



### 1.8 接地点

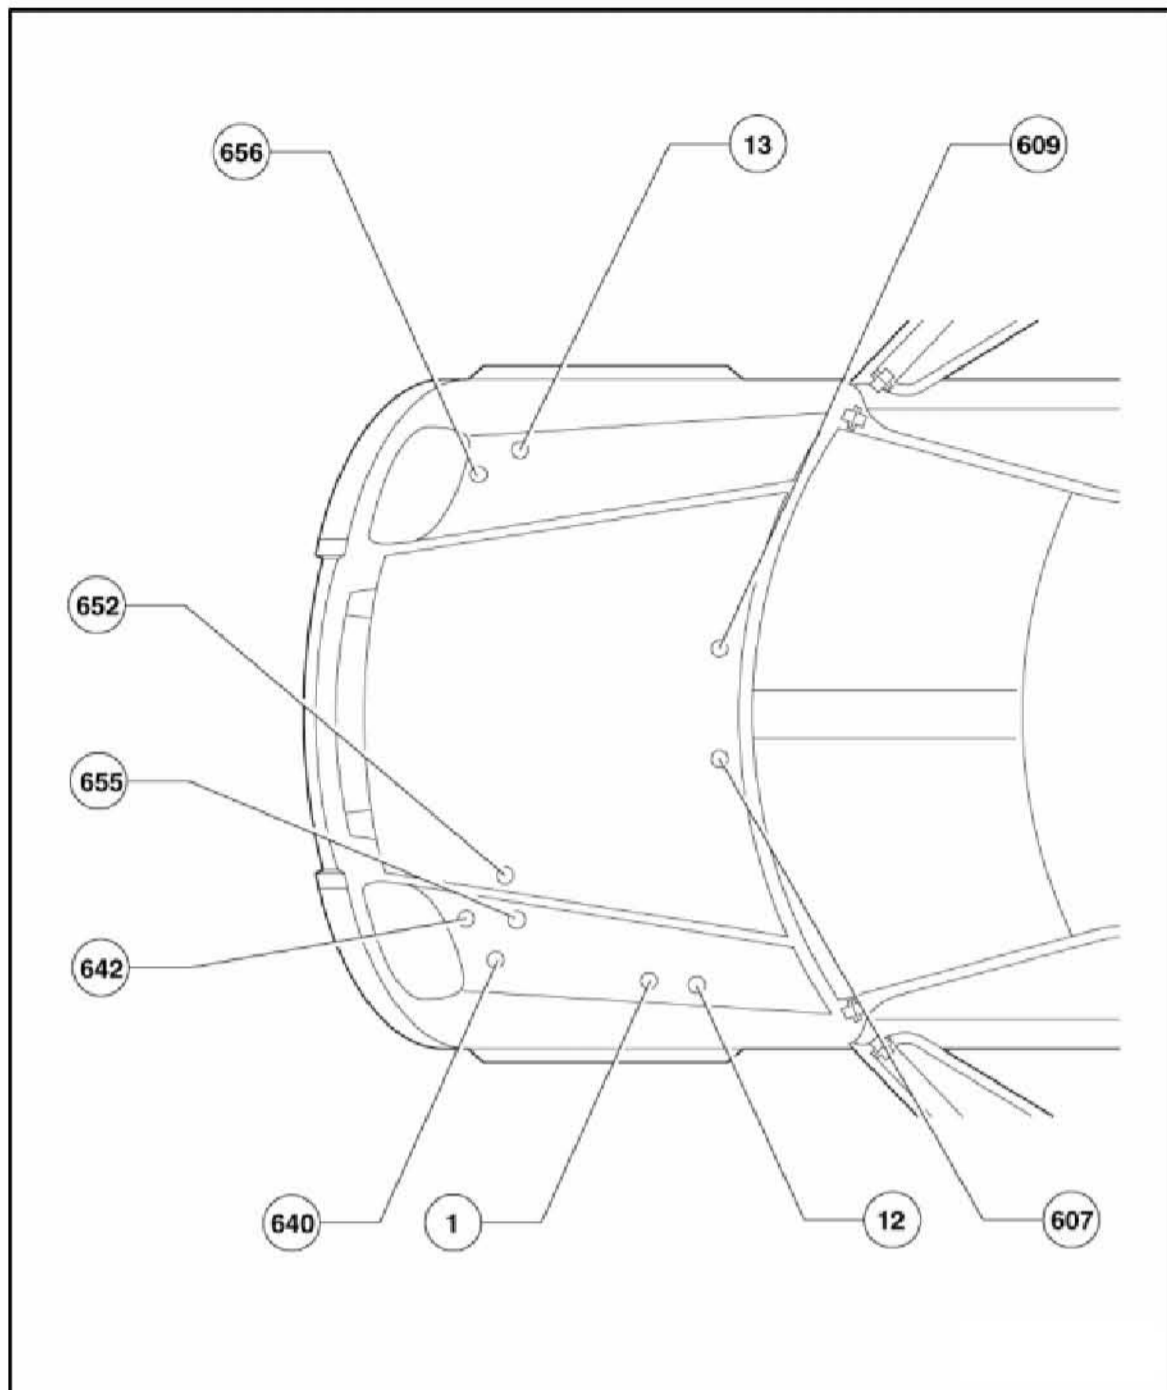


发动机舱内所有接地点一览

- ① - 接地点，发动机舱内左侧，蓄电池附近 => -箭头-

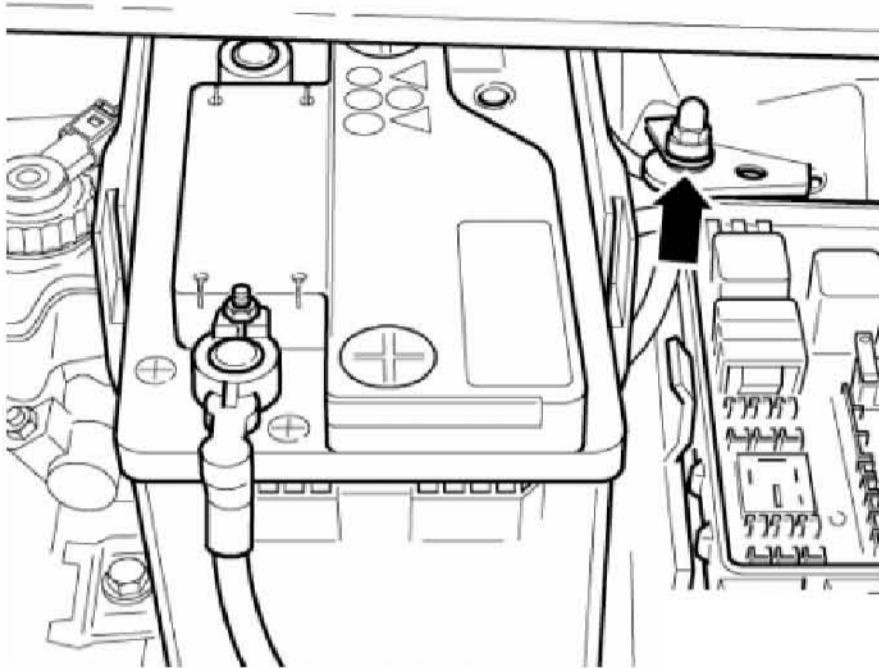


- ⑬ - 接地点，发动机舱内右侧 => -箭头 A-


- ⑥56 - 接地点，右侧大灯上 => -箭头 B-

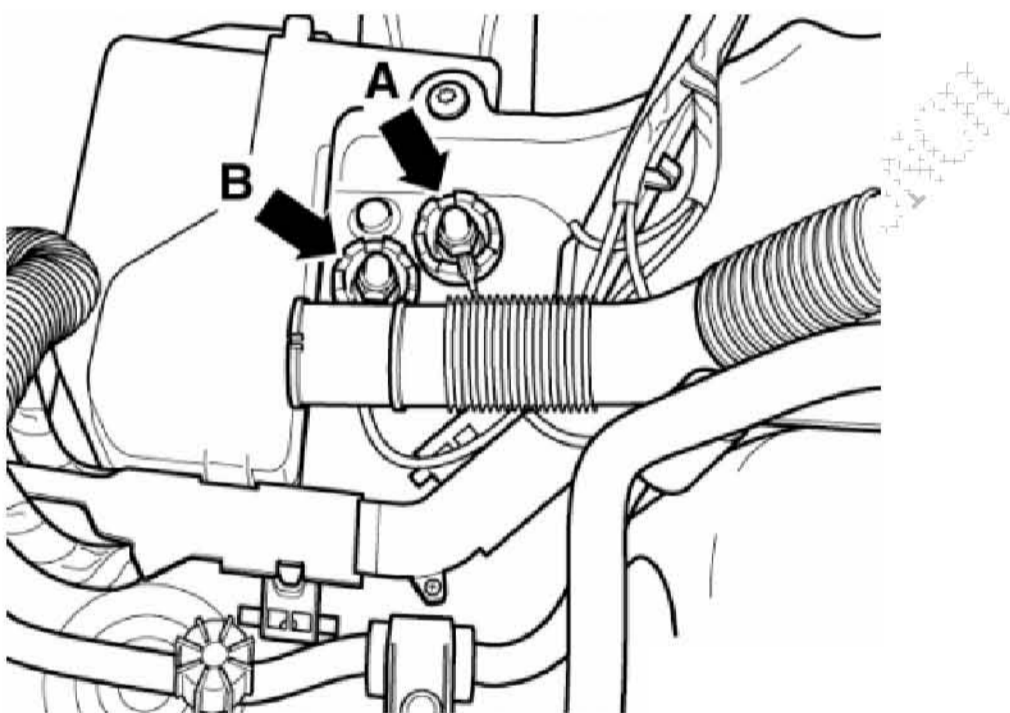

- ⑥07 - 接地点，排水槽内左侧 => -箭头-

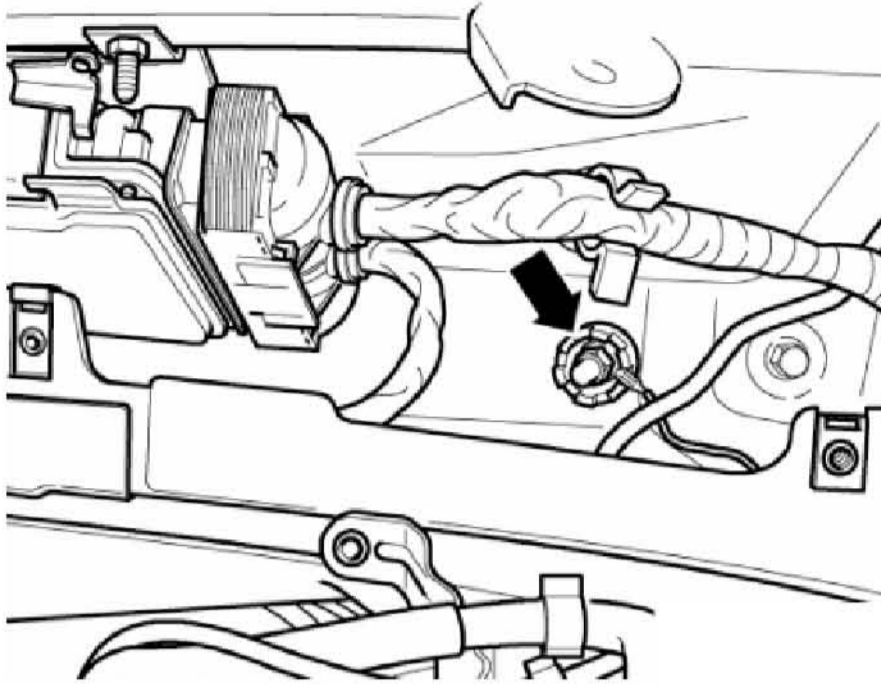


609 - 接地点, 排水槽内右侧 => -箭头-

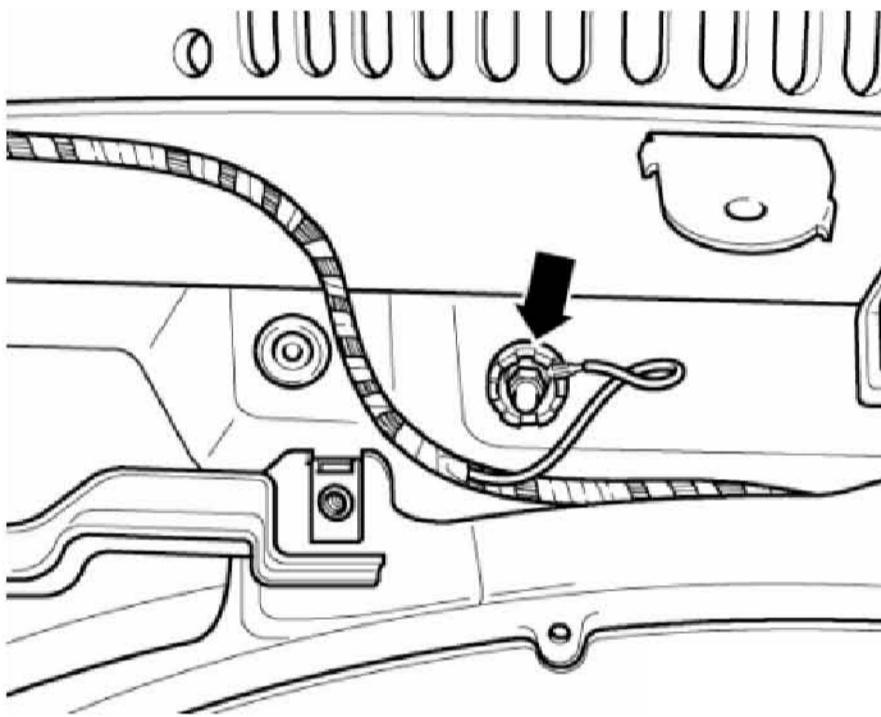


640 - 接地点, 发动机舱左侧 => -箭头 C-

642 - 接地点, 电控风扇 => -箭头 A-

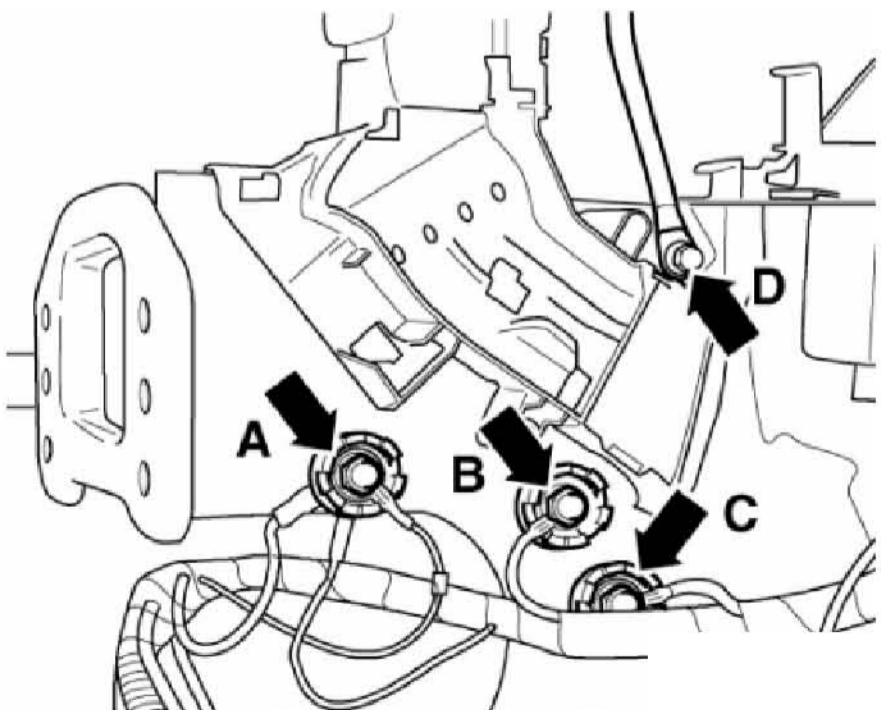

⑥52 - 接地点, 变速箱接地 / 发动机接地 => -箭头 D-

⑥55 - 接地点, 左侧大灯上 => -箭头 B-

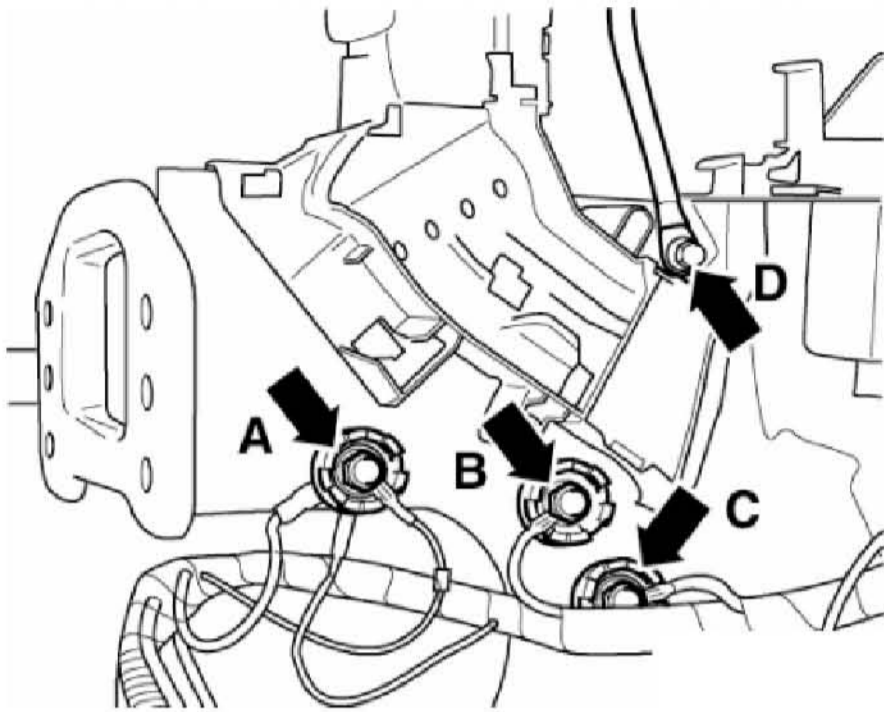

LAUNCH