


## brake system

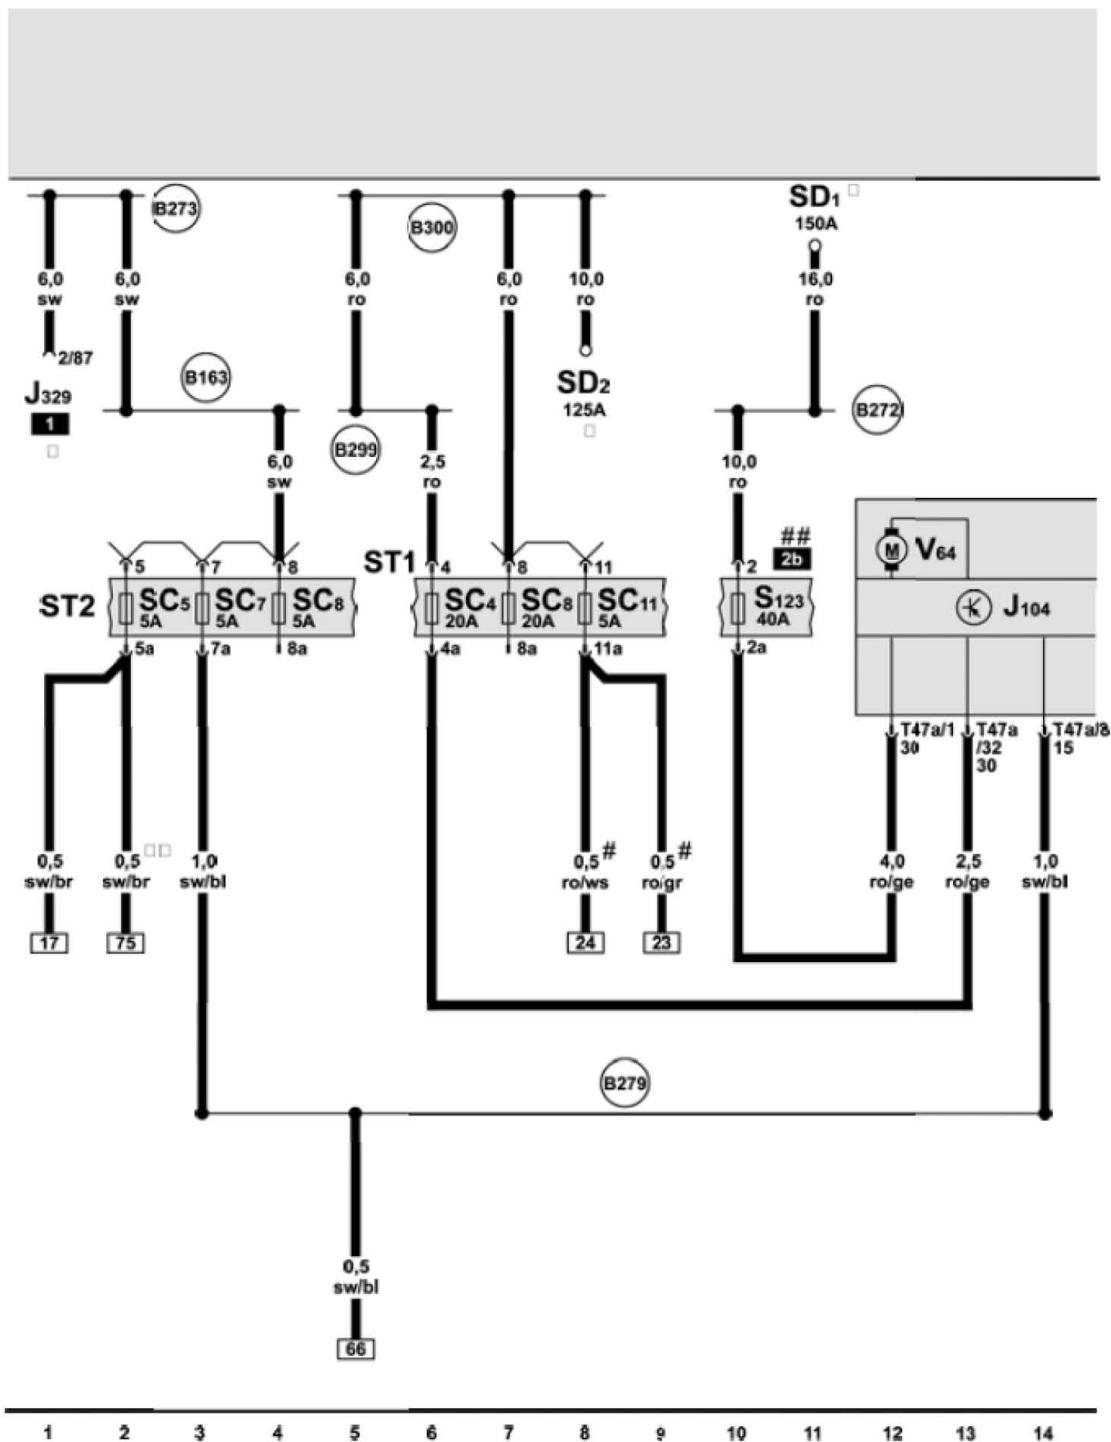

ws = white      sw = black      ro = red      br = brown      gn = green      bl = blue  
 gr = grey      li = purple      ge = yellow      or = orange      rs = pink

ABS control unit, ABS control unit fuse 1, ABS hydraulic pump

J104 - ABS control unit

J329 - Terminal 15 voltage supply relay

S123 - ABS control unit fuse 1

SC4 - Fuse 4 on fuse holder C

SC5 - Fuse 5 on fuse holder C

SC7 - Fuse 7 on fuse holder C

SC8 - Fuse 8 on fuse holder C

SC11 - Fuse 11 on fuse holder C

SD1 - Fuse 1 on fuse holder D

SD2 - Fuse 2 on fuse holder D

T47a - 47-pin connector, on ABS control unit

V64 - ABS hydraulic pump

B163 - Positive connection 1 (15), in interior wiring harness

B272 - Positive connection (30), in main wiring harness

B273 - Positive connection (15), in main wiring harness

B279 - Positive connection 3 (15a), in main wiring harness

B299 - Positive connection 3 (30), in main wiring harness


B300 - Positive connection 4 (30), in main wiring harness

- Relay and fuse carrier under driver seat

- models with manual gearbox

- cable installed as an option

- relay and fuse carrier centre dash panel

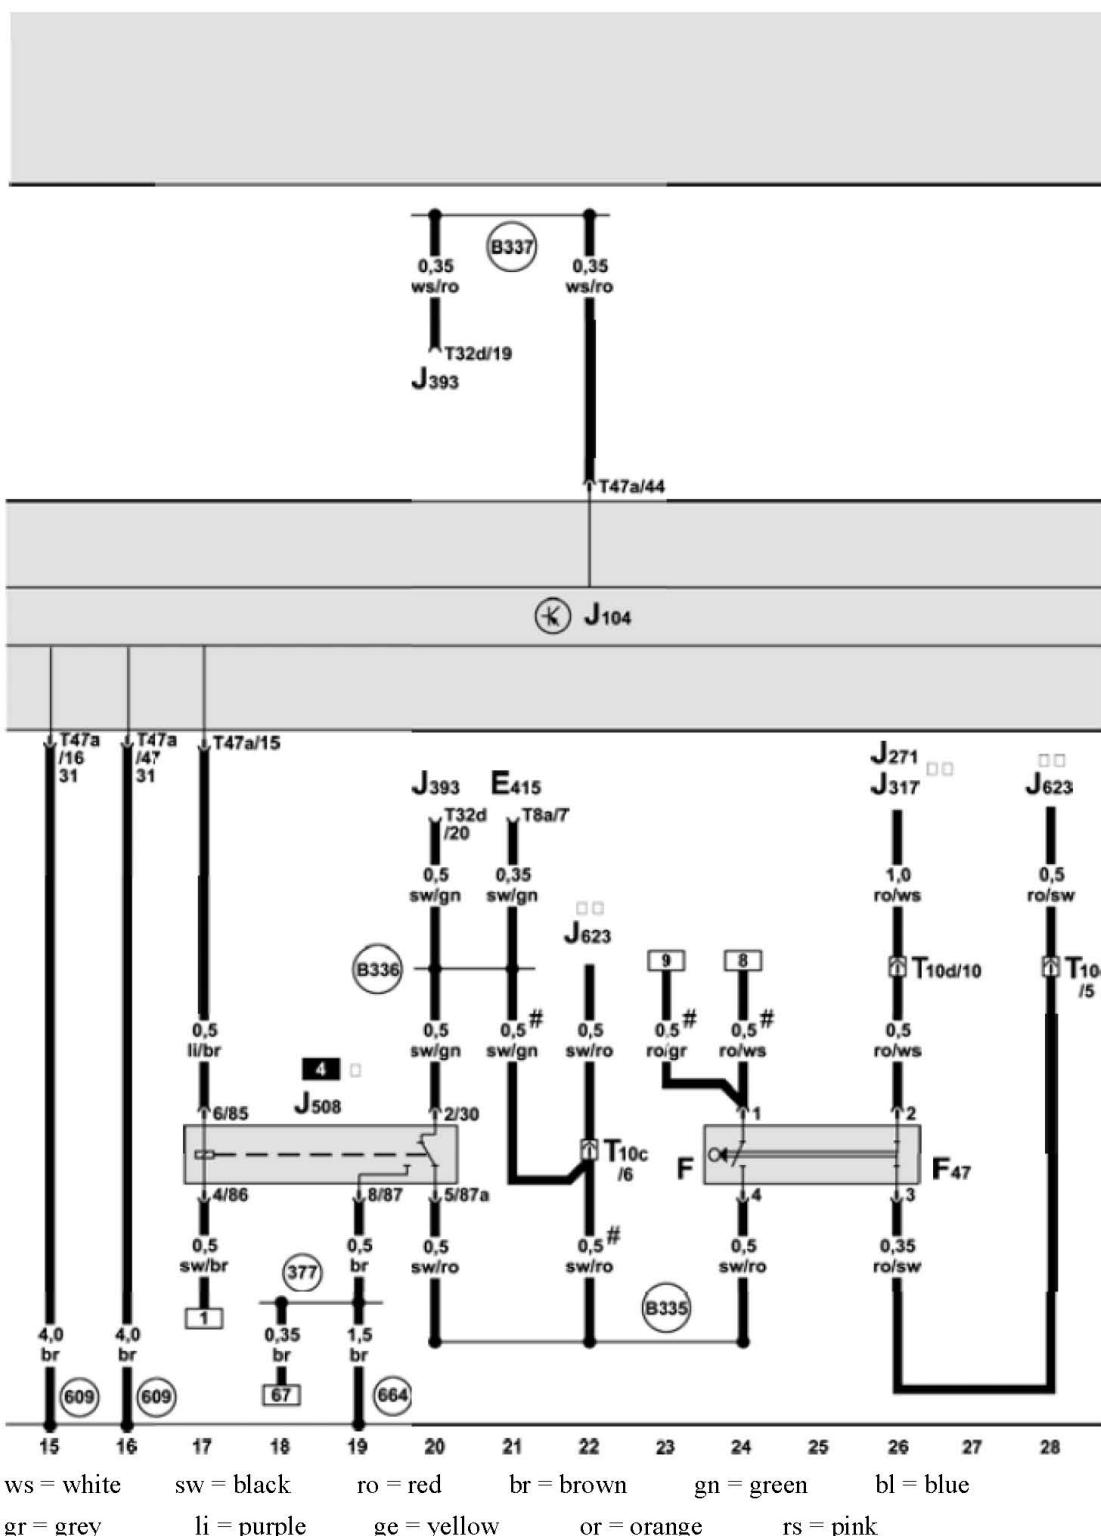

ABS control unit, brake light suppression relay, brake light switch, brake pedal switch

E415 - Entry and start authorisation switch

F - Brake light switch

F47 - Brake pedal switch


J104 - ABS control unit

J271 - Motronic current supply relay

J317 - Terminal 30 voltage supply relay  
J393 - Convenience system central control unit  
J508 - Brake light suppression relay  
J623 - Engine control unit  
T8a - 8-pin connector, black, on entry and start authorisation switch  
T10c - 10-pin connector, pink, coupling station on electronics box, plenum chamber  
T10d - 10-pin connector, blue, coupling station on electronics box, plenum chamber  
T32d - 32-pin connector, on convenience system central control unit  
T47a - 47-pin connector, on ABS control unit  
377 - Earth connection 12, in main wiring harness  
609 - Earth point, on right in plenum chamber  
664 - Earth point, on left behind dash panel  
B335 - Connection 1 (54), in main wiring harness  
B336 - Connection 2 (54), in main wiring harness  
B337 - Connection 3 (54), in main wiring harness

- relay and fuse carrier centre dash panel
- see engine Current Flow Diagram
- cable installed as an option

LAUNCH

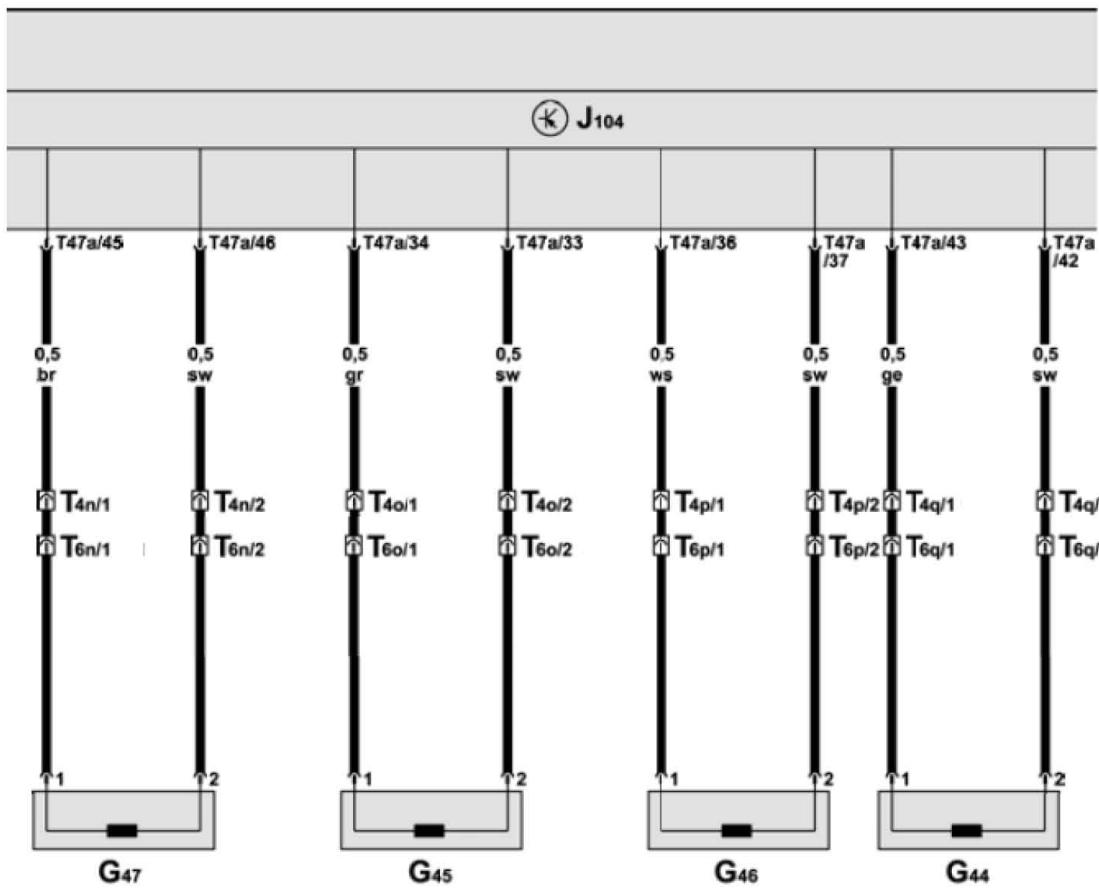

29	30	31	32	33	34	35	36	37	38	39	40	41	42
ws = white	sw = black	ro = red	br = brown	gn = green	bl = blue								

gr = grey      li = purple      ge = yellow      or = orange      rs = pink

ABS control unit, speed sensor

G44 - Rear right speed sensor

G45 - Front right speed sensor

G46 - Rear left speed sensor

G47 - Front left speed sensor

J104 - ABS control unit

T4n - 4-pin connector, black, in front left engine compartment

T4o - 4-pin connector, black, in front right engine compartment

T4p - 4-pin connector, black, on rear left vehicle floor

T4q - 4-pin connector, black, on rear right vehicle floor

T6n - 6-connector, black, in front left engine compartment

T6o - 6-pin connector, black, in front right engine compartment


 
T6p - 6-pin connector, black, on rear left vehicle floor

T6q - 6-pin connector, black, on rear right vehicle floor

T47a - 47-pin connector, on ABS control unit

- without adaptive suspension

- with adaptive suspension

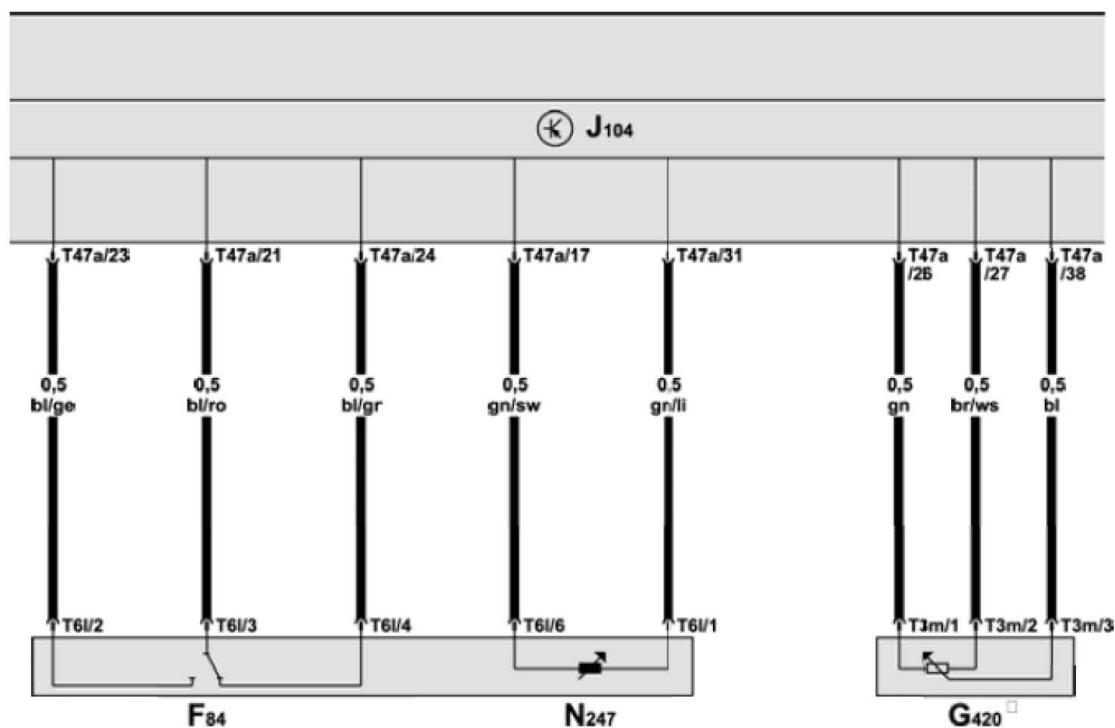

43	44	45	46	47	48	49	50	51	52	53	54	55	56
----	----	----	----	----	----	----	----	----	----	----	----	----	----

ws = white      sw = black      ro = red      br = brown      gn = green      bl = blue

gr = grey      li = purple      ge = yellow      or = orange      rs = pink

potentiometer for brake servo diaphragm movement, brake pressure solenoid valve

F84 - Brake pressure solenoid trip switch

G420 - potentiometer for brake servo diaphragm movement

J104 - ABS control unit


N247 - Brake pressure solenoid valve

T3m - 3-pin connector, black, on brake servo

T6l - 6-pin connector, black, on brake servo

T47a - 47-pin connector, on ABS control unit

- with adaptive cruise (ACC)

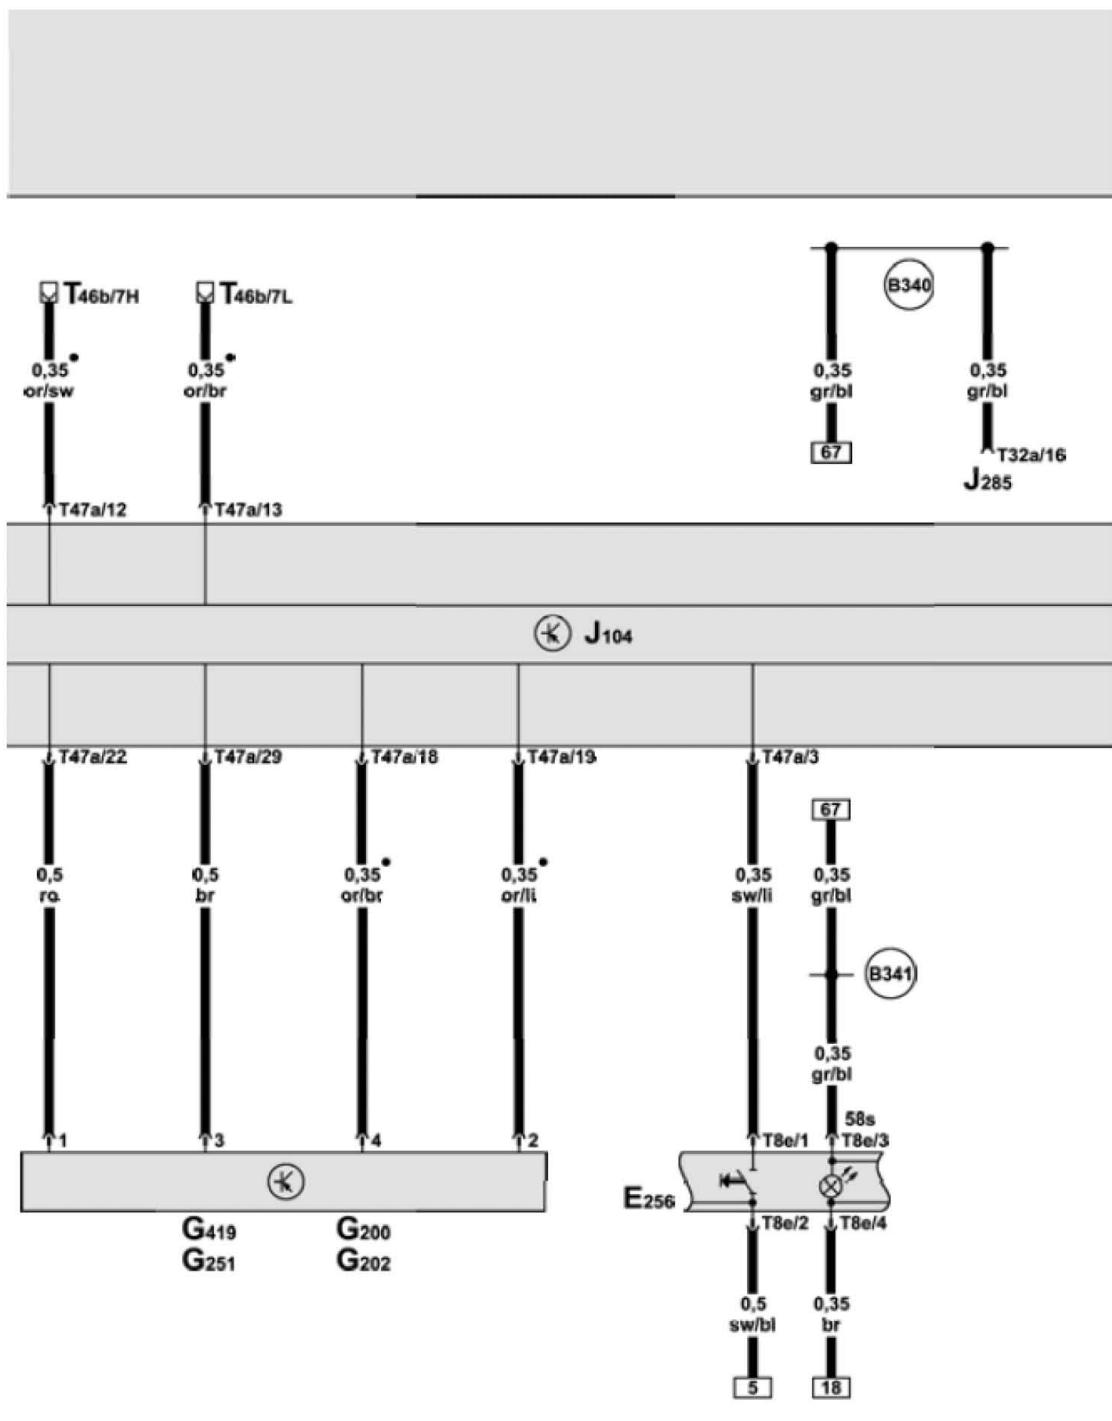

ws = white      sw = black      ro = red      br = brown      gn = green      bl = blue  
 gr = grey      li = purple      ge = yellow      or = orange      rs = pink  
 ABS control unit, ESP TCS and ESP button, lateral acceleration sender, yaw rate sender, longitudinal acceleration sender, ESP sensor unit  
**E256** - TCS and ESP button  
**G200** - Lateral acceleration sender  
**G202** - Yaw rate sender  
**G251** - Longitudinal acceleration sender

G419 - ESP sensor unit

J104 - ABS control unit

J285 - Control unit in dash panel insert

T8e - 8-pin connector, black, on centre vent switch module

T32a - 32-pin connector, grey, on control unit in dash panel insert


 
T46b - 46-pin connector, black, CAN separating connector right

T47a - 47-pin connector, on ABS control unit

B340 - Connection 1 (58s), in main wiring harness

B341 - Connection 2 (58s), in main wiring harness

- CAN bus (data wire)

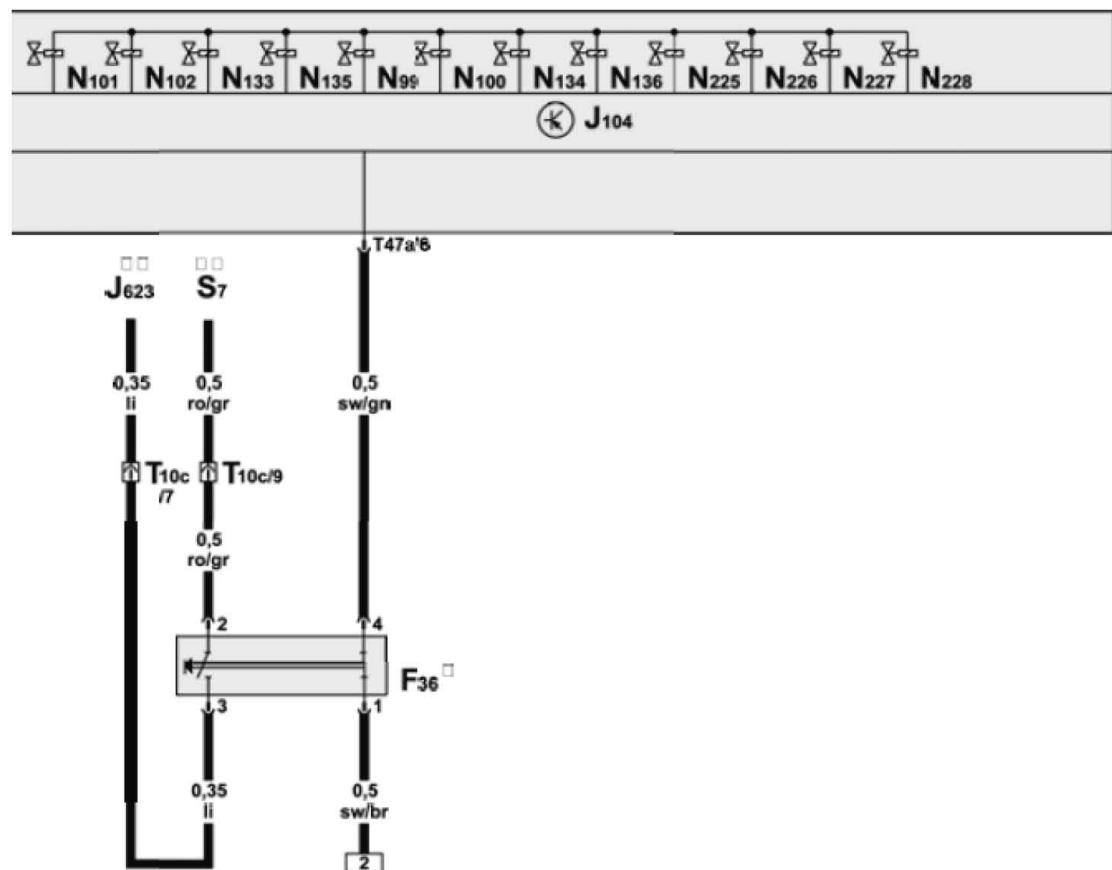

Legend for wire colors:

Pin Number	Wire Color
71	ws = white
72	sw = black
73	ro = red
74	br = brown
75	gn = green
76	bl = blue
77	gr = grey
78	li = purple
79	ge = yellow
80	or = orange
81	rs = pink
82	
83	
84	

Components connected to the ABS control unit (J104):

- ABS control unit, clutch pedal switch, ABS inlet valve, ABS outlet valve, vehicle stabilization program switch valve, vehicle stabilization program high pressure valve

F36 - Clutch pedal switch  
J104 - ABS control unit  
J623 - Engine control unit  
N99 - Front right ABS inlet valve  
N100 - Front right ABS outlet valve  
N101 - Front left ABS inlet valve  
N102 - Front left ABS outlet valve  
N133 - Rear right ABS inlet valve  
N134 - Rear left ABS inlet valve  
N135 - Rear right ABS outlet valve  
N136 - Rear left ABS outlet valve  
N225 - Vehicle stabilization program switch valve 1  
N226 - Vehicle stabilization program switch valve 2  
N227 - Vehicle stabilization program high pressure valve 1  
N228 - Vehicle stabilization program high pressure valve 2  
S7 - Fuses in relay plate fuse holder  
T10c - 10-pin connector, pink, coupling station on electronics box, plenum chamber  
T47a - 47-pin connector, on ABS control unit  
    - only manual gearbox  
    - see engine Current Flow Diagram