


# REMOVAL AND INSTALLATION OF REAR BUMPER

## 1. REAR BUMPER

※ Preceding Work: Disconnect the negative battery cable and remove the rear combination lamps.

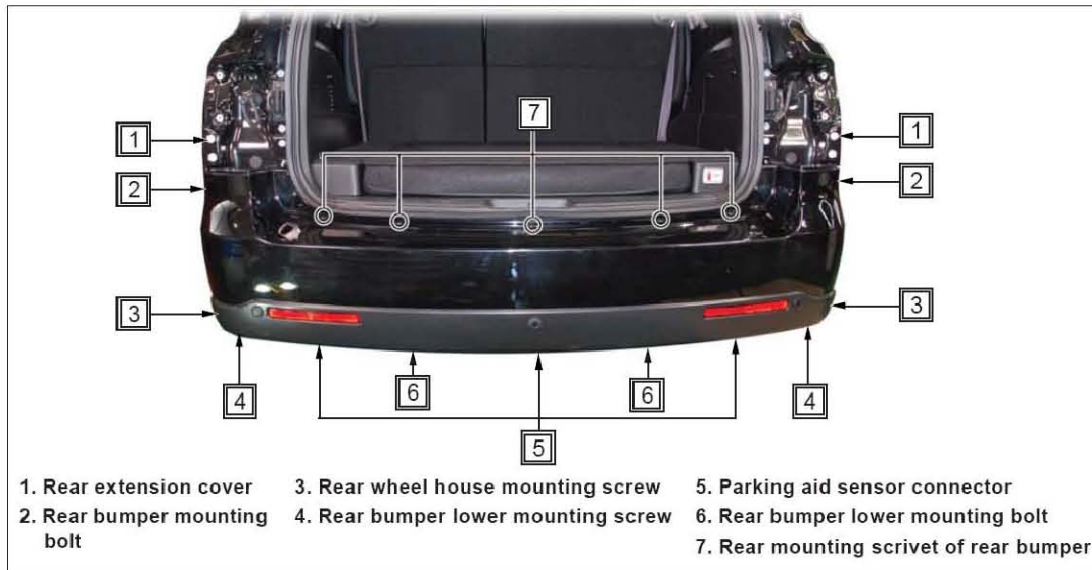

1. Remove two rear extension cover mounting screws and remove the rear combination extension cover by sliding it.

**CAUTION**  
 • Remove the cover by pushing it gently as shown in the figure so that its pin is not damaged.

2. Remove two upper mounting bolts (10 mm) of the rear bumper from the rear combination lamps.

3. Remove the rear wheel house mounting screws.







4. Remove the lower mounting screw from the rear



5. Disconnect three parking aid sensor connectors (LH/C/RH).

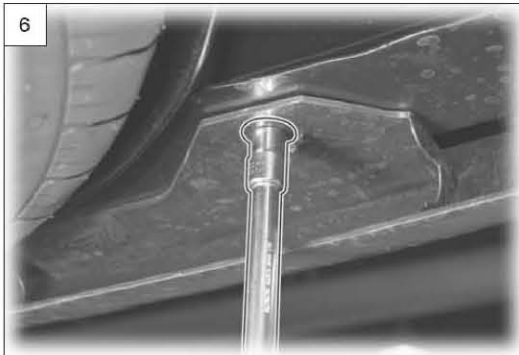


6. Remove the lower mounting bolts (LH/RH, 12 mm) from the rear bumper.

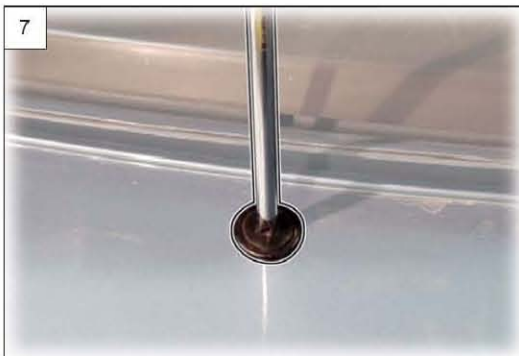


7. Remove five rear mounting scrivets and remove the rear bumper fascia.

Remove the upper bracket and rear bumper beam with the rear bumper fascia removed.

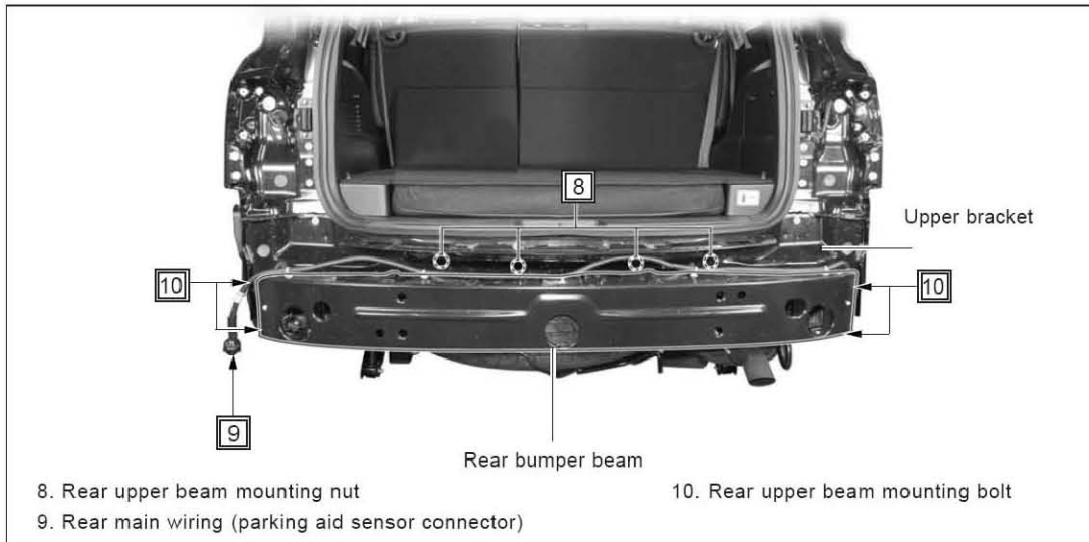

8. Unscrew four upper beam mounting bolts and remove the upper beam assembly.

10. Remove two LH/RH mounting bolts. Do not unscrew the upper left and lower right bolts completely.

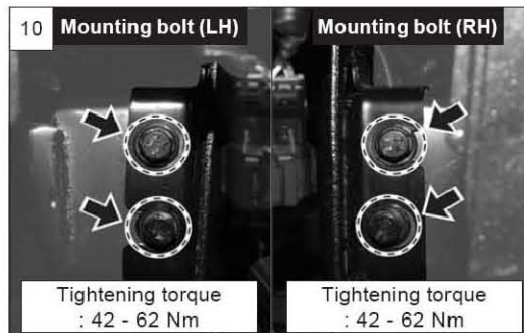

9. Disconnect the rear main wiring (parking aid sensor) connector and the connector mounting piece on the side of the body.

11. Install the rear bumper beam assembly in reverse order of removal.

