


Horn

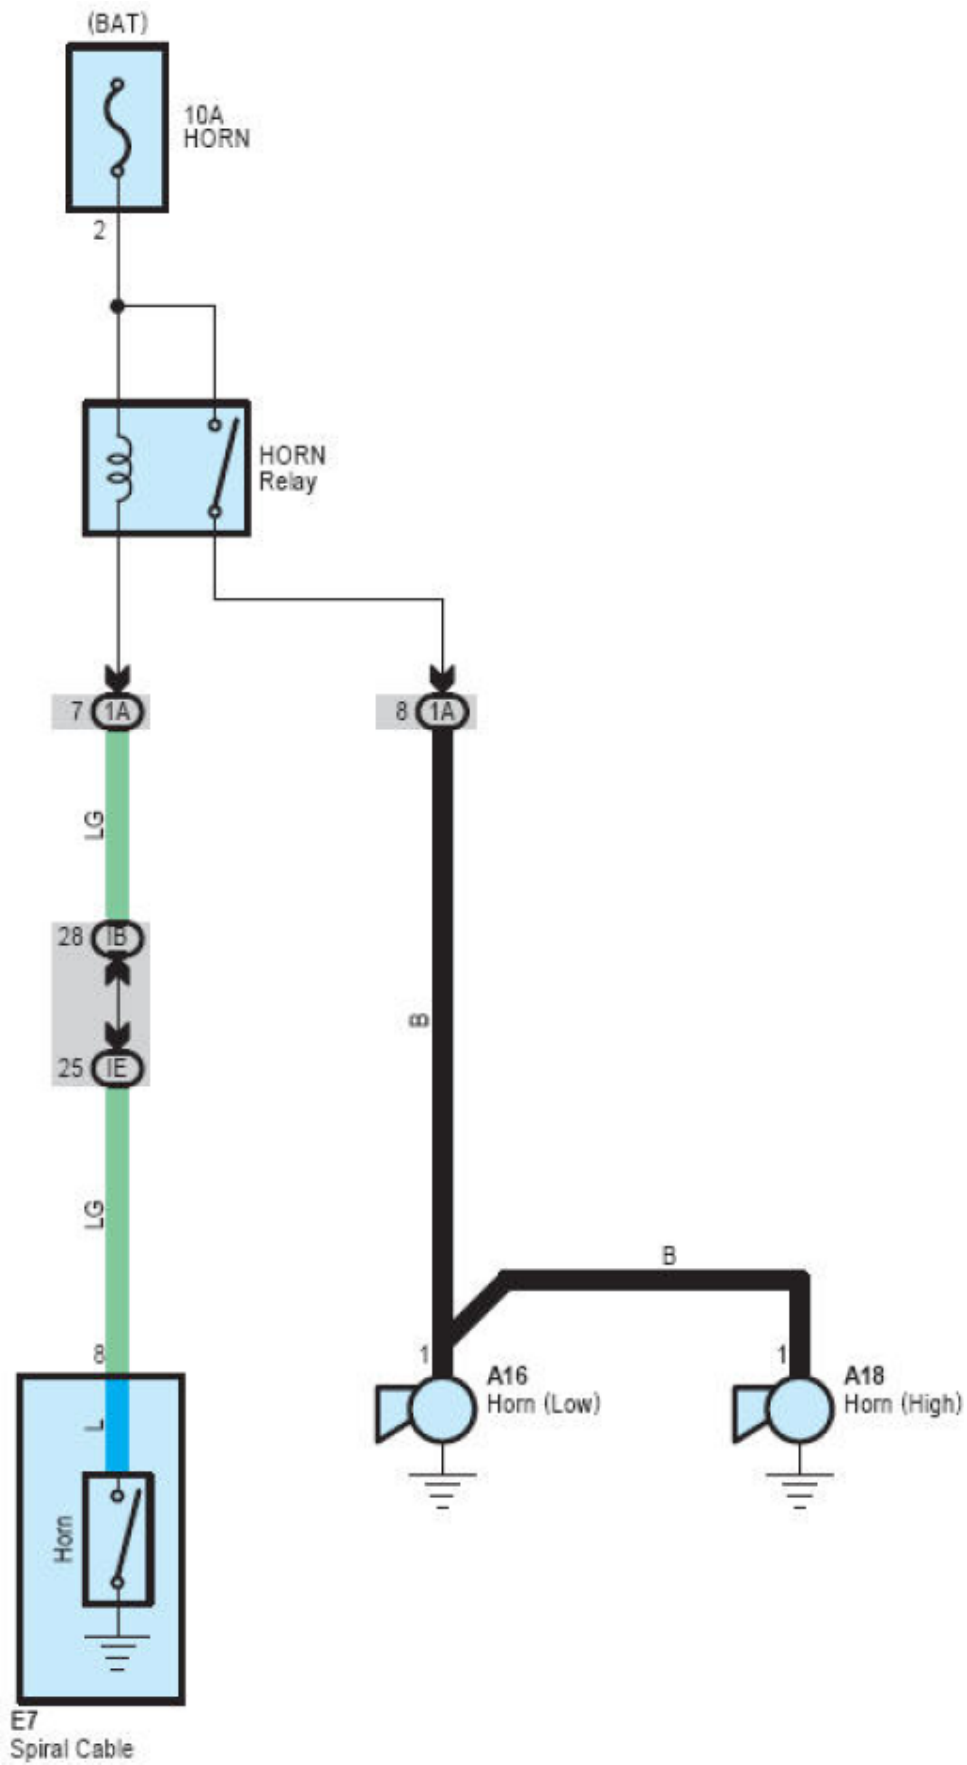

Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
1A	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
IB	Engine Room Main Wire and Instrument Panel J/B (Cowl Side Left)
IE	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)

Lh LAUNCH