

J329 - Terminal 15 voltage supply relay

J393 - Convenience system central control unit

N253 - Battery isolation igniter

SC8 - Fuse 8 on fuse holder C

SC10 - Fuse 10 on fuse holder C

T32d - 32-pin connector, on convenience system central control unit

T46b - 46-pin connector, black, CAN separating connector right


 
T75 - 75-pin connector, grey, on airbag control unit (USA: white)

B163 - Positive connection 1 (15), in interior wiring harness

B273 - Positive connection (15), in main wiring harness

B278 - Positive connection 2 (15a), in main wiring harness

- CAN bus (data wire)
- Relay and fuse carrier under driver seat
- only USA

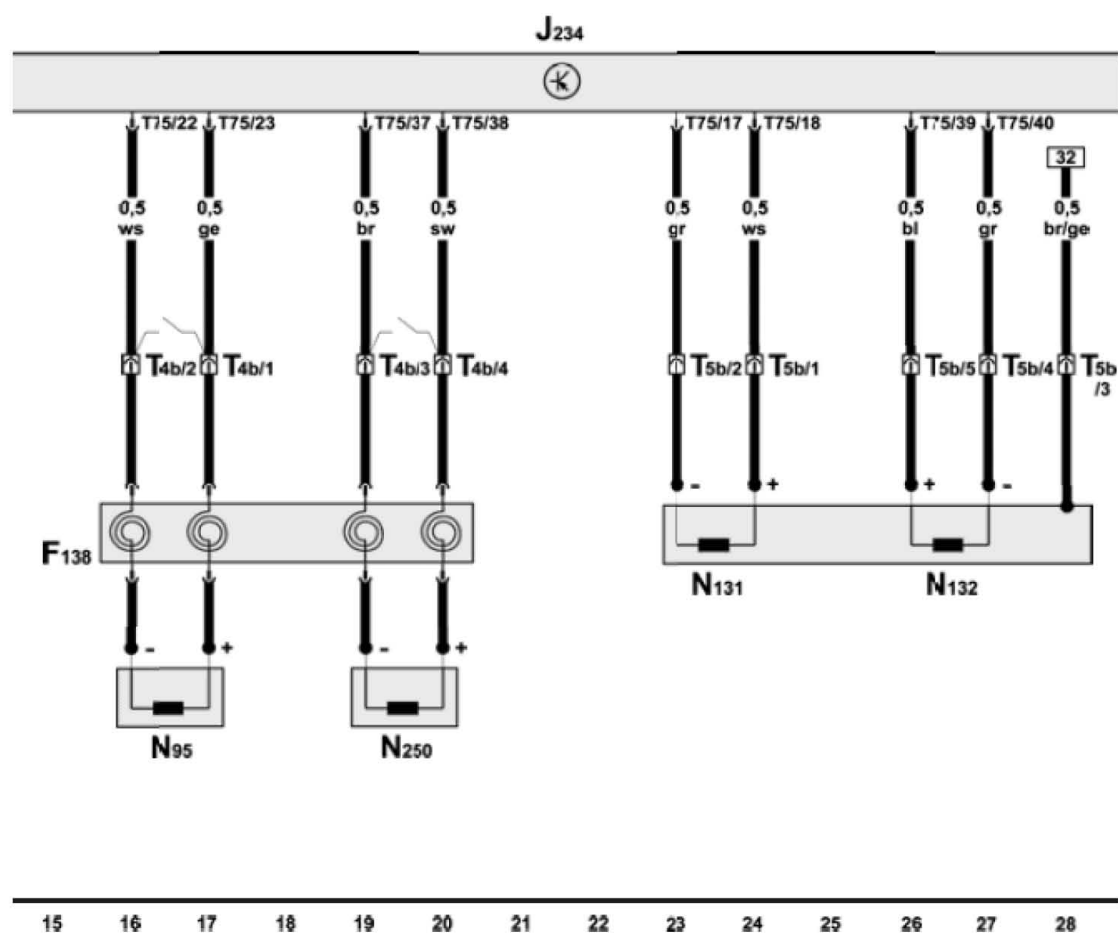

ws = white sw = black ro = red br = brown gn = green bl = blue

gr = grey li = purple ge = yellow or = orange rs = pink

Airbag control unit, airbag coil connector and return spring with slip ring, airbag igniter

F138 - Airbag coil connector and return spring with slip ring

J234 - Airbag control unit

N95 - Driver side airbag igniter

N131 - Front passenger side airbag igniter 1

N132 - Front passenger side airbag igniter 2



N250 - Driver side airbag igniter 2

T4b - 4-pin connector, yellow, behind steering column switch trim

T5b - 5-pin connector, yellow, behind the dash panel, right

T75 - 75-pin connector, grey, on airbag control unit (USA: white)

- short circuit bridge becomes effective when connector is unplugged

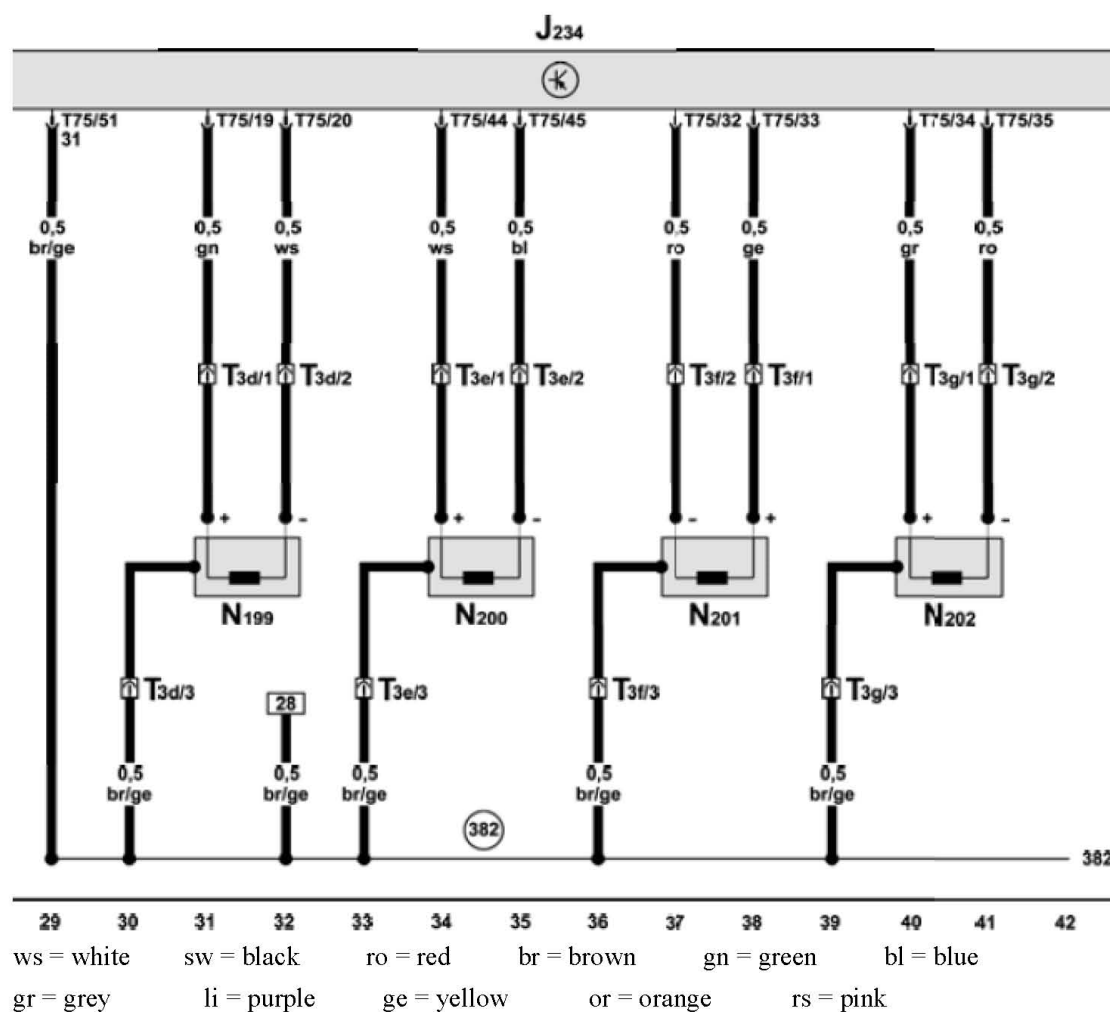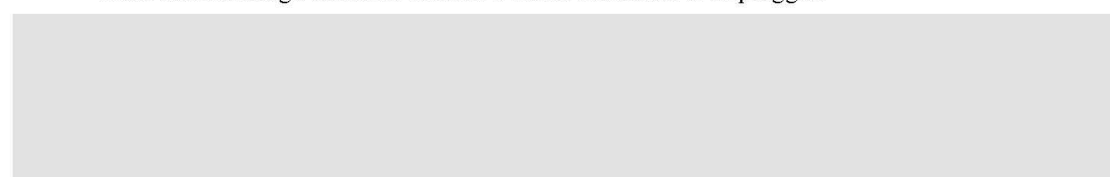

Airbag control unit, side airbag igniter

J234 - Airbag control unit

N199 - Side airbag igniter on driver side

N200 - Side airbag igniter on front passenger side

N201 - Rear side airbag igniter on driver side

N202 - Rear side airbag igniter on front passenger side

T3d - 3-pin connector, yellow, under driver seat

T3e - 3-pin connector, yellow, under front passenger seat


T3f - 3-pin connector, yellow, under rear seat, left

T3g - 3-pin connector, yellow, under rear seat, right

T75 - 75-pin connector, grey, on airbag control unit (USA: white)

382 - Earth connection 17, in main wiring harness

LAUNCH

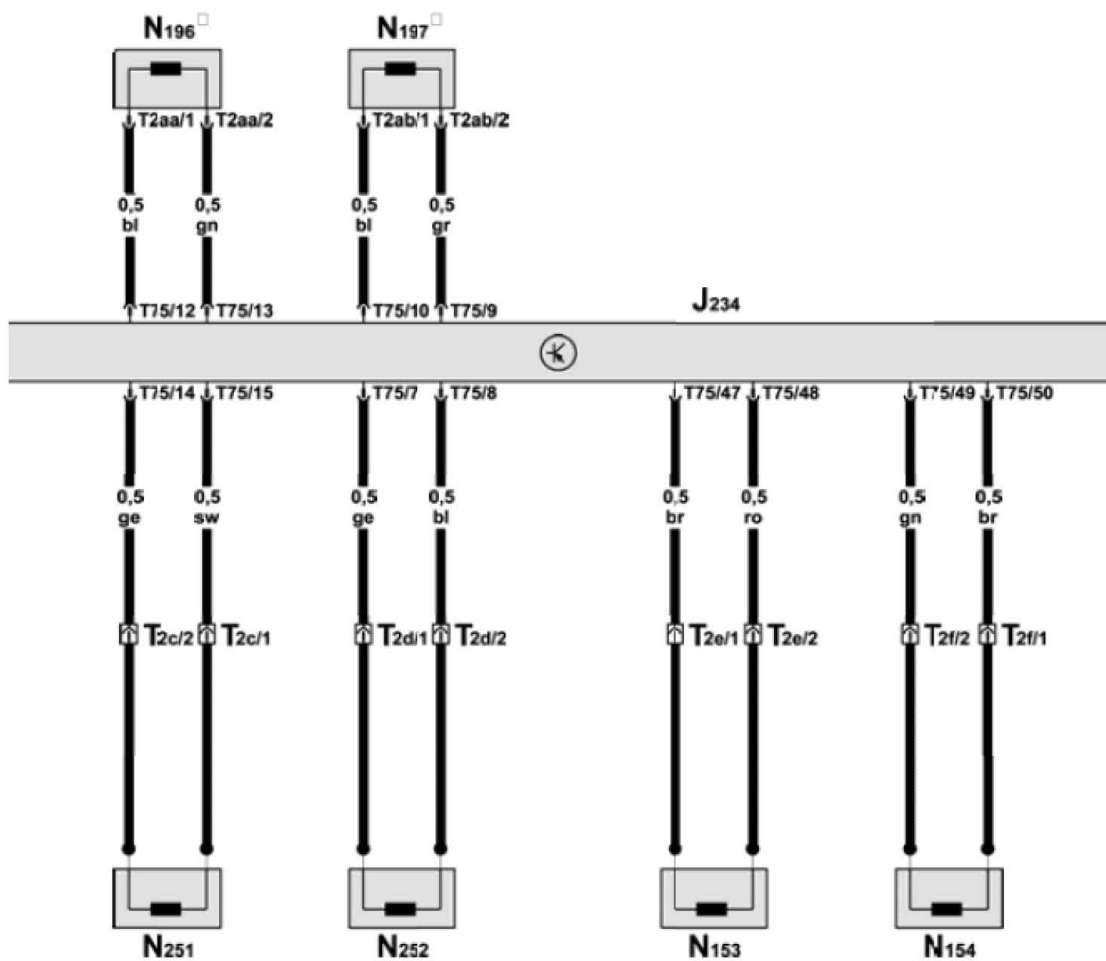

(382)

382

382

43 44 45 46 47 48 49 50 51 52 53 54 55 56

ws = white sw = black ro = red br = brown gn = green bl = blue

gr = grey li = purple ge = yellow or = orange rs = pink

Airbag control unit, belt tensioner igniter 1, rear belt tensioner igniter, curtain airbag igniter

J234 - Airbag control unit

N153 - Driver seat belt tensioner igniter 1

N154 - Front passenger side seat belt tensioner igniter 1

N196 - Rear belt tensioner igniter on driver side

N197 - Rear belt tensioner igniter on front passenger side

N251 - Driver side curtain airbag igniter

N252 - Front passenger side curtain airbag igniter

T2c - 2-pin connector, yellow, on driver side curtain airbag igniter

T2d - 2-pin connector, yellow, on front passenger side curtain airbag igniter

T2e - 2-pin connector, yellow, left B-pillar

T2f - 2-pin connector, yellow, right B-pillar


 
T2aa - 2-pin connector, on rear belt tensioner igniter on driver side

T2ab - 2-pin connector, on rear belt tensioner igniter on front passenger side

T75 - 75-pin connector, grey, on airbag control unit (USA: white)

382 - Earth connection 17, in main wiring harness

- only USA

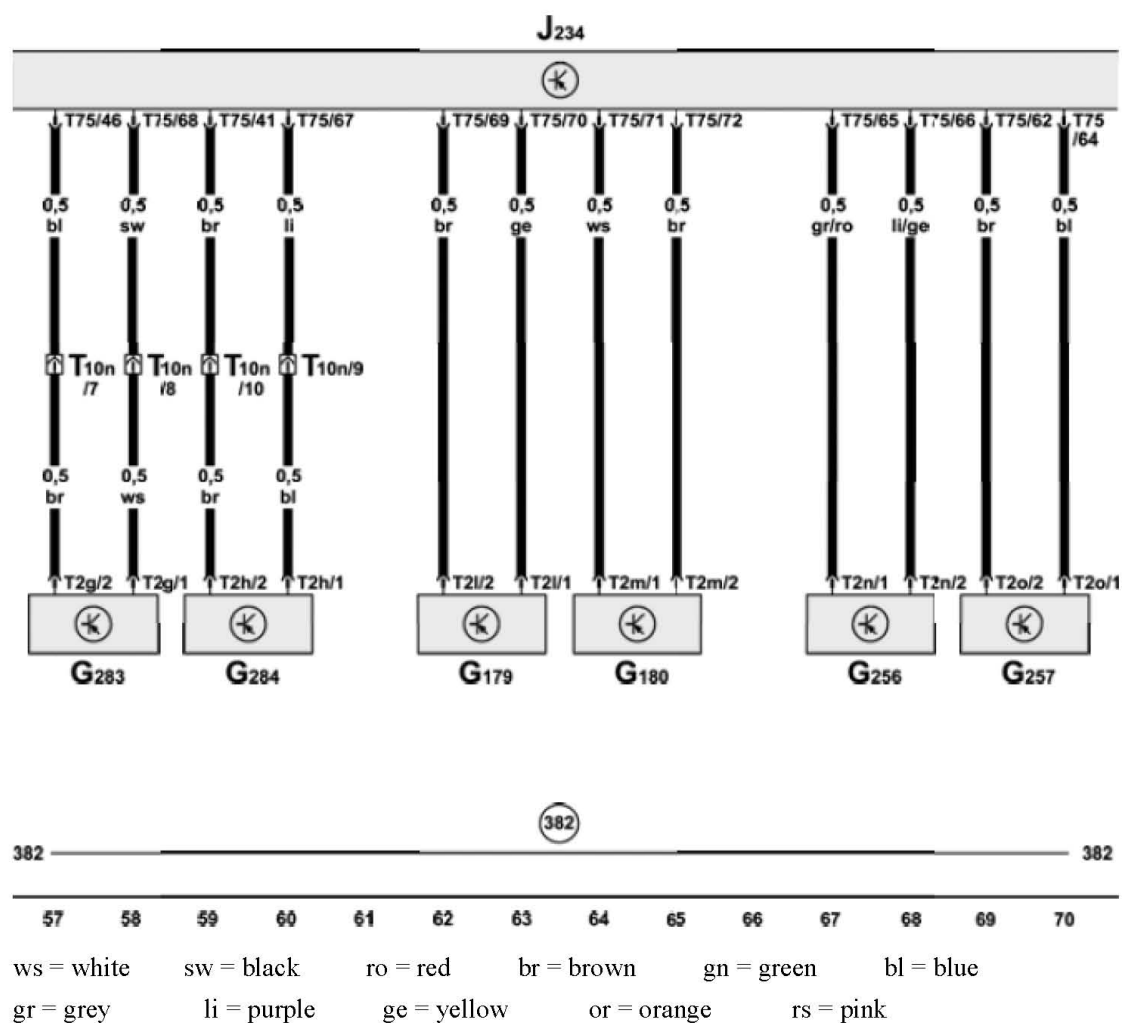

Airbag control unit, side airbag crash sensor, rear side airbag crash sensor, crash sensor for front airbag

G179 - Side airbag crash sensor on driver side

G180 - Side airbag crash sensor on front passenger side

G256 - Rear side airbag crash sensor on driver side

G257 - Rear side airbag crash sensor on front passenger side

G283 - Front airbag crash sensor for driver side

G284 - Front airbag crash sensor for front passenger side

J234 - Airbag control unit

T2g - 2-pin connector, yellow, in front left engine compartment

T2h - 2-pin connector, yellow, in front right engine compartment

T2l - 2-pin connector, yellow, on side airbag crash sensor on driver side

T2m - 2-pin connector, yellow, on side airbag crash sensor on front passenger side

T2n - 2-pin connector, yellow, on rear side airbag crash sensor on driver side


T2o - 2-pin connector, yellow, on rear side airbag crash sensor on front passenger side

T10n - 10-pin connector, black, in front left engine compartment

T75 - 75-pin connector, grey, on airbag control unit (USA: white)

382 - Earth connection 17, in main wiring harness

LAUNCH

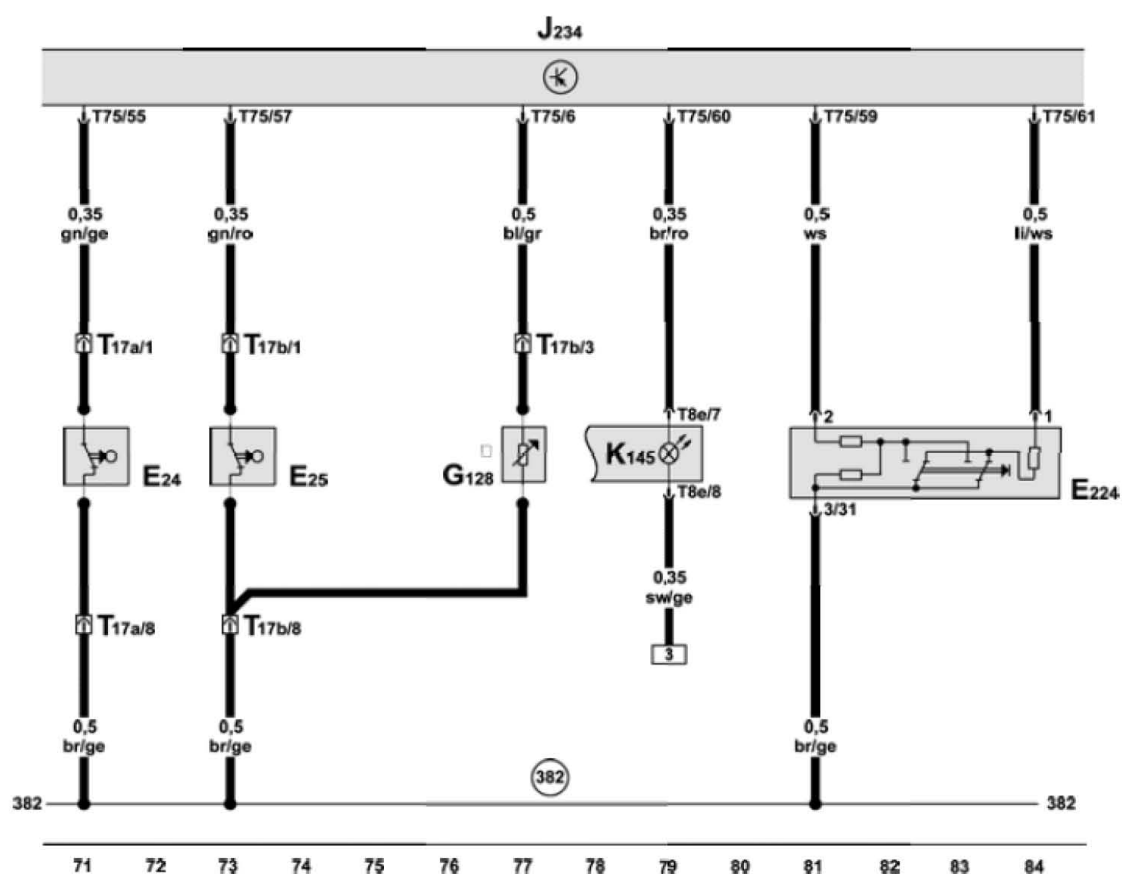

ws = white sw = black ro = red br = brown gn = green bl = blue

gr = grey li = purple ge = yellow or = orange rs = pink

Airbag control unit, belt switch, key operated switch to deactivate front passenger side airbag, front passenger side airbag deactivated warning lamp

E24 - Driver side belt switch

E25 - Front passenger side belt switch

E224 - Key operated switch to deactivate front passenger side airbag

G128 - Seat occupied sensor, front passenger side

J234 - Airbag control unit

K145 - Front passenger side airbag deactivated warning lamp

T8e - 8-pin connector, black, on centre vent switch module


T17a - 17-pin connector, under driver seat

T17b - 17-pin connector, under front passenger seat

T75 - 75-pin connector, grey, on airbag control unit (USA: white)

382 - Earth connection 17, in main wiring harness

- models with seat occupied sensor, front passenger side

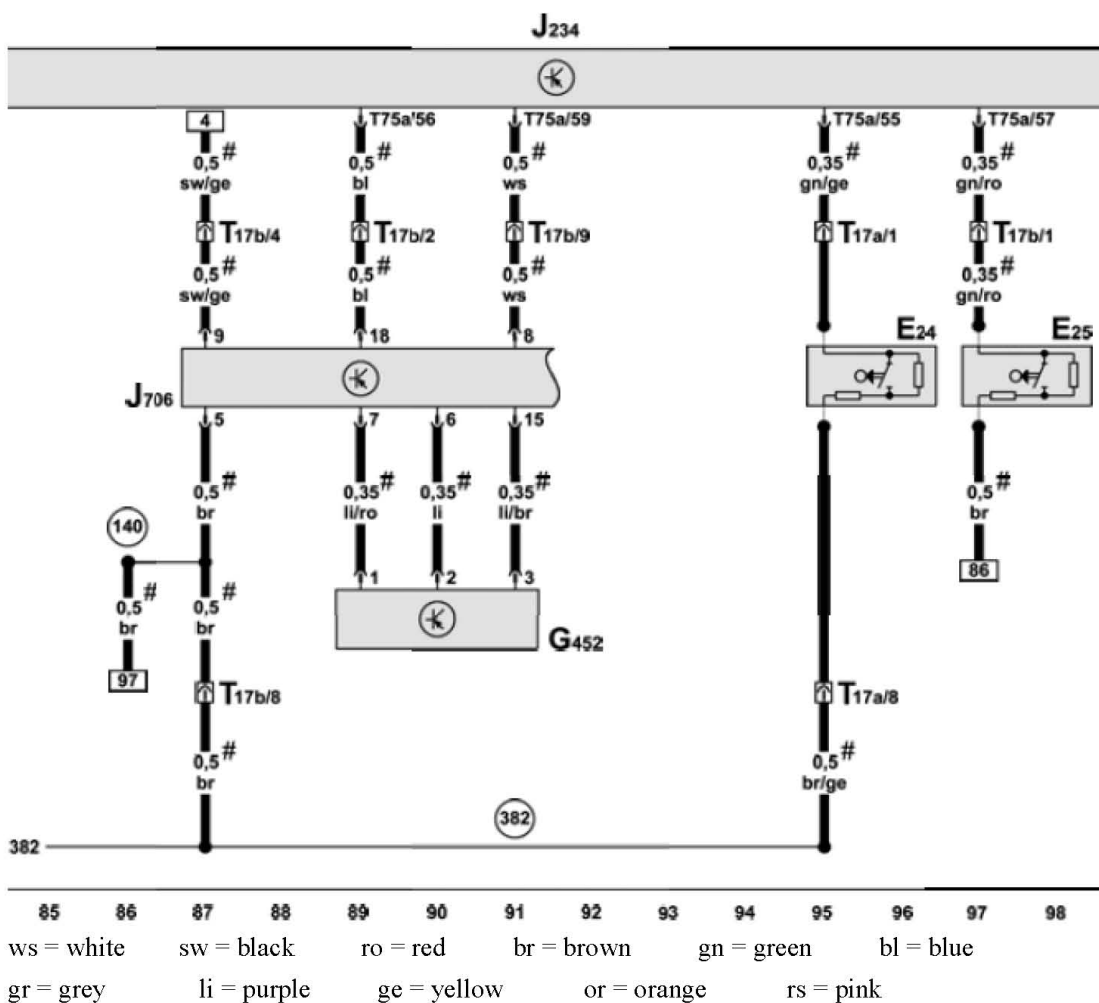

USA, airbag control unit, seat occupied recognition control unit, pressure sensor for seat occupied recognition, belt switch

E24 - Driver side belt switch

E25 - Front passenger side belt switch

G452 - Pressure sensor for seat occupied recognition

J234 - Airbag control unit

J706 - Seat occupied recognition control unit

T17a - 17-pin connector, under driver seat

T17b - 17-pin connector, under front passenger seat

T75a - 75-pin connector, white, on airbag control unit

140 - Earth connection 2, in seat adjuster wiring harness

- 382 - Earth connection 17, in main wiring harness
- only USA

LAUNCH