


## Automatic gearbox 09D

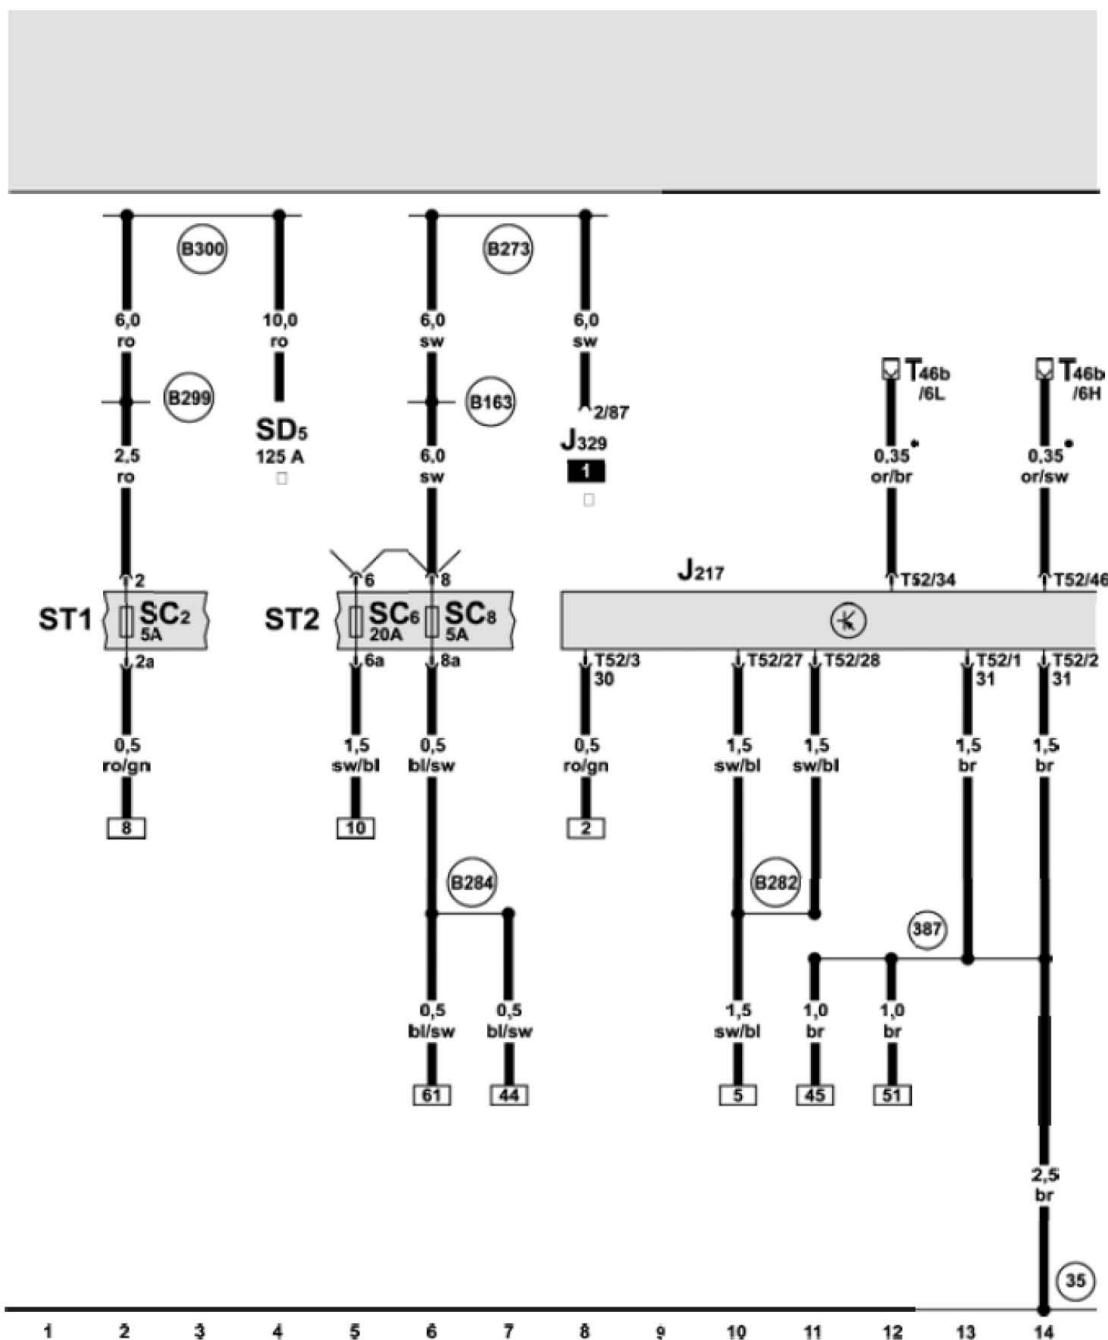

1    2    3    4    5    6    7    8    9    10    11    12    13    14

ws = white      sw = black      ro = red      br = brown      gn = green      bl = blue

gr = grey      li = purple      ge = yellow      or = orange      rs = pink

Automatic gearbox control unit, fuses

J217 - Automatic gearbox control unit

J329 - Terminal 15 voltage supply relay

SC2 - Fuse 2 on fuse holder C



SC6 - Fuse 6 on fuse holder C

SC8 - Fuse 8 on fuse holder C

SD5 - Fuse 5 on fuse holder D

T46b - 46-pin connector, black, CAN separating connector right

- T52 - 52-pin connector, black, on automatic gearbox control unit  
 35 - Earth point, under front passenger seat  
 387 - Earth connection 22, in main wiring harness  
 B163 - Positive connection 1 (15), in interior wiring harness  
 B273 - Positive connection (15), in main wiring harness  
 B282 - Positive connection 6 (15a), in main wiring harness  
 B284 - Positive connection 8 (15a), in main wiring harness  
 B299 - Positive connection 3 (30), in main wiring harness  
 B300 - Positive connection 4 (30), in main wiring harness
  - CAN bus (data wire)
  - Relay and fuse carrier under driver seat

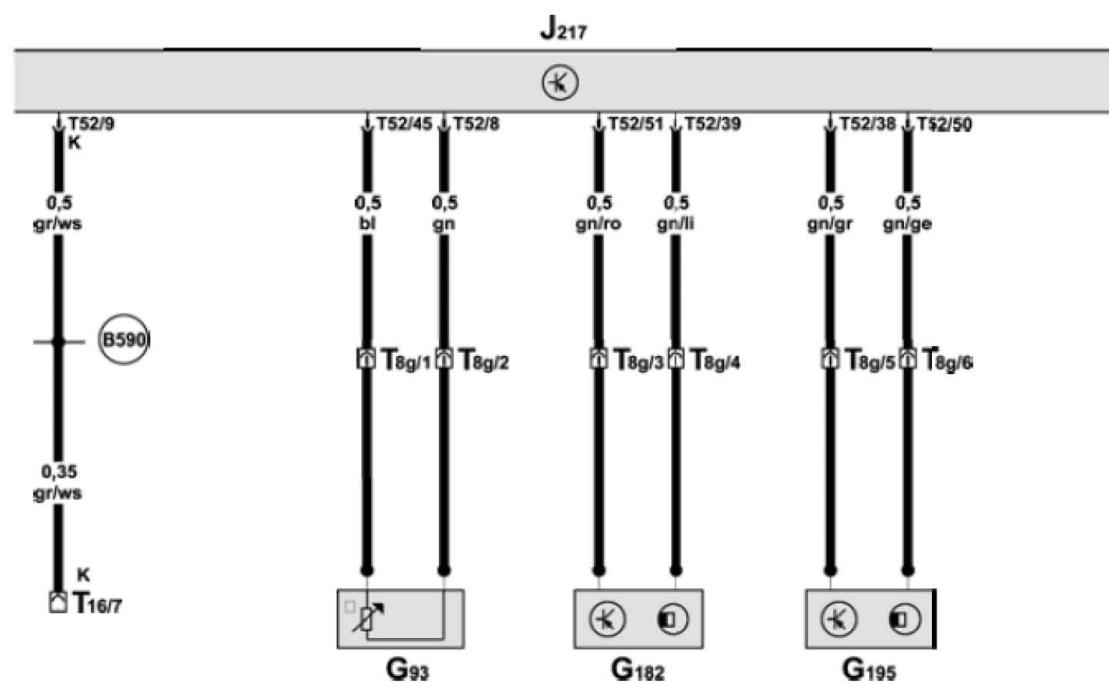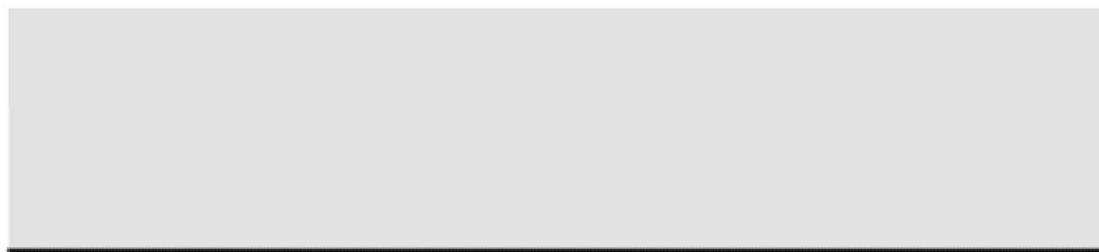

15      16      17      18      19      20      21      22      23      24      25      26      27      28

ws = white      sw = black      ro = red      br = brown      gn = green      bl = blue

gr = grey      li = purple      ge = yellow      or = orange      rs = pink

Automatic gearbox control unit, gearbox oil temperature sender, gearbox input speed sender, gearbox output speed sender

G93 - Gearbox oil temperature sender

G182 - Gearbox input speed sender

G195 - Gearbox output speed sender



J217 - Automatic gearbox control unit

T8g - 8-connector, black, on gearbox

T16 - 16-pin connector, diagnosis socket

T52 - 52-pin connector, black, on automatic gearbox control unit

B590 - K diagnosis connection, interior wiring harness

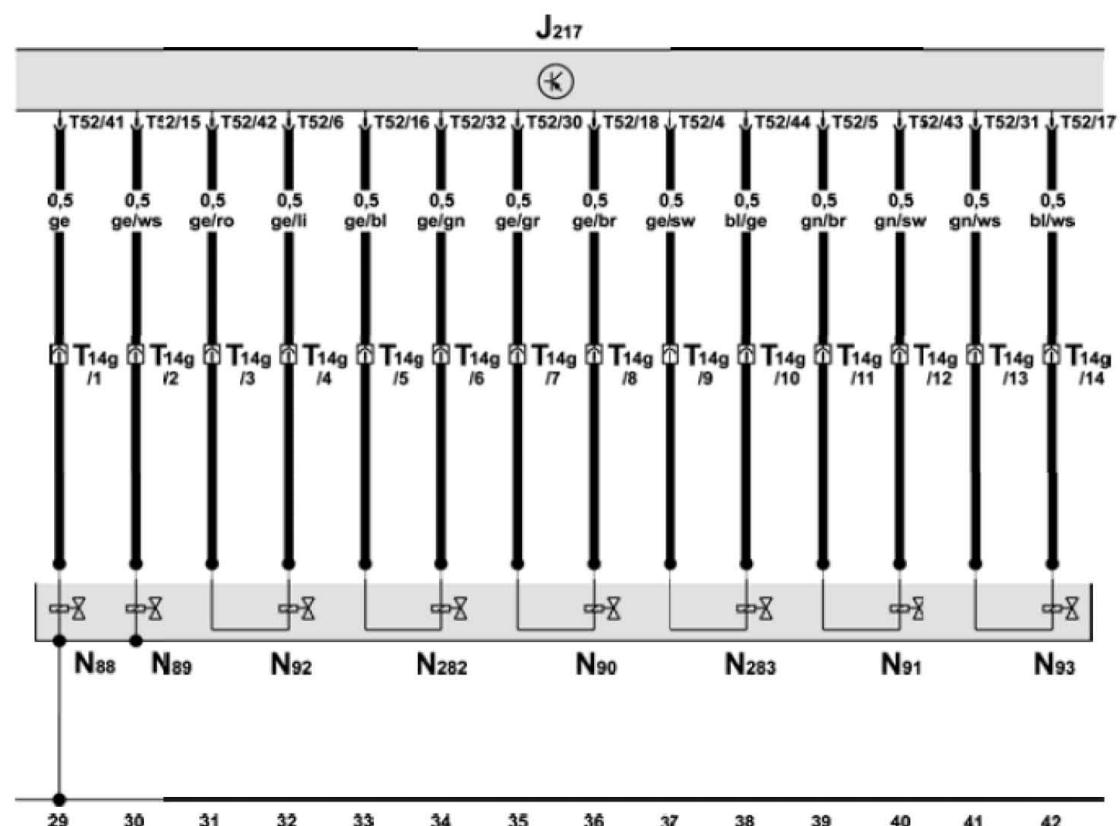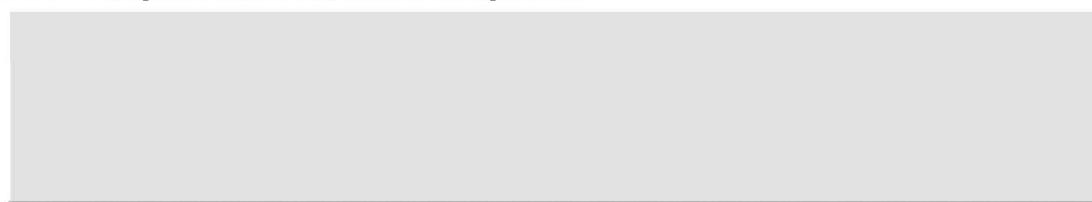

Automatic gearbox control unit, solenoid valves

J217 - Automatic gearbox control unit

N88 - Solenoid valve 1

N89 - Solenoid valve 2

N90 - Solenoid valve 3

N91 - Solenoid valve 4

N92 - Solenoid valve 5


N93 - Solenoid valve 6

N282 - Solenoid valve 9


N283 - Solenoid valve 10

T14g - 14-pin connector, black, on gearbox

T52 - 52-pin connector, black, on automatic gearbox control unit

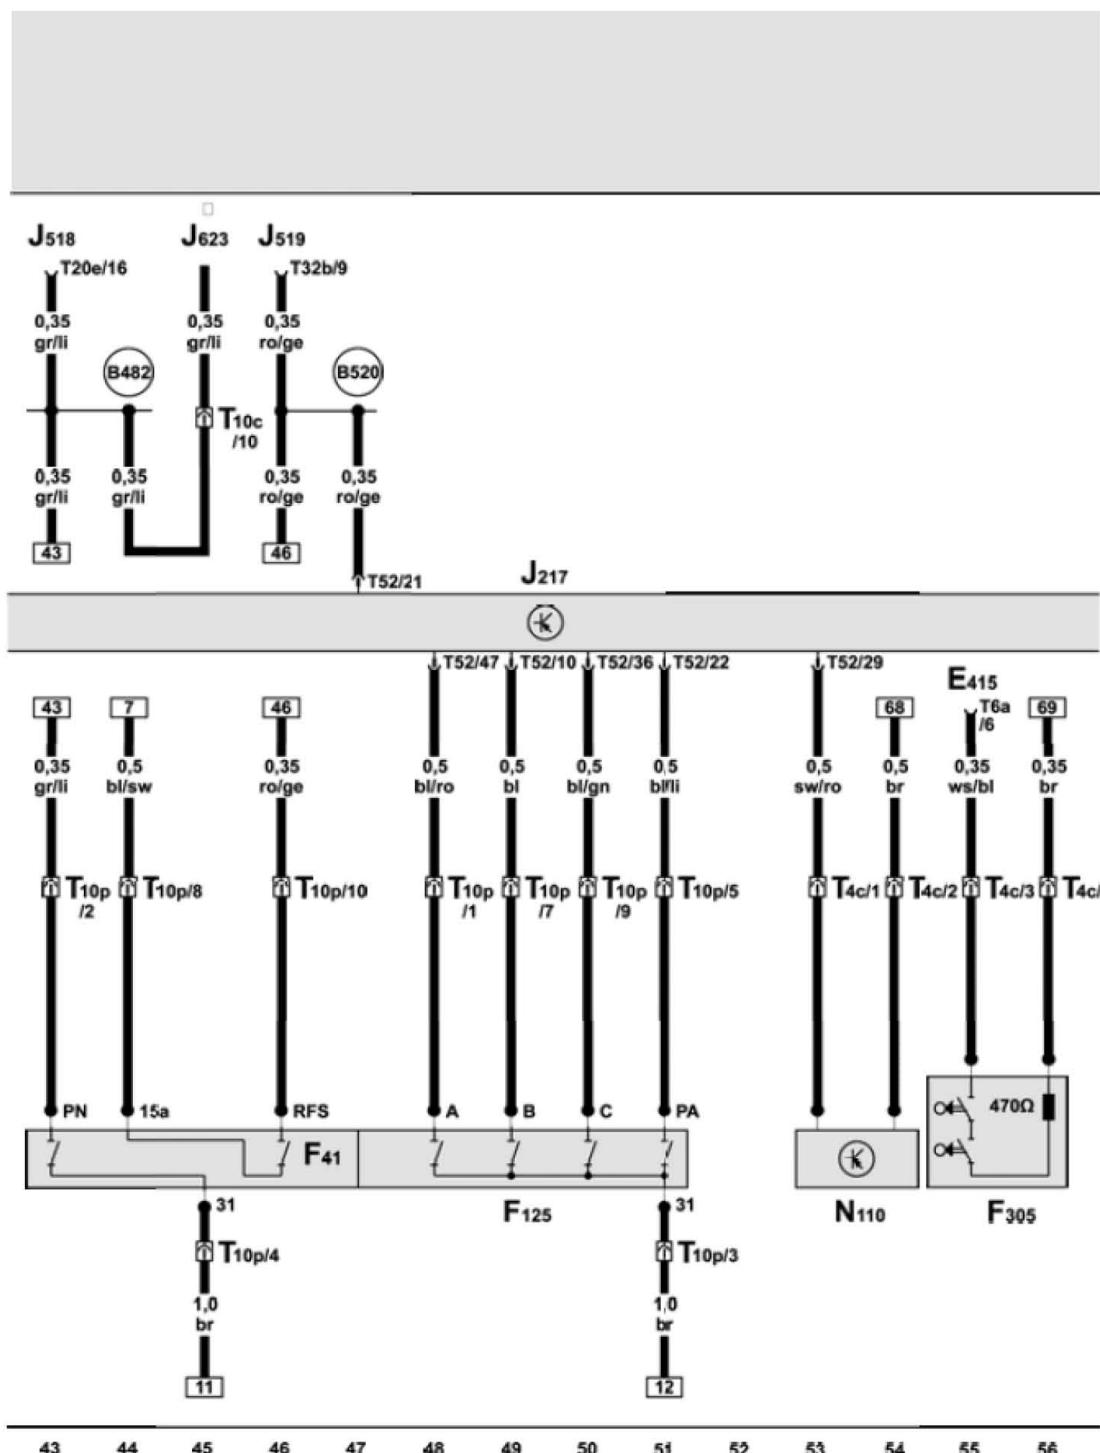

Automatic gearbox control unit, multifunction switch, gear selector position P switch, selector lever lock solenoid, reversing switch  
E415 - Entry and start authorisation switch  
F41 - Reversing switch  
F125 - Multifunction switch  
F305 - Gear selector position P switch  
J217 - Automatic gearbox control unit  
J518 - Entry and start authorisation control unit  
J519 - Onboard supply control unit  
J623 - Engine control unit  
N110 - Selector lever lock solenoid  
T4c - 4-pin connector, black, in centre console on selector lever console  
T6a - 6-pin connector, on entry and start authorisation switch  
T10c - 10-pin connector, pink, coupling station on electronics box, plenum chamber  
T10p - 10-pin connector, black, on gearbox  
T20e - 20-pin connector, black, on entry and start authorization control unit  
T32b - 32-pin connector, grey, on onboard supply control unit  
T52 - 52-pin connector, black, on automatic gearbox control unit  
B482 - Connection 18, in main wiring harness  
B520 - Connection (RL), in main wiring harness  
- see engine Current Flow Diagram

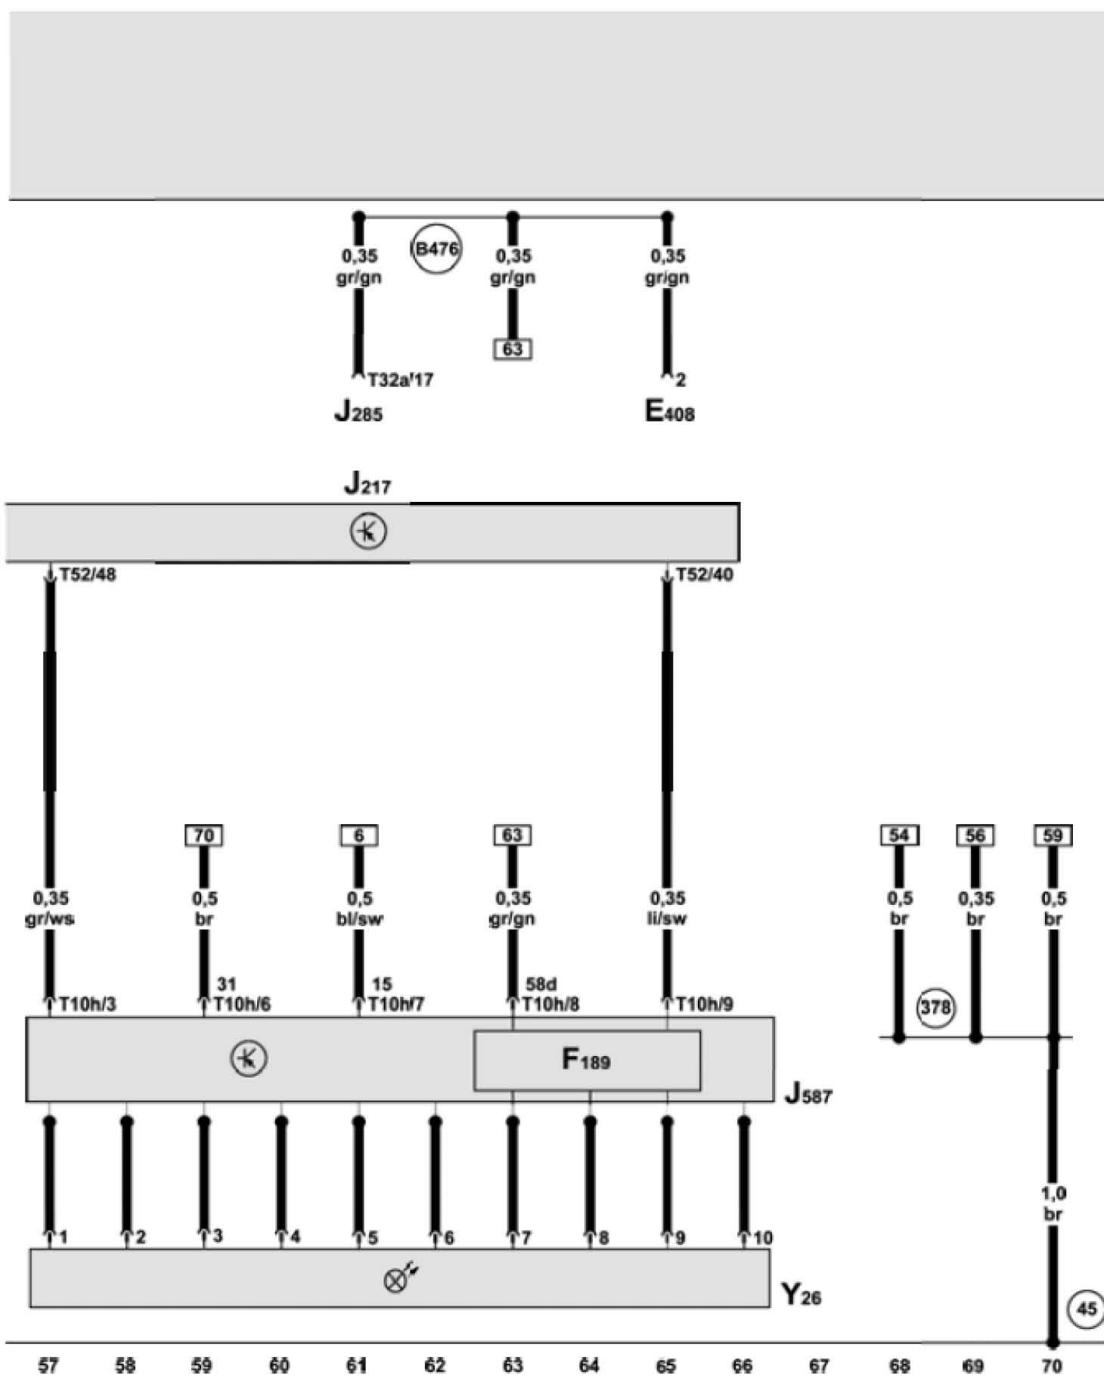

ws = white      sw = black      ro = red      br = brown      gn = green      bl = blue  
 gr = grey      li = purple      ge = yellow      or = orange      rs = pink

Automatic gearbox control unit, selector lever sensors control unit, Tiptronic switch, selector lever position display

E408 - Entry and start authorisation button

F189 - Tiptronic switch

J217 - Automatic gearbox control unit

J285 - Control unit in dash panel insert

J587 - Selector lever sensors control unit

T10h - 10-pin connector, black, on selector lever sensors control unit  
T32a - 32-pin connector, grey, on control unit in dash panel insert  
T52 - 52-pin connector, black, on automatic gearbox control unit  
Y26 - Selector lever position display  
45 - Earth point, centre behind dash panel  
378 - Earth connection 13, in main wiring harness  
B476 - Connection 12, in main wiring harness

LAUNCH