

## Remote Key Program Setting

**Pay attention to the following items when set the remote key program:**

- 1). When 2 main keys are learned, maximum another 10 additional main keys or specific keys can be added using this program.
- 2). One or more specific keys shall be learned as soon as the 2 learned main keys are taken out.
- 3). This program is used only for adding keys. It cannot delete previous learned keys.
- 4). The notch of the key to be learned must be consistent with the current key notch.

**Please perform the setting according to the following procedures:**

- 1). Insert previous learned main key to turn on the ignition switch with engine off.
- 2). Turn off ignition switch and pull out the key.
- 3). Insert the 2<sup>nd</sup> learned main key within 10s. Turn on the ignition switch with engine off.
- 4). Turn off ignition switch and pull out the key.
- 5). Insert the new key to be learned within 10s. Turn on the ignition switch with engine off. Vehicle will learn this new key.