


Power Outlet – 115V

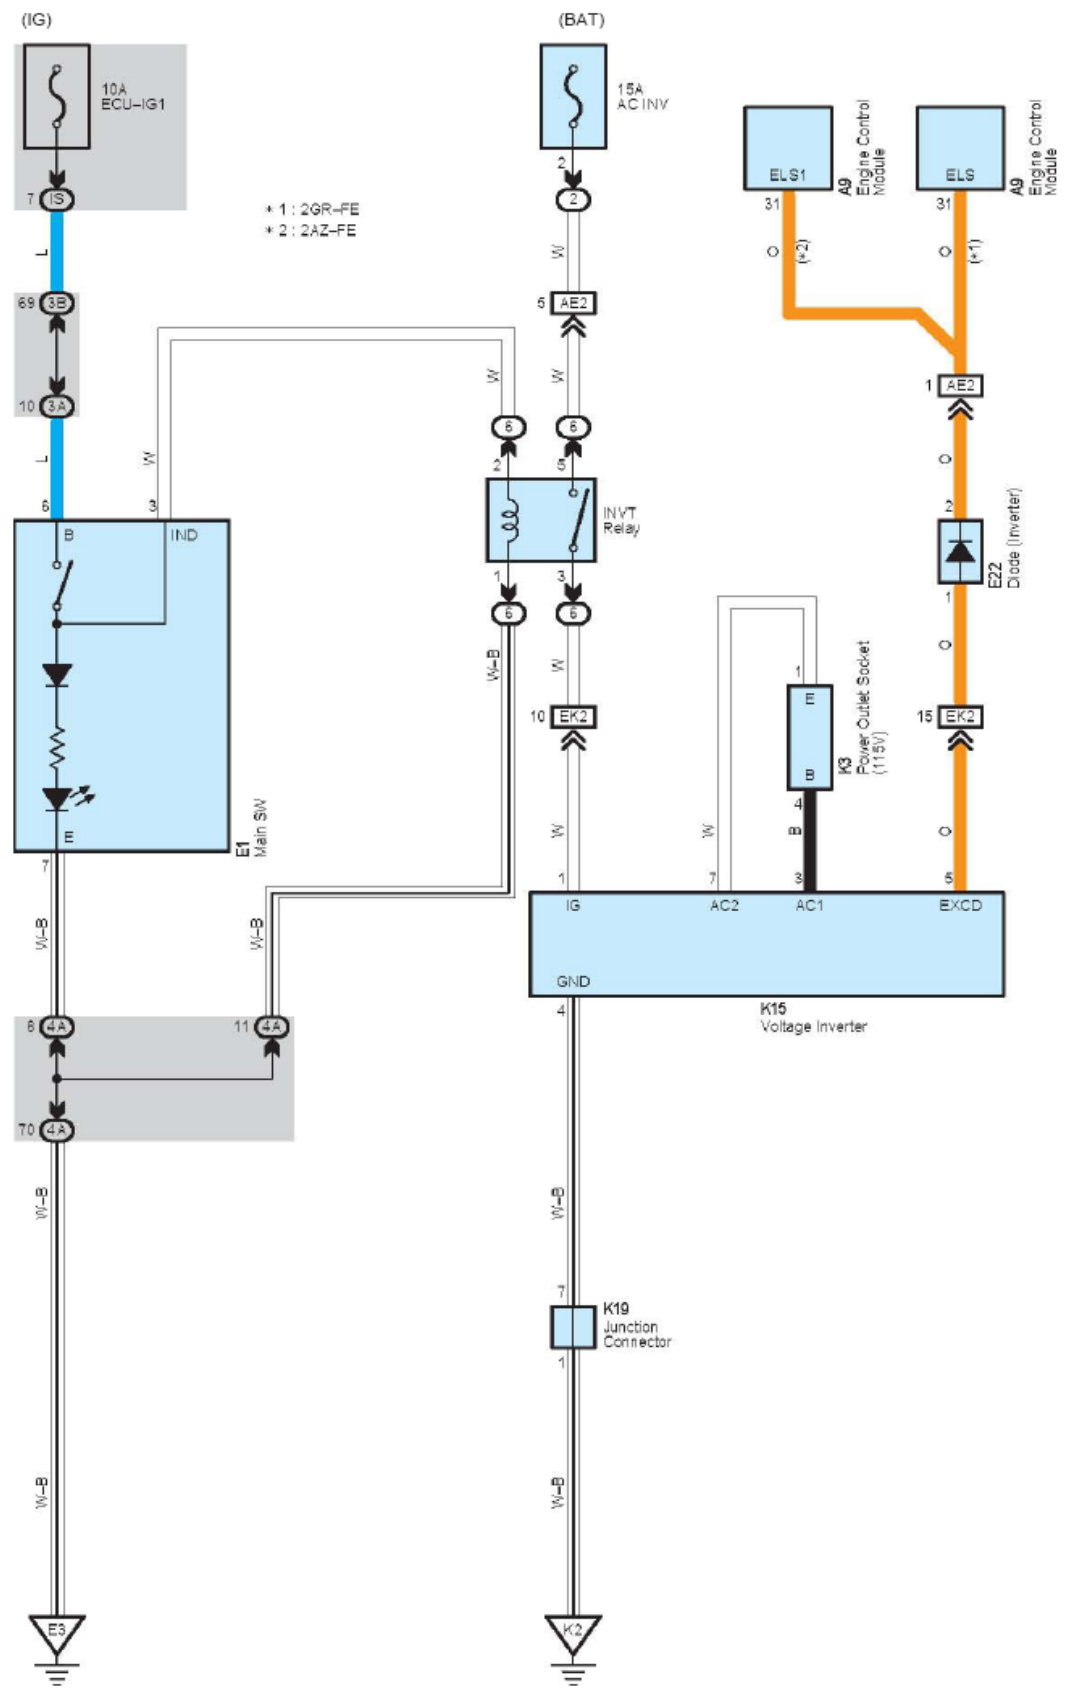

Relay Blocks

Code	Relay Blocks (Relay Block Location)
2	Engine Room R/B No.2 (Engine Compartment Right)Engine Room R/B No.2 (Engine Compartment Right)
6	R/B No.6 (Cowl Side Left)

Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
3A	Instrument Panel Wire and J/B No.3 (Instrument Panel Center)Instrument Panel Wire and J/B No.3 (Instrument Panel Center)
3B_	
4A	Instrument Panel Wire and J/B No.4 (Instrument Panel Center)
IS	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)

Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
AE2	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
EK2	Instrument Panel Wire and Floor Wire (Left Kick Panel)

Ground Points

Code	Ground Points Location
E3	Instrument Panel Reinforcement Center
K2	Left Quarter Panel

LAUNCH