

2008菱智仪表板系统电路图

摘要:

该文档主要描述2008东风风行菱智仪表板系统电路图。

关键字:

2008 东风风行 菱智 电路图 仪表


LAUNCH

目录

1. 仪表和计量表.....	1
2. 燃油和机油压力警告灯.....	5
3. 制动警告灯.....	6

LAUNCH

1. 仪表和计量表

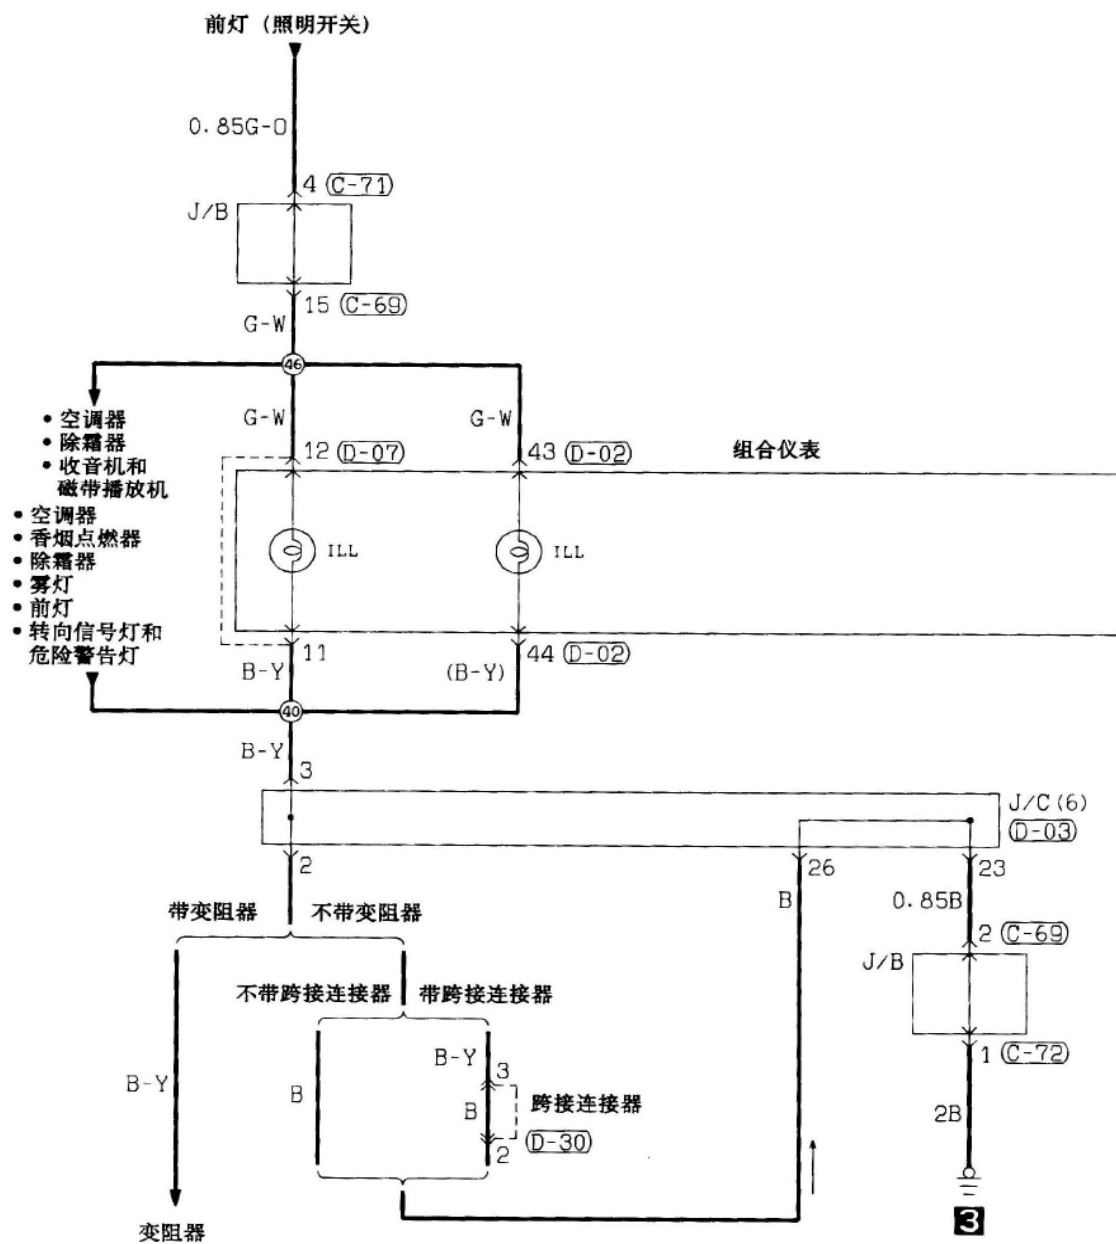

(A-47) (C-16)



 
(C-69)




(C-71)



(C-72)



(D-01)

 


(D-28)



(D-30)




 (F-06)



(G-04)



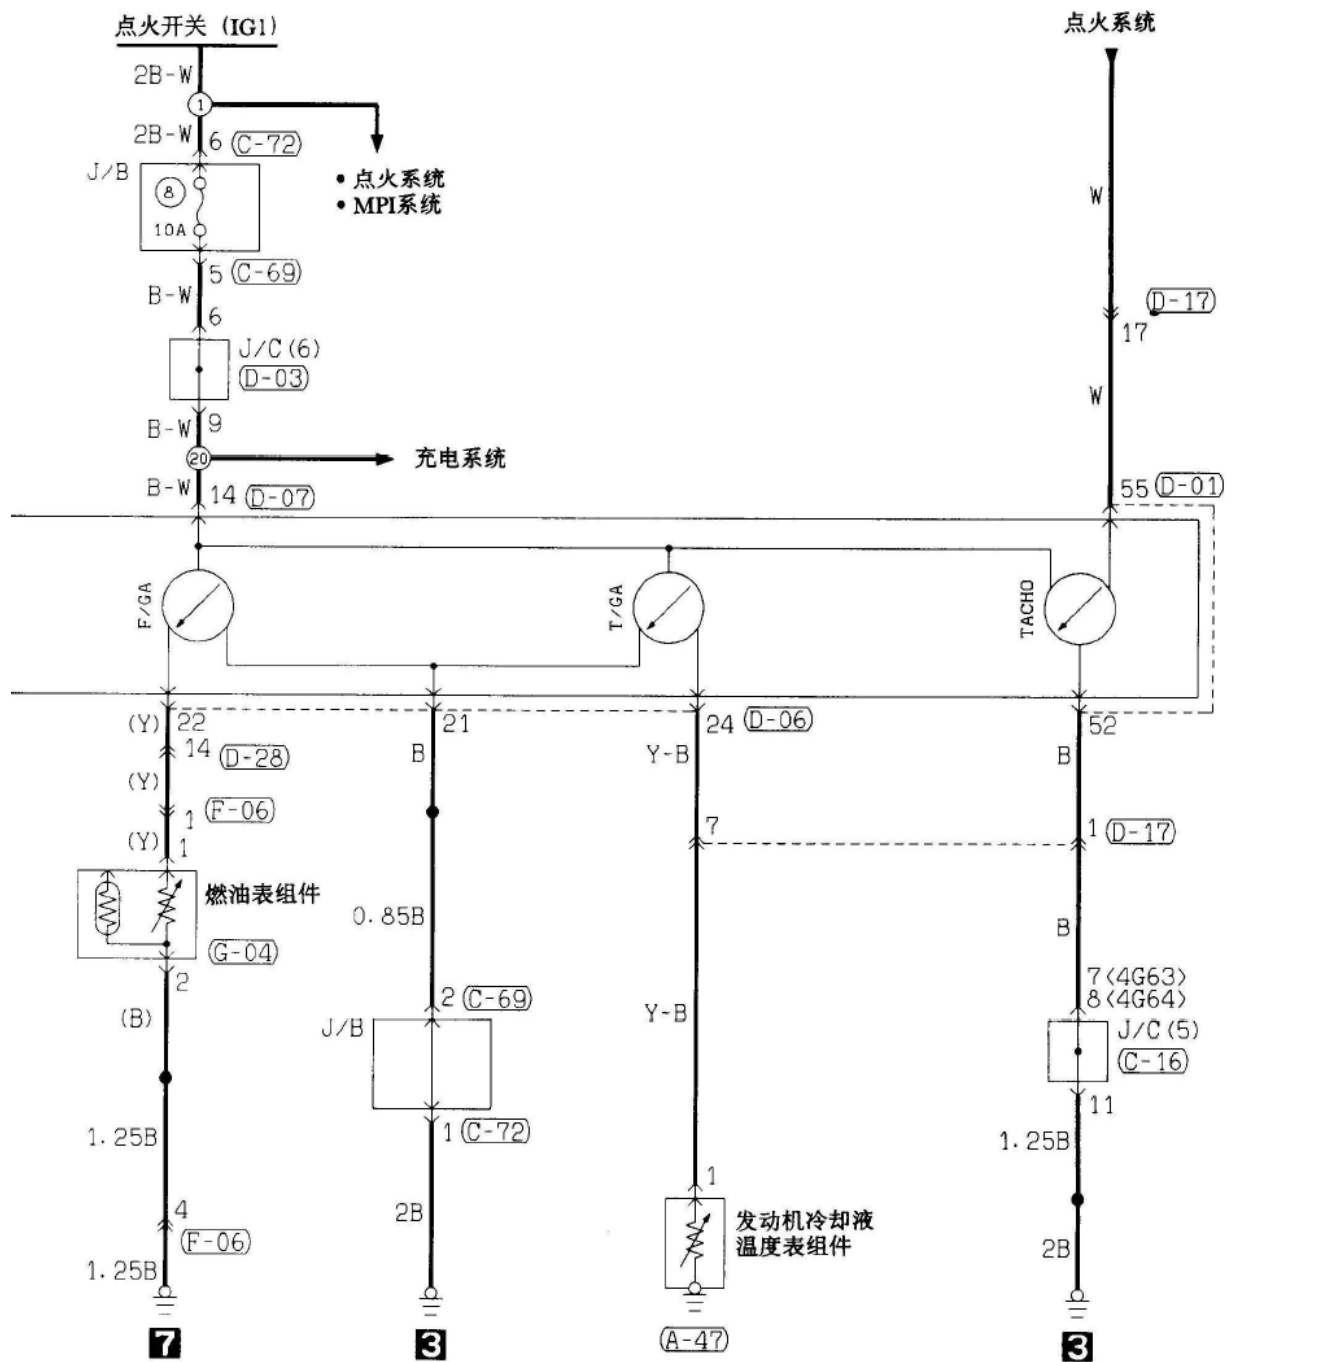

D-02

31	32	33	34	35	36	37	38	39	40	41	42	43	44
12	13	14	15	16	17	18	19	20	21	22			
23	24	25	26	27	28	29	30	31	32	33			

D-03

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

D-06



21	22	23	24	25	26	27	28	29	30


D-07

1	2	3	4	5	6	7	8	9	10	11	12	13	14


D-17

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

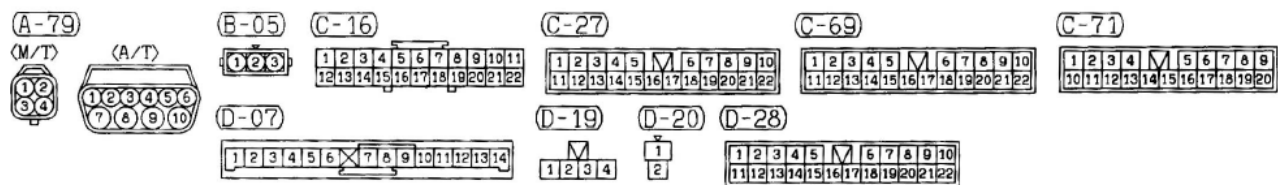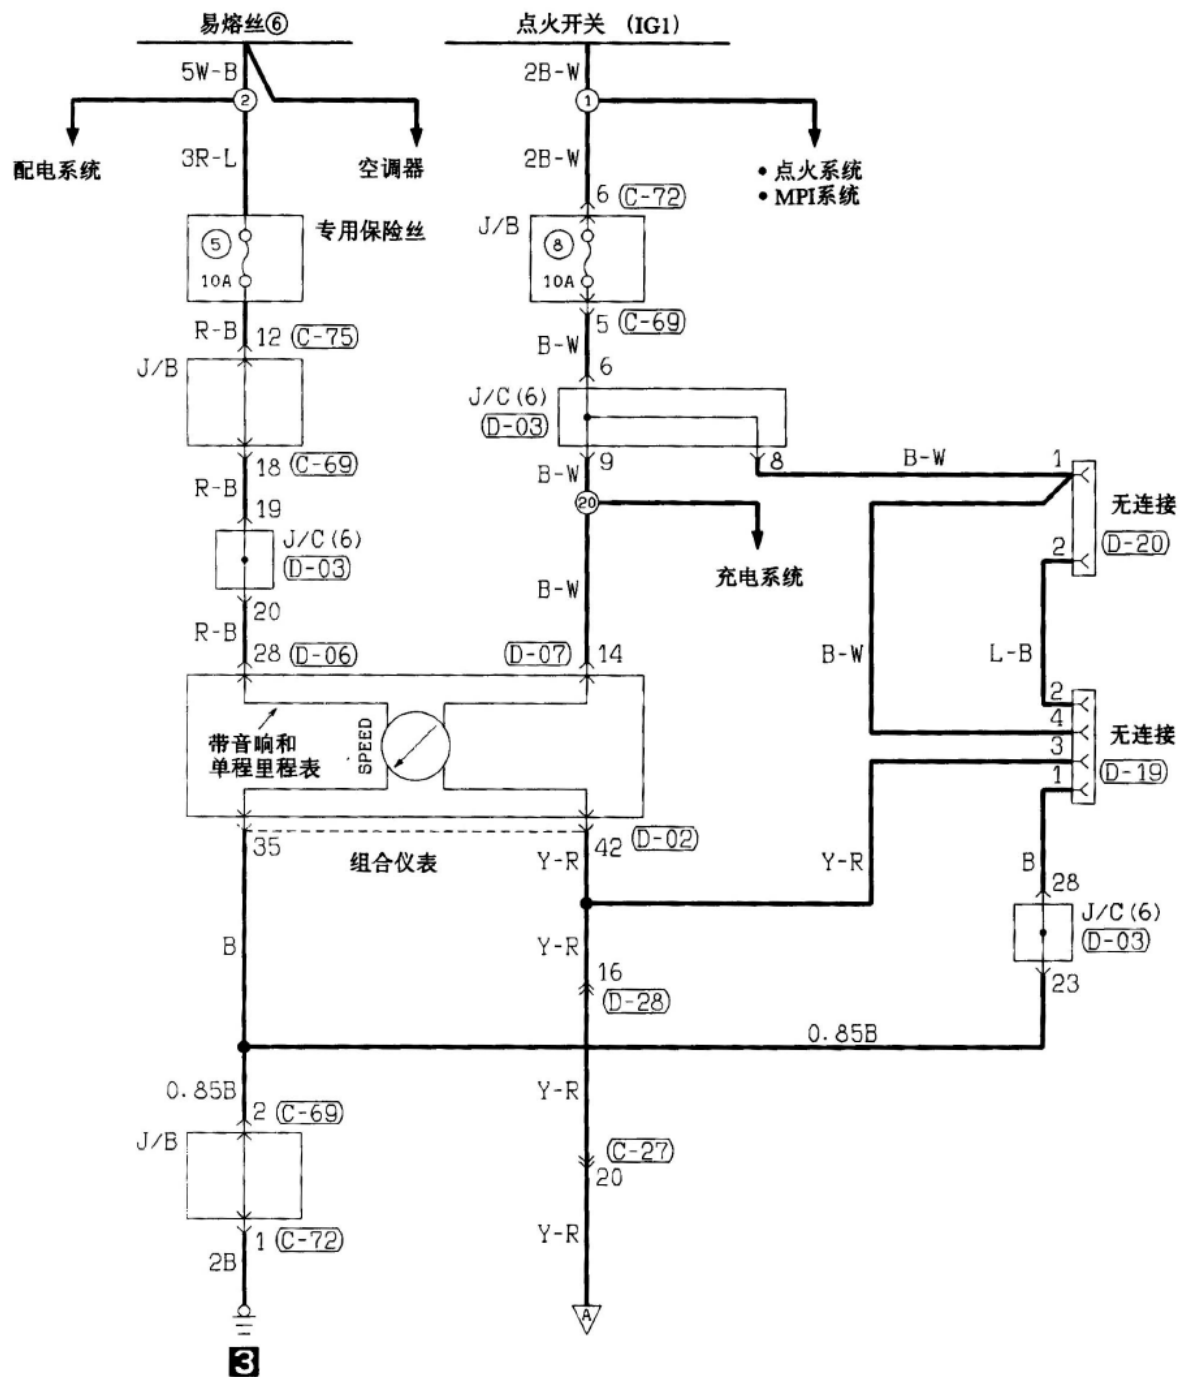

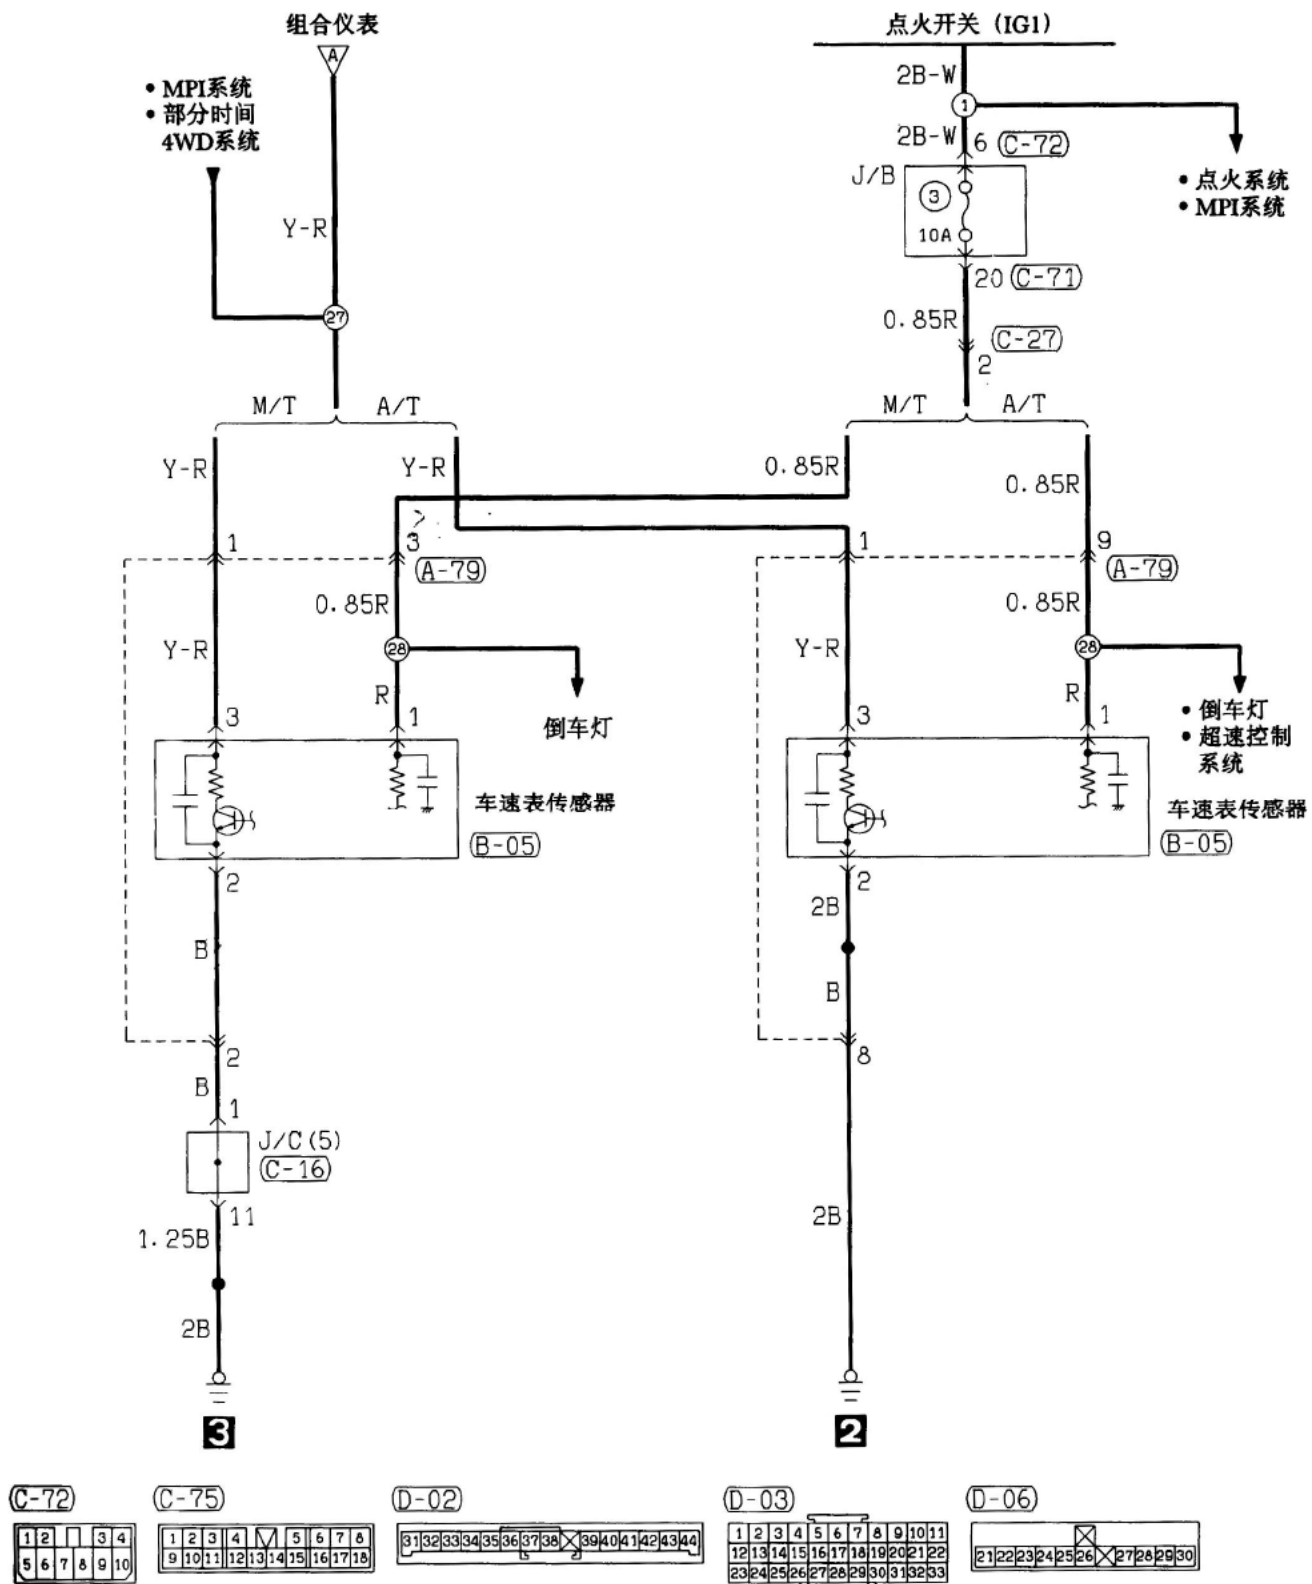

2.燃油和机油压力警告灯

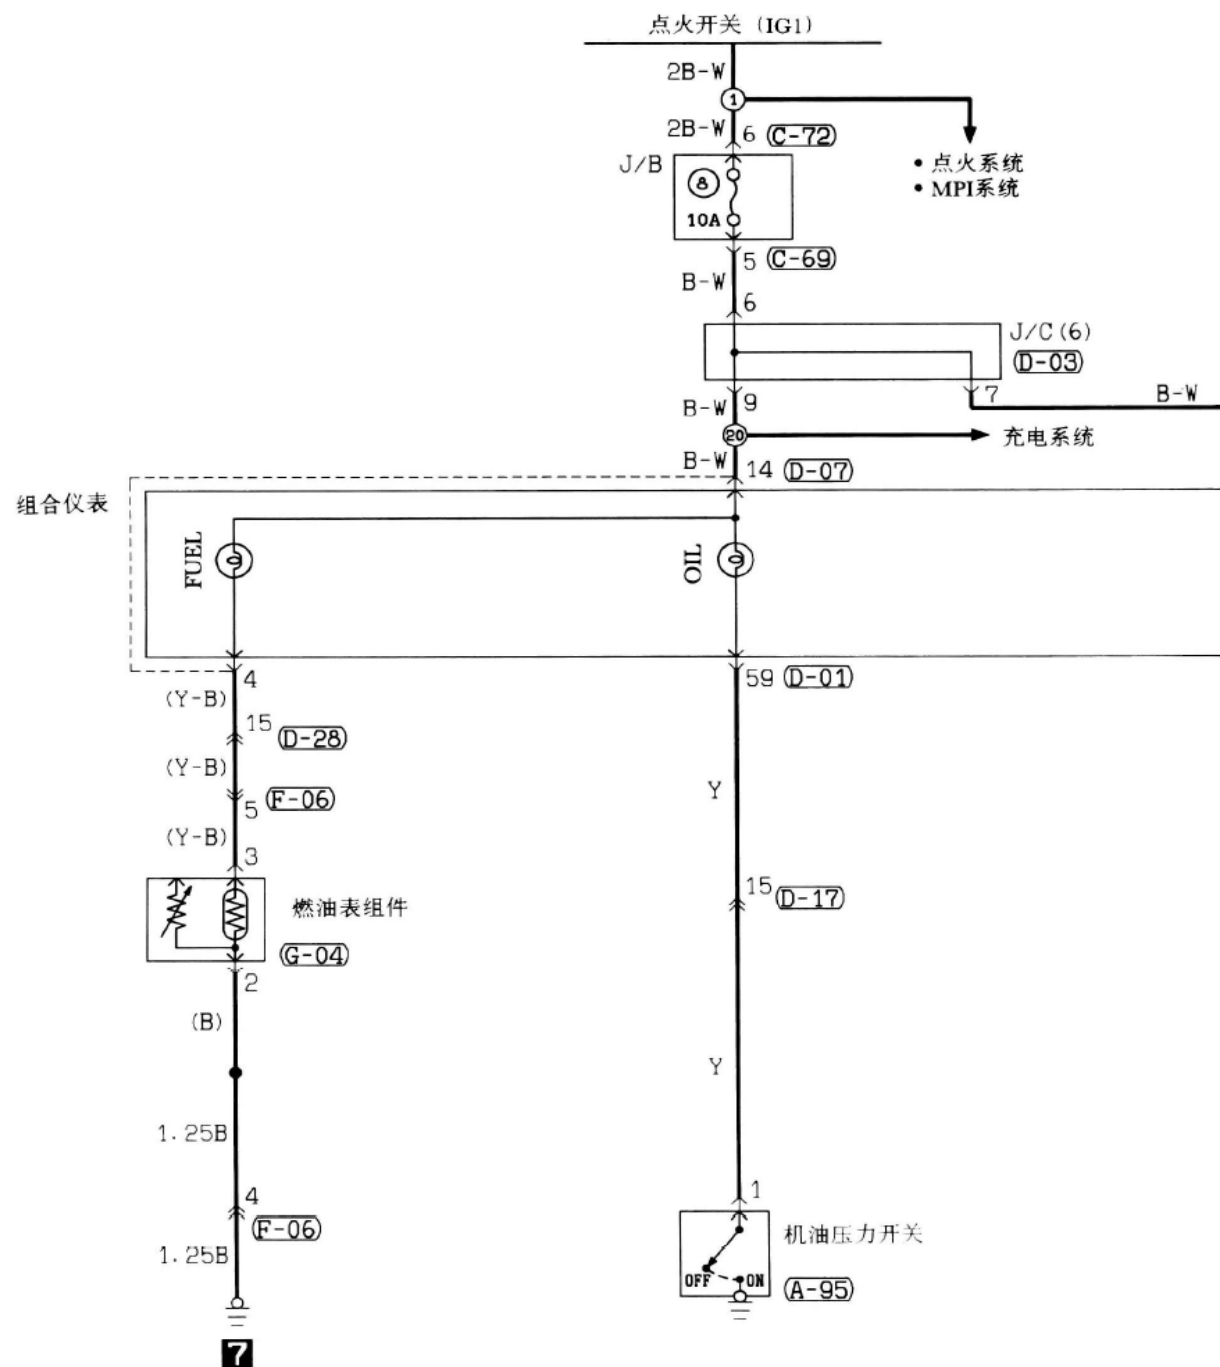

A-63
1
2

A-95
1B

C-69
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20 21 22

C-72
1 2 3 4
5 6 7 8 9 10

D-01
5 1 5 2 5 3 5 4 5 5 5 6 5 7 5 8 5 9 6 0 6 1 6 2

D-03
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
23 24 25 26 27 28 29 30 31 32 33

D-06
1 2 2 3 2 4 2 5 2 6 2 7 2 8 2 9 3 0
3 1 3 2 3 3 3 4 3 5 3 6 3 7 3 8 3 9 4 0

