CHRYSLER Renegade Blinking Oil Life Lamp Reset Method

Supported equipment: Launch's full range of comprehensive


diagnostic equipment


Current equipment: PAD V

Function description: After repair is completed for CHRYSLER Renegade, the blinking oil life lamp needs to be reset.

Tested models: CHRYSLER/2018/Renegade, VIN: 988611415JK1*****

1. On a PAD V, choose [Local Diagnose] and then [CHRYSLER] to test.

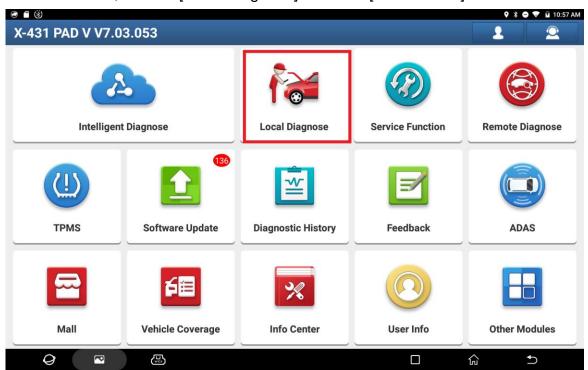

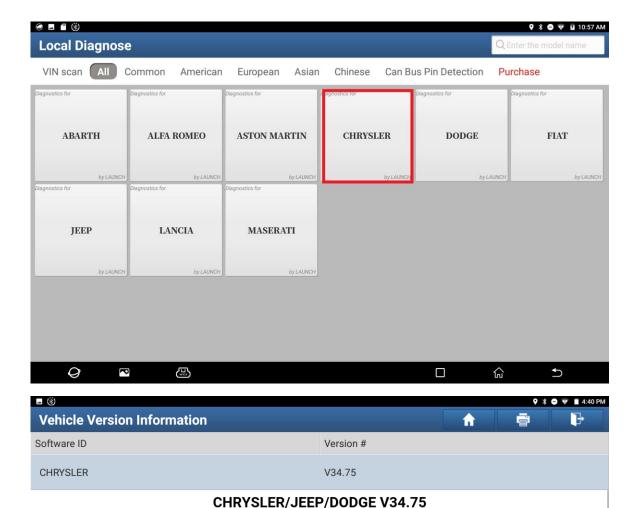

Introduction

ECU Coverage:

 
Engine, Automatic Transmission, Anti-lock Brake, Airbag, Body, A/C, Dashboard, Memory Seat, Trap-door, Steering Angle, Wireless Control Module, Tire Pressure, etc.

- Read Car Computer Information
 Read Car Fault Information
- Clear Car Fault Information
 Read Car Running Data
- Actuation Test For Car Component


Special Functions:


• ENGINE [Engine System]:

Check PCM Odometer, Check PCM VIN, Learn ETC, Reset ECU, Reset Memory, Clear Variable Line Pressure(VLP) Counters, Relearn Cam/Crank, Injector Quantity Adjustment, View/Reset duty cycle accumulators, View/reset trip information accumulators, Enable / Disable vehicle features, Reset Nox adsorber counts, Reset after treatment trip information, Turbo actuator pre-align / self calibrate, Reset regenerative filter timers, Reset Fuel Pressure Limiting Valve Accumulators, Stationary Desoot, View/Reset Duty Cycle Maps, Idle Shutdown Timer Adjustment, Oil Change Monitor Type, View/Reset NAC After Treatment Over Temp Events, Manual DPF Regeneration, DPF Replacement,




2. Click [16 PIN Connector] and choose [Automatically Search] to identify car models automatically.

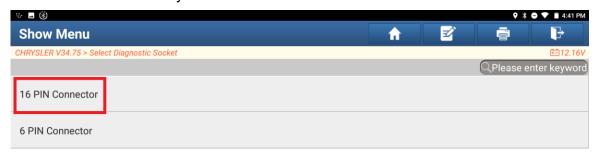


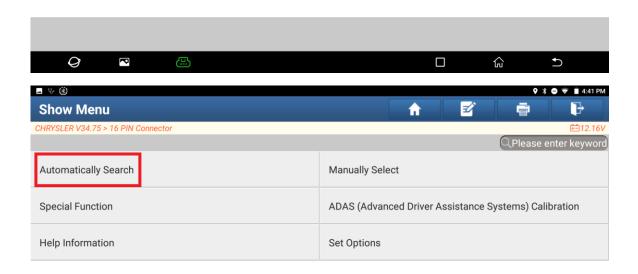



3. Click OK. It displays a prompt message indicating that the SGW needs to be unlocked.

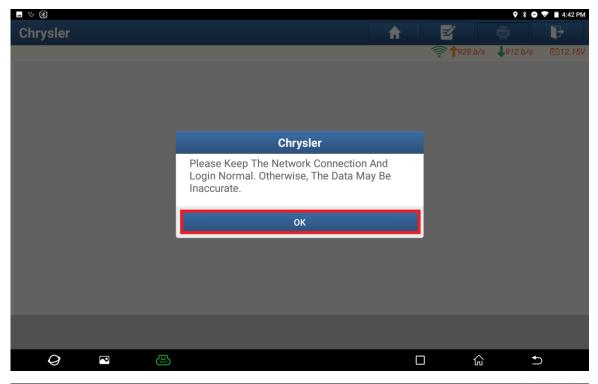

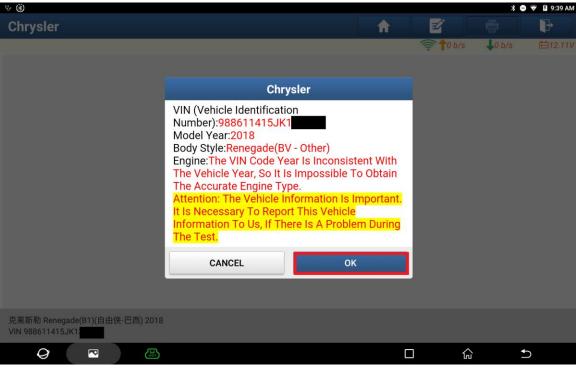

4. Click [Yes], choose [North America], and input the FCA account you purchased.



The Vehicle Is Equipped With SGW (Security Gateway) Module.

Do You Want To Login with FCA Account To Unlock SGW (Security Gateway) Module?


Supports European Region Or North American Region(USA & Canada & Mexico). It Depends On The Business Area Of Your Dealer.


YES - Login With FCA Account, Unlock The SGW (Supports'Version Information', 'Read DTC', 'Read Data Stream', 'Actuation Test'And'Special Function')

No - Not Unlock SGW (Only Supports'Version Information', 'Read DTC'And'Read Data Stream')


Without Unlocking SGW (Security Gateway).

The Diagnostic Software Only Supports'Version Information', Read DTC'And'Read Data Stream'Functions.

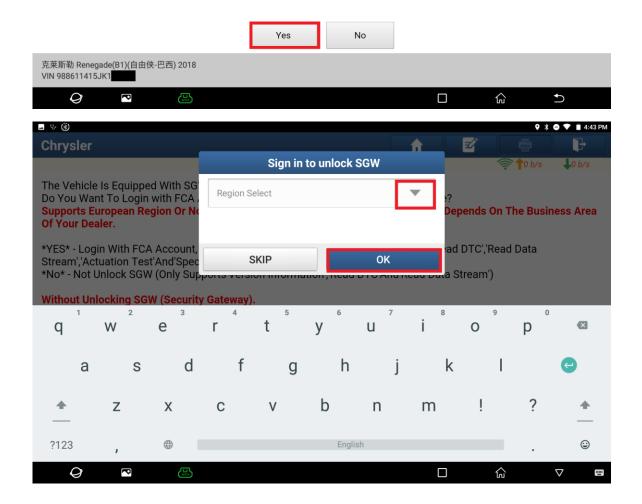


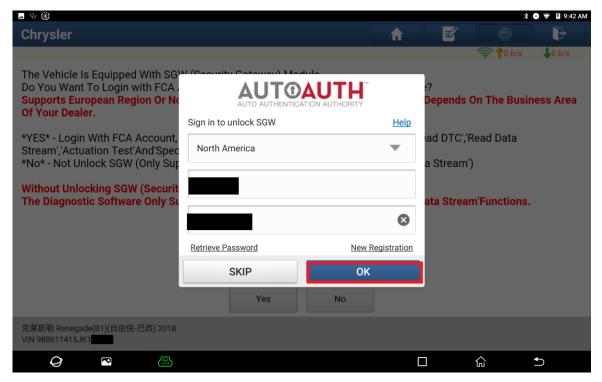


5. Click "OK".

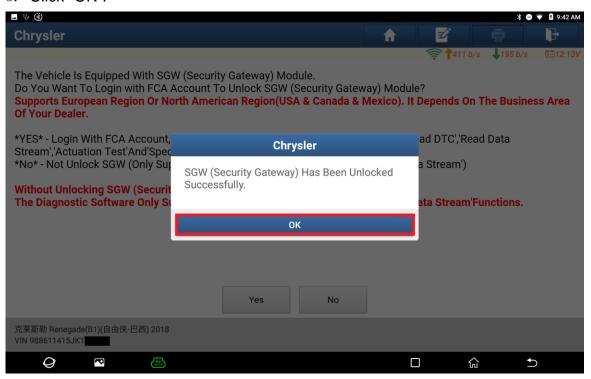


6. On the PAD V, click [Smart Detection] to scan the entire vehicle systems.

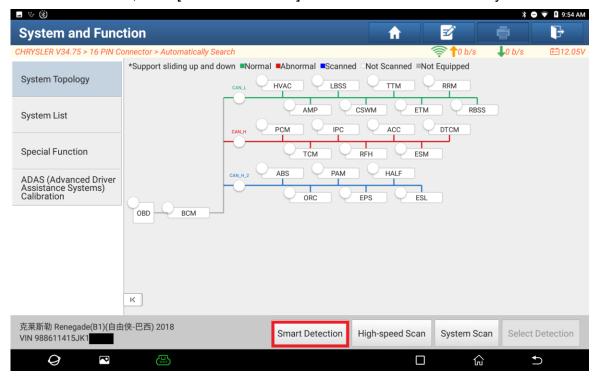

7. Click [PCM (Powertrain Control Module)] to access the system.

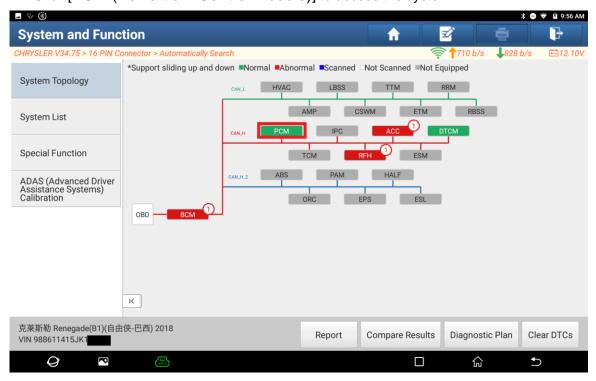

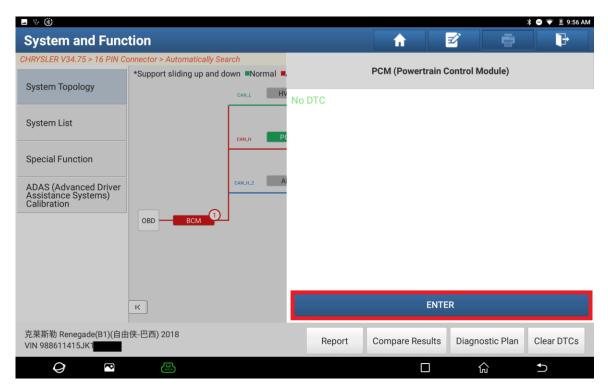


8. Click [Special Function].







9. Click [Reset Blinking Oil Life Lamp].

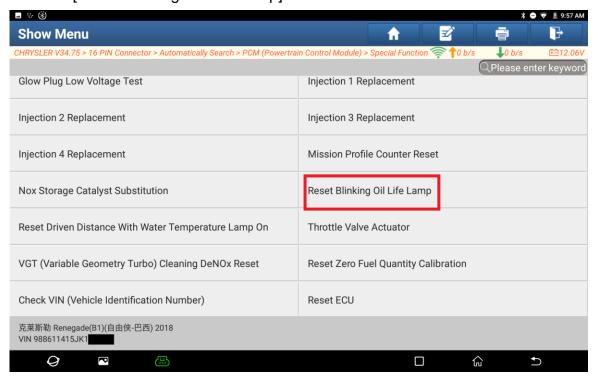


10. Click OK.

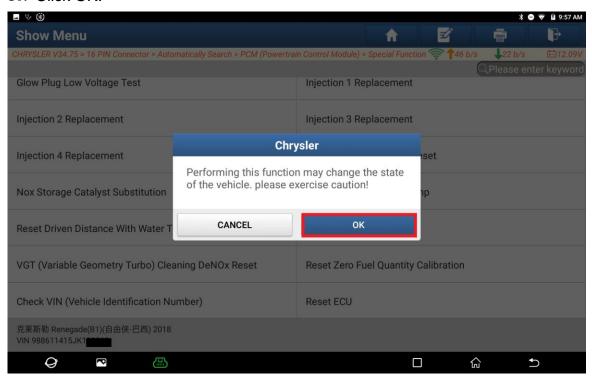

11. Click OK.

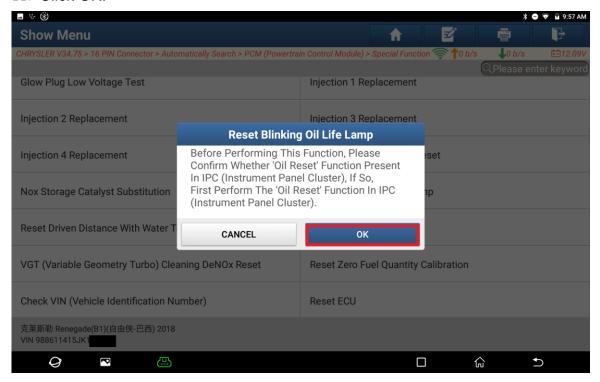

12. Click OK.

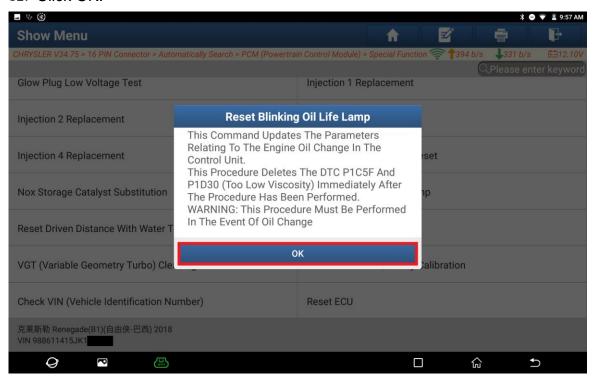



13. Click the Back icon.







14. Click OK and wait.

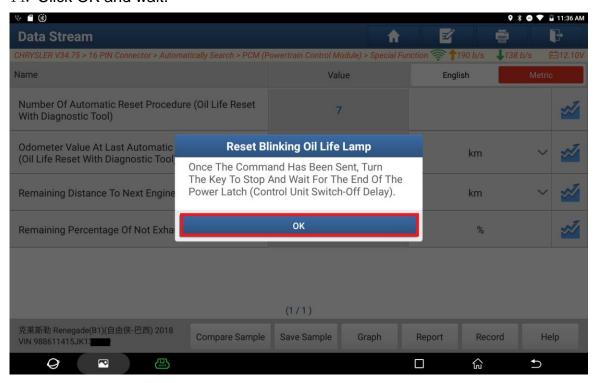

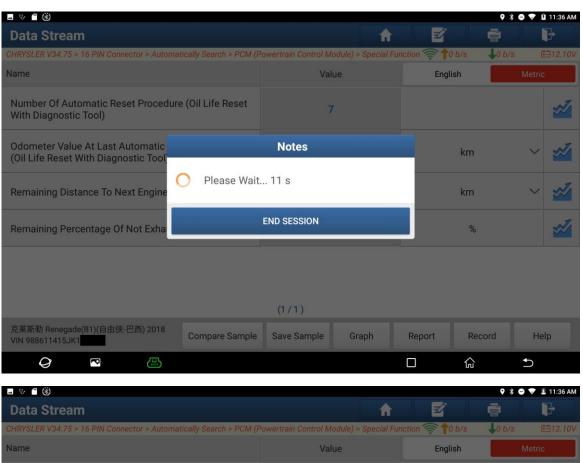


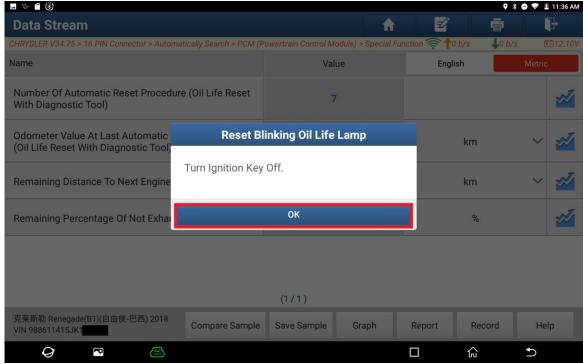

15. Click OK.

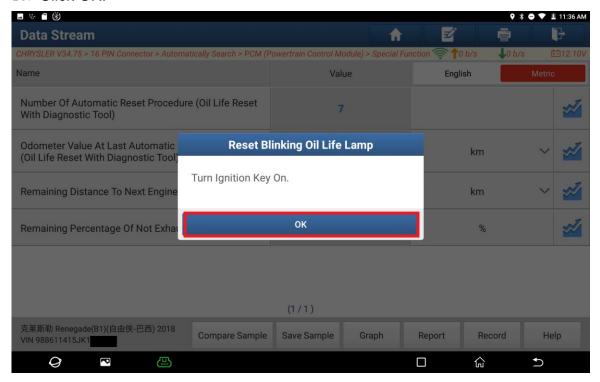


16. Click the Back icon.

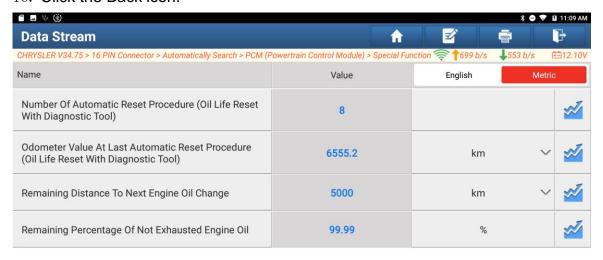



17. Click OK. The operations are completed.

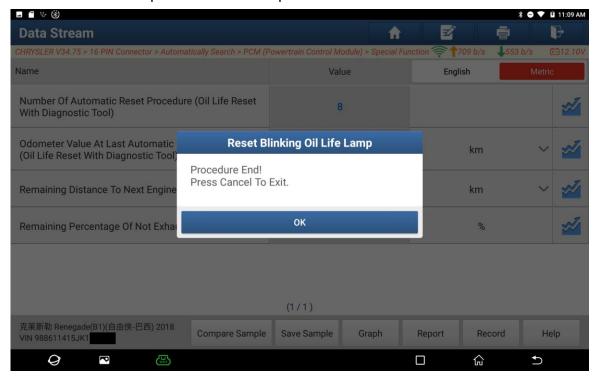

Statement:

The content of this document is copyrighted by Shenzhen Launch Tech Co., Ltd., and no individual or organization may quote or reprint it without consent.