

# Toyota Crown HEV Reset Memory


**Function Description:** After the automatic transaxle assembly and valve body assembly are replaced, the ECU learning value must be reset. This function is used to delete the ECU learning value.

**Supported Products:** Launch PRO or PAD series comprehensive diagnostic equipment


**Tested Model:** Toyota Crown HEV 2024

## Procedure:


1. Click "ECM (Engine Control Module)" to access it. (See the following figure.)

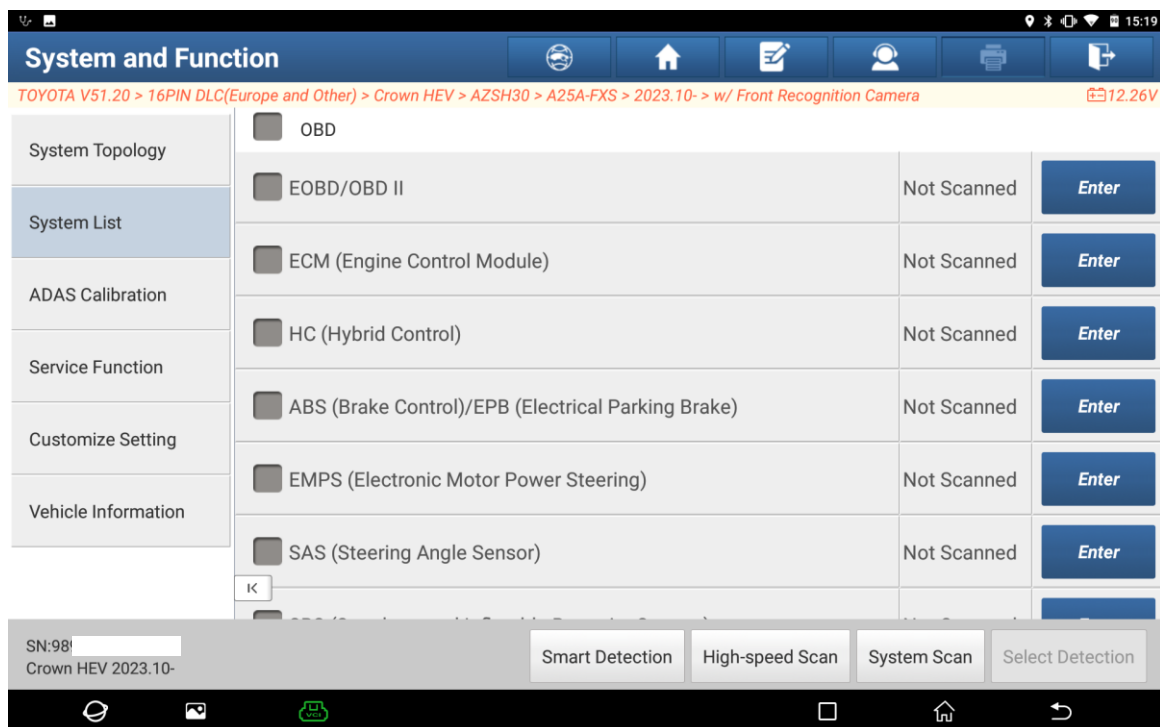


2. Choose “Special Function”. (See the following figure.)

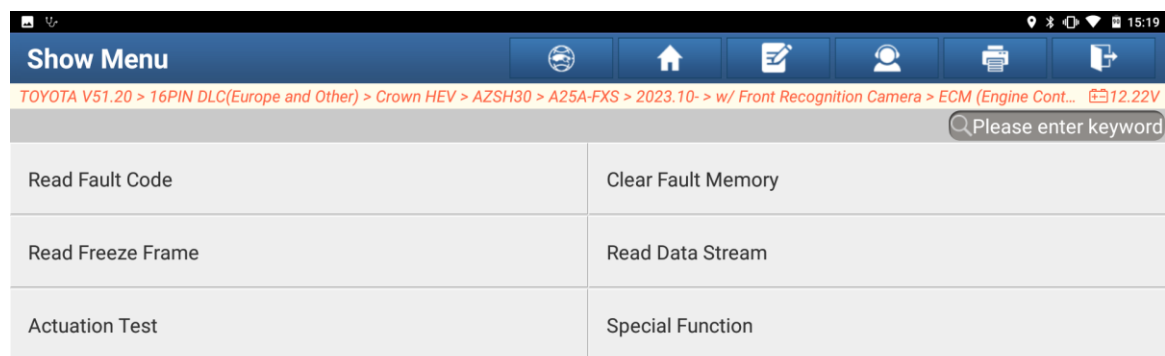


3. Choose “Reset Memory”. (See the following figure.)

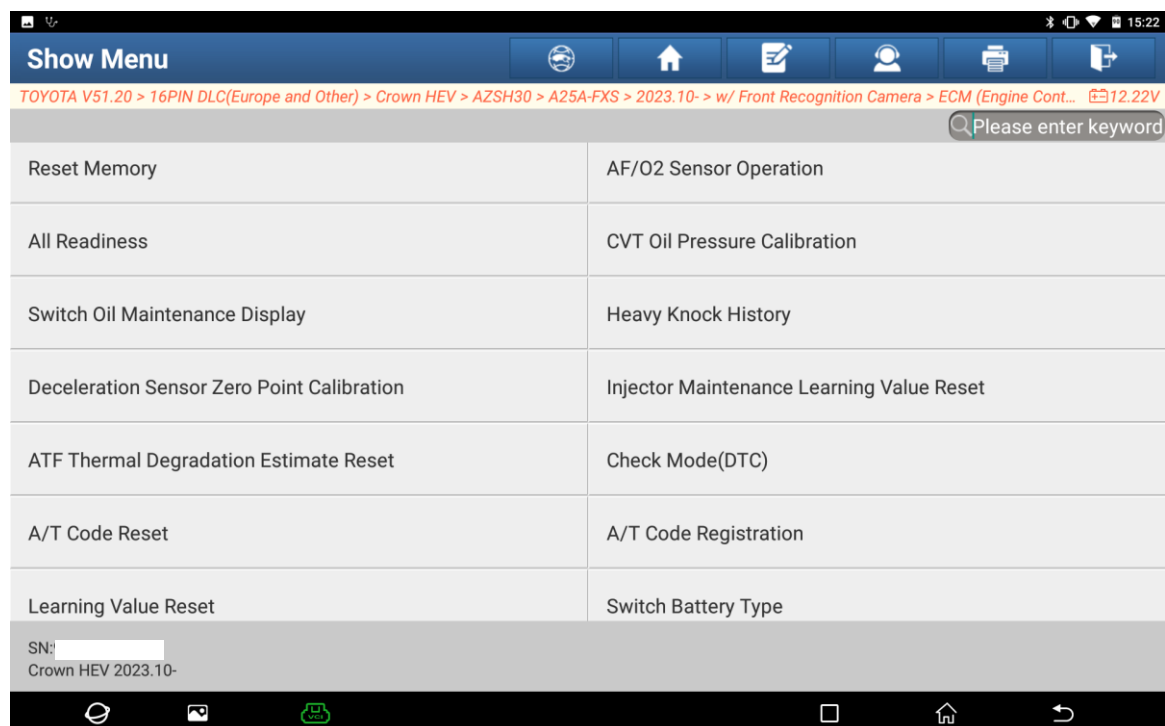


4. Use this function after replacing the automatic transaxle assembly and valve body assembly. Click OK. (See the following figure.)

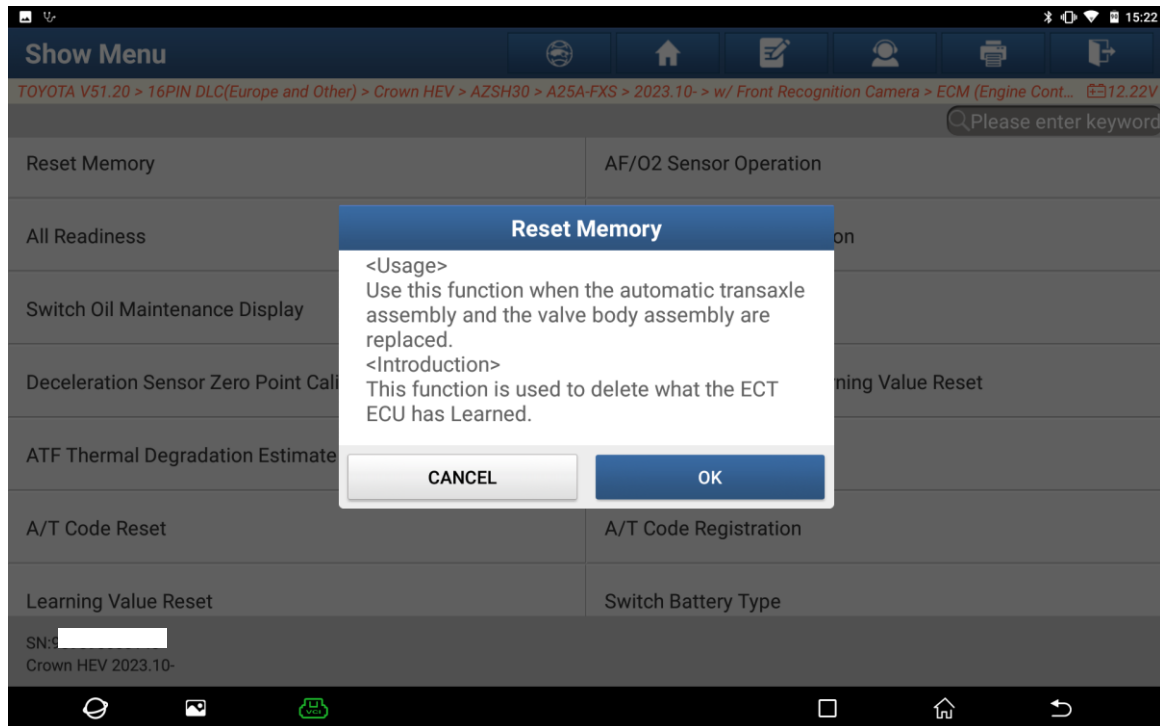


5. Click OK. (See the following figure.)

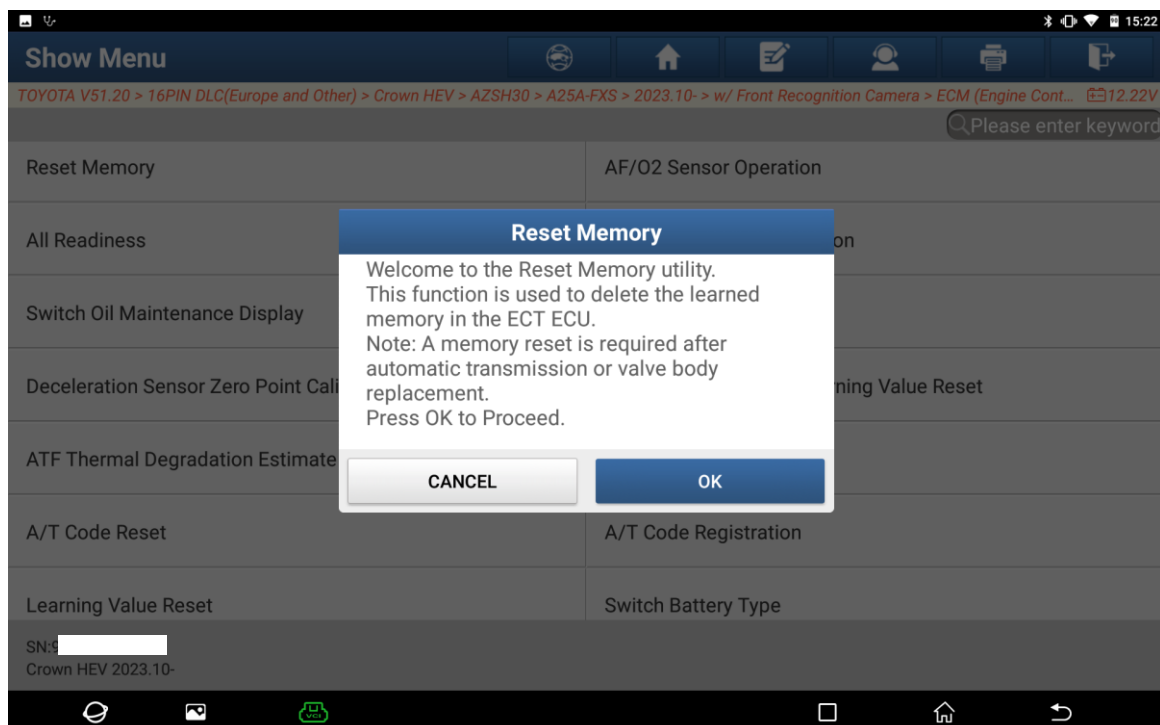

## 6. Resetting...Please wait.

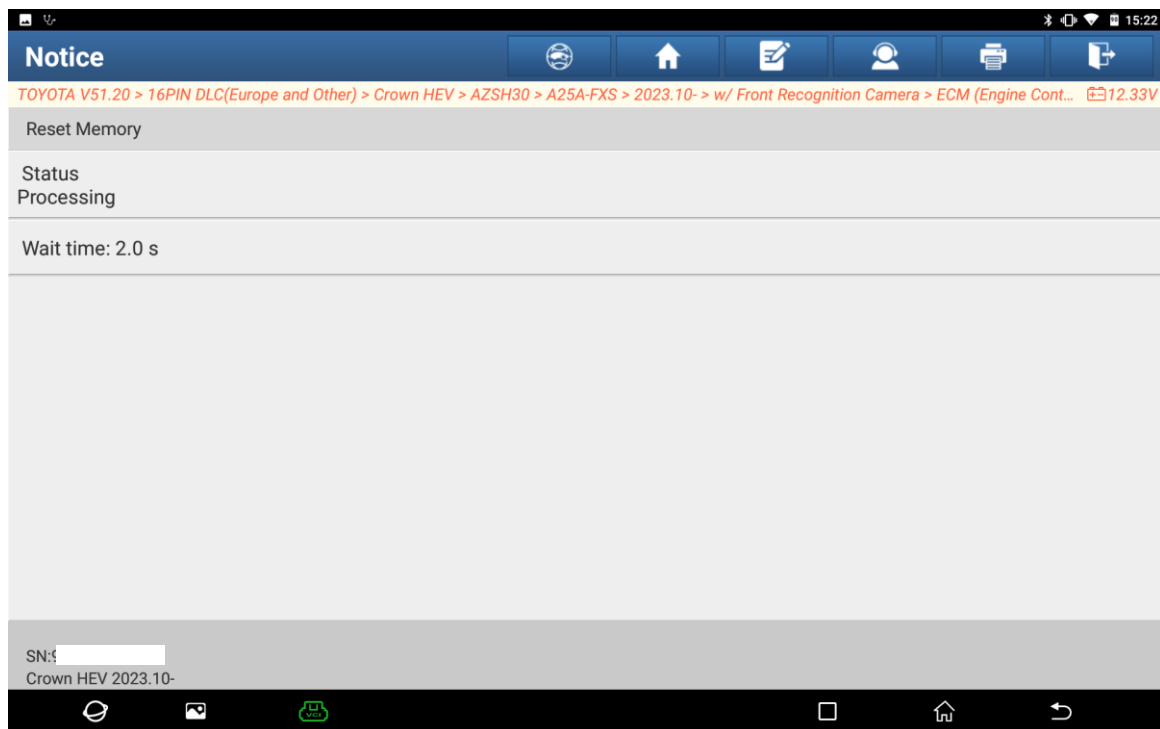

## 7. Memory reset is executed successfully. Perform the following operations, and click OK to exit.

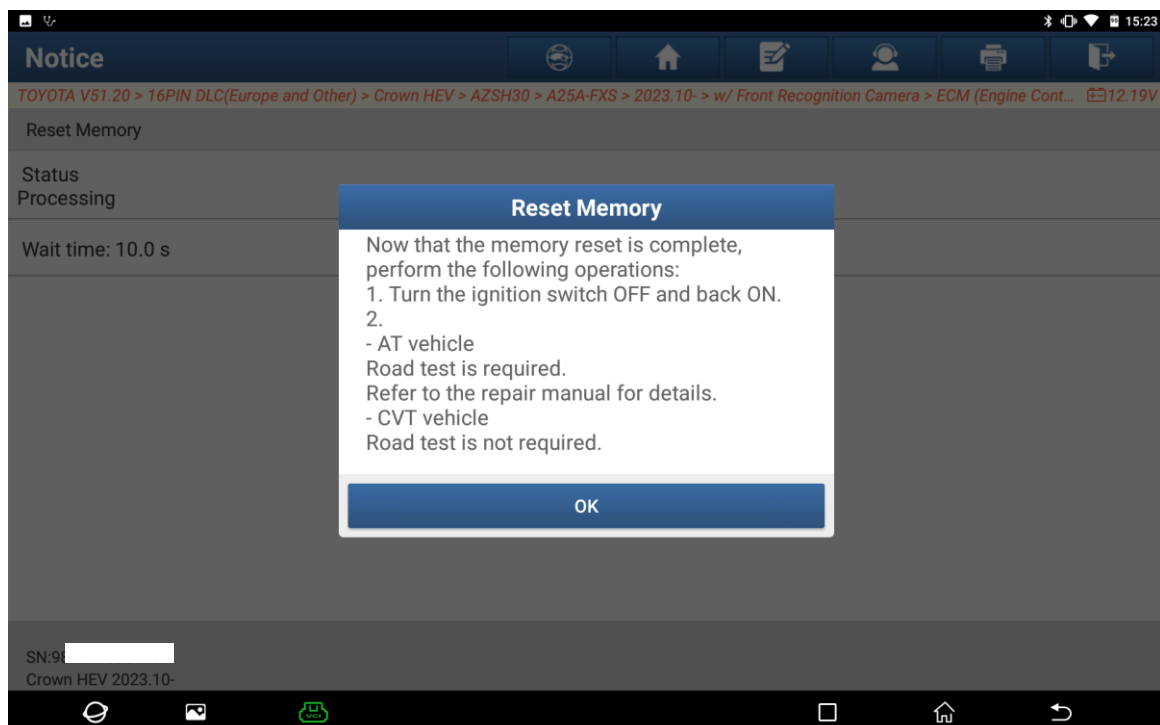

## Statement:

The content of this document is copyrighted by Shenzhen Launch Tech Co., Ltd., and no individual or organization may quote or reprint it without consent.