

CHRYSLER Renegade (BV) Enable HV Battery Contactors for Service


Supported equipment: Launch's full range of comprehensive diagnostic equipment



Current equipment: PAD 5

Function description: Enable HV (hybrid vehicle) battery contactors for service on CHRYSLER Renegade (BV)

Tested model: CHRYSLER/2020/Renegade (BV), VIN: 1C4BU0001LP0*****

1. On a PAD 5, choose [Local Diagnose] and then [CHRYSLER] to test.

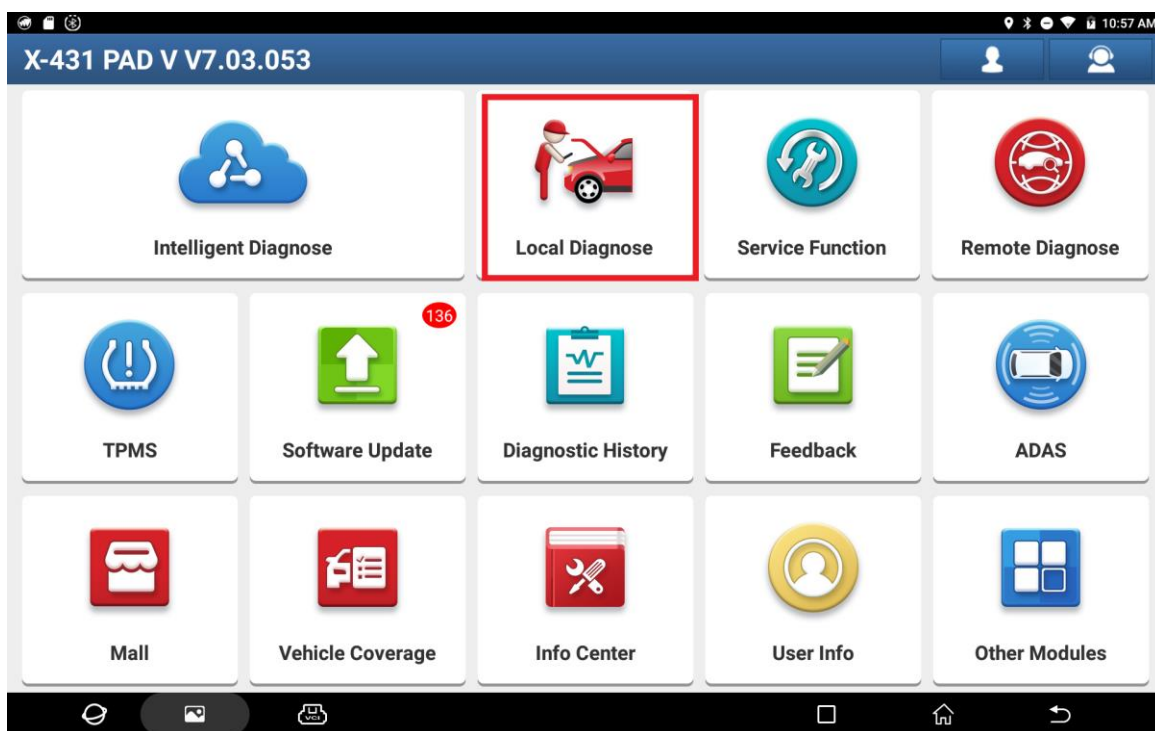

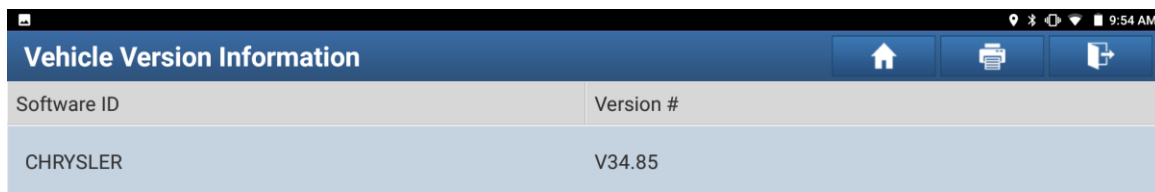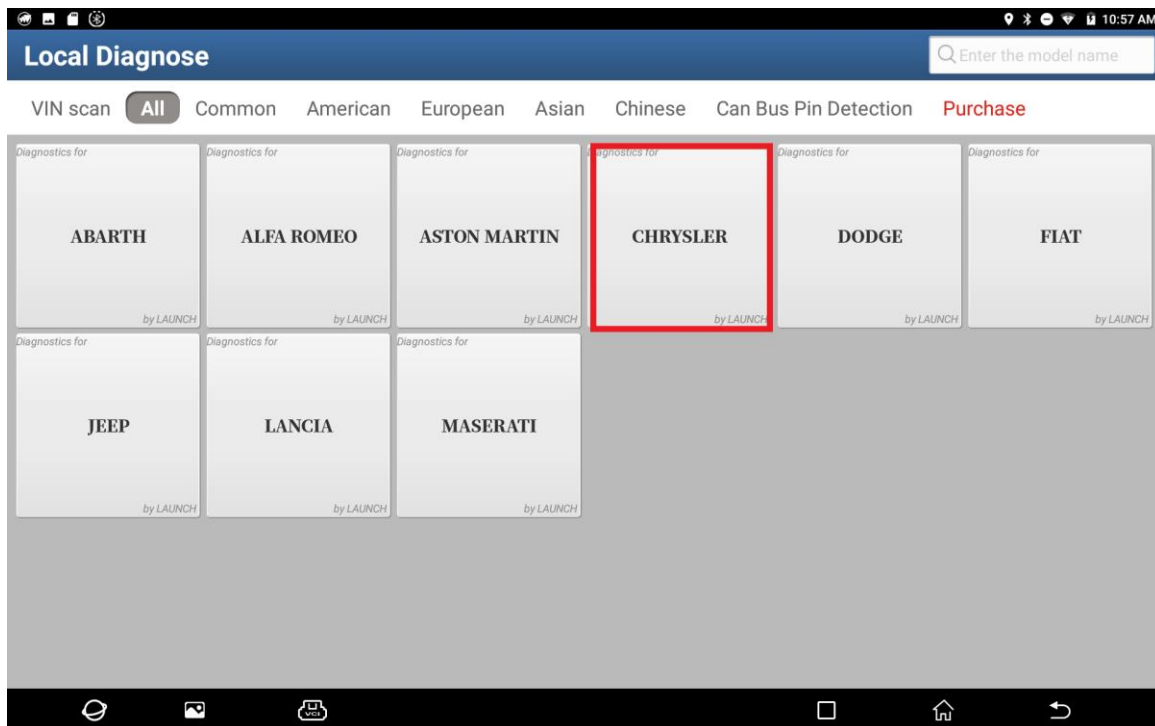

CHRYSLER/JEEP/DODGE V34.85

Introduction

ECU Coverage:

 
Engine, Automatic Transmission, Anti-lock Brake, Airbag, Body, A/C, Dashboard, Memory Seat, Trap-door, Steering Angle, Wireless Control Module, Tire Pressure, etc.

Basic Functions:



- Read Car Computer Information
- Read Car Fault Information
- Clear Car Fault Information
- Read Car Running Data
- Actuation Test For Car Component

Special Functions:



- **ENGINE [Engine System]:**
Check PCM Odometer, Check PCM VIN, Learn ETC, Reset ECU, Reset Memory, Clear Variable Line Pressure(VLP) Counters, Relearn Cam/Crank, Injector Quantity Adjustment, View/Reset duty cycle accumulators, View/reset trip information accumulators, Enable / Disable vehicle features, Reset Nox adsorber counts, Reset after treatment trip information, Turbo actuator pre-align / self calibrate, Reset regenerative filter timers, Reset Fuel Pressure Limiting Valve Accumulators, Stationary Desoot, View/Reset Duty Cycle Maps, Idle Shutdown Timer Adjustment, Oil Change Monitor Type, View/Reset NAC After Treatment Over Temp Events, Manual DPF Regeneration, DPF Replacement,




2. Click [16 PIN Connector] and choose [Automatically Search] to identify car models automatically.

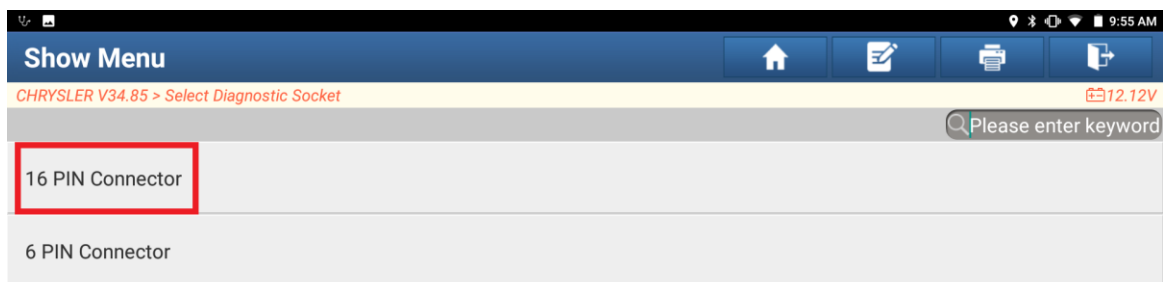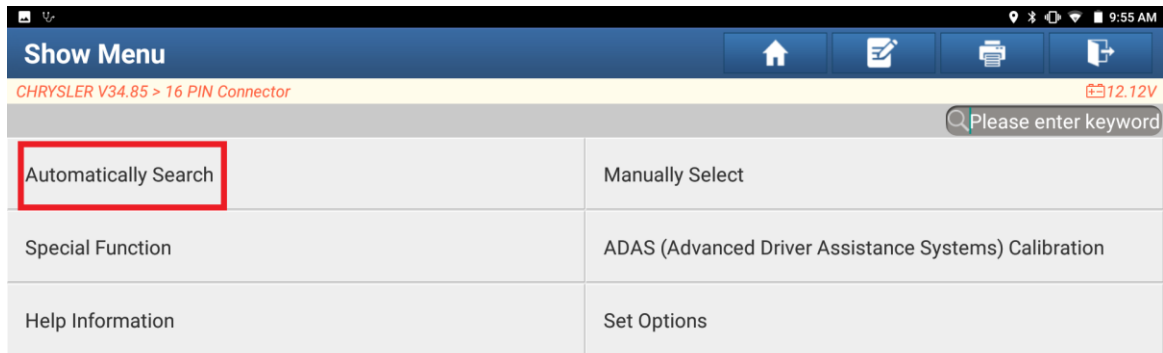



- Click OK. It displays a prompt message indicating that the SGW needs to be unlocked.

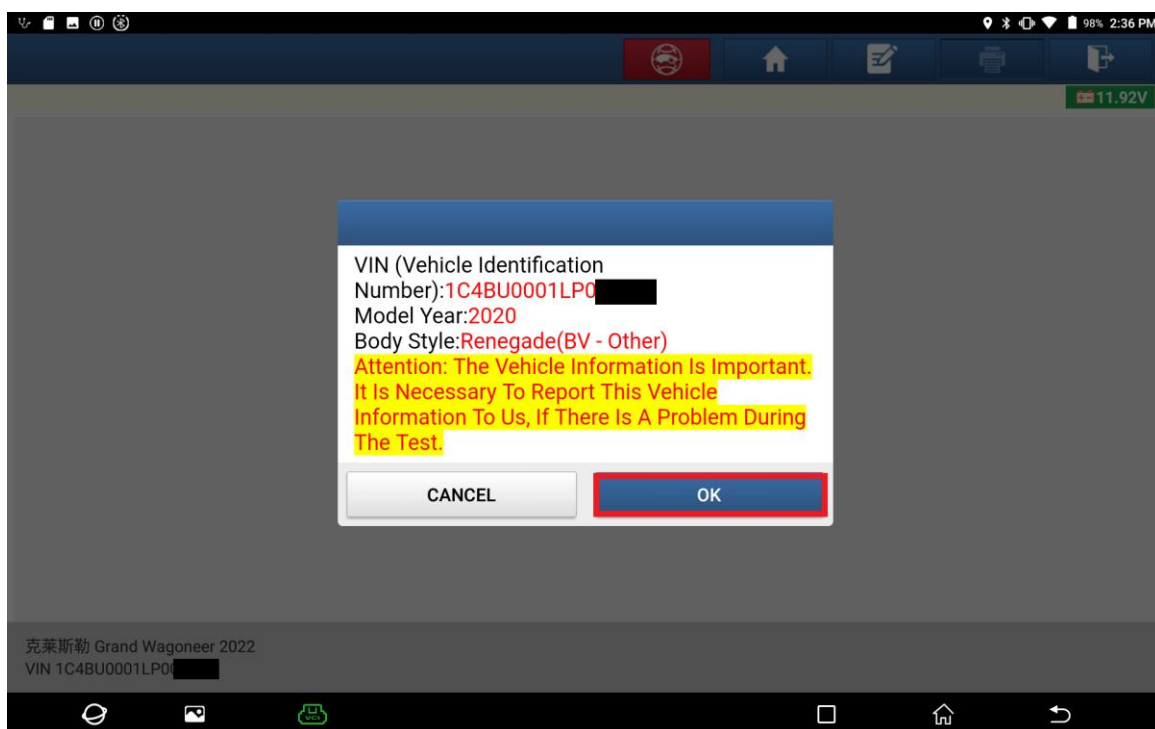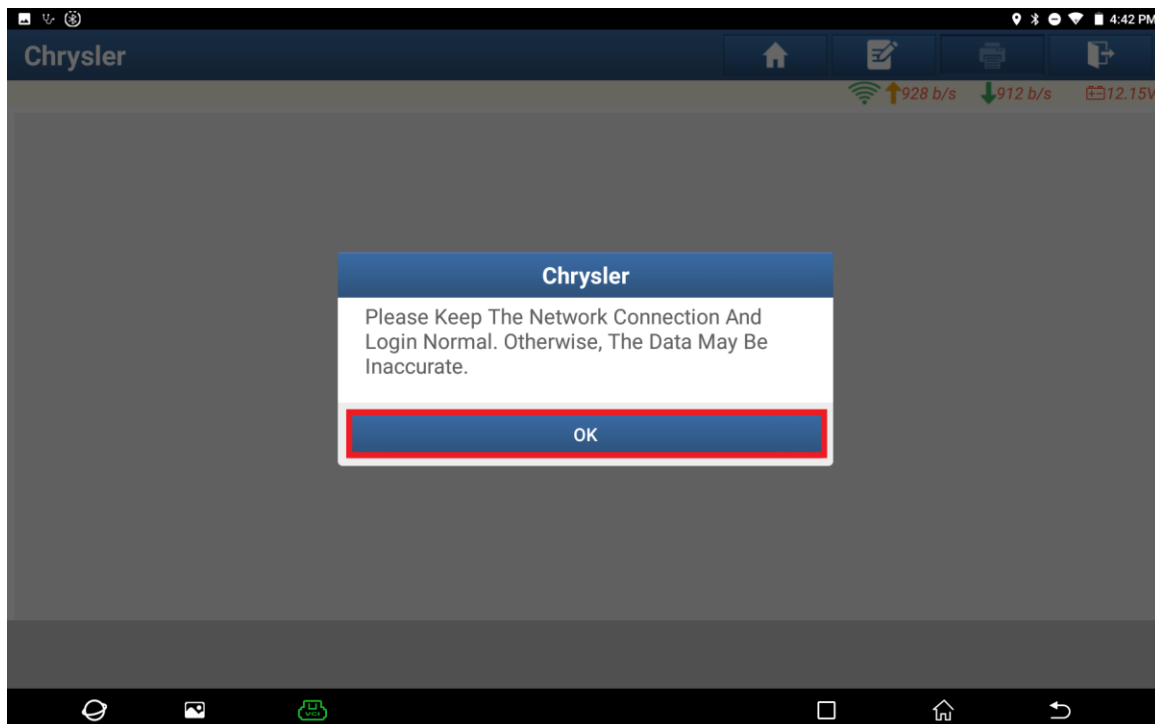


4. Click [Yes], choose [North America], and input the FCA account you purchased.

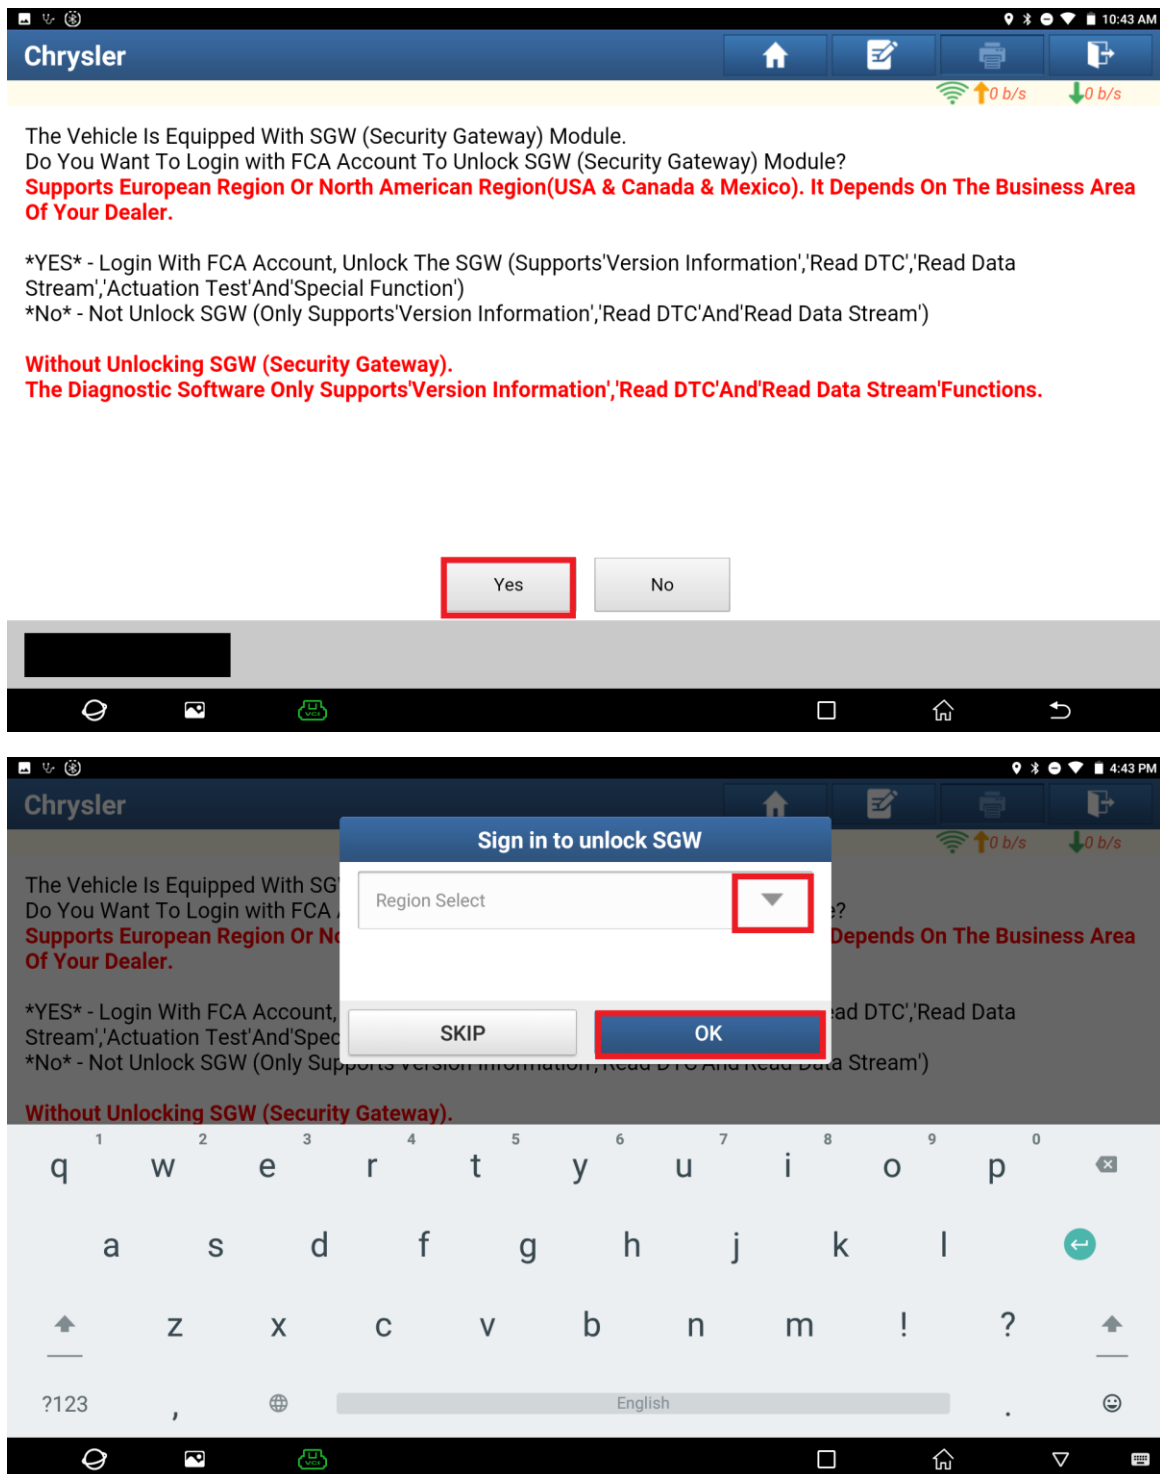


5. Click OK.

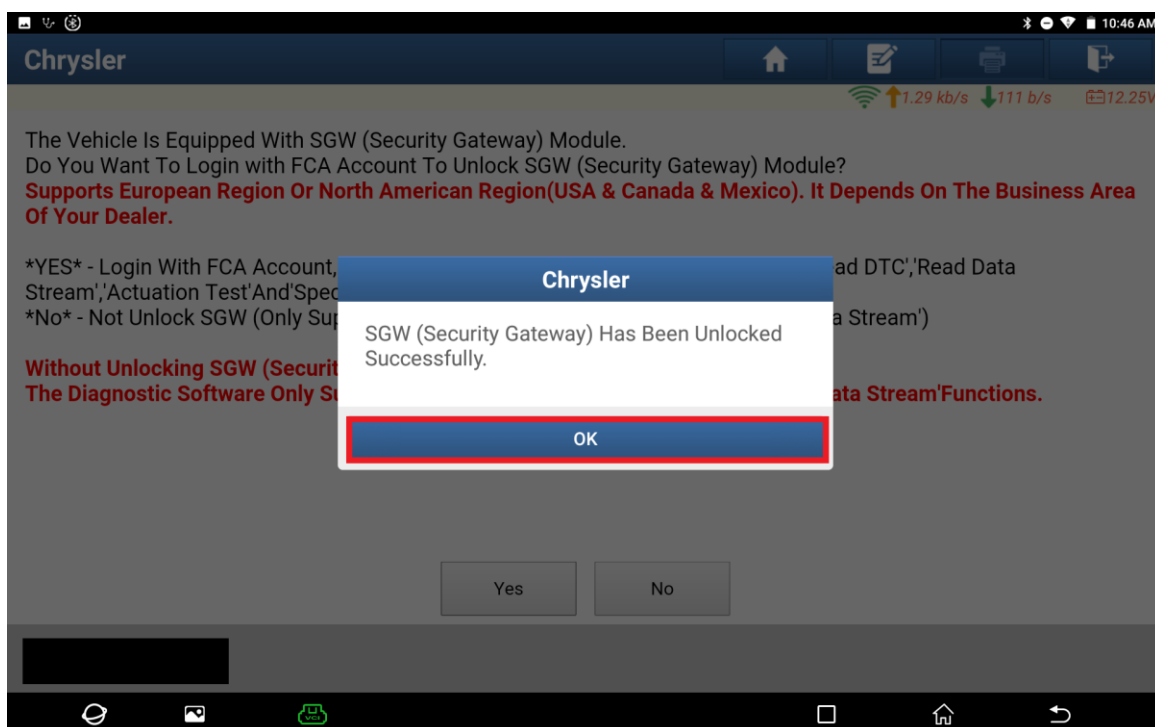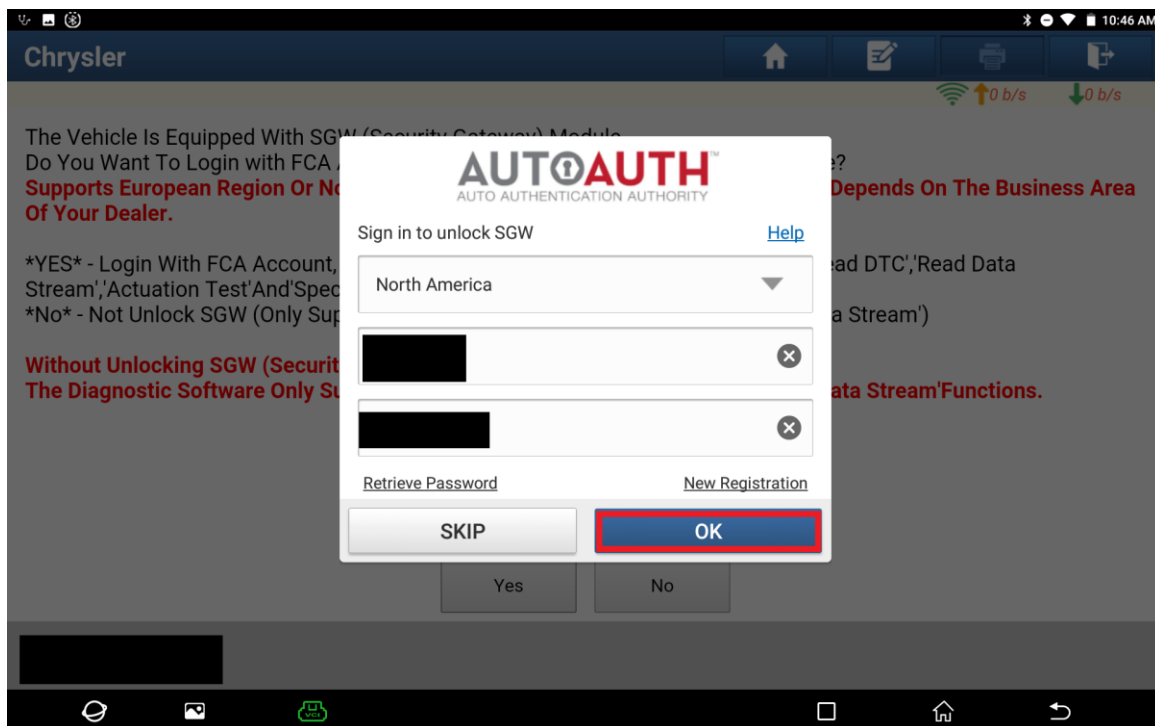


6. On the PAD 5, click [Smart Detection] to scan the entire vehicle systems.

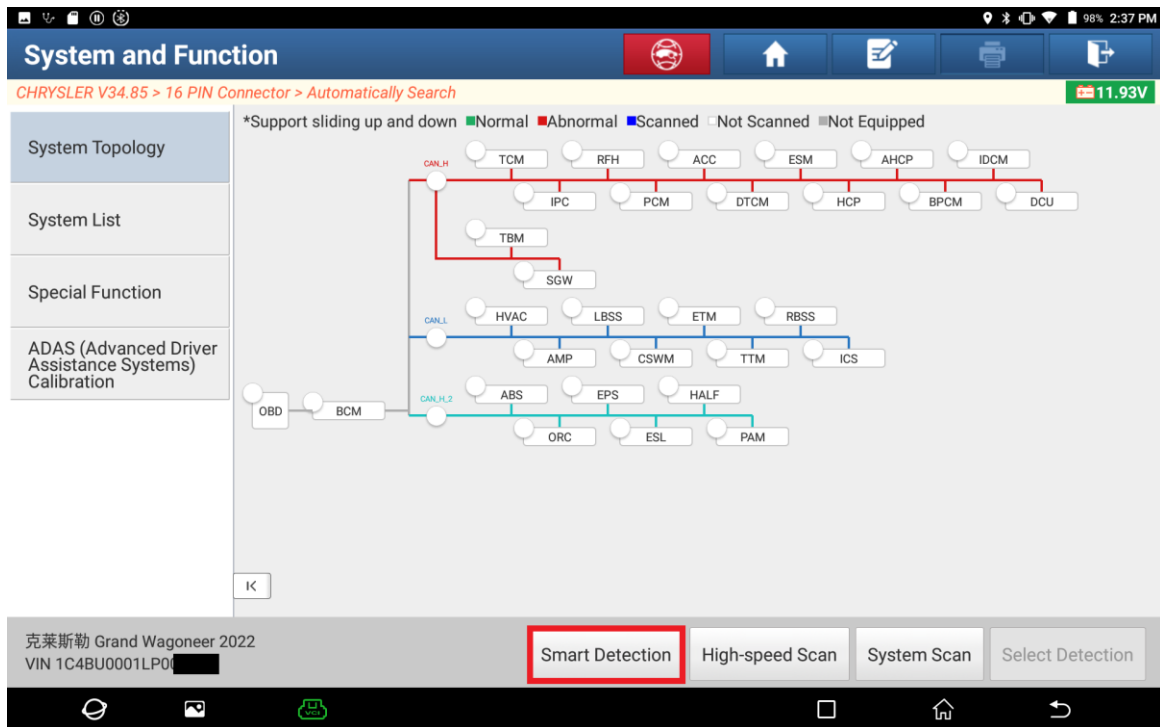


7. Click [BPCM (Battery Pack Control Module)] to access the system.

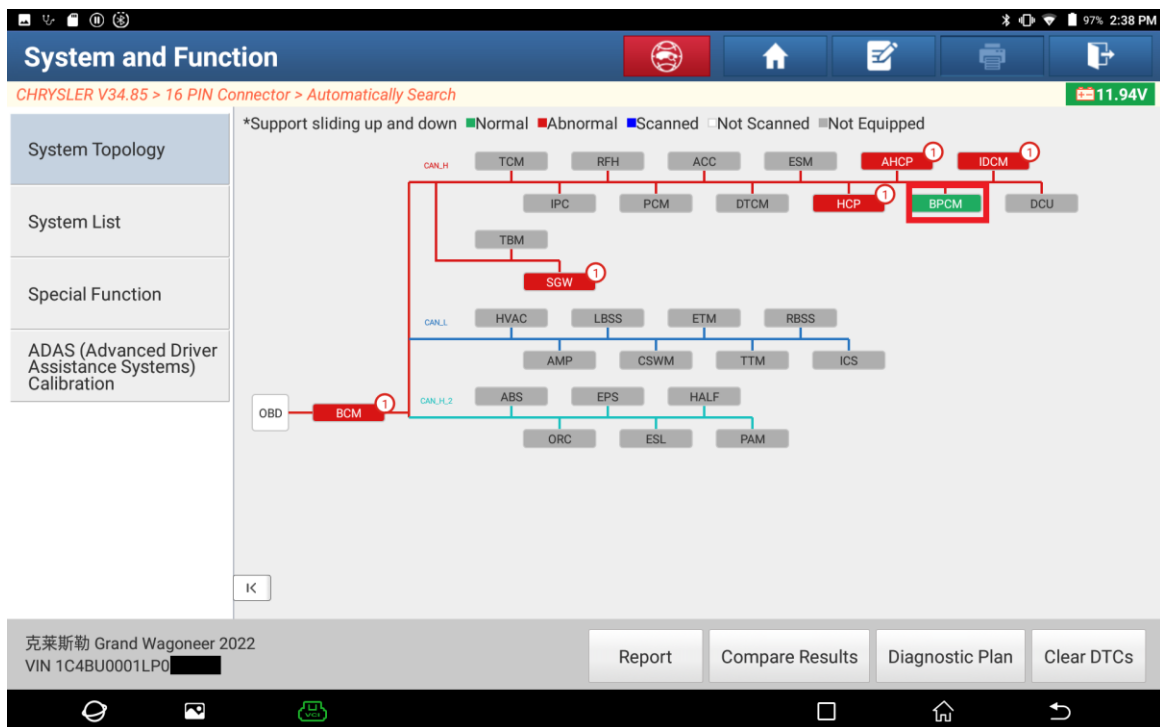


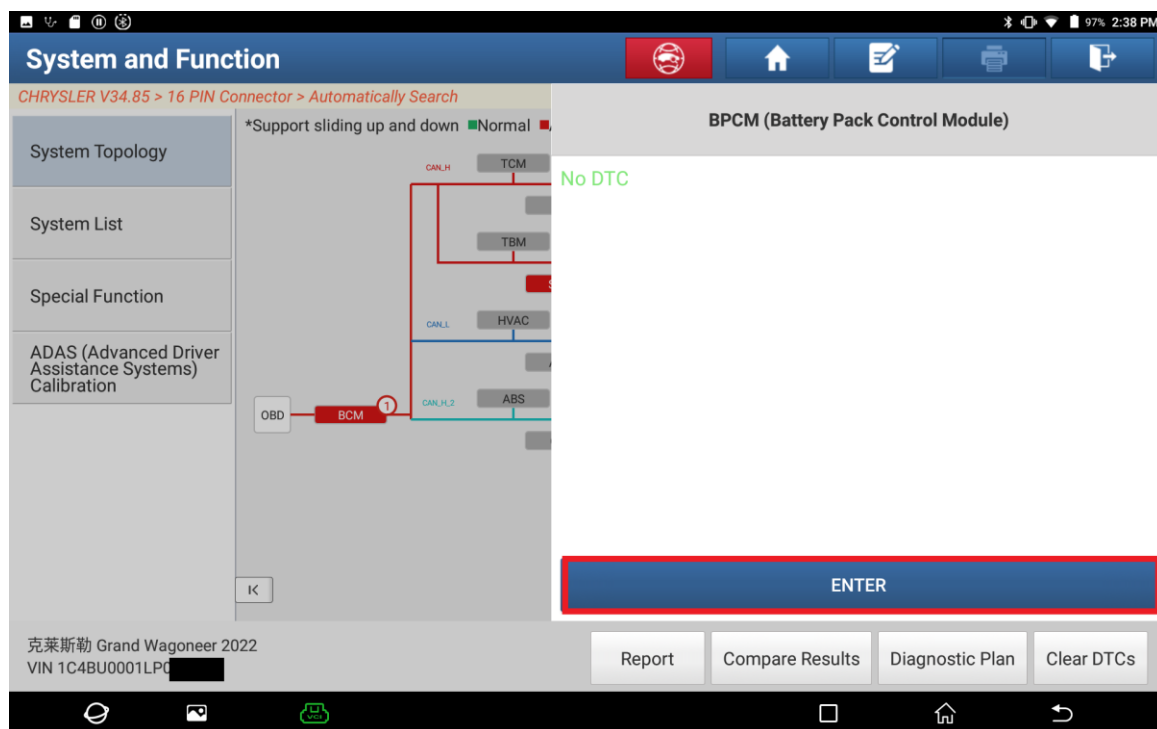


8. Click [Special Function].

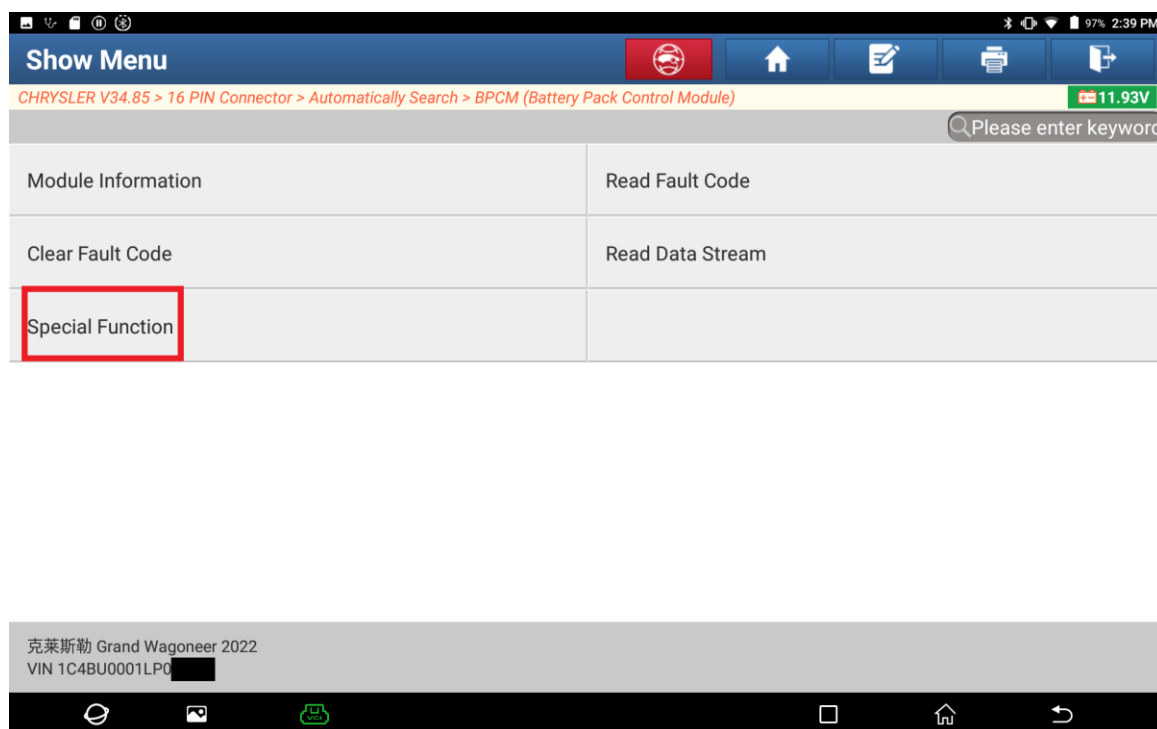


9. Click [Enable HV (Hybrid Vehicle) Battery Contactors For Service].

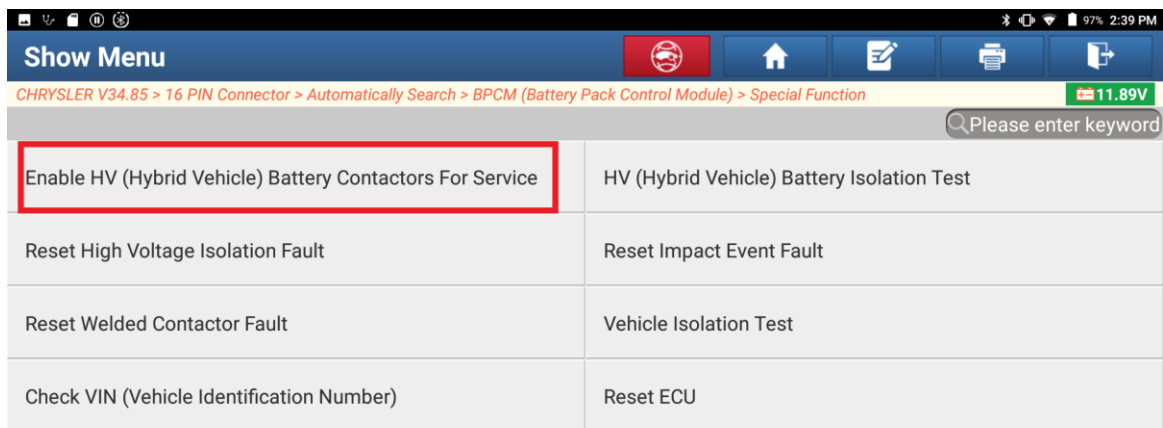


10. Click OK.

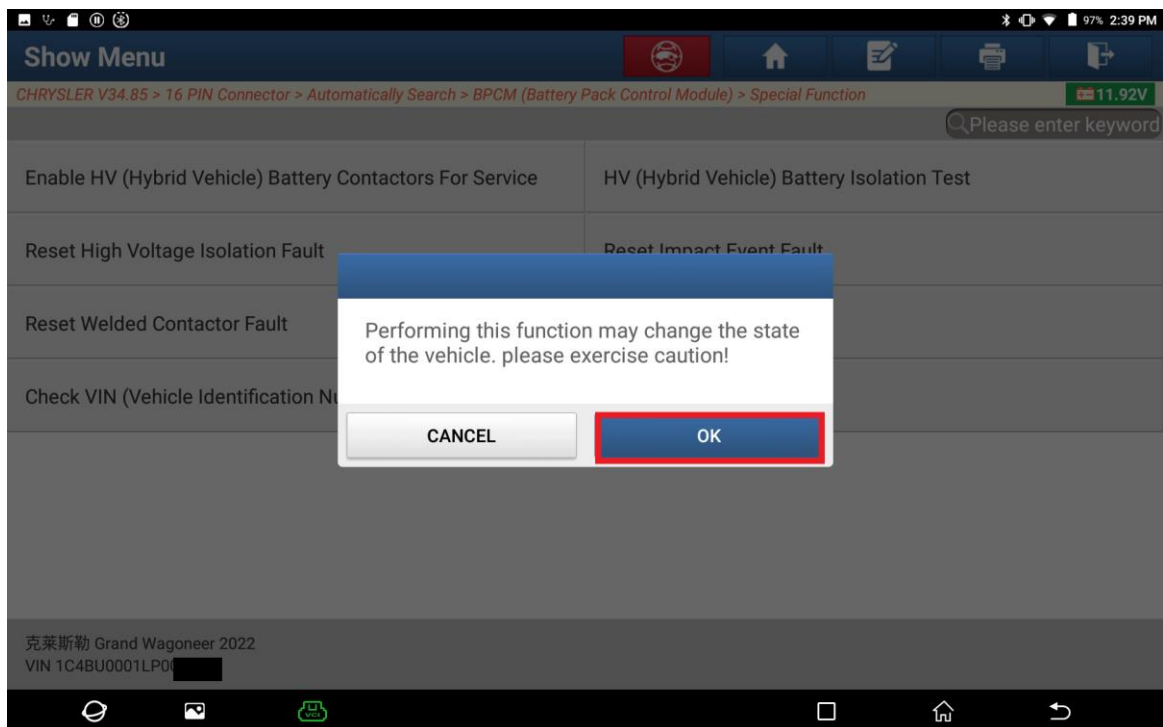


11. Click OK.

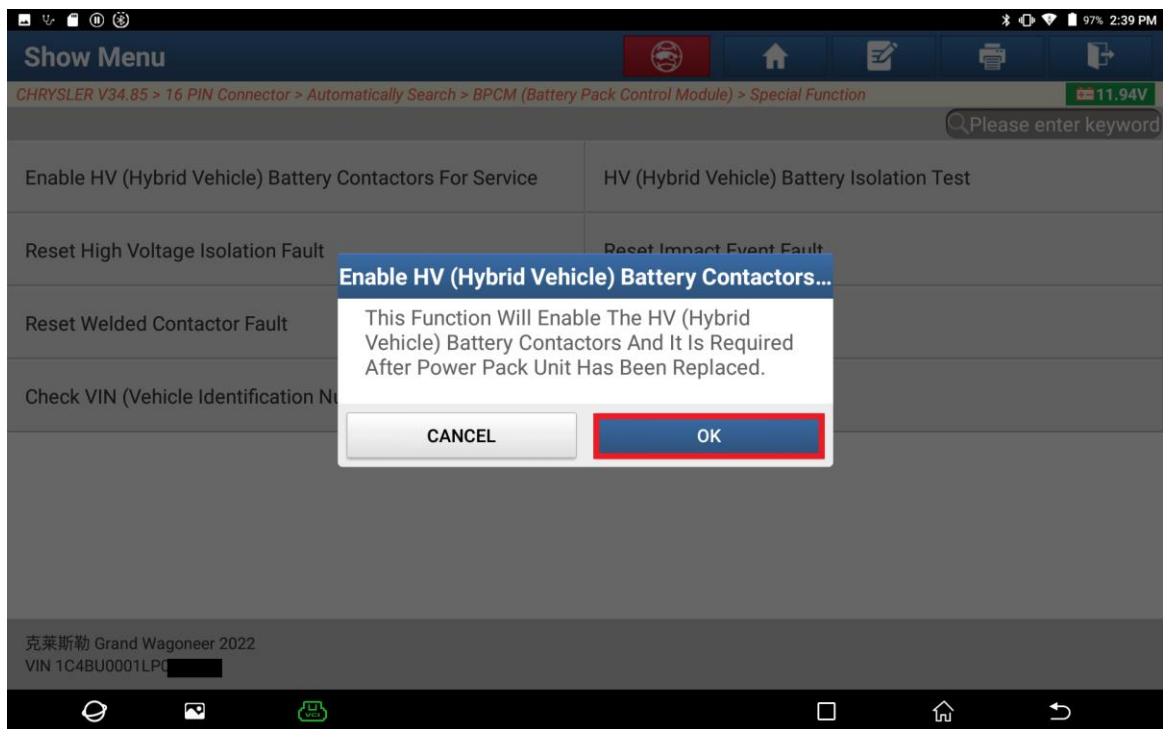

12. Click OK.

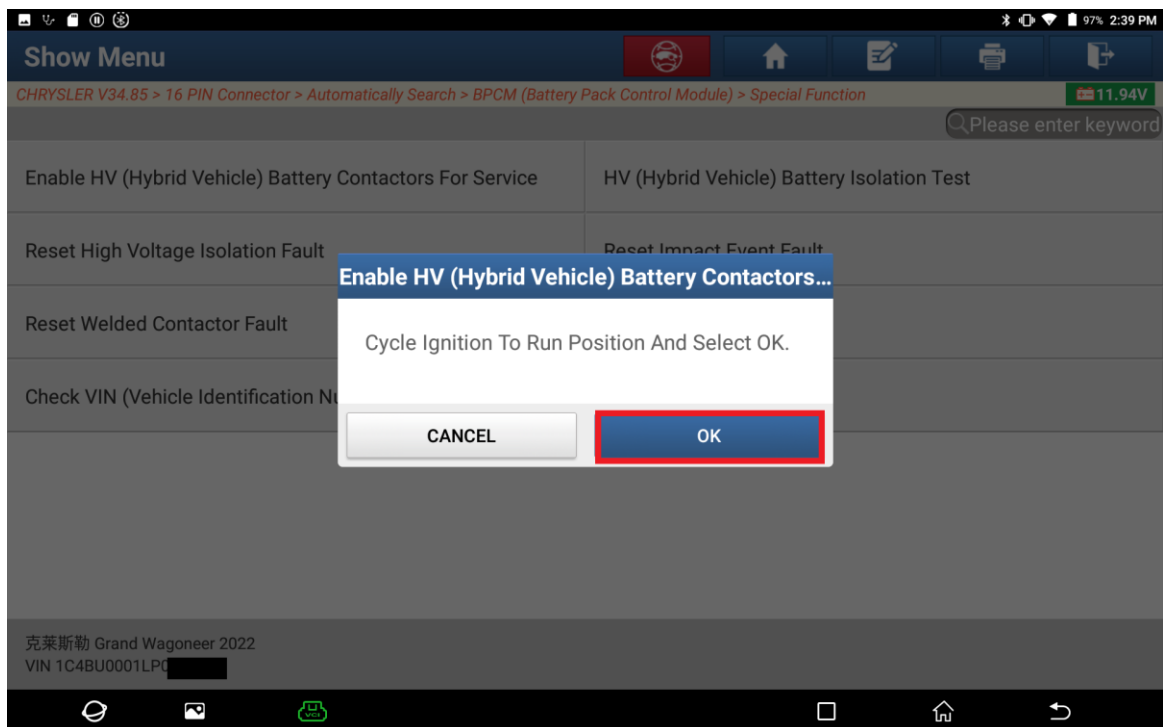

13. Click OK. The operations are completed.

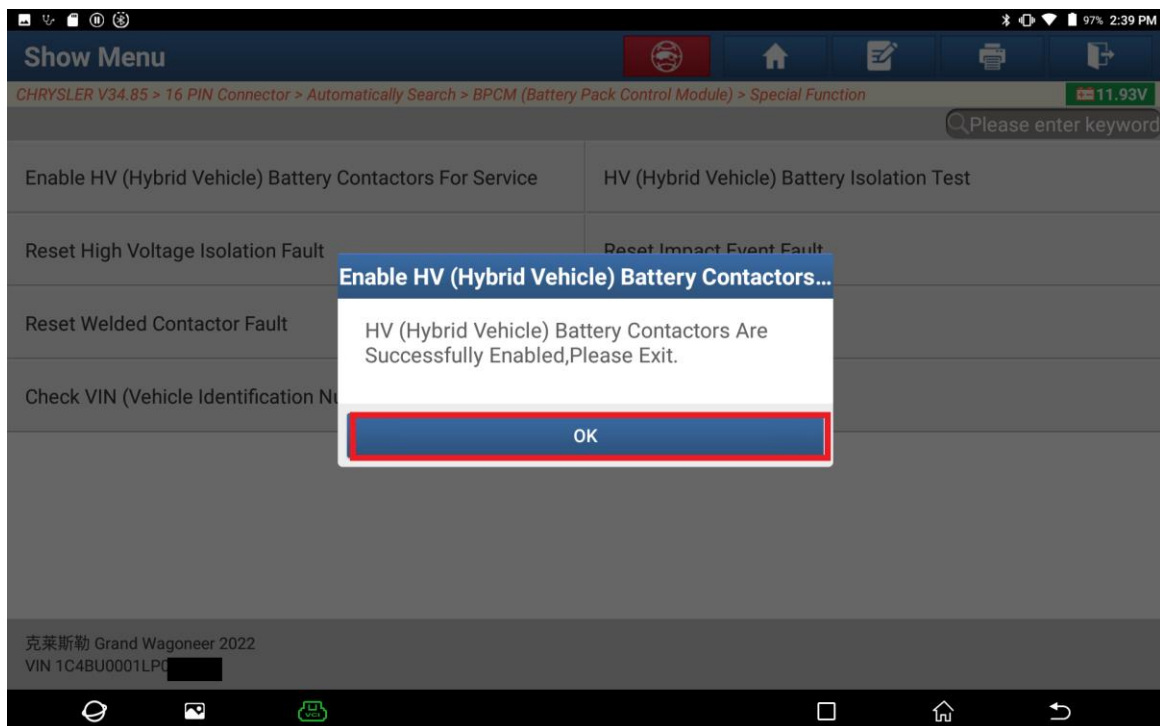

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.