

Ford Transit Fuel Fired Booster Heater Remote Control Programming


Supported equipment: Launch's full range of comprehensive diagnostic equipment

Current equipment: PAD 5


Function description: This function is used to pair a new or replacement remote control with the auxiliary heater control module on the vehicle, enabling it to remotely control the heater.

Tested model: Ford/2023/Transit, VIN: WF0KXXTTRKPP*****

1. On a PAD 5, choose [Local Diagnose].

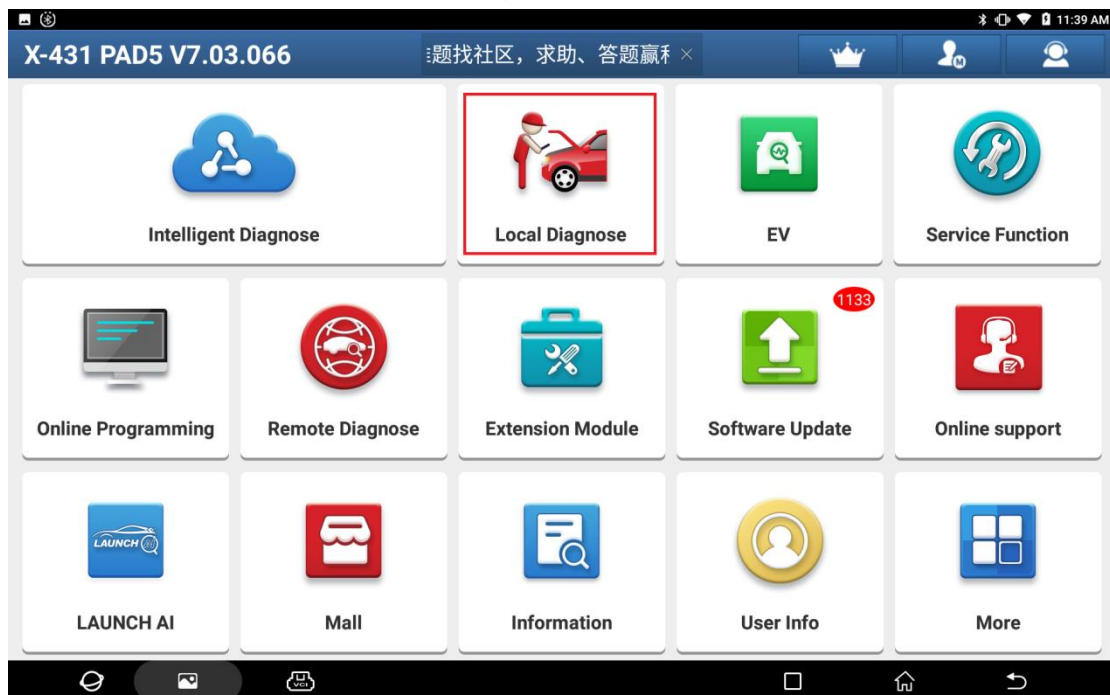

2. Choose [FORD] to test.

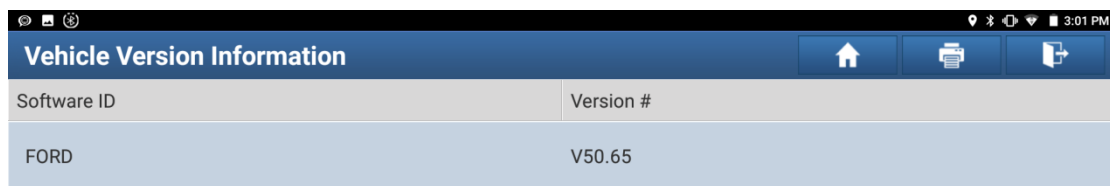**Ford Diagnosis V50.65****Software Introduction****ECU Coverage:**

This Diagnostic Software Can Test For USA Ford ECUs, Including: Engine, Automatic Transmission, Anti-Lock Brake, Airbag, Air Conditioning, Dashboard, Anti-Theft, Cruise, Common Electronics, Seats, Light, etc.

Basic Functions:



- Reading ECUs
- Reading DTCs(Diagnostic trouble code)
- Clearing DTCs(Diagnostic trouble code)
- Reading Vehicle Running Data
- Vehicle Component Operation Test


Special Functions:

- Programmable Module Installation
- ESP(Electronic Stability Program) Sensor Calibration
- PCM (Powertrain Control Module) Or ICM (Instrument Control Module):
*Passive Anti-Theft Function (Program Additional Ignition Key, Ignition Key Code Erase And Program, Customer Spare Key Programming Enable/Disable, Parameter Reset, Unlimited Key Made ON/OFF, Program Unlimited Key Code)




3. Choose [Automatically Search] to identify car models automatically.

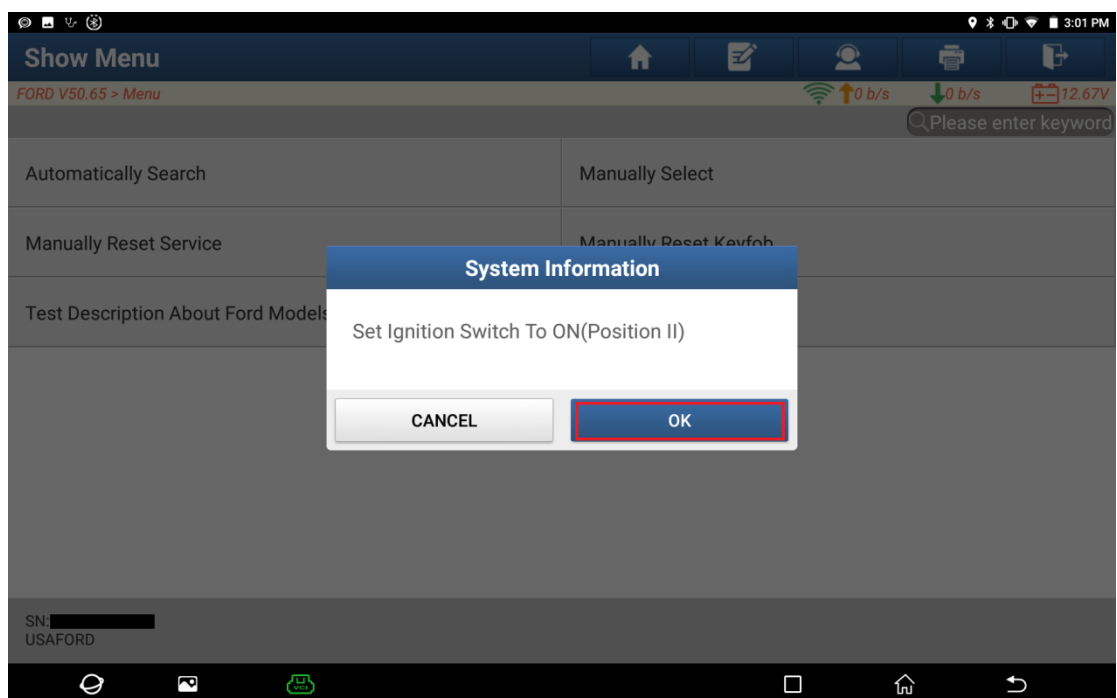
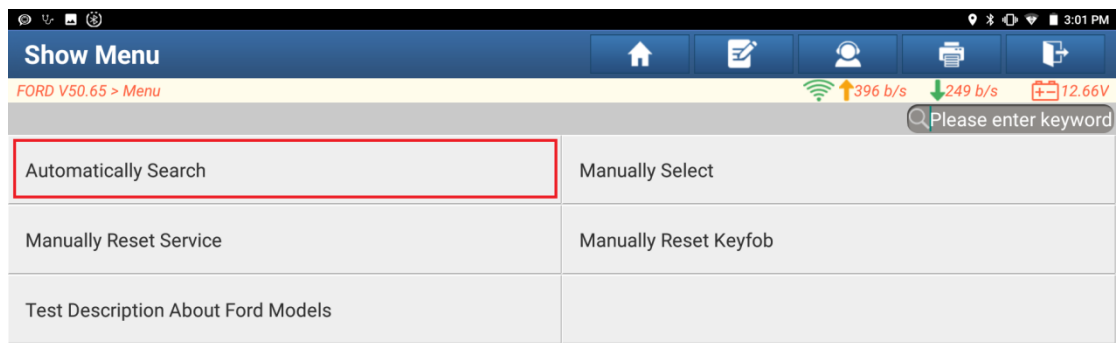


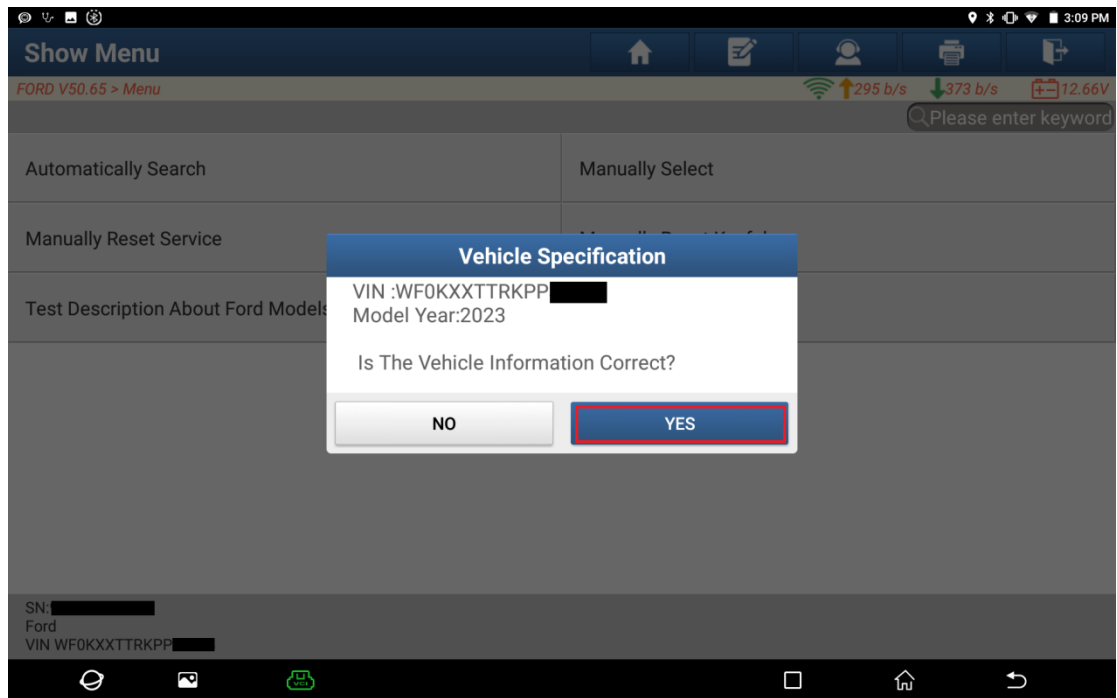


4. Click [Smart Detection] to scan the entire vehicle systems.

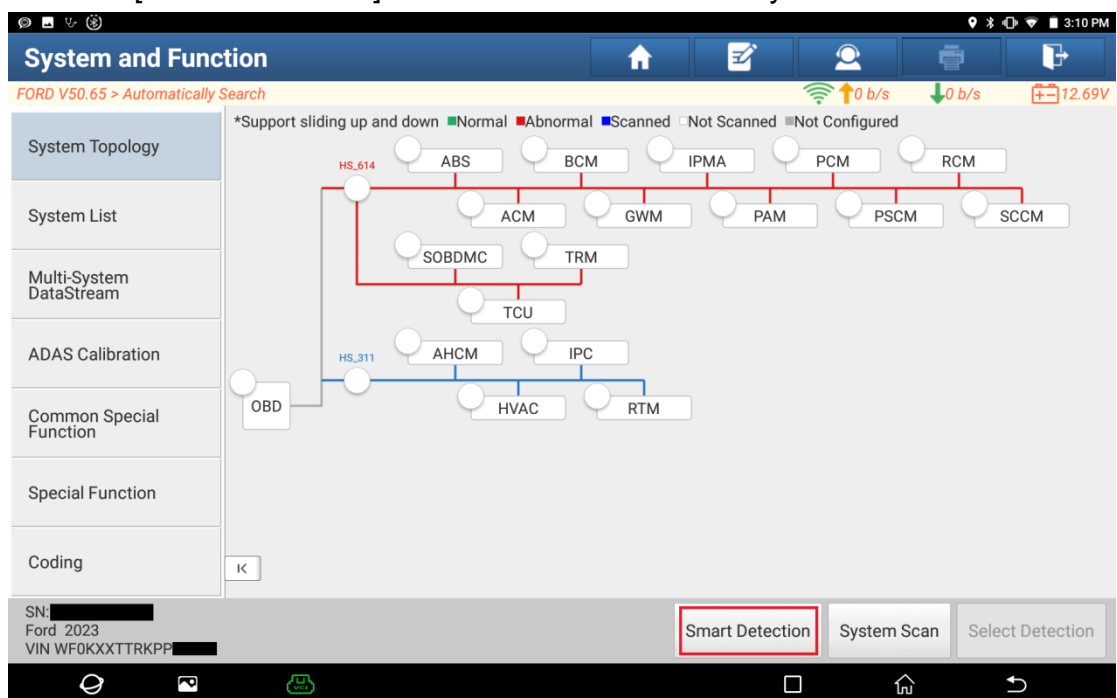


5. Click [AHCM (Auxiliary Heater Control Module)] to access the system.

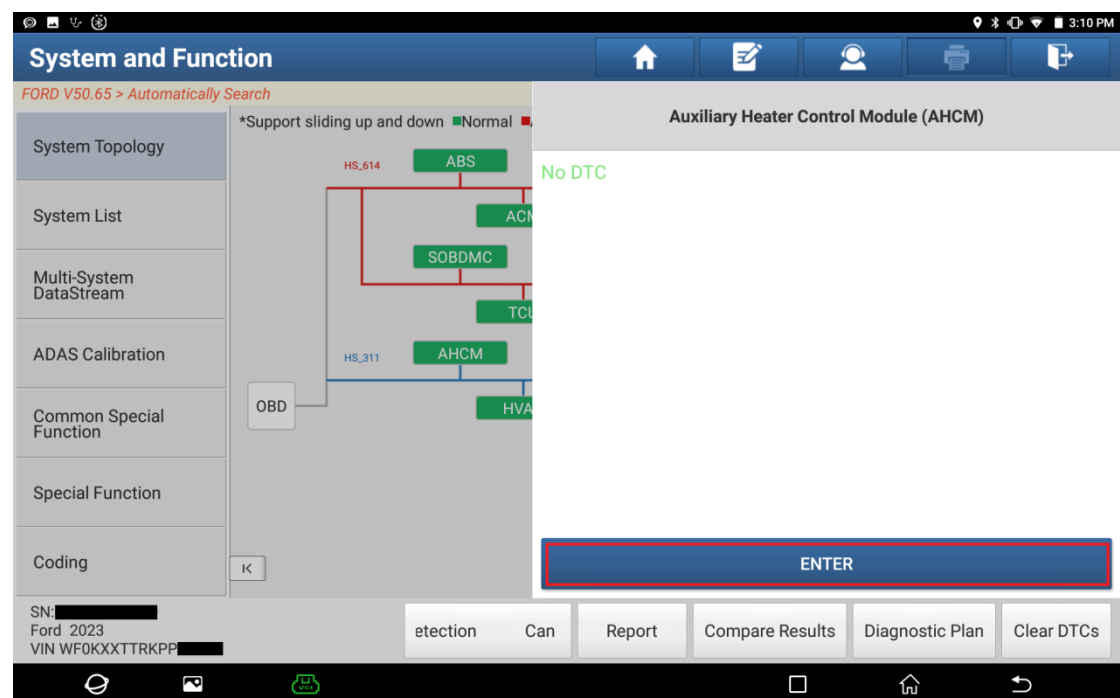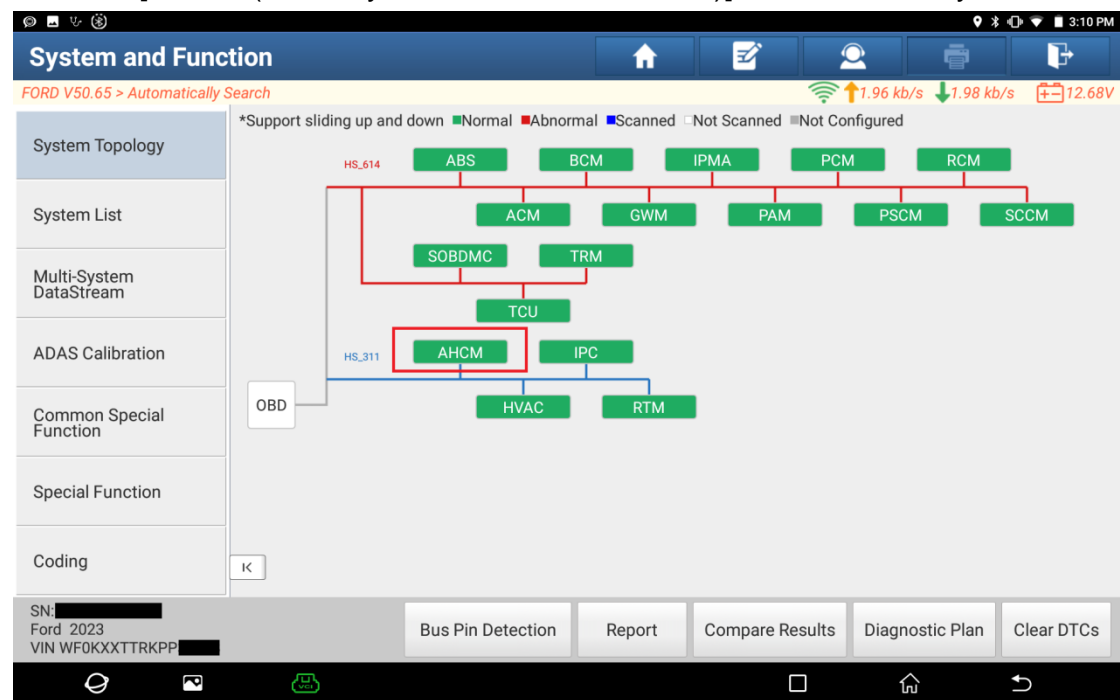


6. Click [Special Functions].

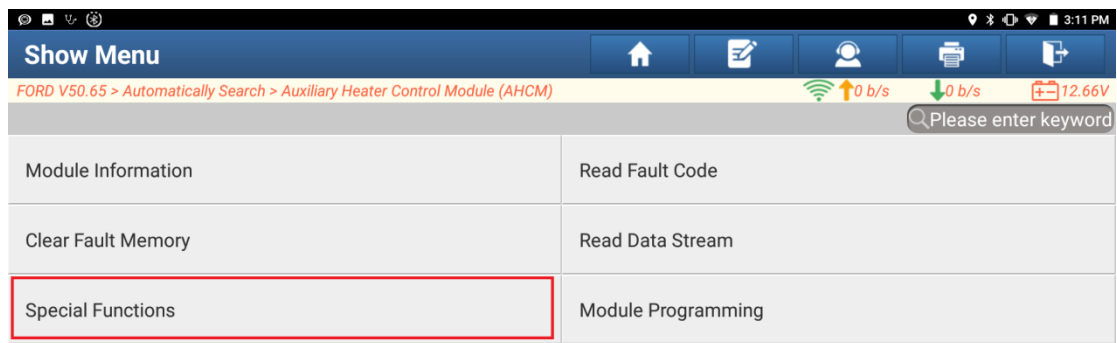


7. Click [Fuel Fired Booster Heater Remote Control Programming].

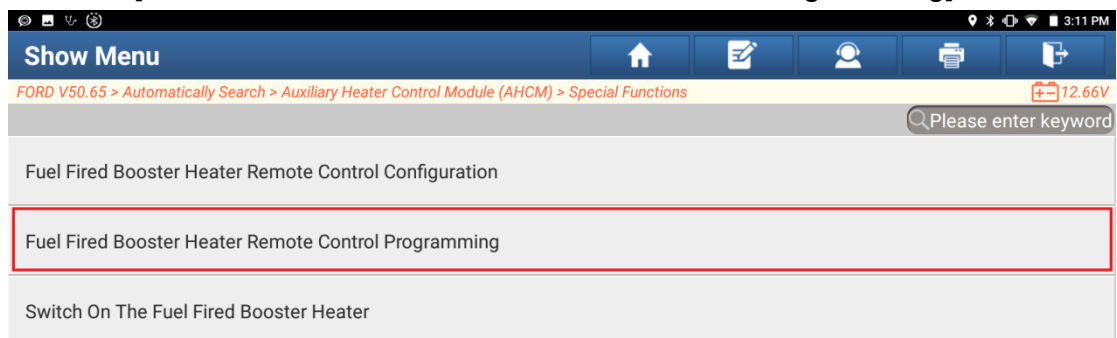


8. Set the ignition switch to ON (position II).

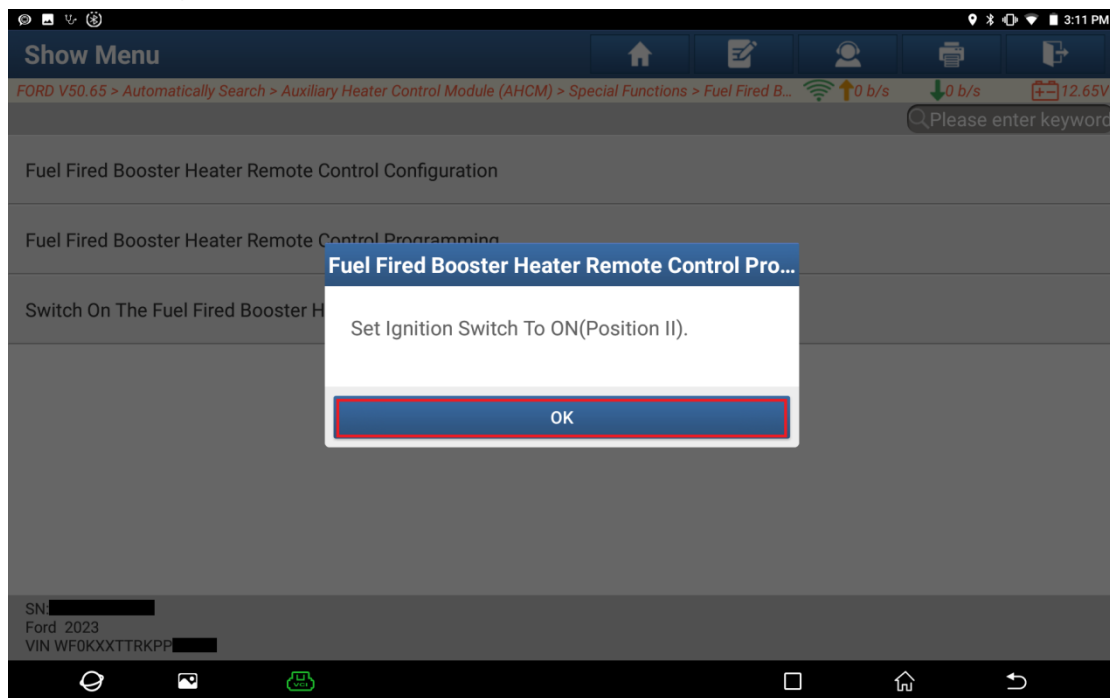


9. Program function introduction.

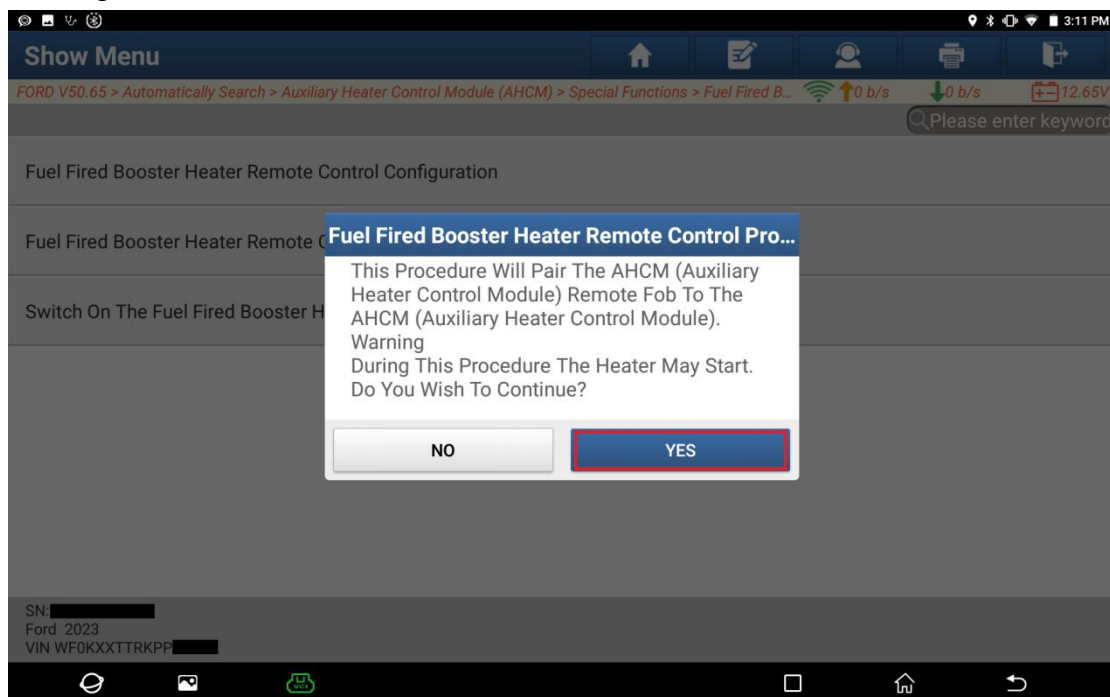


10. Explanation of the AHCM (Auxiliary Heater Control Module).

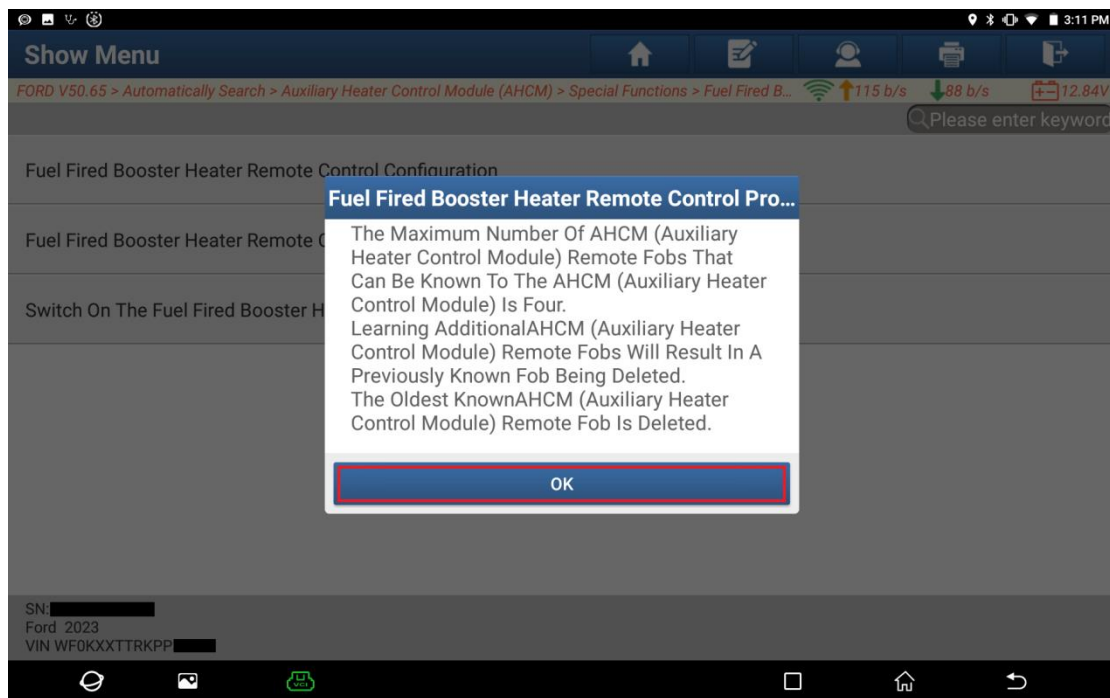


11. Follow the prompts to operate.

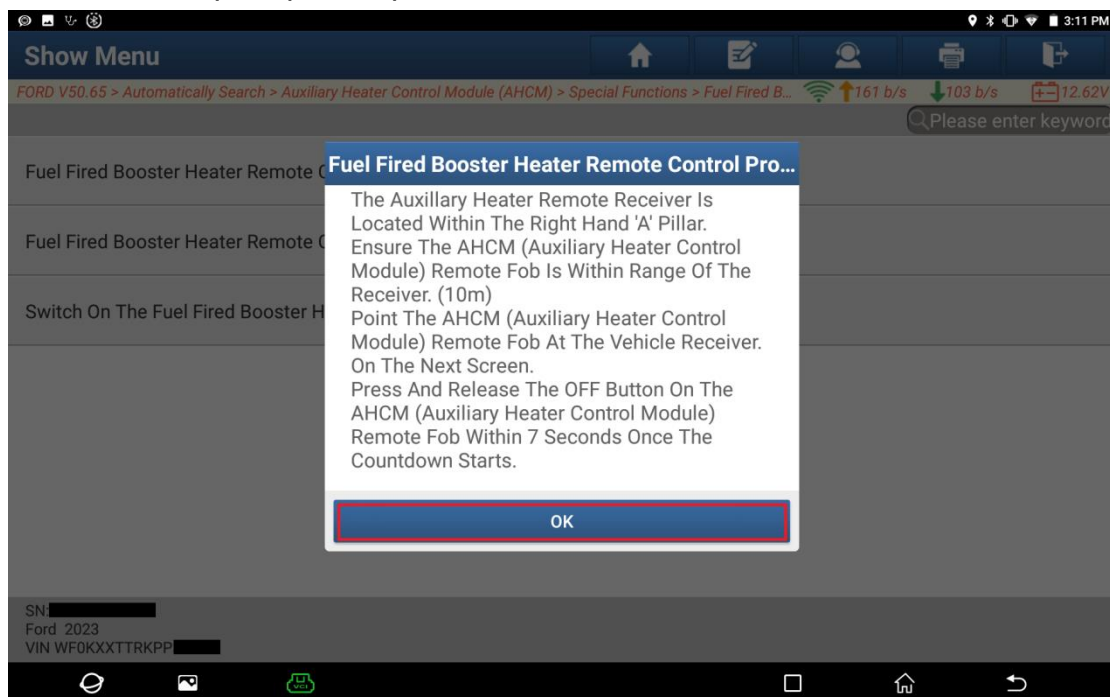


12. Press the power-off button on the remote control within 7 seconds.

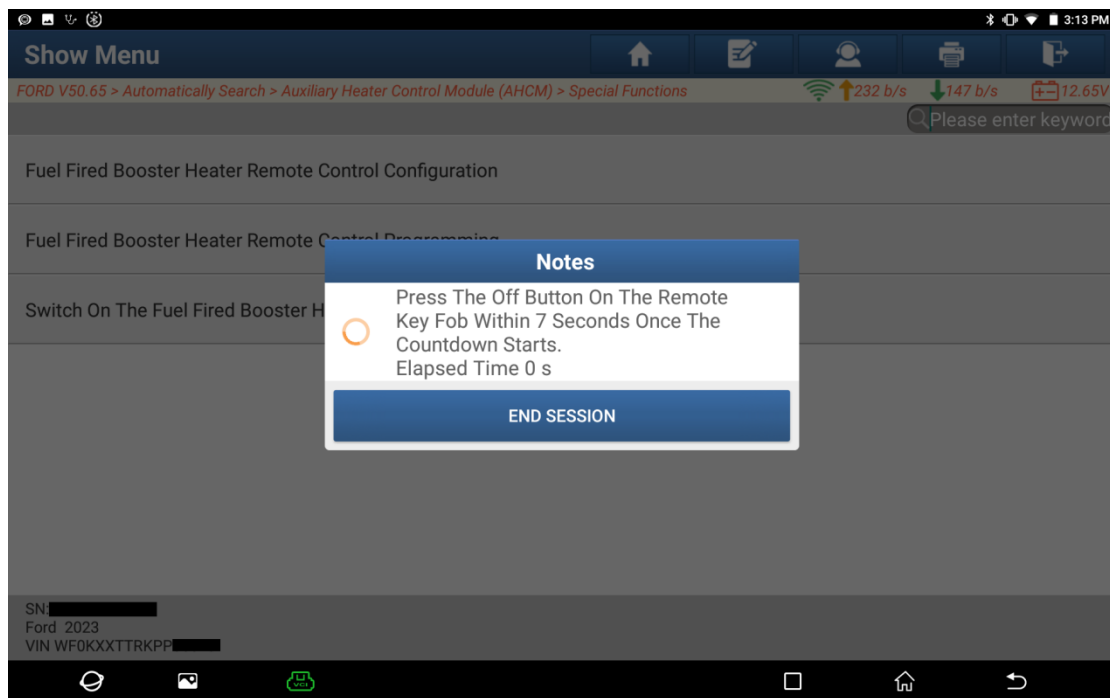


13. Follow the prompts to operate. The indicator lamp should turn green upon successful operation.

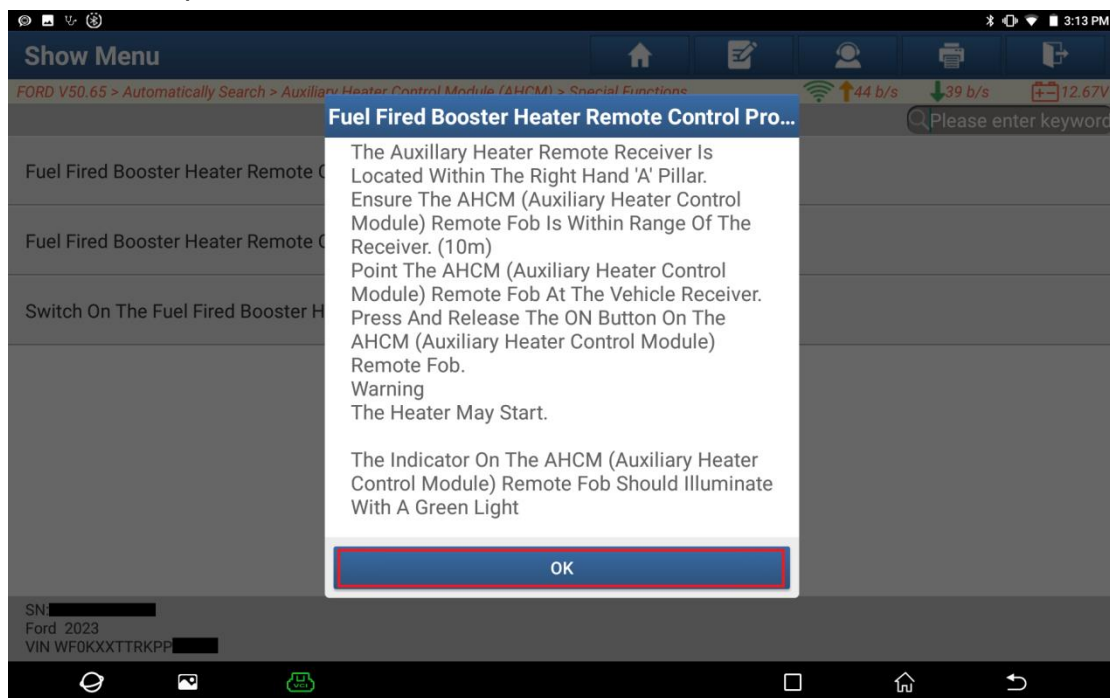

14. Set the ignition switch to the off position (position 0).

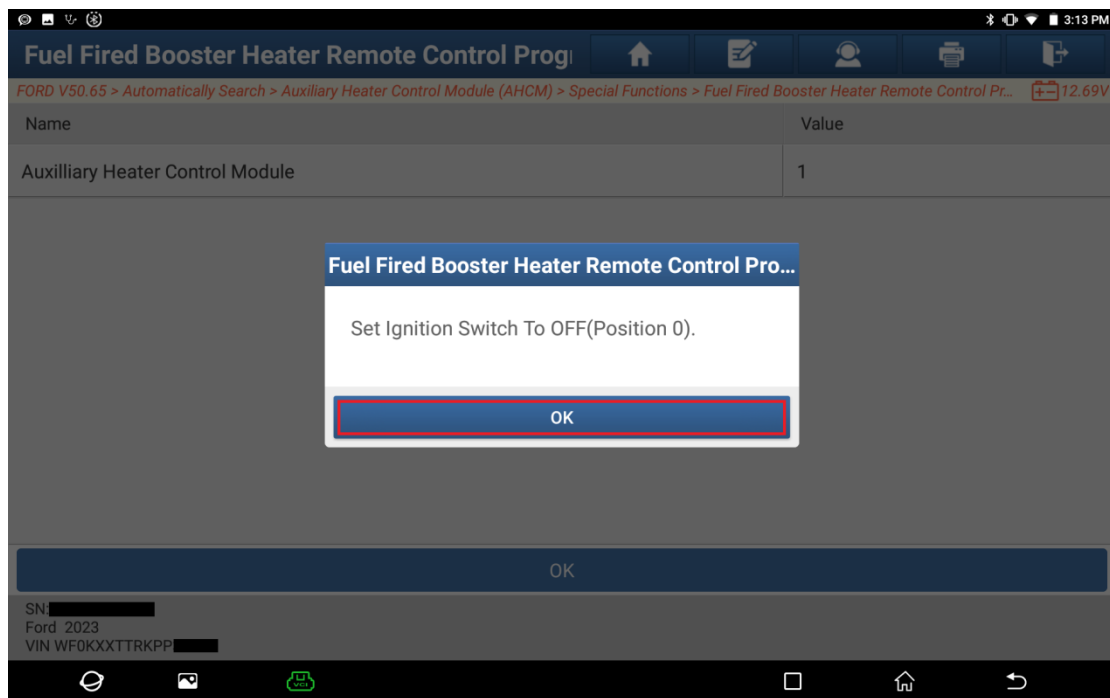

15. The program is successfully completed. Exit the program.

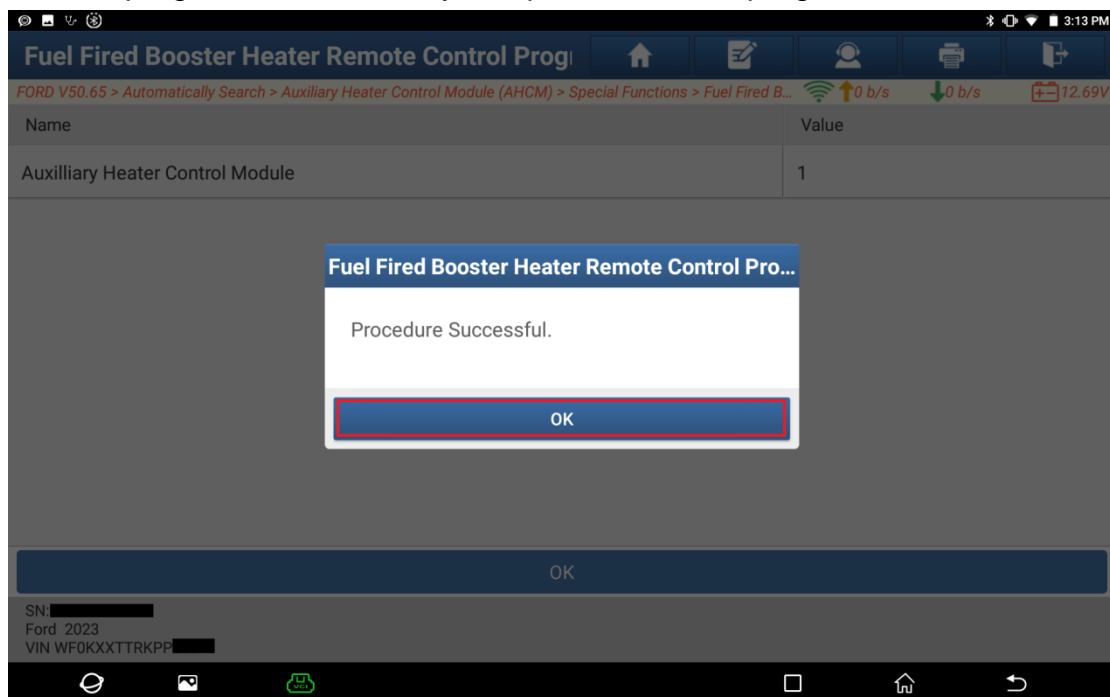

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.