

Ford C-MAX Clear the Body Control Module Crash Data


Supported equipment: Launch's full range of comprehensive diagnostic equipment

Current equipment: PAD 5


Function description: This function is used to clear the crash data records stored in the body control module so that the vehicle can be restored to the factory default status of "no crash" or "repaired" after repair.

Tested model: Ford/2019/C-MAX, VIN: WF0VXXGCEVKD *****

1. On a PAD 5, choose [Local Diagnose].

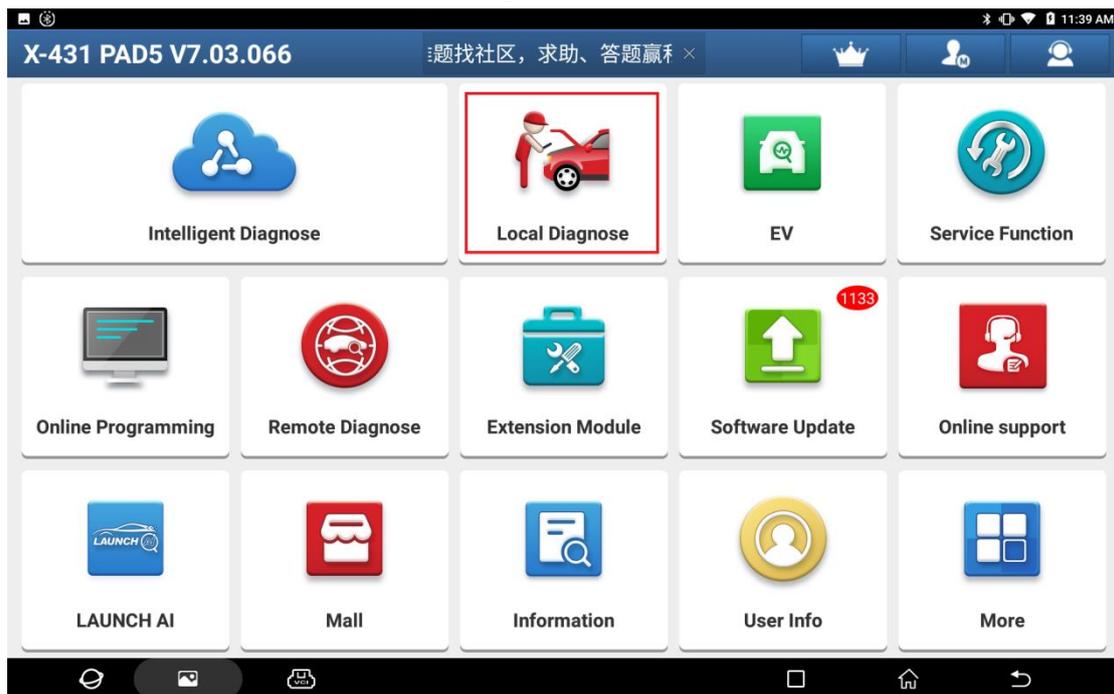

2. Choose [FORD] to test.

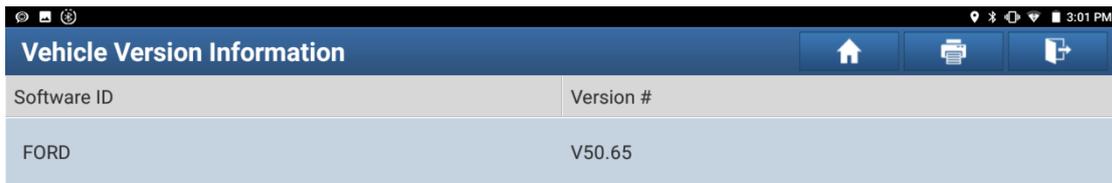

Ford Diagnosis V50.65

Software Introduction

ECU Coverage:

This Diagnostic Software Can Test For USA Ford ECUs, Including: Engine, Automatic Transmission, Anti-Lock Brake, Airbag, Air Conditioning, Dashboard, Anti-Theft, Cruise, Common Electronics, Seats, Light, etc.

Basic Functions:



- Reading ECUs
- Reading DTCs(Diagnostic trouble code)
- Clearing DTCs(Diagnostic trouble code)
- Reading Vehicle Running Data
- Vehicle Component Operation Test


Special Functions:

- Programmable Module Installation
- ESP(Electronic Stability Program) Sensor Calibration
- PCM (Powertrain Control Module) Or ICM (Instrument Control Module):
 *Passive Anti-Theft Function (Program Additional Ignition Key, Ignition Key Code Erase And Program, Customer Spare Key Programming Enable/Disable, Parameter Reset, Unlimited Key Mode ON/OFF, Program Unlimited Key Code)




3. Choose [Automatically Search] to identify car models automatically.

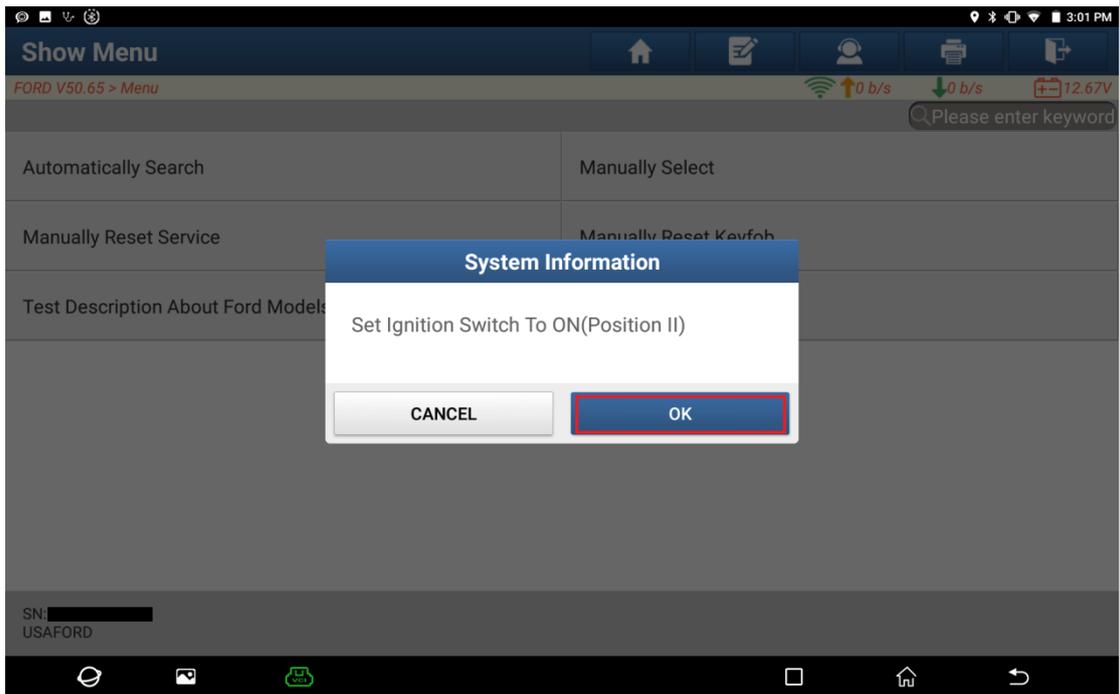
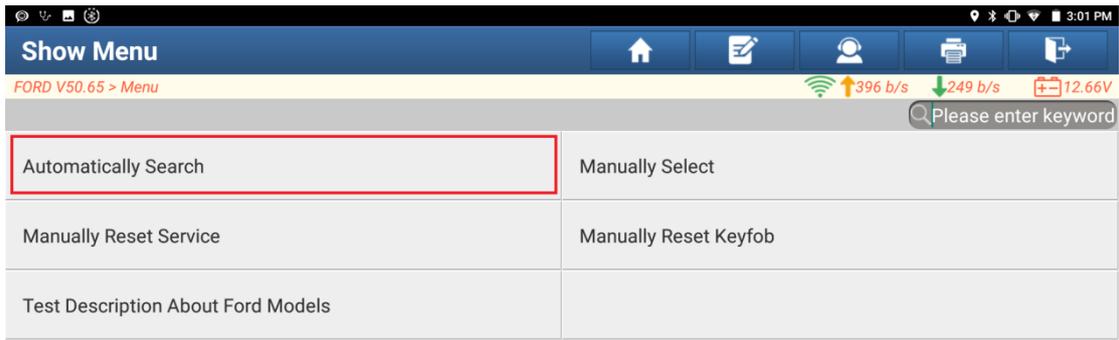


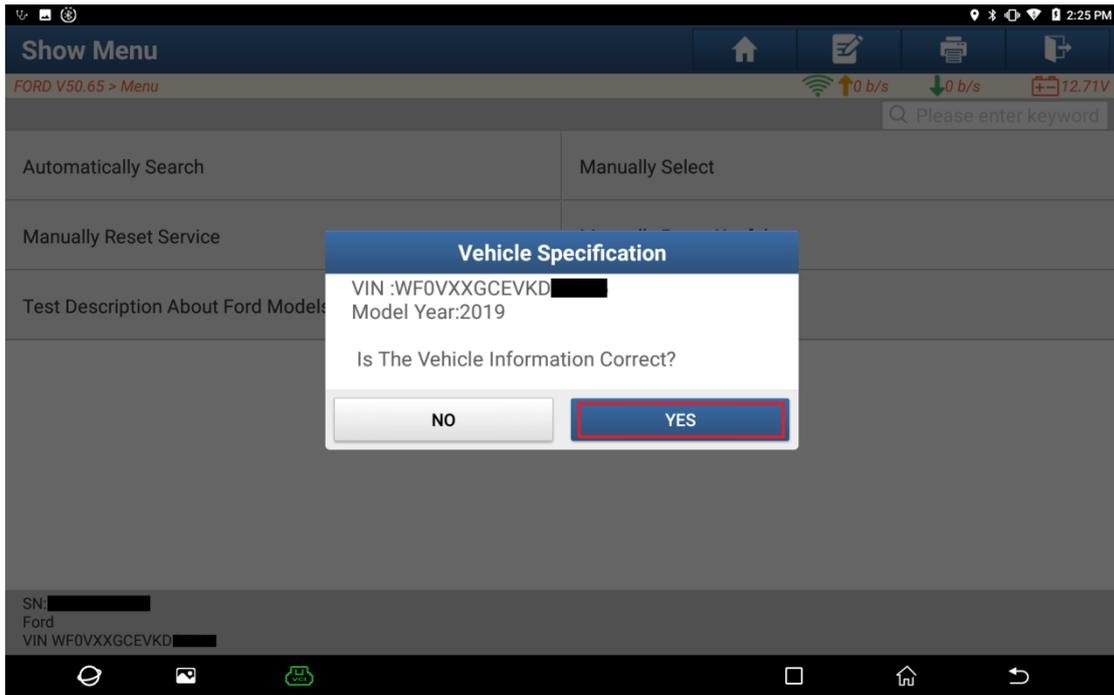


4. Click [Smart Detection] to scan the entire vehicle systems.

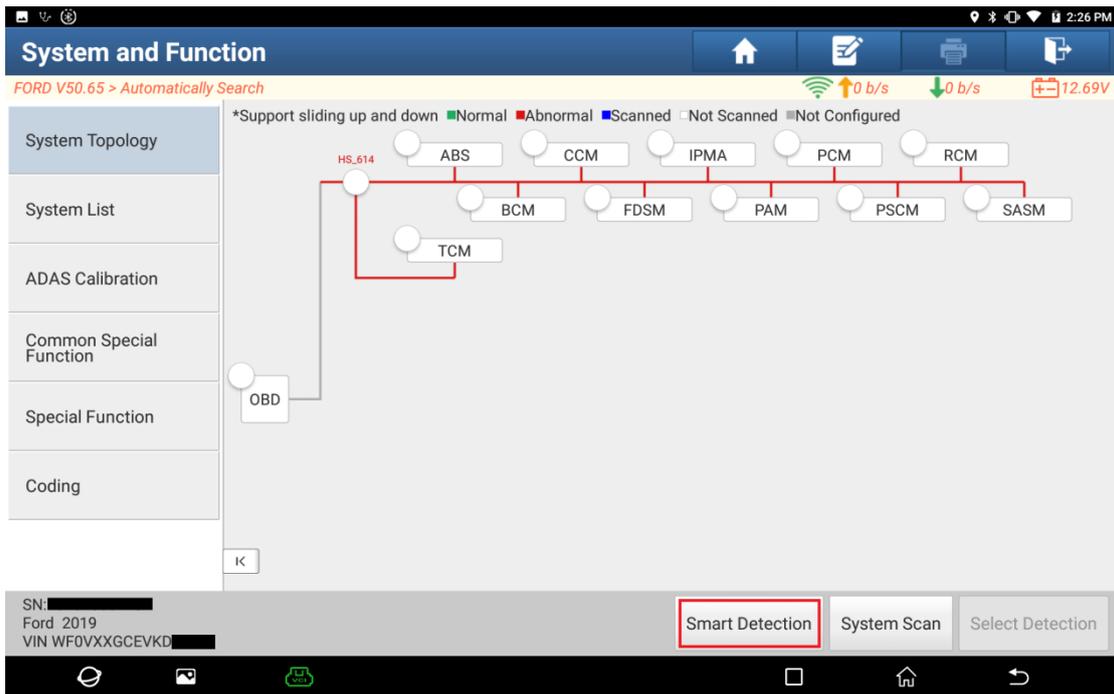


5. Click [BCM (Body Control Module)] to access the system.

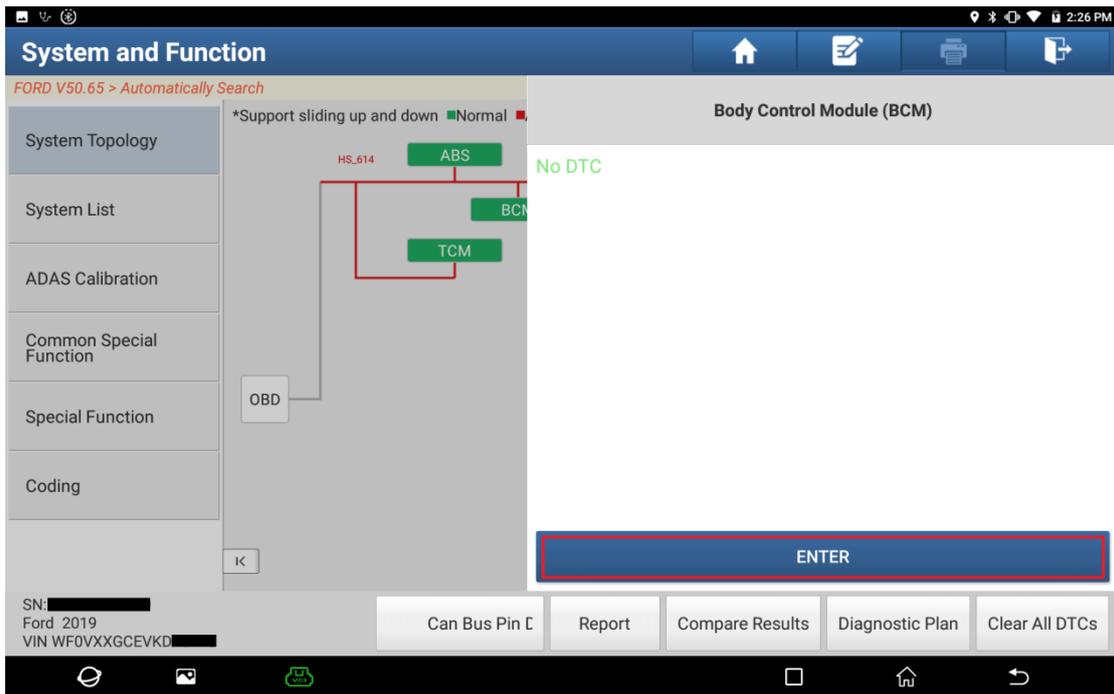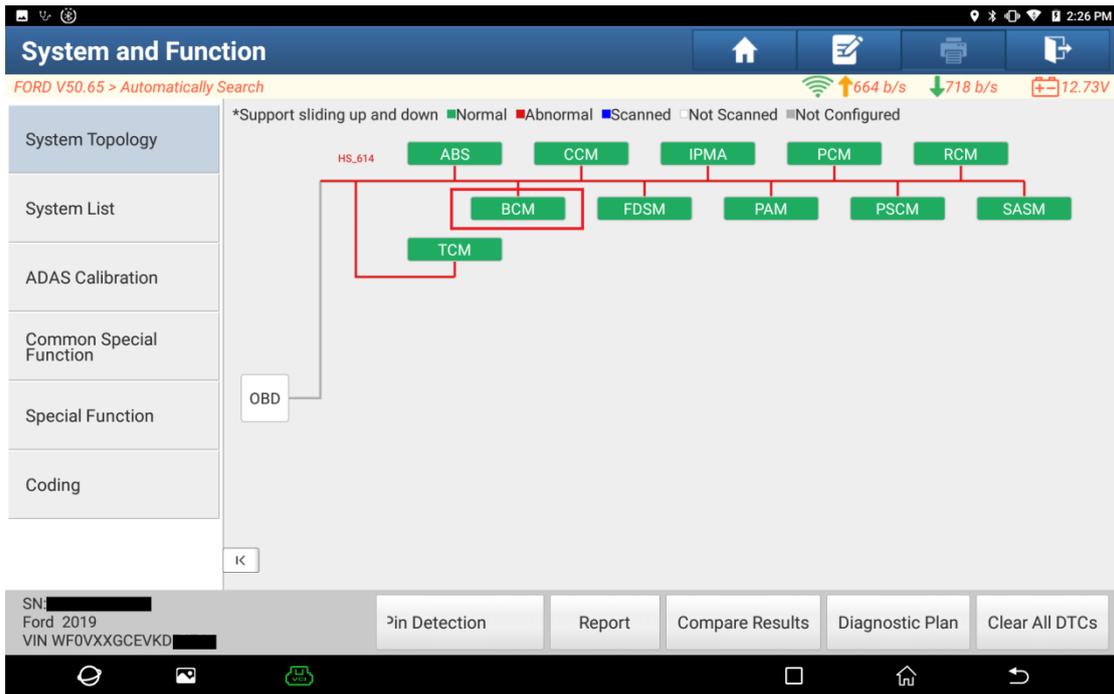


6. Click [Special Functions].

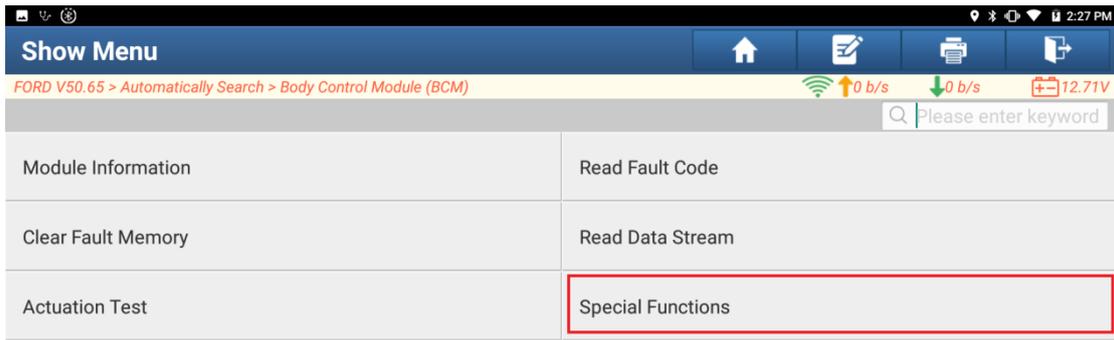


7. Click [Clear The BCM (Body Control Module) Crash Data].

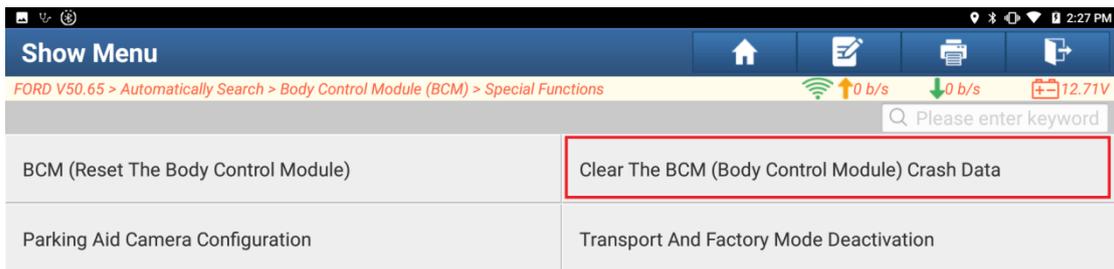


8. Program function introduction.

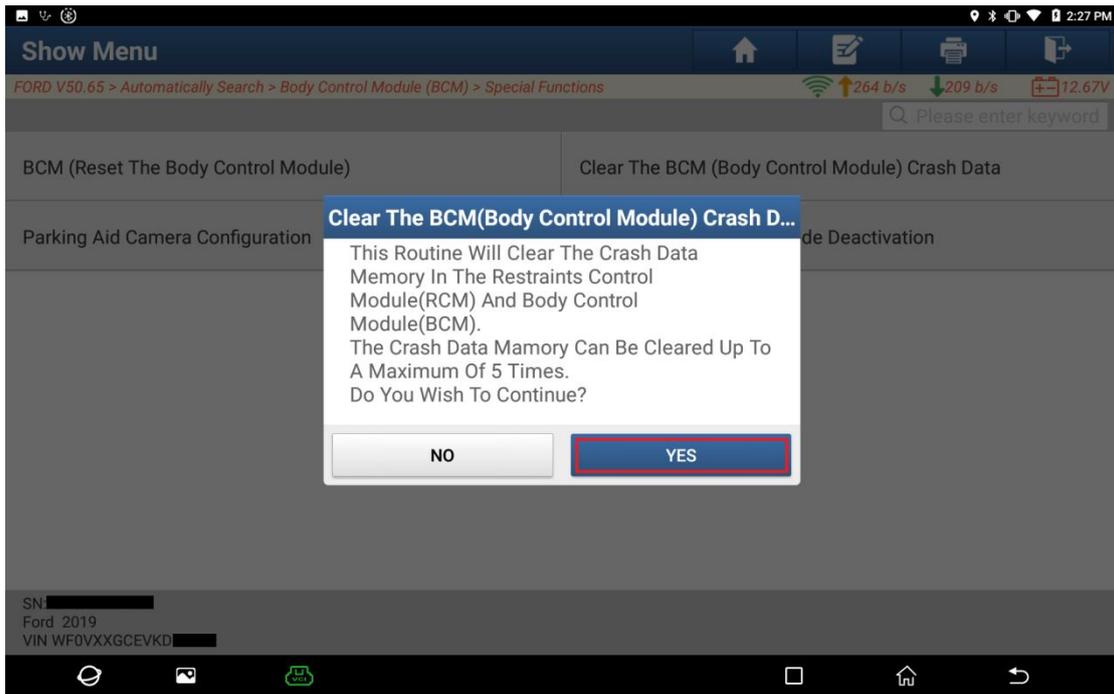


9. Turn the ignition switch to ON (position II).

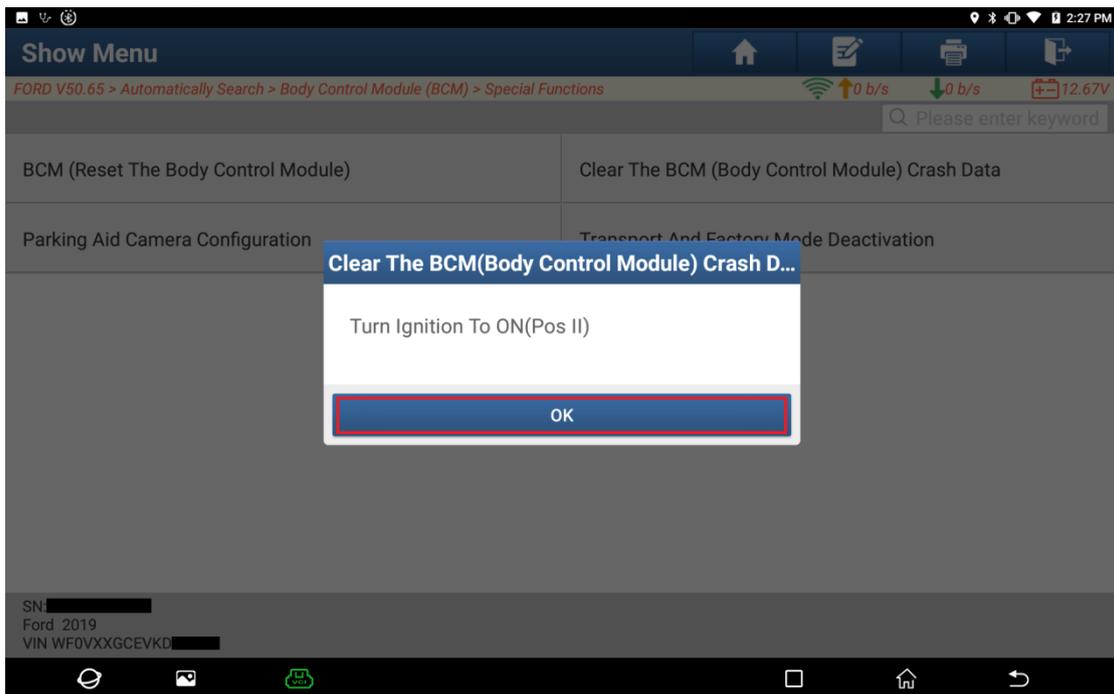


10. Read the crash counter.

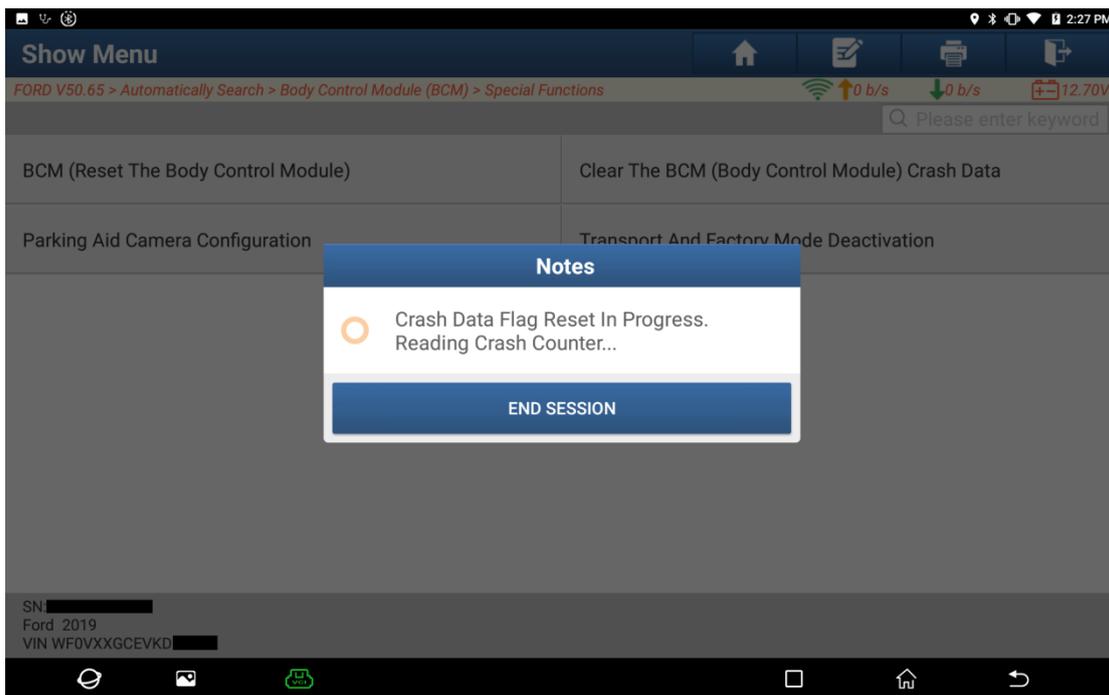


11. Clear RCM (Restraint Control Module) crash events.

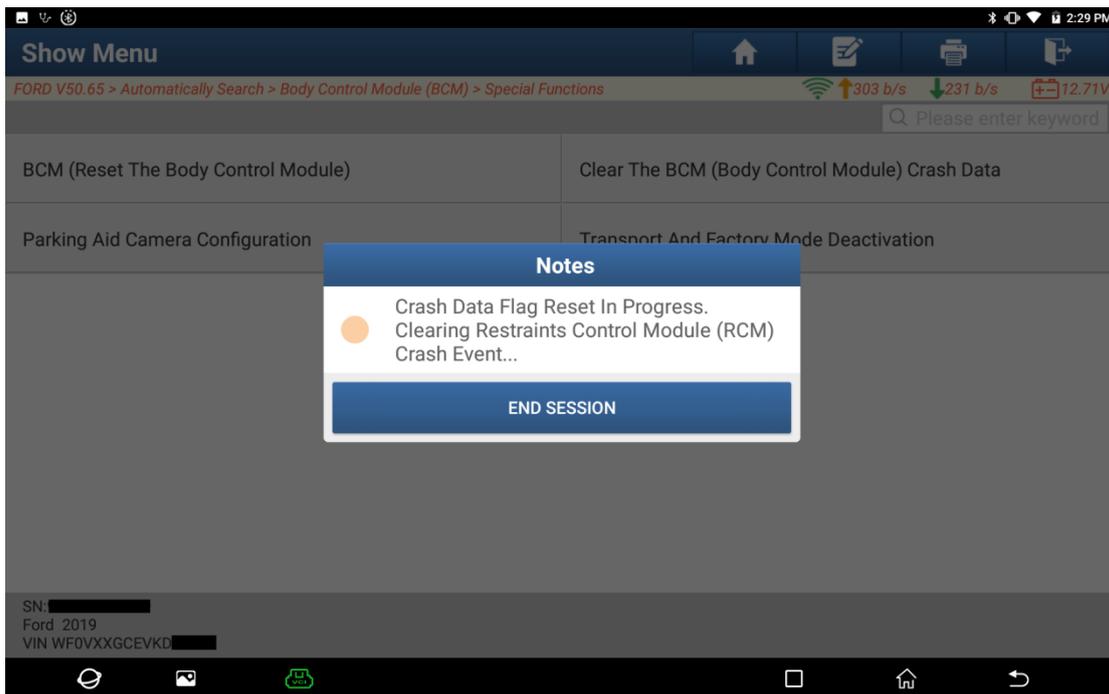


12. Clear BCM (Body Control Module) crash events.

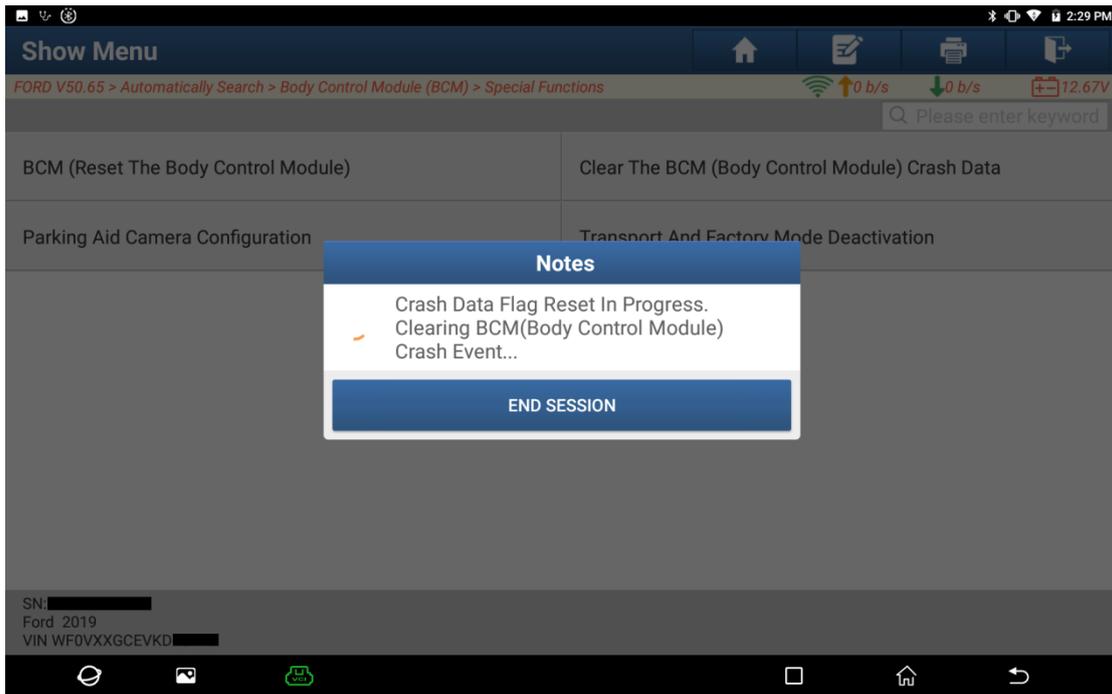

13. Turn the ignition switch to OFF (position 0).

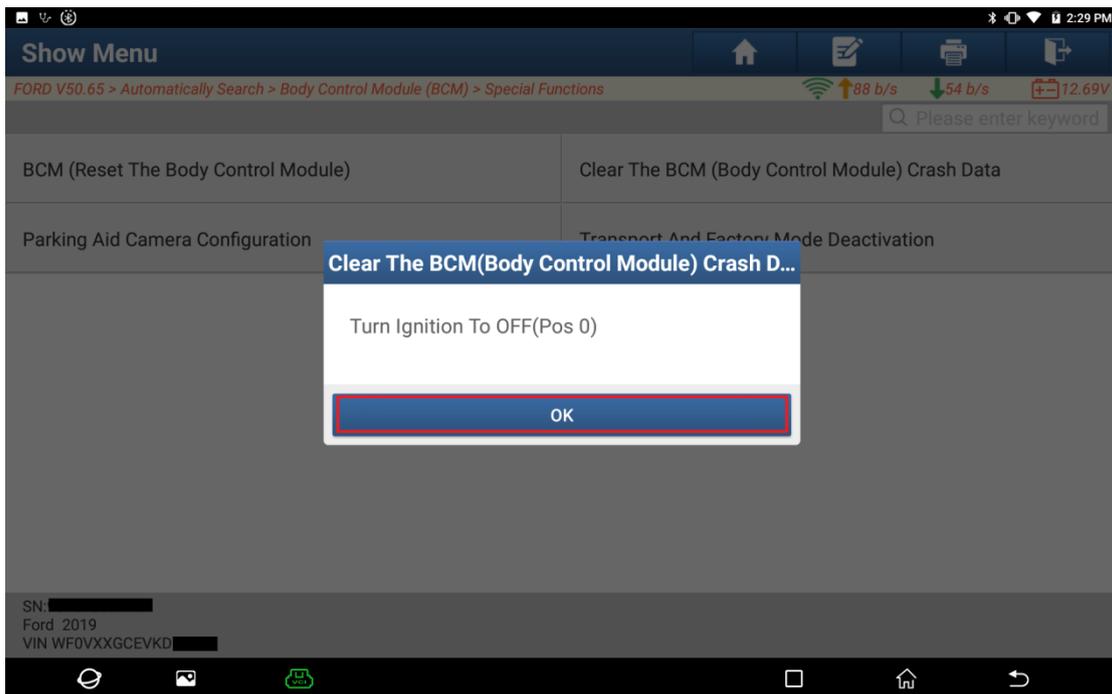

14. Crash data flags have been successfully cleared. Exit the program.

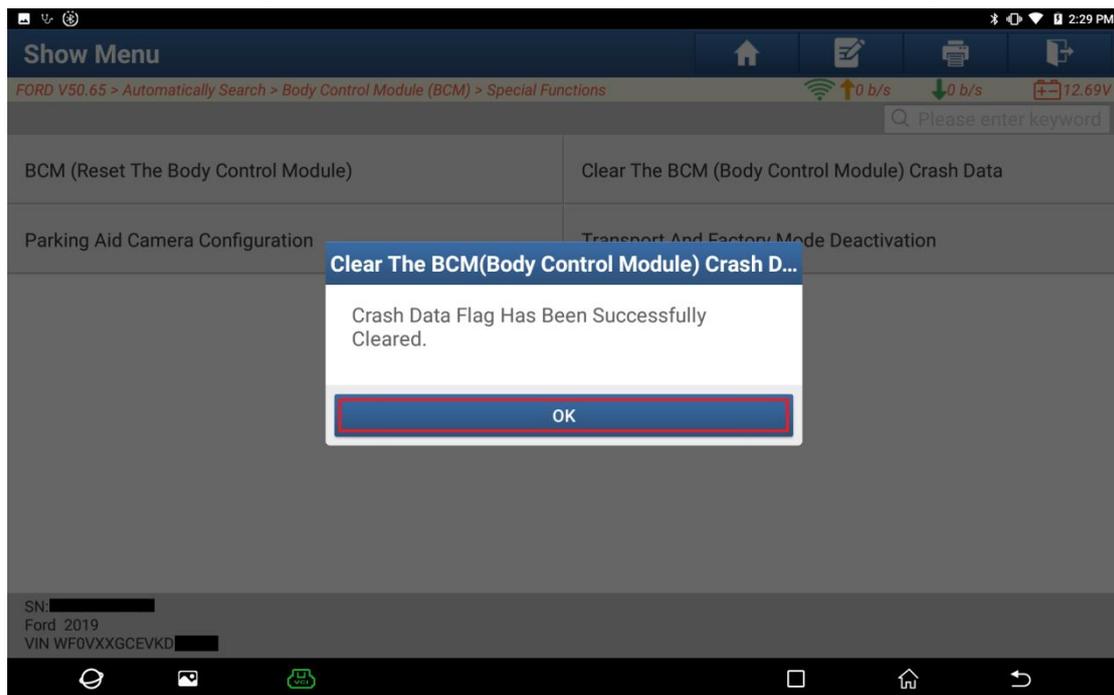

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.