

# Ford Everest Reset the Fuel Metering Valve Learned Values


**Supported equipment:** Launch's full range of comprehensive diagnostic equipment

**Current equipment:** PAD 5


**Function description:** This function is used after installing a new fuel metering valve to clear the basic learned values stored in the PCM and write the new component's basic values into the PCM memory.

**Tested model:** Ford/2021/Everest, VIN: 6FPJXXMJWJME \*\*\*\*\*

1. On a PAD 5, choose [Local Diagnose].

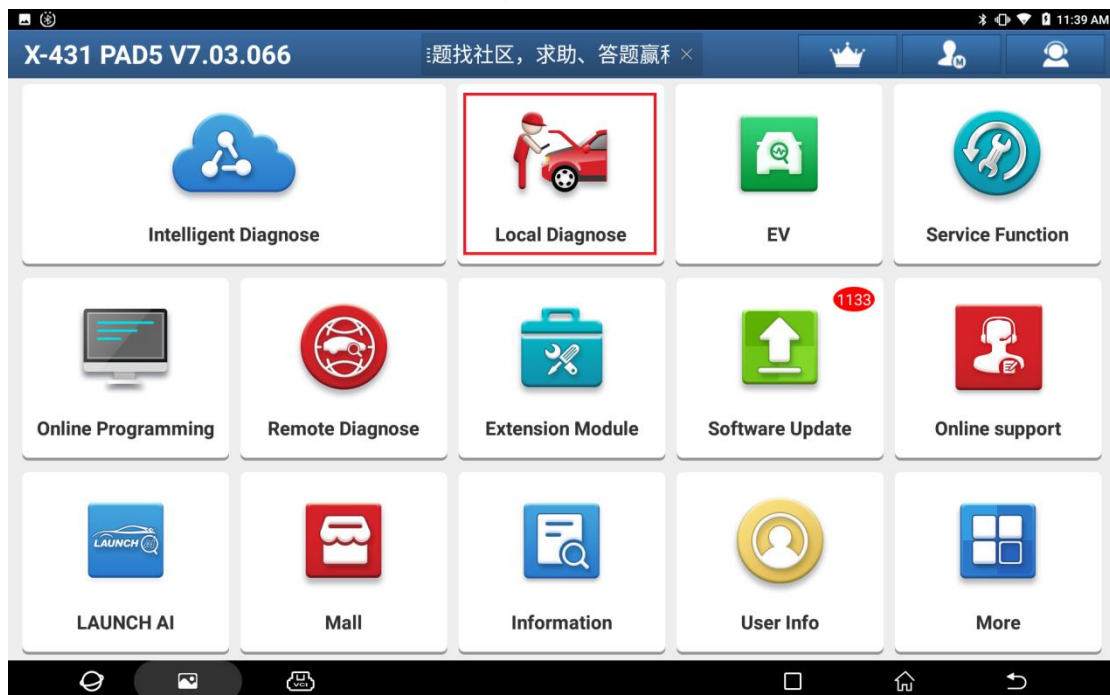

2. Choose [FORD] to test.

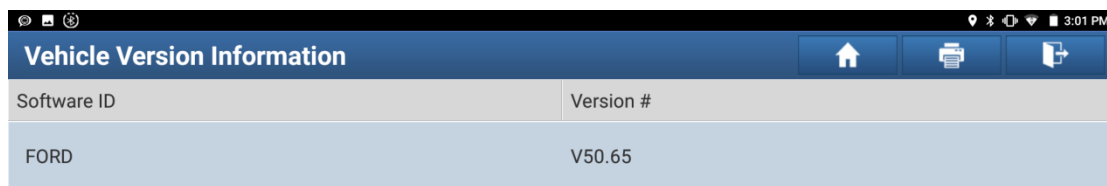

### Ford Diagnosis V50.65

#### Software Introduction

**ECU Coverage:**

This Diagnostic Software Can Test For USA Ford ECUs, Including: Engine, Automatic Transmission, Anti-Lock Brake, Airbag, Air Conditioning, Dashboard, Anti-Theft, Cruise, Common Electronics, Seats, Light, etc.

**Basic Functions:**



- Reading ECUs
- Reading DTCs(Diagnostic trouble code)
- Clearing DTCs(Diagnostic trouble code)
- Reading Vehicle Running Data
- Vehicle Component Operation Test


**Special Functions:**

- Programmable Module Installation
- ESP(Electronic Stability Program) Sensor Calibration
- PCM (Powertrain Control Module) Or ICM (Instrument Control Module):  
 \*Passive Anti-Theft Function (Program Additional Ignition Key, Ignition Key Code Erase And Program, Customer Spare Key Programming Enable/Disable, Parameter Reset, Unlimited Key Mode ON/OFF, Program Unlimited Key Code)




3. Choose [Automatically Search] to identify car models automatically.

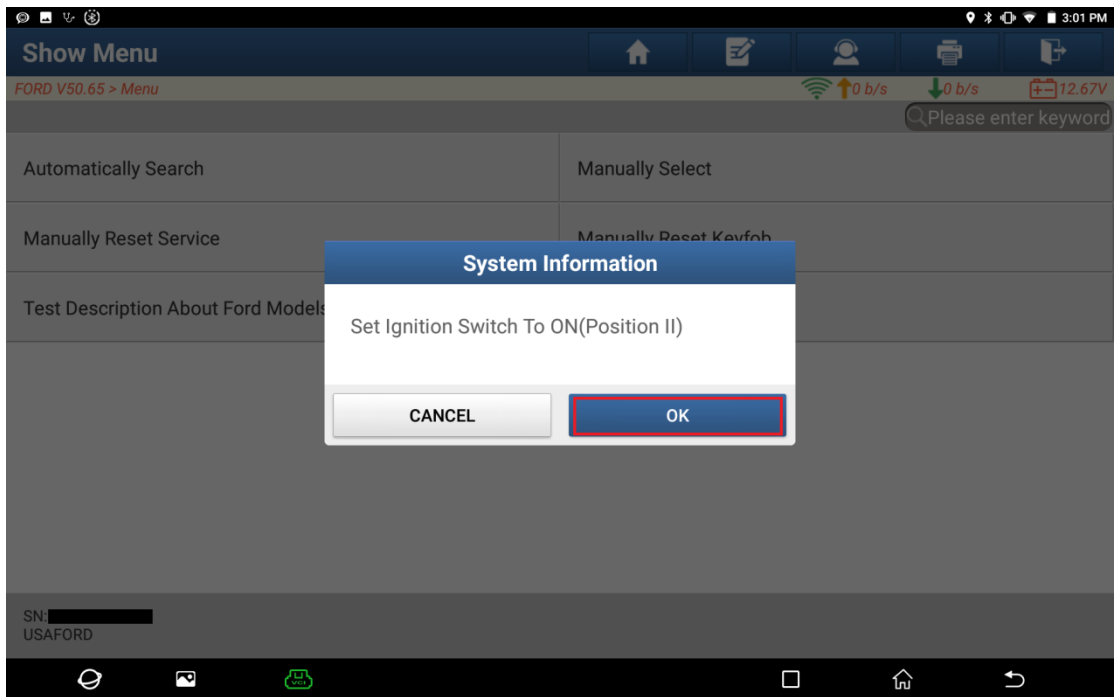
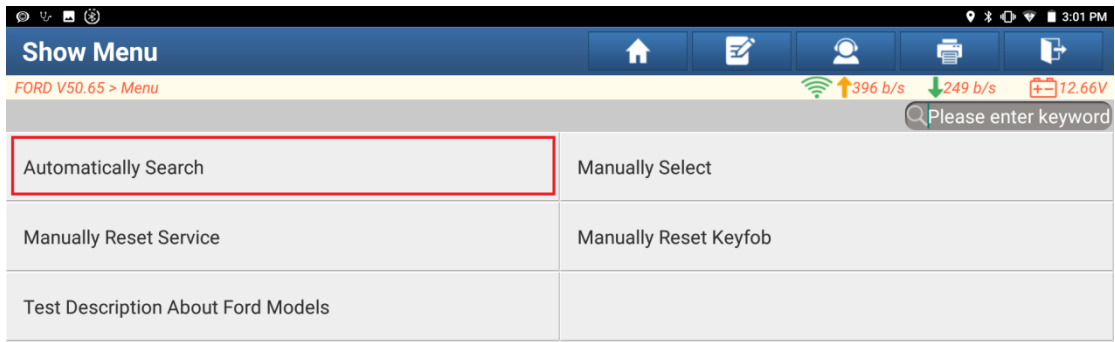


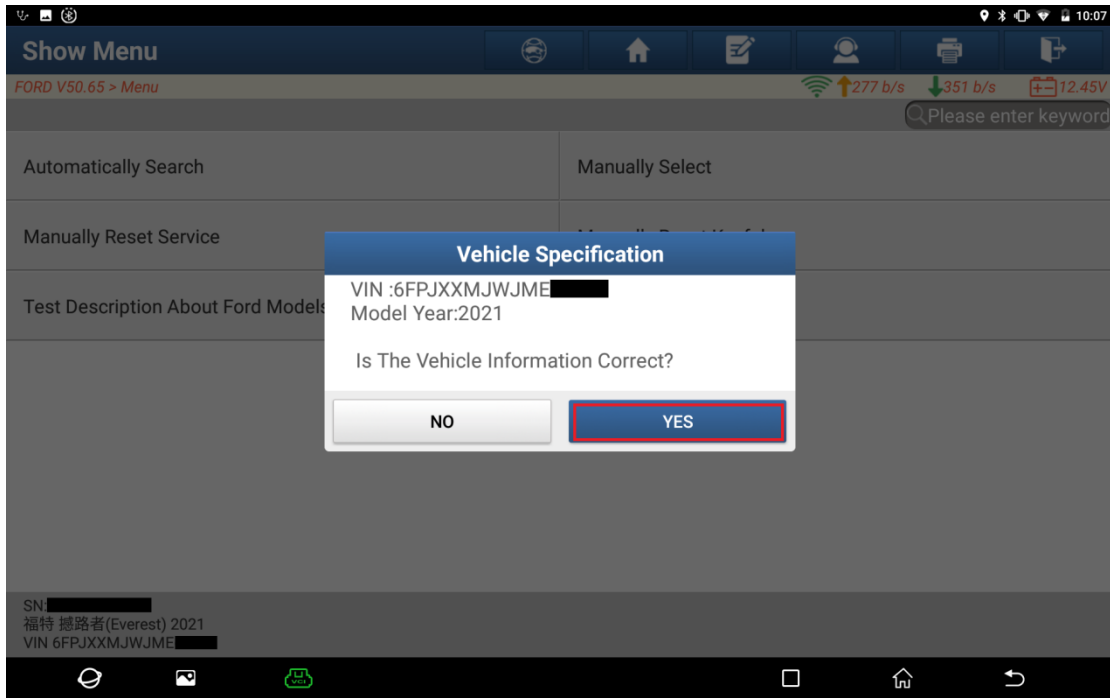


4. Click [Smart Detection] to scan the entire vehicle systems.

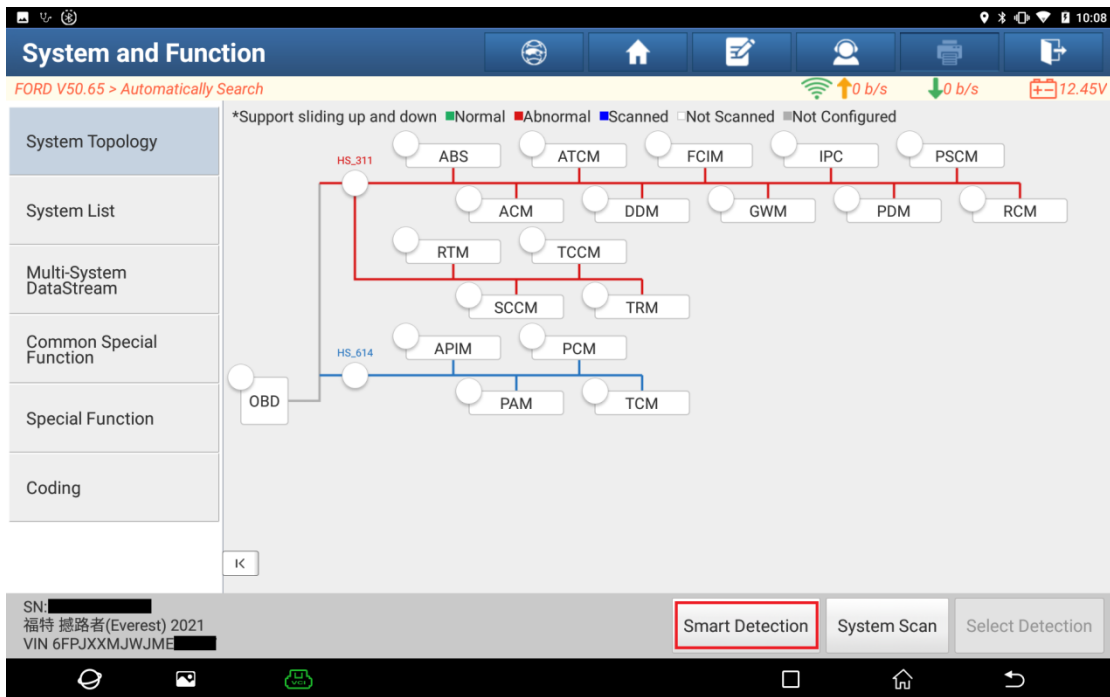


5. Click [PCM (Powertrain Control Module)] to access the system.

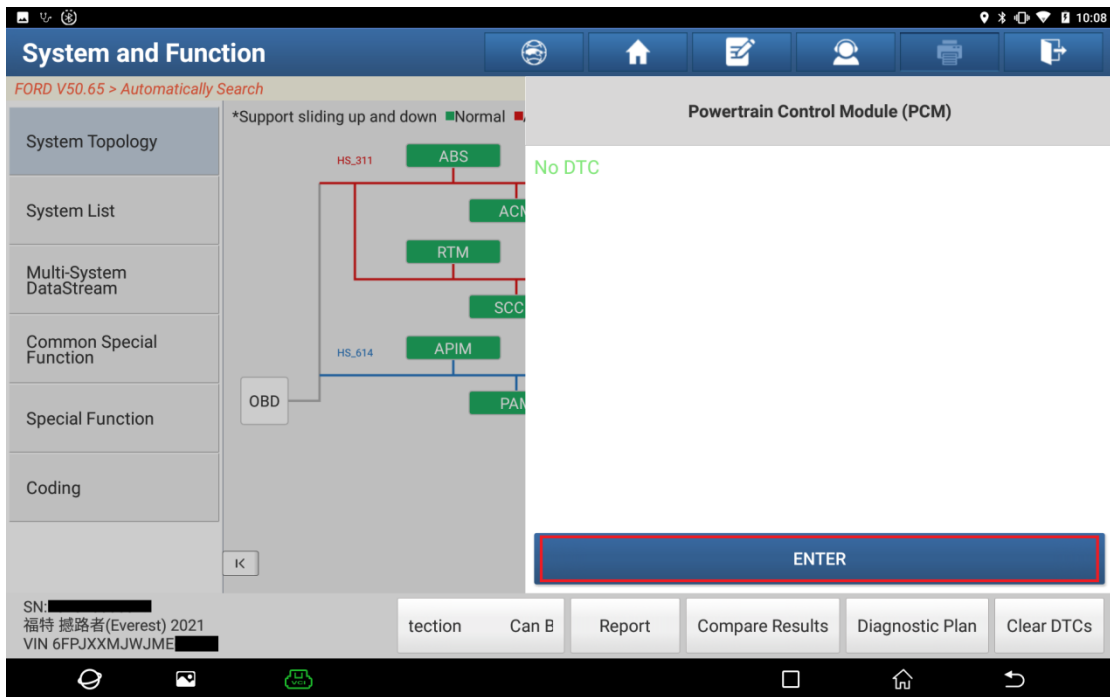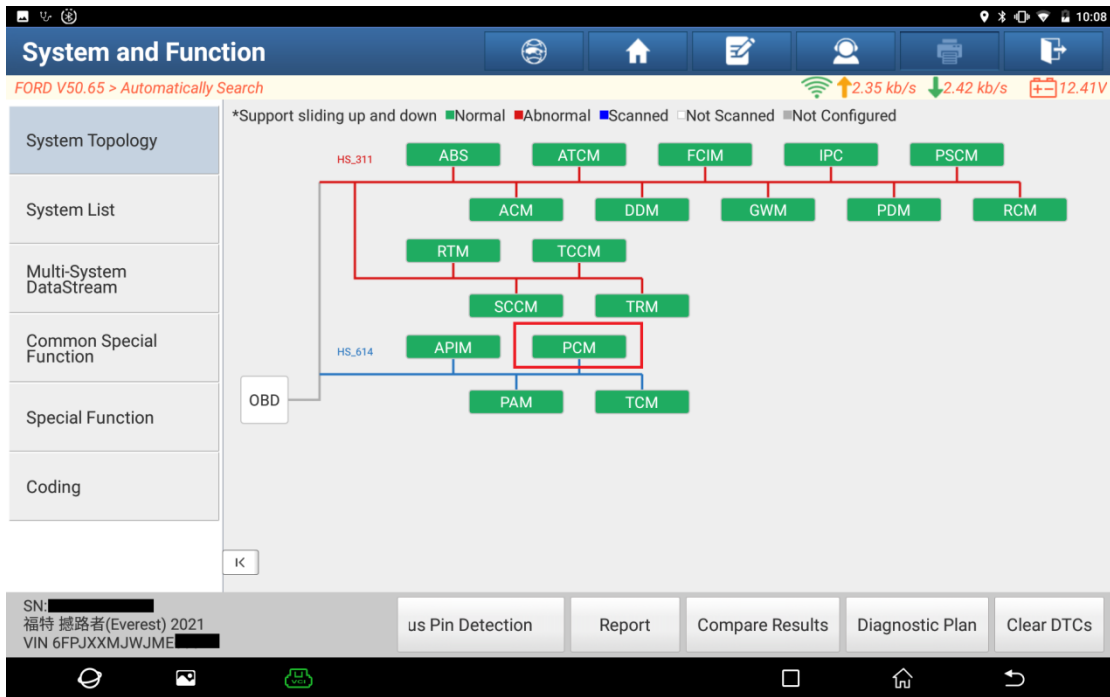


6. Click [Special Functions].

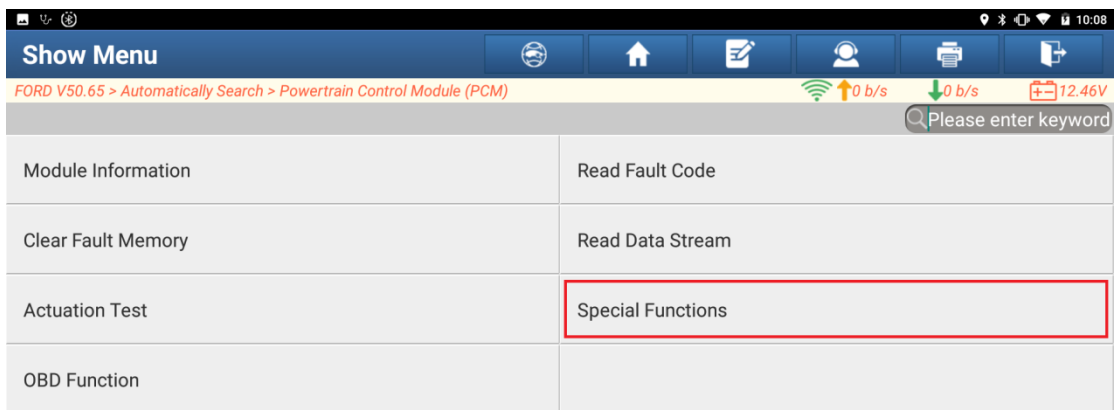


7. Click [Reset The Fuel Metering Valve Learned Values].

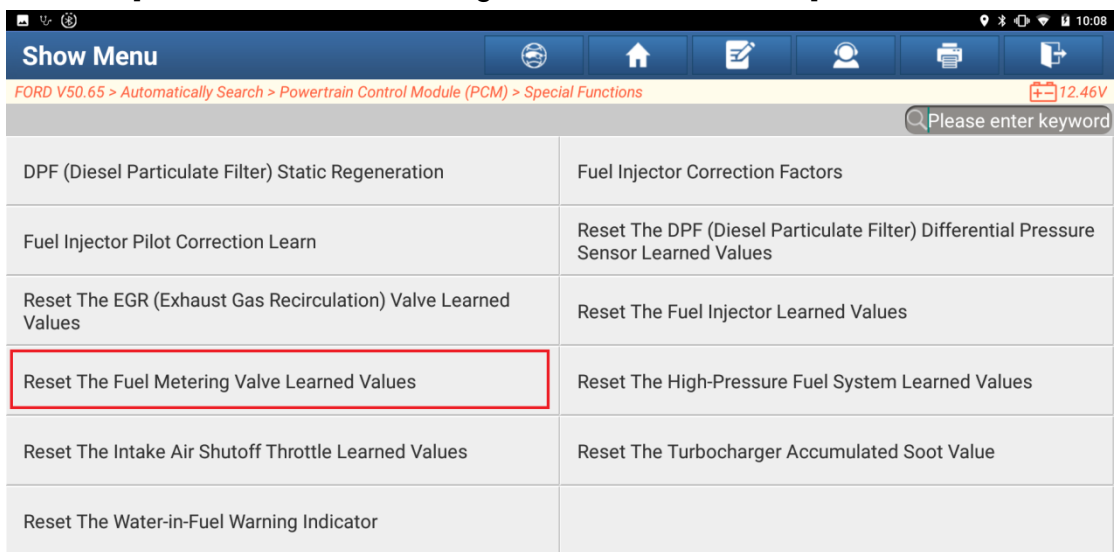


8. Program function introduction.

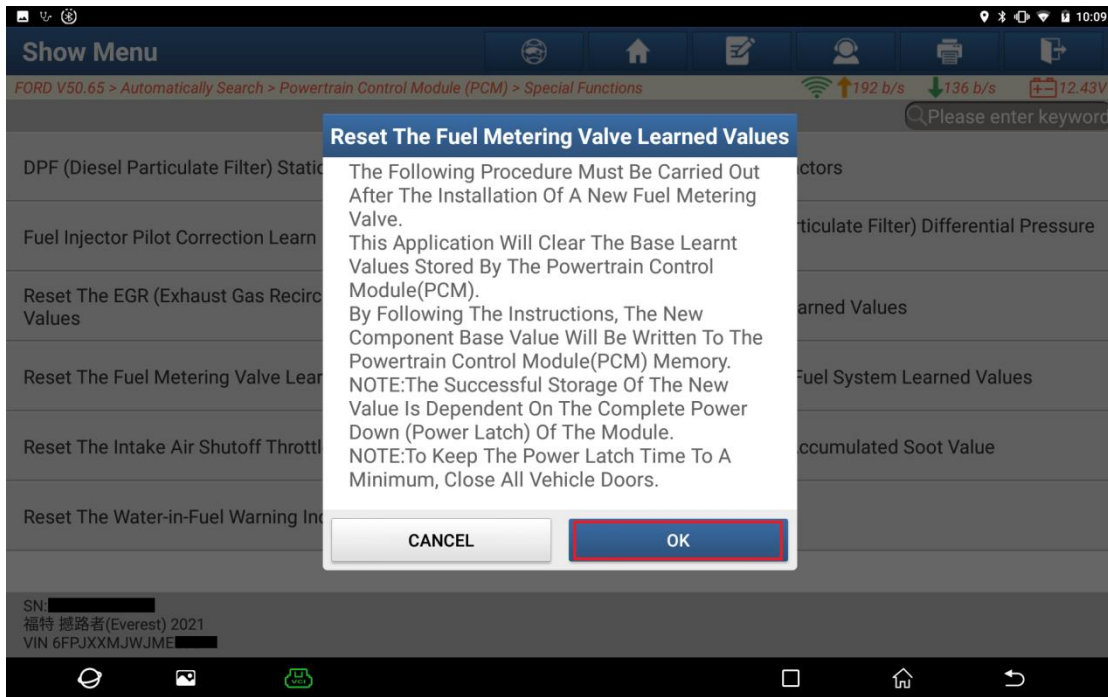


9. Ignition status: Ignition on, engine off

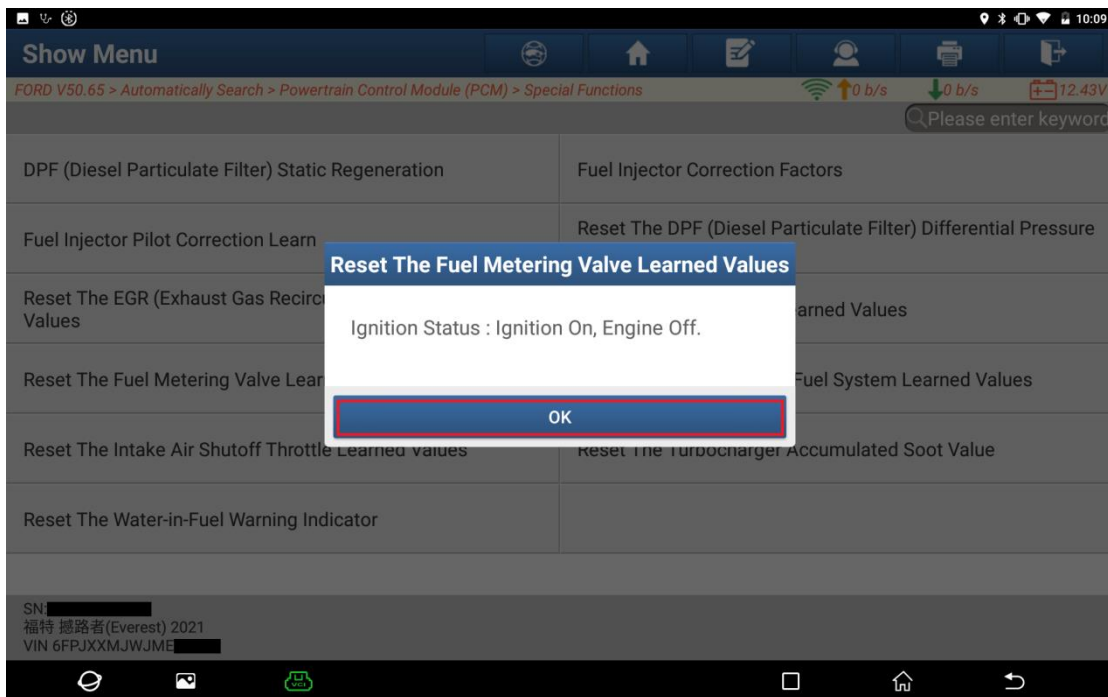


10. Clear learned values.

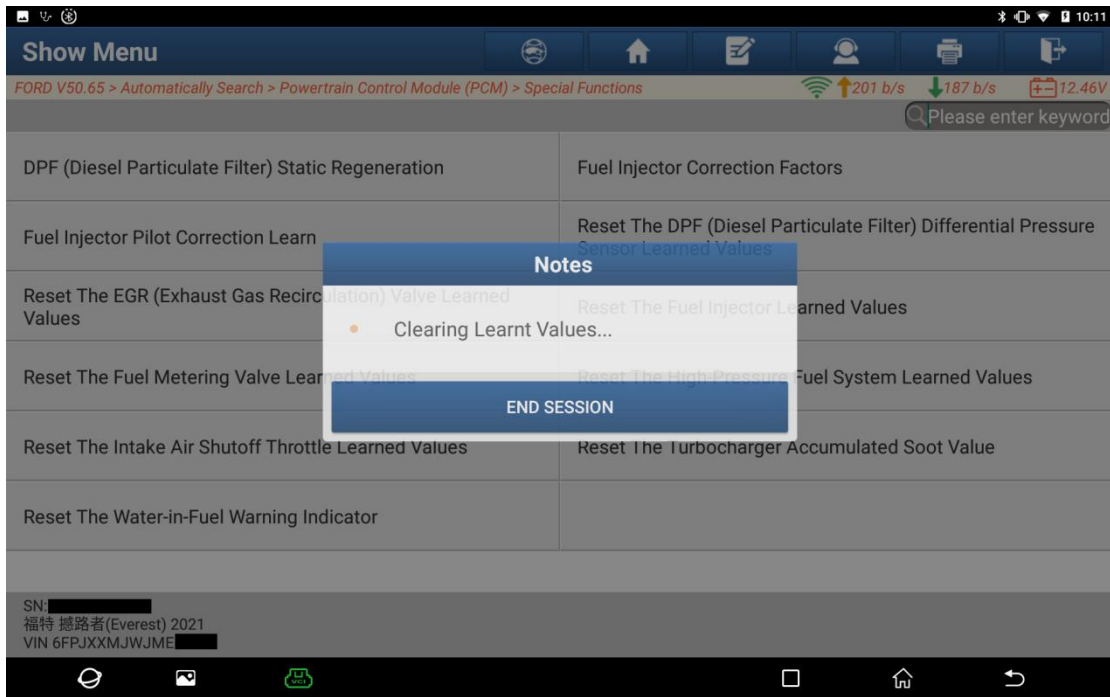


11. Ignition status: Ignition off

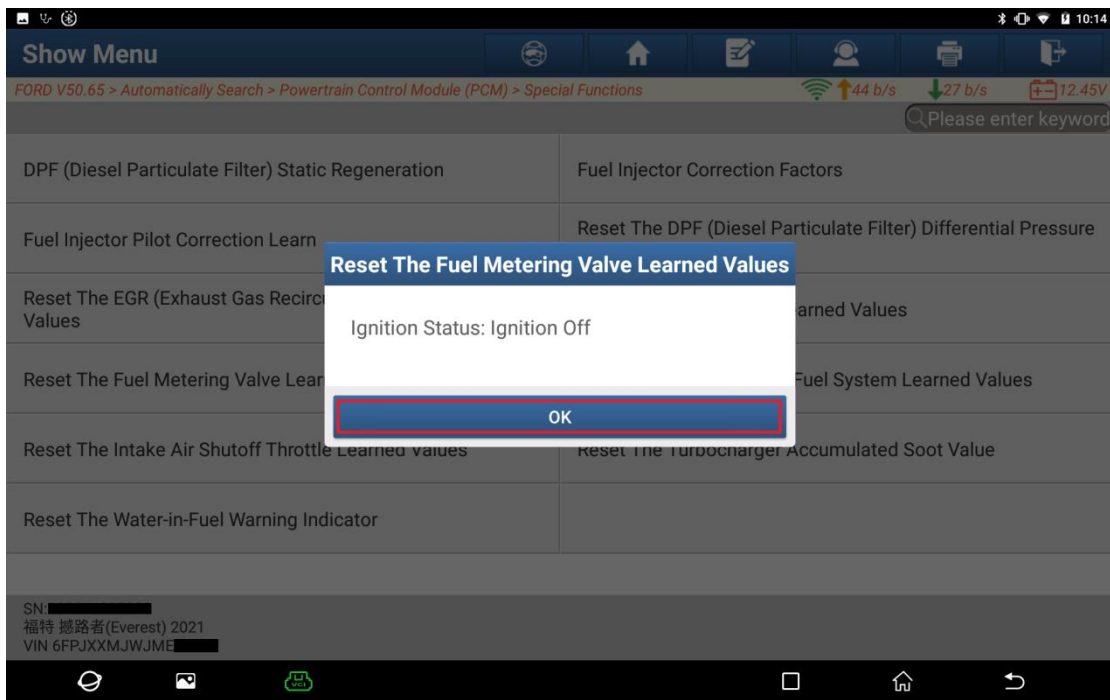


12. Wait for the module to power down (about 20 seconds).

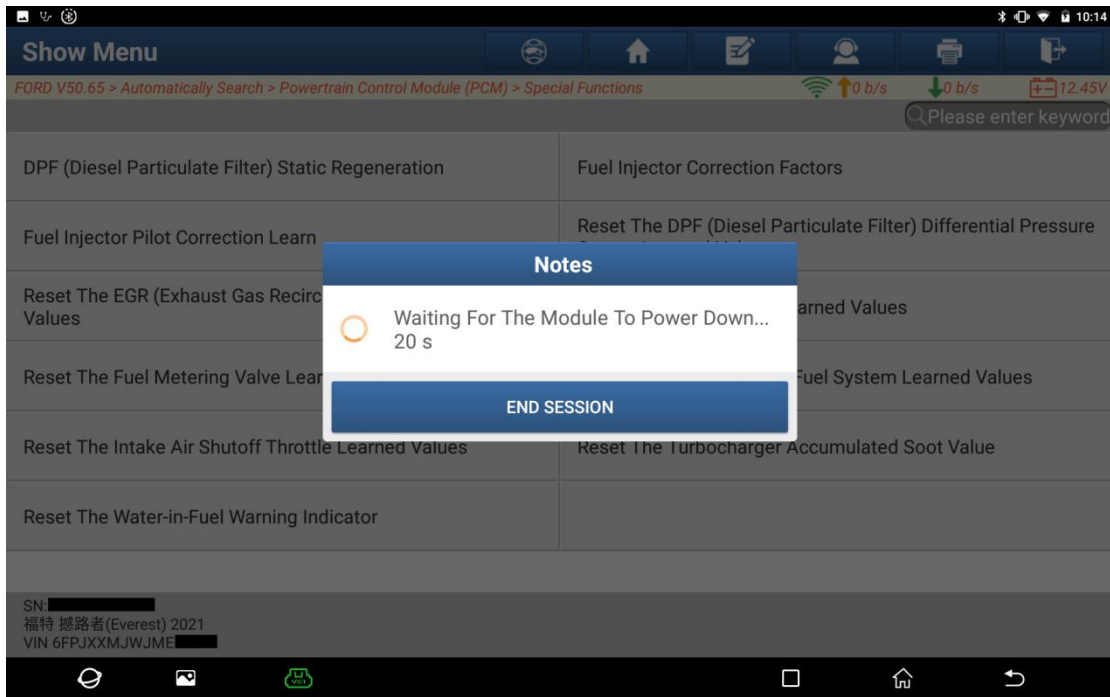


13. Ignition status: Ignition on, engine off

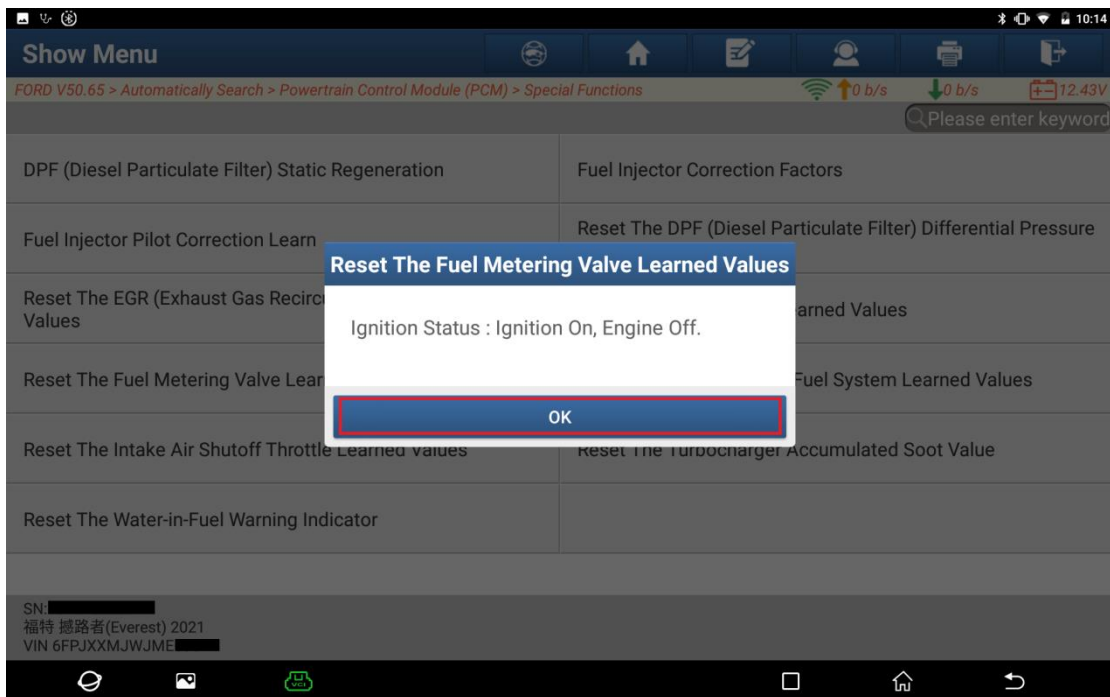

## 14. Ignition status: Ignition off

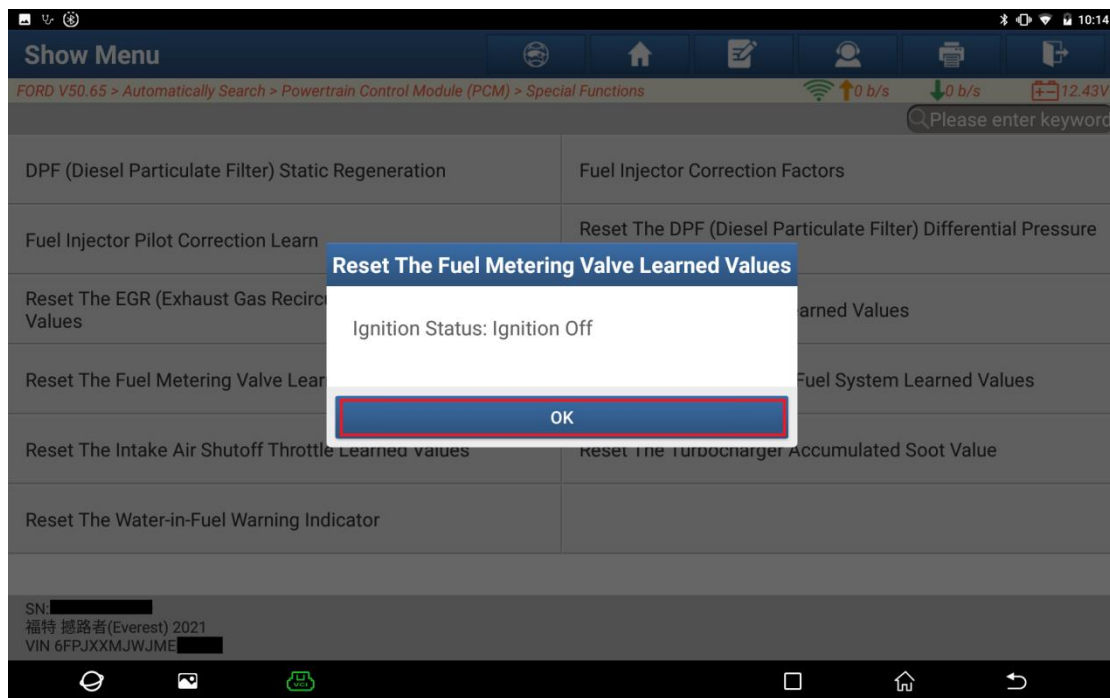

## 15. Service reset is completed. Exit the program.

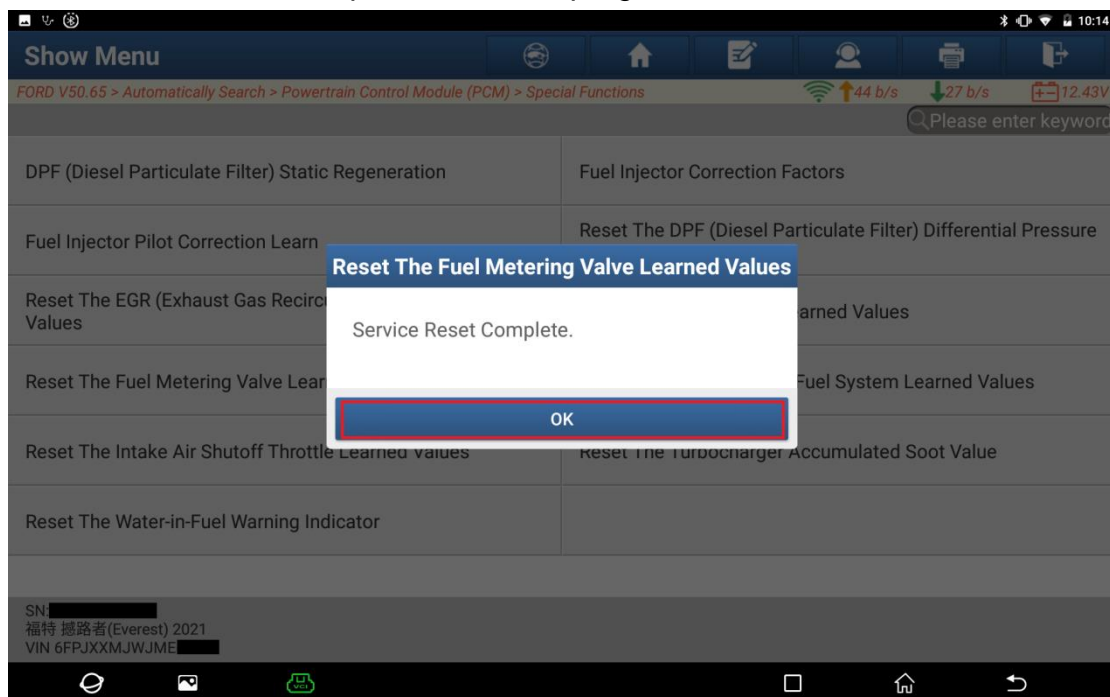**Statement:**

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.