

Headlamp Calibration

Tested Model: LandRover Range Rover 2023

Function Description:


This function is used to calibrate the headlamp level sensor. It shall be performed after the CHCM height calibration is completed.



Execution Conditions:

- Battery voltage > 12V
- Ignition switch ON

Procedure:

1. On a PAD 5, choose [Diagnose], and then choose [Land Rover] for testing.

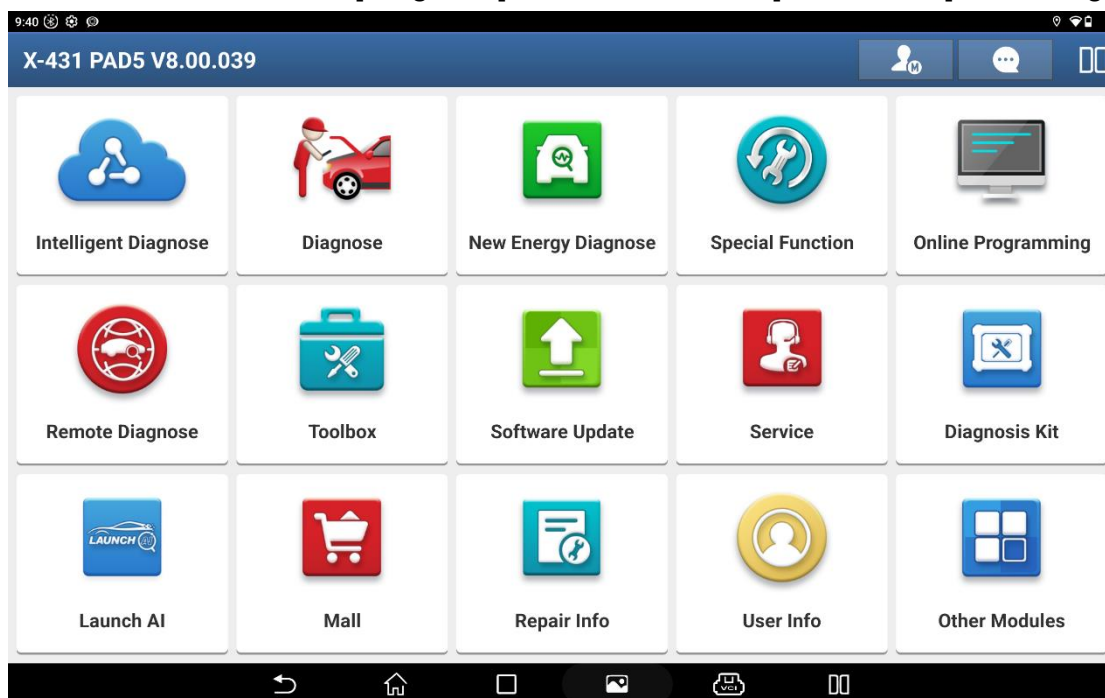

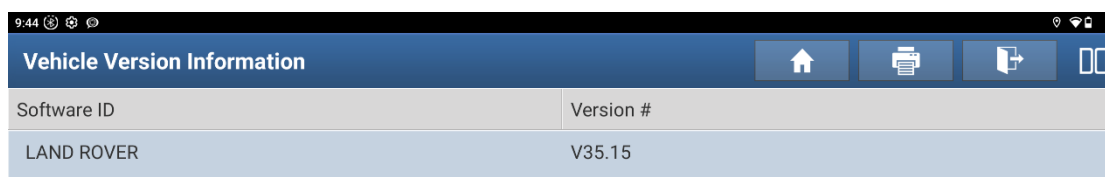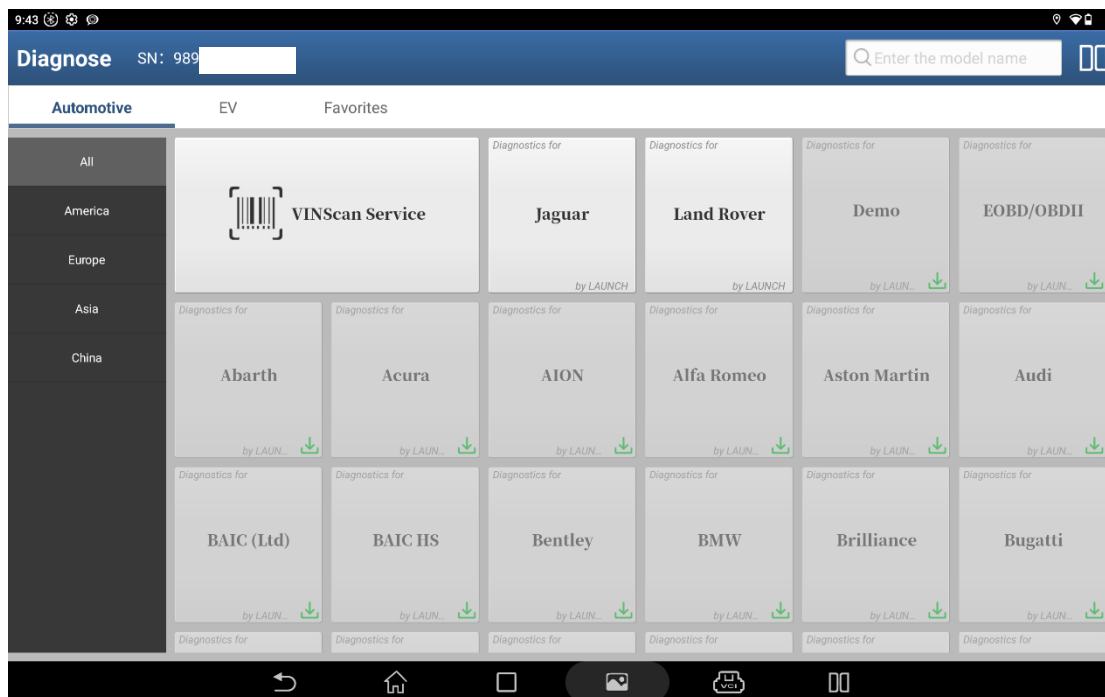

Land Rover Series diagnostic software V35.15

Software Instruction

Summary for the covered ECU:

Engine, transmission, Anti-lock brake, Airbag, Instrument, etc. systems.

Summary for the covered basic function:


- Reading ECU information
- Reading DTCs
- Clearing DTCs
- Reading vehicle running data
- Vehicle component operation test

Summary for the covered special function:


- **PCM (Engine):**
 - Diesel particle filter dynamic regeneration
 - Injector replace
 - EGR replace
- **TCM (Transmission Control Module):**
 - Adaption clear




2. Choose [Automatically Search] to automatically identify the vehicle model.

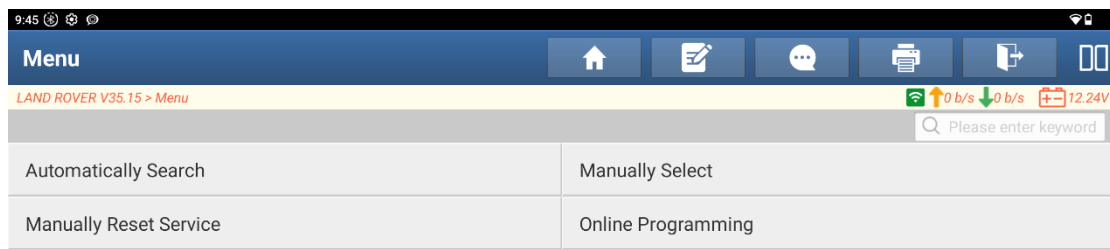

3. Confirm the vehicle information, and then click "YES".

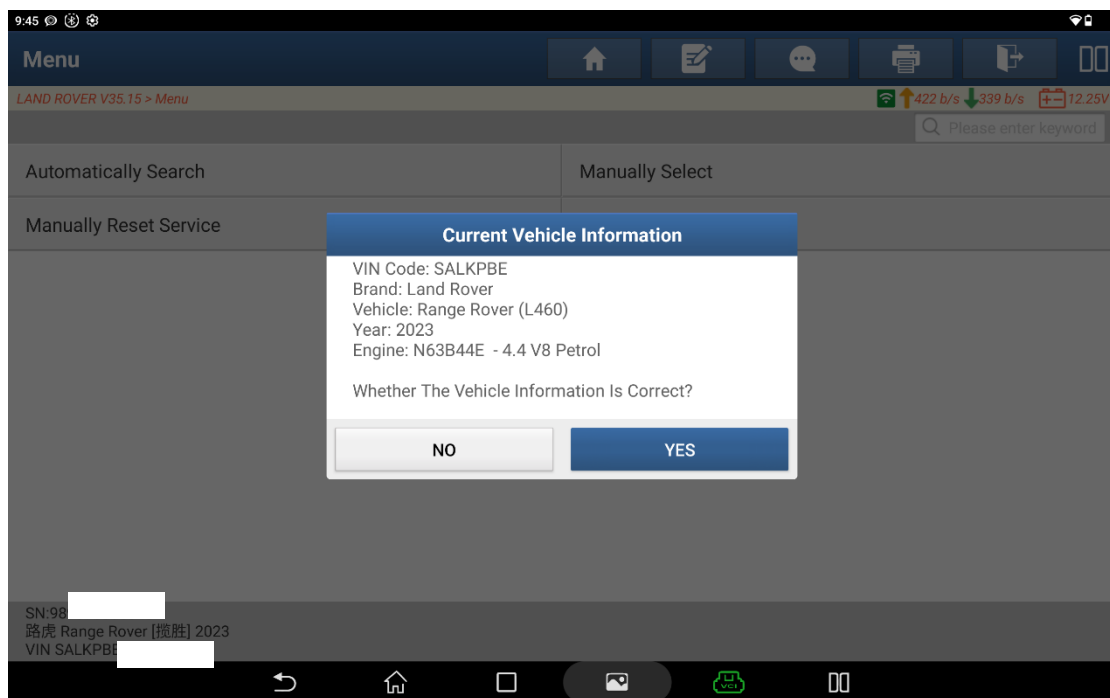

4. Choose [Common Special Function].

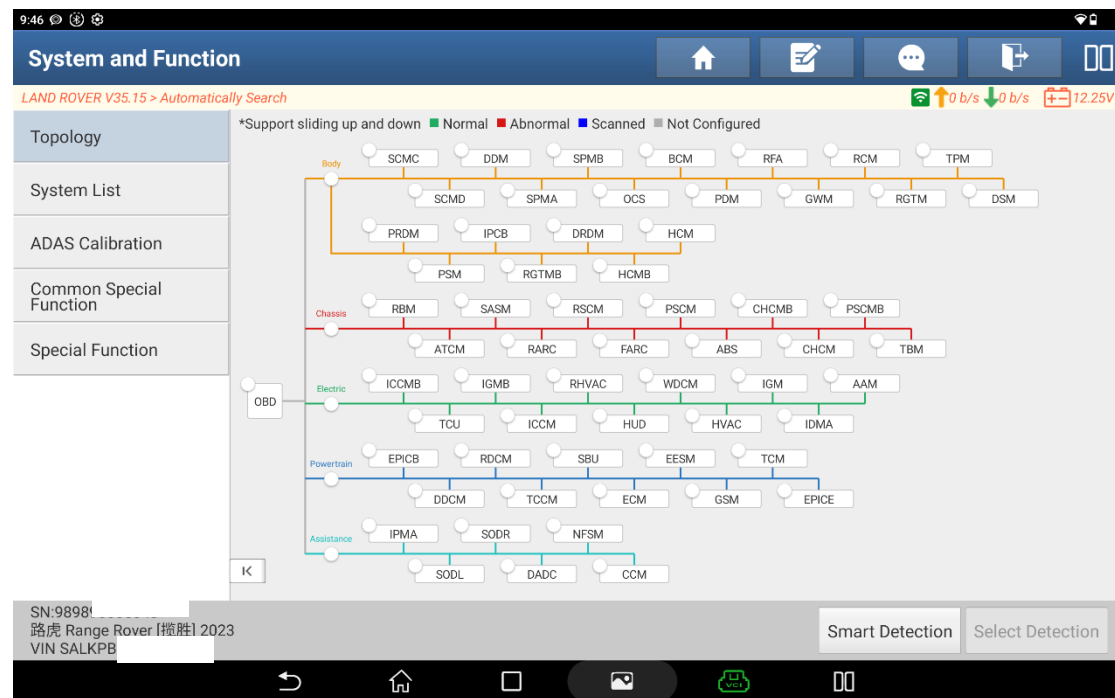

5. Choose [Adaptive Front Lighting].

13:53

Common Special Function

LAND ROVER V35.17 > Automatically Search > Common Special Function

0 b/s 0 b/s 12.59V

Search Please enter keyword


DPF Regen	Gas Particulate Filter Regeneration
Air Level Calibration	Adaptive Front Lighting
Battery Matching	High Voltate Battery
Windows Calibration	Seat Occupancy Calibration
Camera	Radar
Intelligent Cruise Control System	Gearbox Relearn
EGR Adaption	AdBlue Reset
Transport Mode	AC System Relearn/Initialization
Turbo Matching	Rainfall Light Sensor

SN:9893


路虎 Range Rover [揽胜] 2023

VIN SALKPBE


6. Choose [Headlamp Calibration].

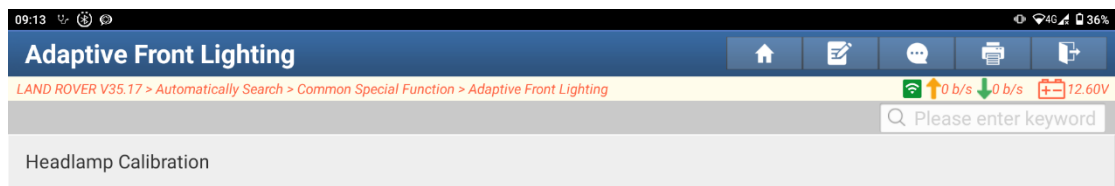


7. Click "OK".

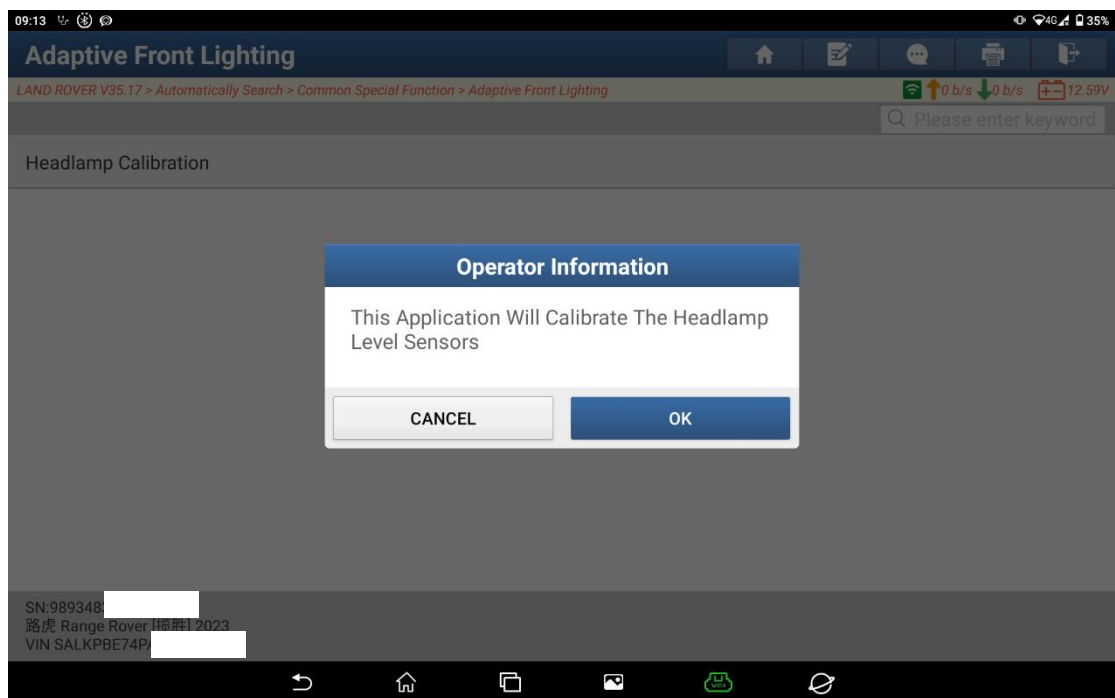


8. Click "OK".

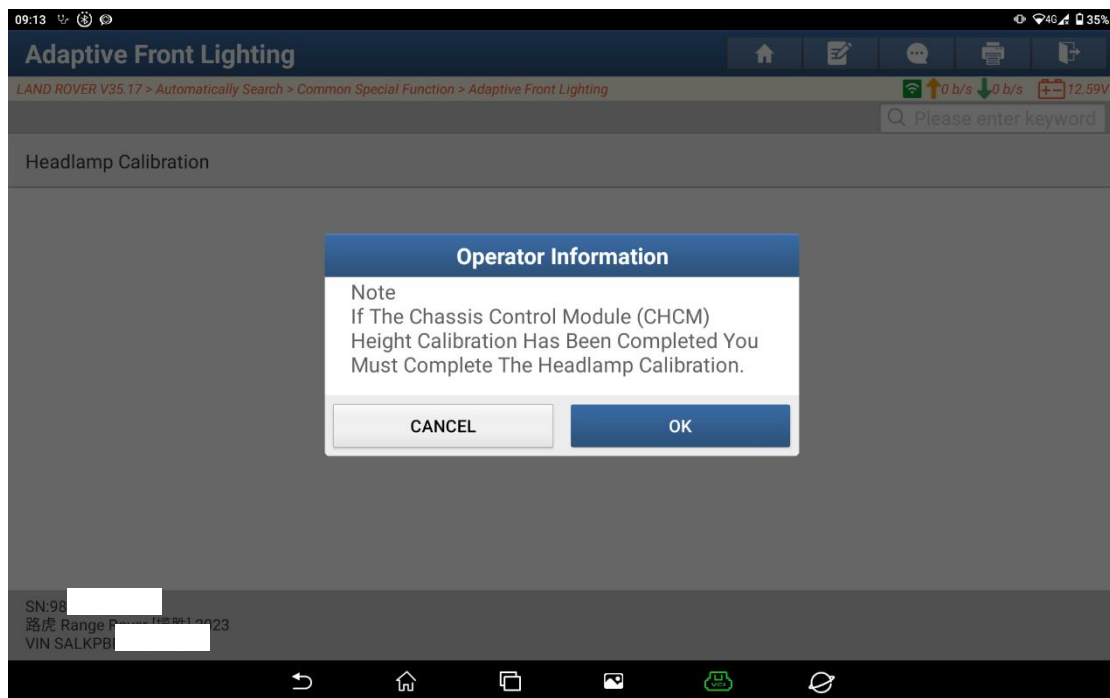


9. Click "YES".

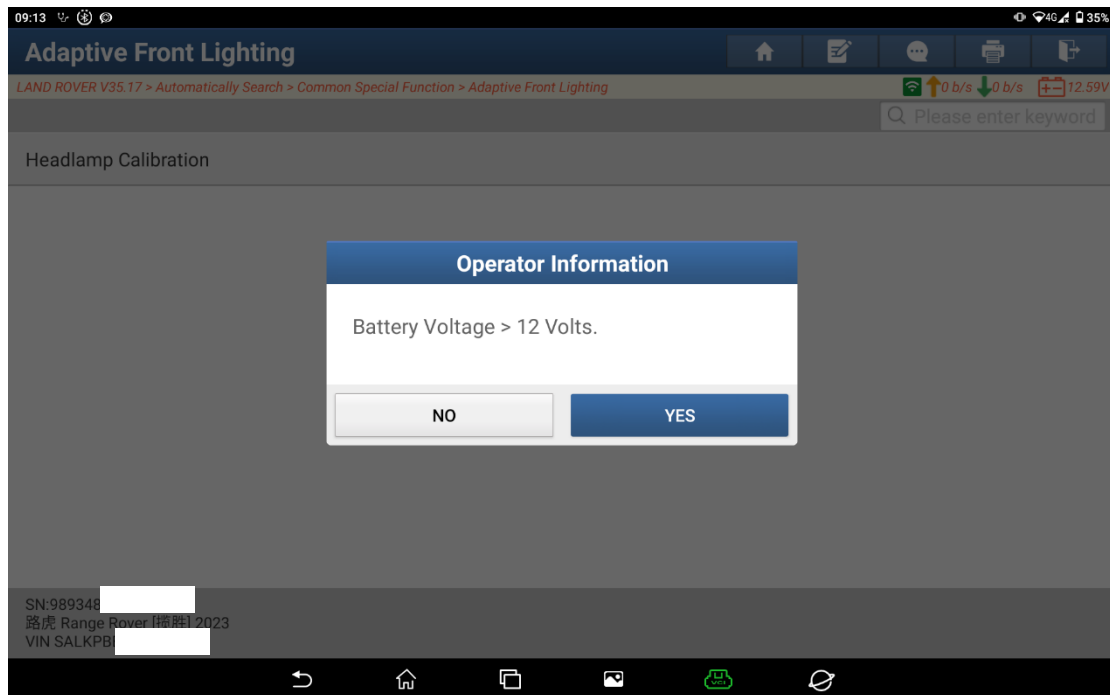


10. Click "OK".

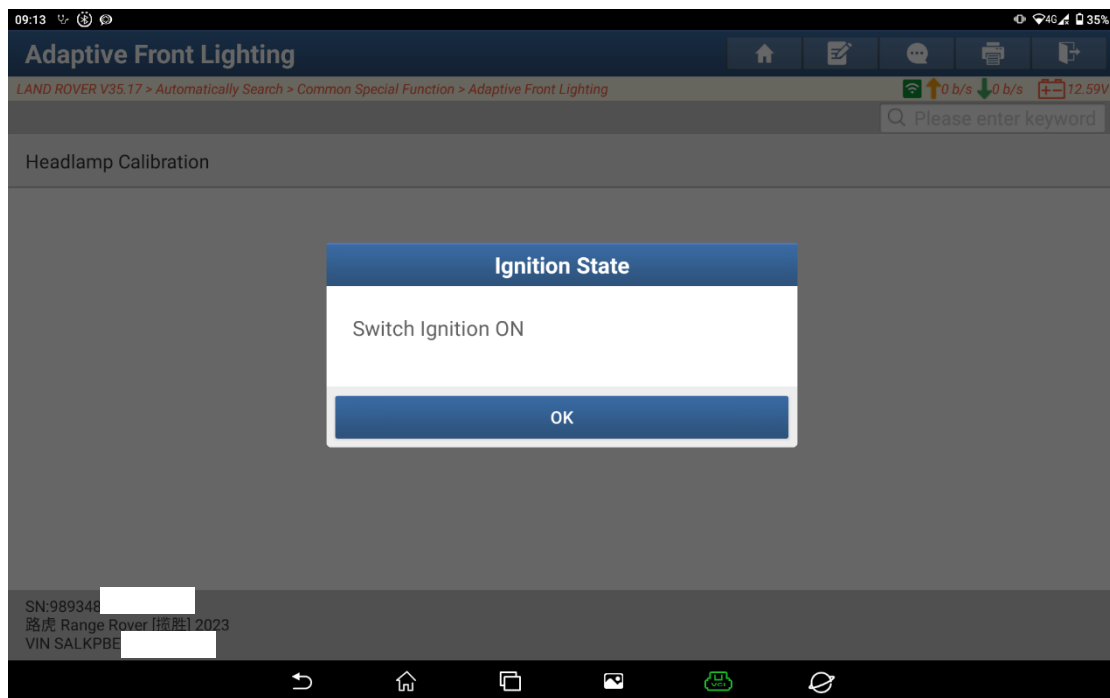

11. Wait for 30s.

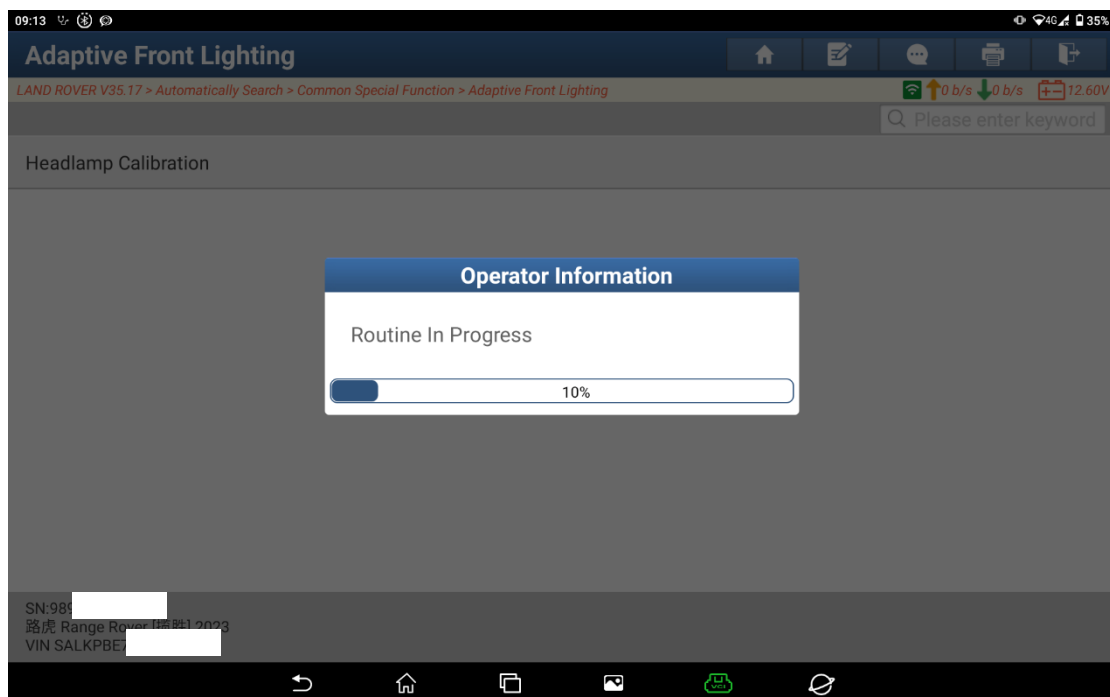

12. Operations completed. Click "OK" to exit the function.

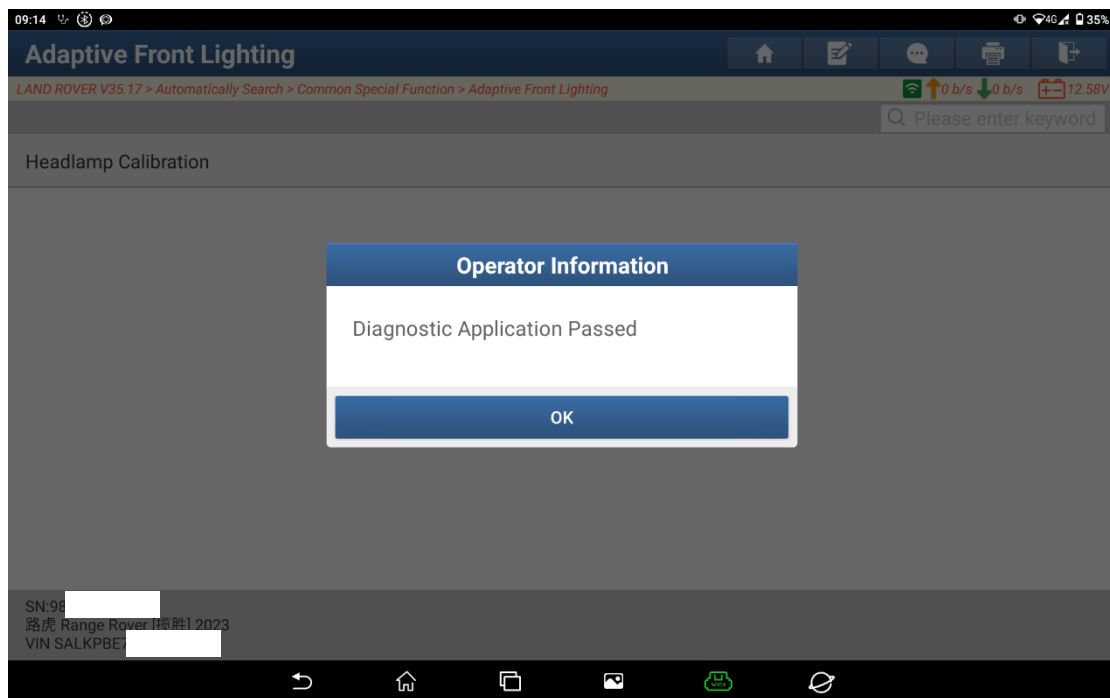

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.