


 
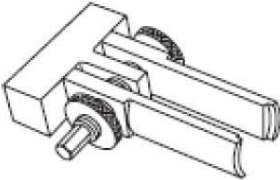 

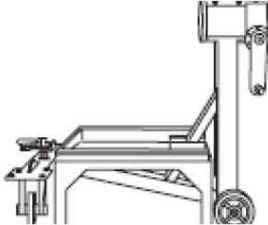 

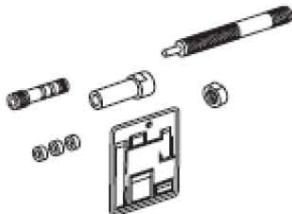 
 


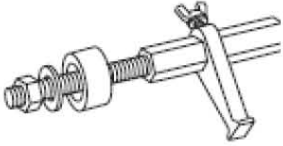 
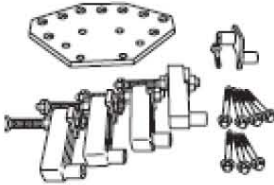 

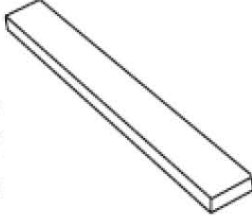 
## 1. 中英文缩写对正表及维修工具编号

### 1.1 中英缩写对症表

ATX	自动变速驱动桥
EX	排气装置
IN	入口
L. H. D.	左侧驾驶
MTX	手动变速驱动桥
OCV	油压转换阀
SST	专用维修工具
TDC	上止点

### 1.2 工具编号

	1: 49 JE01 061 2: 303 - 507 曲轴TDC 定位销钉		1: 49 T032 302 2: - 轴承安装用工具
	1: 49 UN30 3328 2: 303 - 328 后油封拆卸工具		1: 49 1285 071 2: - 轴承拆卸器
	1: 49 B012 0A2 2: - 枢轴		1: 49 0636 100B 2: - 气门弹簧提升器臂
	1: 49 0107 680A 2: - 发动机支架		1: 49 H010 401 2: - 油封安装器
	1: 49 L012 0A0B 2: - 气门油封和气门导管安装工具套件		1: 49 S120 170 2: - 气门油封拆卸器

	<p>1: 49 G011 201 2: - 固定器</p>		<p>1: 49 D032 316 2: - 量角器</p>
	<p>1: 49 E011 1A0 2: - 齿圈制动装置</p>		<p>1: 49 L010 1A0 2: - 发动机吊架套件</p>
	<p>1: 49 B012 015 2: - 气门导管安装工具</p>		<p>1: 49 JE01 054 2: - 凸轮轴校准正时工具（欧洲）</p>
	<p>1: 49 UN30 3376 2: 303 - 376 凸轮轴校准正时工具（除欧洲之外）</p>		<p>1: 49 UN30 3465 2: 303 - 465 凸轮轴校准正时工具（除欧洲之外）</p>
	<p>1: 49 JE02 0A2 2: - 万向阀工具（仅欧洲）</p>		