

1. DTC 编号

注:

如果 DTC U1000 或 U1001 与其他DTC 同时显示, 请首先执行 DTC U1000、U1001 的故障诊断。请参阅章节DTC U1000、U1001 CAN 通讯线路。

DTC*1		项目 (汽车故障诊断仪屏幕术语)
汽车故障诊断仪	ECM*3	
NO DTC	闪烁*4	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.
U1000	1000*5	CAN COMM CIRCUIT
U1001	1001*5	CAN COMM CIRCUIT
P0000	0000	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.
P0011	0011	INT/V TIM CONT-B1
P0021	0021	INT/V TIM CONT-B2
P0031	0031	H02S1 HTR (B1)
P0032	0032	H02S1 HTR (B1)
P0037	0037	H02S2 HTR (B1)
P0038	0038	H02S2 HTR (B1)
P0051	0051	H02S1 HTR (B2)
P0052	0052	H02S1 HTR (B2)
P0057	0057	H02S2 HTR (B2)
P0058	0058	H02S2 HTR (B2)
P0102	0102	MAF SEN/CIRCUIT
P0103	0103	MAF SEN/CIRCUIT
P0112	0112	IAT SEN/CIRCUIT
P0113	0113	IAT SEN/CIRCUIT
P0117	0117	ECT SEN/CIRC
P0118	0118	ECT SEN/CIRC
P0122	0122	TP SEN 2/CIRC
P0123	0123	TP SEN 2/CIRC
P0132	0132	H02S1 (B1)
P0133	0133	H02S1 (B1)
P0134	0134	H02S1 (B1)
P0138	0138	H02S2 (B1)
P0139	0139	H02S2 (B1)
P0152	0152	H02S1 (B2)
P0153	0153	H02S1 (B2)
P0154	0154	H02S1 (B2)
P0158	0158	H02S2 (B2)

DTC*1		项目（汽车故障诊断仪屏幕术语）
汽车故障诊断仪	ECM*3	
P0159	0159	H02S2 (B2)
P0171	0171	FUEL SYS-LEAN-B1
P0172	0172	FUEL SYS-RICH-B1
P0174	0174	FUEL SYS-LEAN-B2
P0175	0175	FUEL SYS-RICH-B2
P0222	0222	TP SEN 1/CIRC
P0223	0223	TP SEN 1/CIRC
P0300	0300	MULTI CYL MISFIRE
P0301	0301	CYL 1 MISFIRE
P0302	0302	CYL 2 MISFIRE
P0303	0303	CYL 3 MISFIRE
P0304	0304	CYL 4 MISFIRE
P0305	0305	CYL 5 MISFIRE
P0306	0306	CYL 6 MISFIRE
P0327	0327	KNOCK SEN/CIRC-B1
P0328	0328	KNOCK SEN/CIRC-B1
P0335	0335	CKP SEN/CIRCUIT
P0340	0340	CMP SEN/CIRC-B1
P0345	0345	CMP SEN/CIRC-B2
P0420	0420	TW CATALYST SYS-B1
P0430	0430	TW CATALYST SYS-B2
P0444	0444	PURG VOLUME CONT/V
P0500	0500	VEH SPEED SEN/CIRC*6
P0550	0550	PW ST P SEN/CIRC
P0605	0605	ECM
P0705	0705	PNP SW/CIRC
P0710	0710	ATF TEMP SEN/CIRC
P0715	0715	INPUT SPD SEN/CIRC
P0720	0720	VEH SPD SEN/CIR AT*6
P0725	0725	ENGINE SPEED SIG
P0731	0731	A/T 1ST GR FNCTN
P0732	0732	A/T 2ND GR FNCTN
P0733	0733	A/T 3RD GR FNCTN
P0734	0734	A/T 4TH GR FNCTN
P0740	0740	TCC SOLENOID/CIRC

DTC*1		项目（汽车故障诊断仪屏幕术语）
汽车故障诊断仪	ECM*3	
P0744	744	A/T TCC S/V FNCTN
P0745	745	L/PRESS SOL/CIRC
P0746	746	PRS CNT SOL/A FCTN
P0750	750	SFT SOL A/CIRC
P0755	755	SFT SOL B/CIRC
P0776	776	PRS CONT SOL/B FCTN
P0778	778	PRS CONT SOL/B CIRC
P0840	840	TR PRS SONS/A CIRC
P0845	845	TR PRS SENS/B CIRC
P1065	1065	ECM BACK UP/CIRCUIT
P1111	1111	INT/V TIM V/CIR-B1
P1121	1121	ETC ACTR
P1122	1122	ETC FUNCTION/CIRC
P1124	1124	ETC MOT PWR
P1126	1126	ETC MOT PWR
P1128	1128	ETC MOT
P1136	1136	INT/V TIM V/CIR-B2
P1143	1143	H02S1 (B1)
P1144	1144	H02S1 (B1)
P1146	1146	H02S2 (B1)
P1147	1147	H02S2 (B1)
P1163	1163	H02S1 (B2)
P1164	1164	H02S1 (B2)
P1166	1166	H02S2 (B2)
P1167	1167	H02S2 (B2)
P1211	1211	TCS C/U FUNCTN
P1212	1212	TCS/CIRC
P1217	1217	ENG OVER TEMP
P1225	1225	CTP LEARNING
P1226	1226	CTP LEARNING
P1229	1229	SENSOR POWER/CIRC
P1564	1564	ASCD SW
P1572	1572	ASCD BRAKE SW
P1574	1574	ASCD VHL SPD SEN
P1610 - P1615	1610 - 1615	NATS MALFUNCTION
P1700	1700	CVT C/U FUNCT
P1705	1705	TP SEN/CIRC A/T

DTC*1		项目（汽车故障诊断仪屏幕术语）
汽车故障诊断仪	ECM*3	
P1706	1706	P-N POS SW/CIRCUIT
P1715	1715	IN PULY SPEED
P1720	1720	V/SP SEN(A/T OUT)
P1740	1740	LU-SLCT SOL/CIRC
P1760	1760	O/R CLTCH SOL/CIRC
P1777	1777	STEP MOTR CIRC
P1778	1778	STEP MOTR FNC
P1805	1805	BRAKE SW/CIRCUIT
P2122	2122	APP SEN 1/CIRC
P2123	2123	APP SEN 1/CIRC
P2127	2127	APP SEN 2/CIRC
P2128	2128	APP SEN 2/CIRC
P2135	2135	TP SENSOR
P2138	2138	APP SENSOR

*1: 第一行程 DTC 编号与 DTC 编号相同。

*2: 该编号由 ISO 15031-5 规定。

*3: 在诊断测试模式 II（自诊断结果）中。

*4: 发动机运转时，MIL 可能闪烁。

*5: 此 DTC 的故障排除需要汽车故障诊断仪。

*6: 当两个自诊断中都同时出现“安全—失效”模式运行时，MIL 灯点亮。