

1. DTC 编号

注:

如果 DTC U1000 或 U1001 与其他DTC 同时显示, 请首先执行 DTC U1000、U1001 的故障诊断。请参阅章节DTC U1000、U1001 CAN 通讯线路。

DTC*1		项目 (汽车故障诊断仪屏幕术语)
汽车故障诊断仪	ECM*2	
NO DTC	闪烁*3	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.
U1000	1000*4	CAN COMM CIRCUIT
U1001	1001*4	CAN COMM CIRCUIT
P0000	0000	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.
P0011	0011	INT/V TIM CONT-B1
P0021	0021	INT/V TIM CONT-B2
P0102	0102	MAF SEN/CIRCUIT
P0103	0103	MAF SEN/CIRCUIT
P0117	0117	ECT SEN/CIRC
P0118	0118	ECT SEN/CIRC
P0122	0122	TP SEN 2/CIRC
P0123	0123	TP SEN 2/CIRC
P0132	0132	H02S1 (B1)
P0133	0133	H02S1 (B1)
P0134	0134	H02S1 (B1)
P0138	0138	H02S2 (B1)
P0139	0139	H02S2 (B1)
P0152	0152	H02S1 (B2)
P0154	0154	H02S1 (B2)
P0158	0158	H02S2 (B2)
P0222	0222	TP SEN 1/CIRC
P0223	0223	TP SEN 1/CIRC
P0327	0327	KNOCK SEN/CIRC-B1
P0328	0328	KNOCK SEN/CIRC-B1
P0335	0335	CKP SEN/CIRCUIT
P0340	0340	CMP SEN/CIRC-B1
P0345	0345	CMP SEN/CIRC-B2
P0550	0550	PW ST P SEN/CIRC
P0605	0605	ECM
P1065	1065	ECM BACK UP/CIRCUIT
P1111	1111	INT/V TIM V/CIR-B1

P1121	1121	ETC ACTR
P1122	1122	ETC FUNCTION/CIRC
P1124	1124	ETC MOT PWR
P1126	1126	ETC MOT PWR
P1128	1128	ETC MOT
P1136	1136	INT/V TIM V/CIR-B2
P1211	1211	TCS C/U FUNCTN
P1212	1212	TCS/CIRC
P1217	1217	ENG OVER TEMP
P1225	1225	CTP LEARNING
P1226	1226	CTP LEARNING
P1229	1229	SENSOR POWER/CIRC
P1564	1564	ASCD SW
P1572	1572	ASCD BRAKE SW
P1574	1574	ASCD VHL SPD SEN
P1610 - P1615	1610 - 1615	NATS MALFUNCTION
P1700	1700	CVT C/U FUNCT
P1706	1706	P-N POS SW/CIRCUIT
P1715	1715	IN PULY SPEED
P1720	1720	V/SP SEN(A/T OUT)
P1805	1805	BRAKE SW/CIRCUIT
P2122	2122	APP SEN 1/CIRC
P2123	2123	APP SEN 1/CIRC
P2127	2127	APP SEN 2/CIRC
P2128	2128	APP SEN 2/CIRC
P2135	2135	TP SENSOR
P2138	2138	APP SENSOR

*1: 第一行程 DTC 编号与 DTC 编号相同。

*2: 在诊断测试模式 II (自诊断结果) 中。

*3: 发动机运转时。

*4: 此 DTC 的故障排除需要汽车故障诊断仪。