

5. 拧紧扭矩规范

紧固件	拧紧扭矩			
	N·m	kg·m	lb·ft	
制动钳销栓	34	3.4	25.0	
制动钳螺栓	85	8.5	61.5	
前制动器软管接头螺栓	16	1.6	11.5	
后制动栓（制动器背板螺栓）	23	2.3	17.0	
制动总泵螺母或真空助力器螺母	13	1.3	9.5	
制动管 4 通螺栓 比例阀栓	11	1.1	8.0	
制动管螺母	16	1.6	11.5	
踏板轴螺母	23	2.3	17.0	
后轴螺母	100	10.0	72.5	
制动器放气塞	（前）	11	1.1	8.0
	（后）	8	0.8	6.0
车轮螺母	85	8.5	61.5	
轮缸螺栓	10	1.0	7.5	
驻车制动操纵手柄螺栓	5.5	0.55	4.0	
LSPV 螺栓	23	2.3	17.0	
LSPV 螺母				

6. 必需的维修材料

材料	推荐产品	用途
制动液	储液罐盖上标明的或车辆用户手册上写明的制动液	<ul style="list-style-type: none"> 注满制动储液罐 清洗或涂干分解的制动总泵制动钳和制动分泵的部件上
防水密封胶	复合 366E 密封胶 99000-31090	<ul style="list-style-type: none"> 涂干制动器背板和后节头的接合面 涂干制动器背板及驻车制动钢索的接合面 涂干垫圈的切口和连接驻车制动钢索处

7. 专用工具

工具	编号和名称
	09922-89810 销拆卸器
	09942-15510 滑锤
	09943-17912 制动鼓拆卸器 (前轮轮毂拆卸器)
	09950-78210 制动导管螺母扳手
	09956-02310 管带式液压表
	09952-16030 真空助力器推杆调整器

工具	编号和名称
 A micrometer screw gauge with a circular scale and a linear scale.	09900-20606 千分表，测微表
 A magnetic stand consisting of a vertical rod with a base and a horizontal arm.	09900-20701 磁性支架
 A threaded hydraulic gauge with a hexagonal top and a tapered end.	09952-36310 螺柱式液压表