

# 2009 睿翼防盗系统车载诊断[高级遥控 门锁系统和按钮起动系统]

## 摘要:

本文档主要讲述 2009 年睿翼带高级遥控门锁系统和按钮起动系统的防盗系统的检测和故障码含义及故障码诊断流程。

## 关键字:

2009 睿翼 防盗系统 按钮 DTC 故障码 诊断

LAUNCH

# 目录

1. 车载诊断说明.....	1
1.1 前言.....	1
1.2 有效命令模式检查.....	1
1.3 有效命令模式表.....	1
1.4 DTC 检查.....	1
1.5 清除 DTC.....	2
1.6 DTC 表.....	2
1.7 DTC 表（带起动机锁止安全系统）.....	5
1.8 PID 数据检查.....	6
1.9 PID 数据表.....	7
2. 故障码诊断.....	10
2.1 B100B:15 故障解析.....	10
2.2 B100C:11 故障解析.....	12
2.3 B100C:12 故障解析.....	14
2.4 B1026:08 故障解析.....	16
2.5 B1026:51 故障解析.....	18
2.6 B1026:62 故障解析.....	20
2.7 B1026:71 故障解析.....	23
2.8 B1026:87 故障解析.....	26
2.9 B1026:92 故障解析.....	28
2.10 B1026:96 故障解析.....	29
2.11 B102B:51 故障解析.....	30
2.12 B108B:23 故障解析.....	30
2.13 B108B:29 故障解析.....	33
2.14 B100B:11 故障解析.....	35
2.15 B108C:23 故障解析.....	37
2.16 B10A5:12 故障解析.....	39
2.17 B10C1:11 故障解析.....	41
2.18 B10C3:11 故障解析.....	43
2.19 B10C3:12 故障解析.....	45
2.20 B10C6:1F 故障解析.....	47
2.21 B10C7:1F 故障解析.....	50
2.22 B10C8:1F 故障解析.....	52
2.23 B10C9:1F 故障解析.....	55
2.24 B10D1:23 故障解析.....	58
2.25 B10D3:23 故障解析.....	59
2.26 B10E7:11 故障解析.....	61
2.27 B10E7:12 故障解析.....	63
2.28 B10E7:16 故障解析.....	65
2.29 B10E7:17 故障解析.....	67
2.30 B112A:11 故障解析.....	69
2.31 B112A:12 故障解析.....	71

2.32	B112A:16 故障解析.....	73
2.33	B112A:17 故障解析.....	75
2.34	P0615:11、P0615:13、P0850:29 故障解析.....	77
2.35	P0615:11、P0615:12、P0615:13、 P1708:29 故障解析.....	83
2.36	B11C4:23 故障解析.....	88
2.37	B11E8:11 故障解析.....	89
2.38	B11E8:12 故障解析.....	92
2.39	B11FD:1F 故障解析.....	96
2.40	B113E:11 故障解析.....	98
2.41	B1210:1F 故障解析.....	101
2.42	C0040:29 故障解析.....	103
2.43	P0560:16、P0560:17 故障解析.....	107
2.44	P081C:62 故障解析.....	110
2.45	P081D:62 故障解析.....	112
2.46	P0830:23 故障解析.....	115
2.47	P1794:16、P1794:17 故障解析.....	117
2.48	U2100:00 故障解析.....	120
2.49	U0028:87 故障解析.....	120
2.50	U201F:00 故障解析.....	122
2.51	U201F:13 故障解析.....	124
2.52	U0401:68 故障解析.....	126
2.53	U3000:41、U3000:49 故障解析.....	126
2.54	U3003:16、U3003:17 故障解析.....	128
2.55	U3004:11 故障解析.....	131
2.56	U3004:12 故障解析.....	133
2.57	U3004:16 故障解析.....	135
2.58	U3004:17 故障解析.....	137