



2. 电路图

2.1 保险与继电器信息


蓄电池连接盒(BJB), 顶端

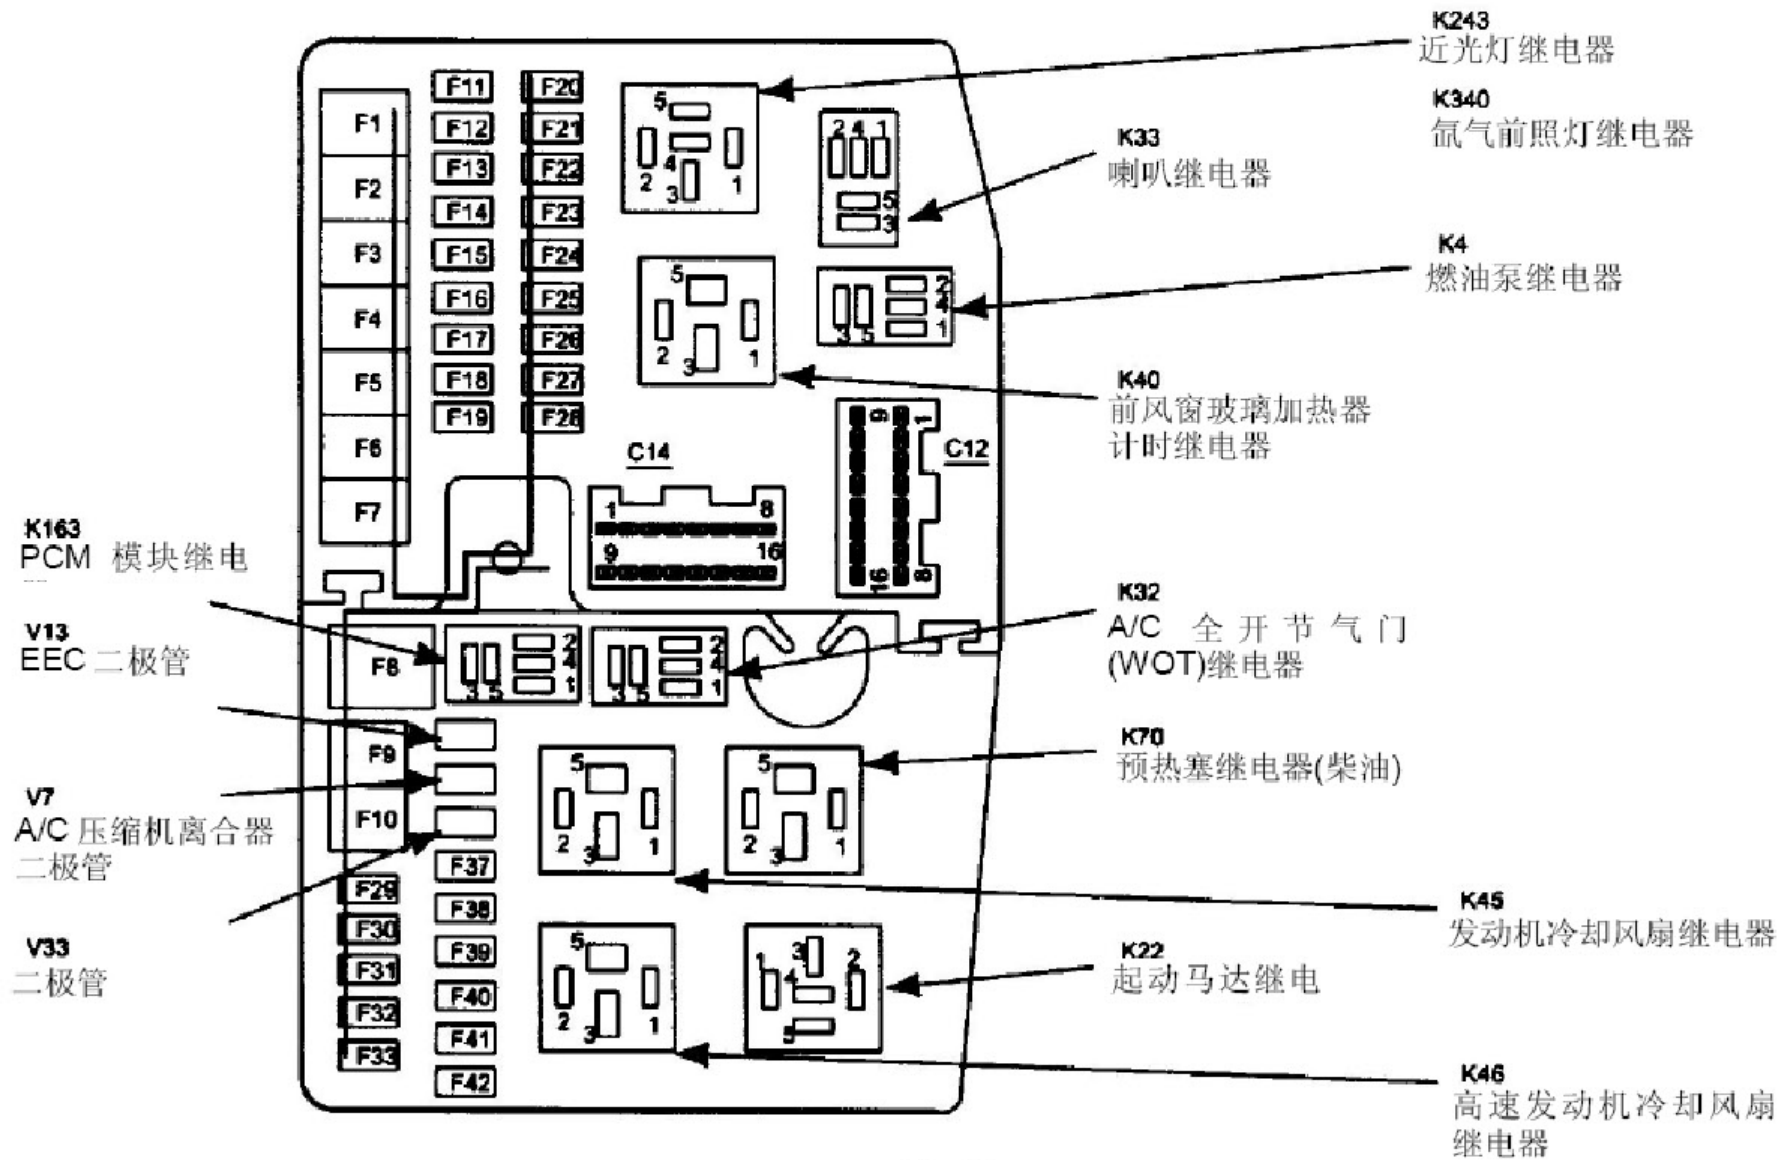

中央连接盒(CJB), 前方

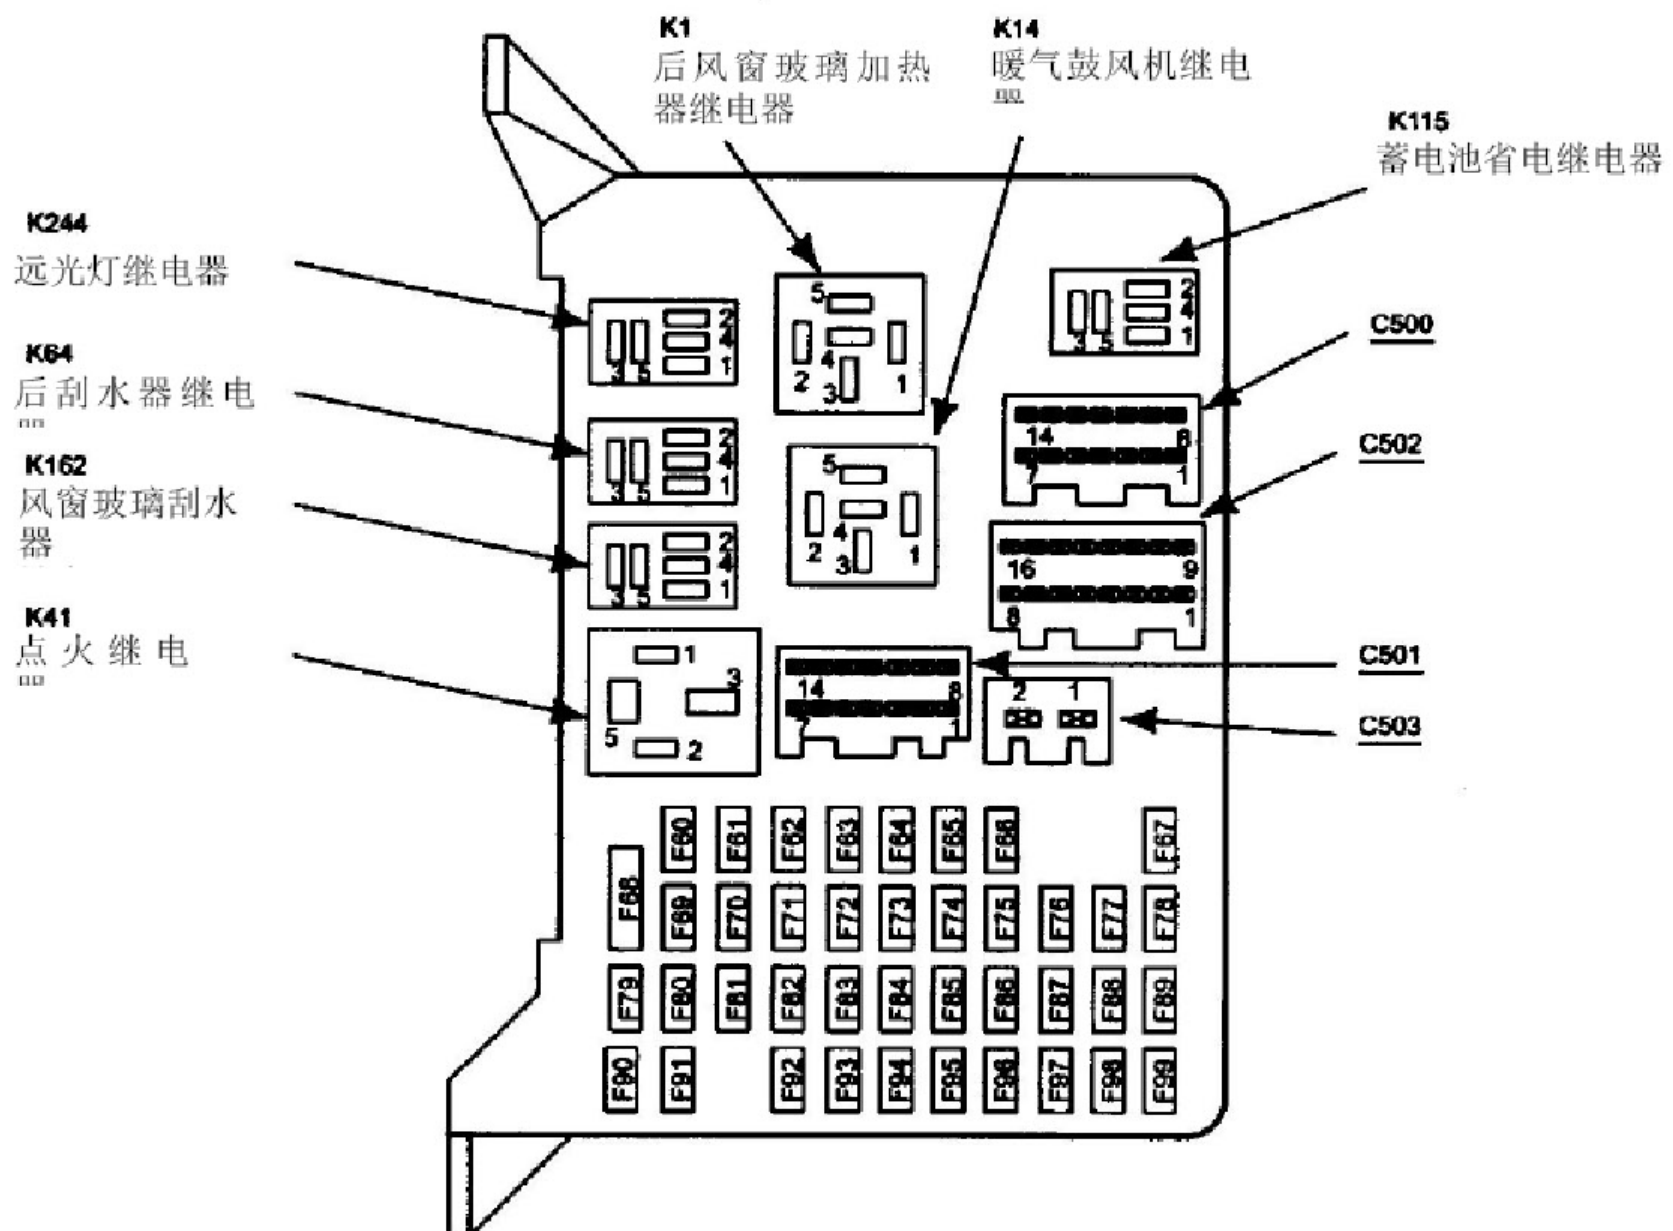

中央连接盒(CJB), 后方

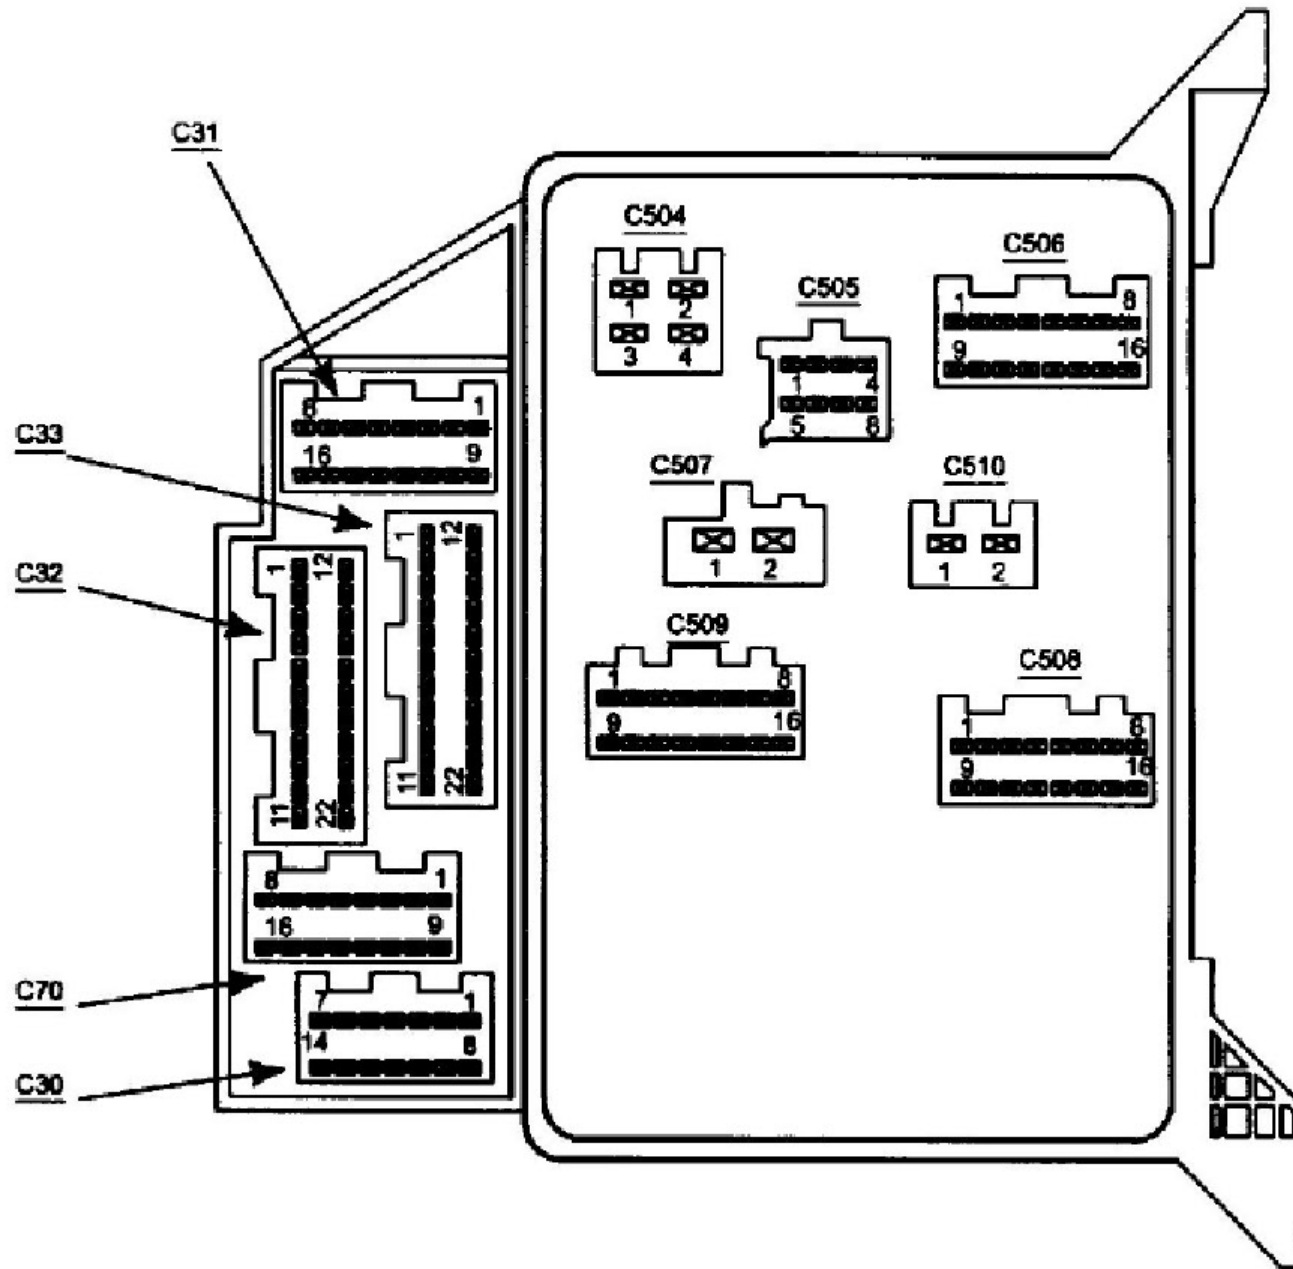

蓄电池连接盒(BJB)

		保险号码										
		1	2	3	4	5	6	7	8	9	10	11
		30A	50A	60A	30A		40A	50A	60A 80A	20A	40A	30A
206-09A-00	防抱死控制	●										
206-09B-00	防抱死控制-牵引力控制	●										
206-09C-00	防抱死控制-牵引力控制与电子稳定性控制	●										
303-03A-00	发动机冷却-1,8 l 与 2,0 l							●		●		
303-03B-00	发动机冷却-2,5 l			●				●				
303-03C-00	发动机冷却-2,0 l 柴油发动机							●				
303-04A-00	燃油充加与控制-1,8 l 与 2,0 l									●		
303-04B-00	燃油充加与控制-2,5 l											
303-04C-00	燃油充加与控制-2,0 l 柴油发动机											
303-06-00	起动系统											
303-07A-00	发动机点火-1,8 l 与 2,0 l											
303-07B-00	发动机点火-2,5 l											
303-07C-00	预热塞系统-2,0 l 柴油发动机							●	●			
303-14A-00	发动机电子控制-1,8 l 与 2,0 l									●		
303-14B-00	发动机电子控制-2,5 l									●		
303-14C-00	发动机电子控制-2,0 l 柴油发动机			●						●		
307-05-00	自动变速器/变速器外部控制											
310-03-00	车速控制									●		
412-00-00	恒温控制系统-一般信息						●	●		●		
413-00-00	组合仪表与仪表板照明											
413-01-00	组合仪表											
413-06-00	喇叭											
413-07-00	时钟											
413-09-00	警告装置											
414-02-00	发电机与调节器											
415-00-00	娱乐系统-一般信息											
415-03-00	扬声器											
417-01-00	车外灯							●				

蓄电池连接盒(BJB)

保险号码																								
12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31					
	30A		3A	7.5A 20A		7.5A 20A		20A	15A	20A	15A	20A	15A	20A	15A	20A	30A	7.5A	7.5A					
								●														206-09A-00		
								●														206-09B-00		
								●														206-09C-00		
																						303-03A-00		
																						303-03B-00		
																						303-03C-00		
																						303-04A-00		
																						303-04B-00		
											●				●							303-04C-00		
											●						●					303-06-00		
																						303-07A-00		
																						303-07B-00		
																						303-07C-00		
															●							303-14A-00		
															●							303-14B-00		
											●				●				●			303-14C-00		
																						307-05-00		
																			●			310-03-00		
																					●	412-00-00		
									●													413-00-00		
									●			●	●									413-01-00		
														●								413-06-00		
																						413-07-00		
									●			●	●			●						413-09-00		
																			●			414-02-00		
																						415-00-00		
																						415-03-00		
				●		●			●			●	●			●						417-01-00		
12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31					
	30A		3A	7.5A 20A		7.5A 20A		20A	15A	20A	15A	20A	15A	20A	15A	20A	30A	7.5A	7.5A					

蓄电池连接盒(BJB)

		保险号码											
		32	33	37	38	39	40	41	42				
		3A		15A			7.5A		10A 15A				
206-09A-00	防抱死控制												
206-09B-00	防抱死控制—牵引力控制												
206-09C-00	防抱死控制—牵引力控制与电子稳定性控制												
303-03A-00	发动机冷却—1,8 l 与 2,0 l												
303-03B-00	发动机冷却—2,5 l												
303-03C-00	发动机冷却—2,0 l 柴油发动机									●			
303-04A-00	燃油充填与控制—1,8 l 与 2,0 l						●						
303-04B-00	燃油充填与控制—2,5 l						●						
303-04C-00	燃油充填与控制—2,0 l 柴油发动机									●			
303-06-00	起动系统												
303-07A-00	发动机点火—1,8 l 与 2,0 l												
303-07B-00	发动机点火—2,5 l												
303-07C-00	预热塞系统—2,0 l 柴油发动机												
303-14A-00	发动机电子控制—1,8 l 与 2,0 l	●		●			●			●			
303-14B-00	发动机电子控制—2,5 l	●		●			●			●			
303-14C-00	发动机电子控制—2,0 l 柴油发动机	●					●			●			
307-05-00	自动变速器/变速器外部控制									●			
310-03-00	车速控制	●					●			●			
412-00-00	恒温控制系统—一般信息												
413-00-00	组合仪表与仪表板照明												
413-01-00	组合仪表												
413-06-00	喇叭												
413-07-00	时钟												
413-09-00	警告装置	●								●			
414-02-00	发电机与调节器												
415-00-00	娱乐系统—一般信息												
415-03-00	扬声器												
417-01-00	车外灯												
		32	33	37	38	39	40	41	42				
		3A		15A			7.5A		10A 15A				

蓄电池连接盒(BJB)

保险号码																																						
12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31																			
	30A		3A	7.5A 20A		7.5A 20A		20A	15A	20A	15A	20A	15A	20A	15A	20A	30A	7.5A	7.5A																			
									●			●	●																								417-02-00	
				●		●			●																												417-04-00	
																																					418-00-00	
												●																									419-01A-00	
																		●																●			419-01B-00	
																																					419-07-00	
												●	●																								419-10-00	
																																					501-09-00	
																																					501-10-00	
	●		●									●	●			●																					501-11-00	
																																					501-12-00	
												●																									501-14-00	
											●																										501-16-00	
																																						501-17-00
																																						501-20A-00
																																						501-20B-00

蓄电池连接盒(BJB)

		保险号码										
		32	33	37	38	39	40	41	42			
		3A		15A			7.5A		10A 15A			
417-02-00	室内灯光											
417-04-00	日间行驶灯											
418-00-00	模块通讯网络, 诊断											
419-01A-00	防盗—主动											
419-01B-00	防盗—被动											
419-07-00	行驶路线指引/导航											
419-10-00	多功能电子控制模块											
501-09-00	后视镜											
501-10-00	座椅											
501-11-00	玻璃、框架与摇窗机构											
501-12-00	仪表板与中控台											
501-14-00	门把、门锁、锁门与进入系统											
501-16-00	刮水器与洗涤器											
501-17-00	天窗开启板											
501-20A-00	乘员防护—主动											
501-20B-00	乘员防护—被动											
		32	33	37	38	39	40	41	42			
		3A		15A			7.5A		10A 15A			