		ſ	100			-	但	险号	和.				
		Ī	50	61	62	63				67	68	69	70
		2	-	_		-	_	_	_	-	15A	-	+-
206-09A-00	防抱死控制											•	Γ
206-09B-00	防抱死控制一牵引力控制		1					Г				•	T
206-09C-00	防抱死控制一牵引力控制与电子稳定性控制							Г				•	T
303-03A-00	发动机冷却-1,8 与 2,0		┪							-	Г		Г
303-03B-00	发动机冷却-2,5		┪			Г		Г				Г	T
303-03C-00	发动机冷却-2,01柴油发动机									Г			T
303-04A-00	燃油充填与控制-1,8 与 2,0		٦							•		Т	T
303-04B-00	燃油充填与控制-2,51											Г	
303-04C-00	燃油充填与控制-2,01柴油发动机		┪					Г		Г			T
303-06-00	起动系统		٦							_			T
303-07A-00	发动机点火-1,8 与 2,0		1							•			T
303-07B-00	发动机点火-2,5		1							•			
303-07C-00	预热塞系统-2,01柴油发动机		┪										
303-14A-00	发动机电子控制-1,8 与 2,0		┪						┢	•			r
303-14B-00	发动机电子控制-2,51		7					Г		•		Г	
303-14C-00	发动机电子控制-2,01柴油发动机									•			T
307-05-00	自动变速器/变速器外部控制		7			Г			Г				T
310-03-00	车速控制		1						Г			•	T
412-00-00	恒温控制系统一一般信息		1					•	Г				T
413-00-00	组合仪表与仪表板照明		┪										T
413-01-00	组合仪表		٦			•				П		•	Τ
413-06-00	喇叭												Г
413-07-00	时钟												Г
413-09-00	警告装置		7			•				•		•	
414-02-00	发电机与调整器		1										T
415-00-00	娱乐系统——般信息		7									•	
415-03-00	扬声器												
417-01-00	车外灯	3			•	•	•						Γ
			io.	61	62	63	64	65	66	67	68	69	70
		2	5A	25A	15A	7.5A	7.5A	7.5A	30A	7.5A	15A	7.5A	154

								保险	号码									***			200		7 X 7 d d d d d d d d d d d d d d d d d	
71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93		
7.5A	20A	20A	20A	7.5A	7.5/	7.5A	7.5A		7.5A	7.5A	7.5A	15A	20A	7.54	7.5A		15A	7.5A	15A	7.5A	10A	10A		
				•		•	•															•		206-09A-00
				•		•	•															•		206-09B-00
				•		•	•															•		206-09C-00
																								303-03A-00
																								303-03B-00
																								303-03C-00
																								303-04A-00
				L																				303-04B-00
																				1000				303-04C-00
											•													303-06-00
					L																			303-07A-00
						L																		303-07B-00
														L										303-07C-00
																						•		303-14A-00
																						L		303-14B-00
				L	L			L						L					L			•		303-14C-00
					L				•	•	L											•		307-05-00
Ц				•	L	L	•				•			L								•		310-03-00
Ц					•	L				•	•											•		412-00-00
					L												•			•				413-00-00
				•			•										•							413-01-00
																	77							413-06-00
				•																				413-07-00
				•			•											•						413-09-00
Ц										Ц														414-02-00
Ц	•																							415-00-00
Ц			Ш																					415-03-00
					L				•					•	•		•					•		417-01-00
\vdash	72		74		_	77		_			\vdash	83		85			88	89	90	91	92	93		
7.5A	20A	20A	20A	7.5A	7.5A	7.5A	7.5A		7.5A	7.54	7.5A	15A	20A	7.5A	7.5A		15A	7.5A	15A	7.5A	10A	10A		

						NAME OF THE OWNER.	保	· 险号	码			
			94	95	96	97	98	99				
			20A	7.5A	7.5	7.5A	7.5A	7.5A		L		
206-09A-00	防抱死控制											
206-09B-00	防抱死控制一牵引力控制											Γ
206-09C-00	防抱死控制一牵引力控制与电子稳定性控制											
303-03A-00	发动机冷却-1,8 与 2,0									Г		Γ
303-03B-00	发动机冷却-2,51						Г			Г	Г	T
303-03C-00	发动机冷却-2,01柴油发动机									Г	Г	T
303-04A-00	燃油充填与控制-1,8 与 2,0				П							T
303-04B-00	燃油充填与控制-2,5 l									Т		T
303-04C-00	燃油充填与控制-2,01柴油发动机									Г	Г	T
303-06-00	起动系统			_						Г		T
303-07A-00	发动机点火-1,8 与 2,0									Г		T
303-07B-00	发动机点火-2,5 I									Г		T
303-07C-00	预热塞系统-2,01柴油发动机						П					H
303-14A-00	发动机电子控制-1,8 与 2,0											T
303-14B-00	发动机电子控制-2,51											T
303-14C-00	发动机电子控制-2,01柴油发动机			8								Γ
307-05-00	自动变速器/变速器外部控制											T
310-03-00	车速控制						П					r
412-00-00	恒温控制系统——般信息						П					T
413-00-00	组合仪表与仪表板照明						П					一
413-01-00	组合仪表						П					Γ
413-06-00	喇叭						П					
413-07- 00	时钟											Г
413-09-00	警告装置					•	П		П	П		T
414-02-00	发电机与调节器									П		r
415-00-00	娱乐系统——般信息		\neg							П		Γ
415-03-00	扬声器											Γ
417-01-00	车外灯			•		•				 en en testa		
			94	95	96	97	98	99				
		1	20A	7.5A	7.5A	7.54	7.5A	7.5A		П		Г

						保	险号	码				
		60	61	62	63	64	65	66	67	68	69	70
		25A	25A	15A	7.54	7.5A	7.5A	30A	7.5A	15A	7.5A	15/
417-02-00	室内灯光											
417-04-00	日间行驶灯				Г							Γ
418-00-00	模块通讯网络,诊断											Г
419-01A-00	防盗一主动				Г							
419-01B-00	防盗一被动		T				T		•			
419-07-00	行驶路线指引/导航						Г				•	
419-10-00	多功能电子控制模块				Г				Г			
501-09-00	后视镜						Г				П	
501-10-00	座椅							•			П	T
501-11-00	玻璃、框架与摇窗机构	•	•									
501-12-00	仪表板与中控台				Г					•	Т	•
501-14-00	门把、门锁、锁闩与进入系统											
501-16-00	刮水器与洗涤器				Г					•		
501-17-00	天窗开启板											
501-20A-00	乘员防护-主动		Г					H	Г		•	Г
501-208-00	乘员防护一被动										•	
								H				T
			Т					H				
***							Г					T
Mari												Г
								300				Г
												Г
		60	61	62	63	64	65	66	67	68	69	70
		25A	25A	15A	7.5A	7.5A	7.5A	30A	7.5A	15A	7.5A	154

			022						保隆	金号码		100											1	
71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93		
7.5A	20A	20A	20A	7.5A	7.5A	7.5A	7.5A		7.5A	7.5A	7.5A	15A	20A	7.5A	7.5A		15A	7.5A	15A	7.5A	10A	10A		
																								417-02-00
													•				•					•		417-04-00
	•																							418-00-00
																								419-01A-00
																								419-01B-00
	•								•															419-07-00
														42 /s										419-10-00
				•							1000													501-09-00
												•												501-10-00
																				•				501-11-00
										L														501-12-00
																		:						501-14-00
											•						•			<u> </u>	_			501-16-00
		•																		•	L			501-17-00
				•			•											•						501-20A-00
				•			•			•								•						501-20B-00
						L						550			L					L				
			L							L										L				
																							U A.V. 9486435	
										L														
																					L			
																L					L			
																			<u> </u>	L				
										Ц										L	_			
4							Ш													L				
				L																		Ш		
_																								
11	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93		
.5A	20A	20A	20A	7.5A	7.5A	7.5A	7.5A		7.5A	7.54	7.5A	15A	20A	7.5A	7.5A		15A	7.5A	15A	7.5A	10A	10A		

						保	脸号	码		
		94	95	96	97	98	99			
		20A	7.5A	7.5A	7.54	7.5A	7.5A			
417-02-00	室内灯光				•		•			
417-04-00	日间行驶灯		•							
418-00-00	模块通讯网络,诊断									
419-01A-00	防盗一主动			20						
419-01B-00	防盗一被动									
419-07-00	行驶路线指引/导航									
419-10-00	多功能电子控制模块				•					
501-09-00	后视镜									
501-10-00	座椅									
501-11-00	玻璃、框架与摇窗机构					•				
501-12-00	仪表板与中控台									
501-14-00	门把、门锁、锁闩与进入系统									
501-16-00	刮水器与洗涤器	•	•							
501-17-00	天窗开启板	Γ								
501-20A-00	乘员防护一主动									
501-20B-00	乘员防护一被动									
· · · · · · · · · · · · · · · · · · ·				Ш						
		94	95	96	97	98	99			
		20A	7.5A	7.5A	7.5A	7.5A	7.5A			