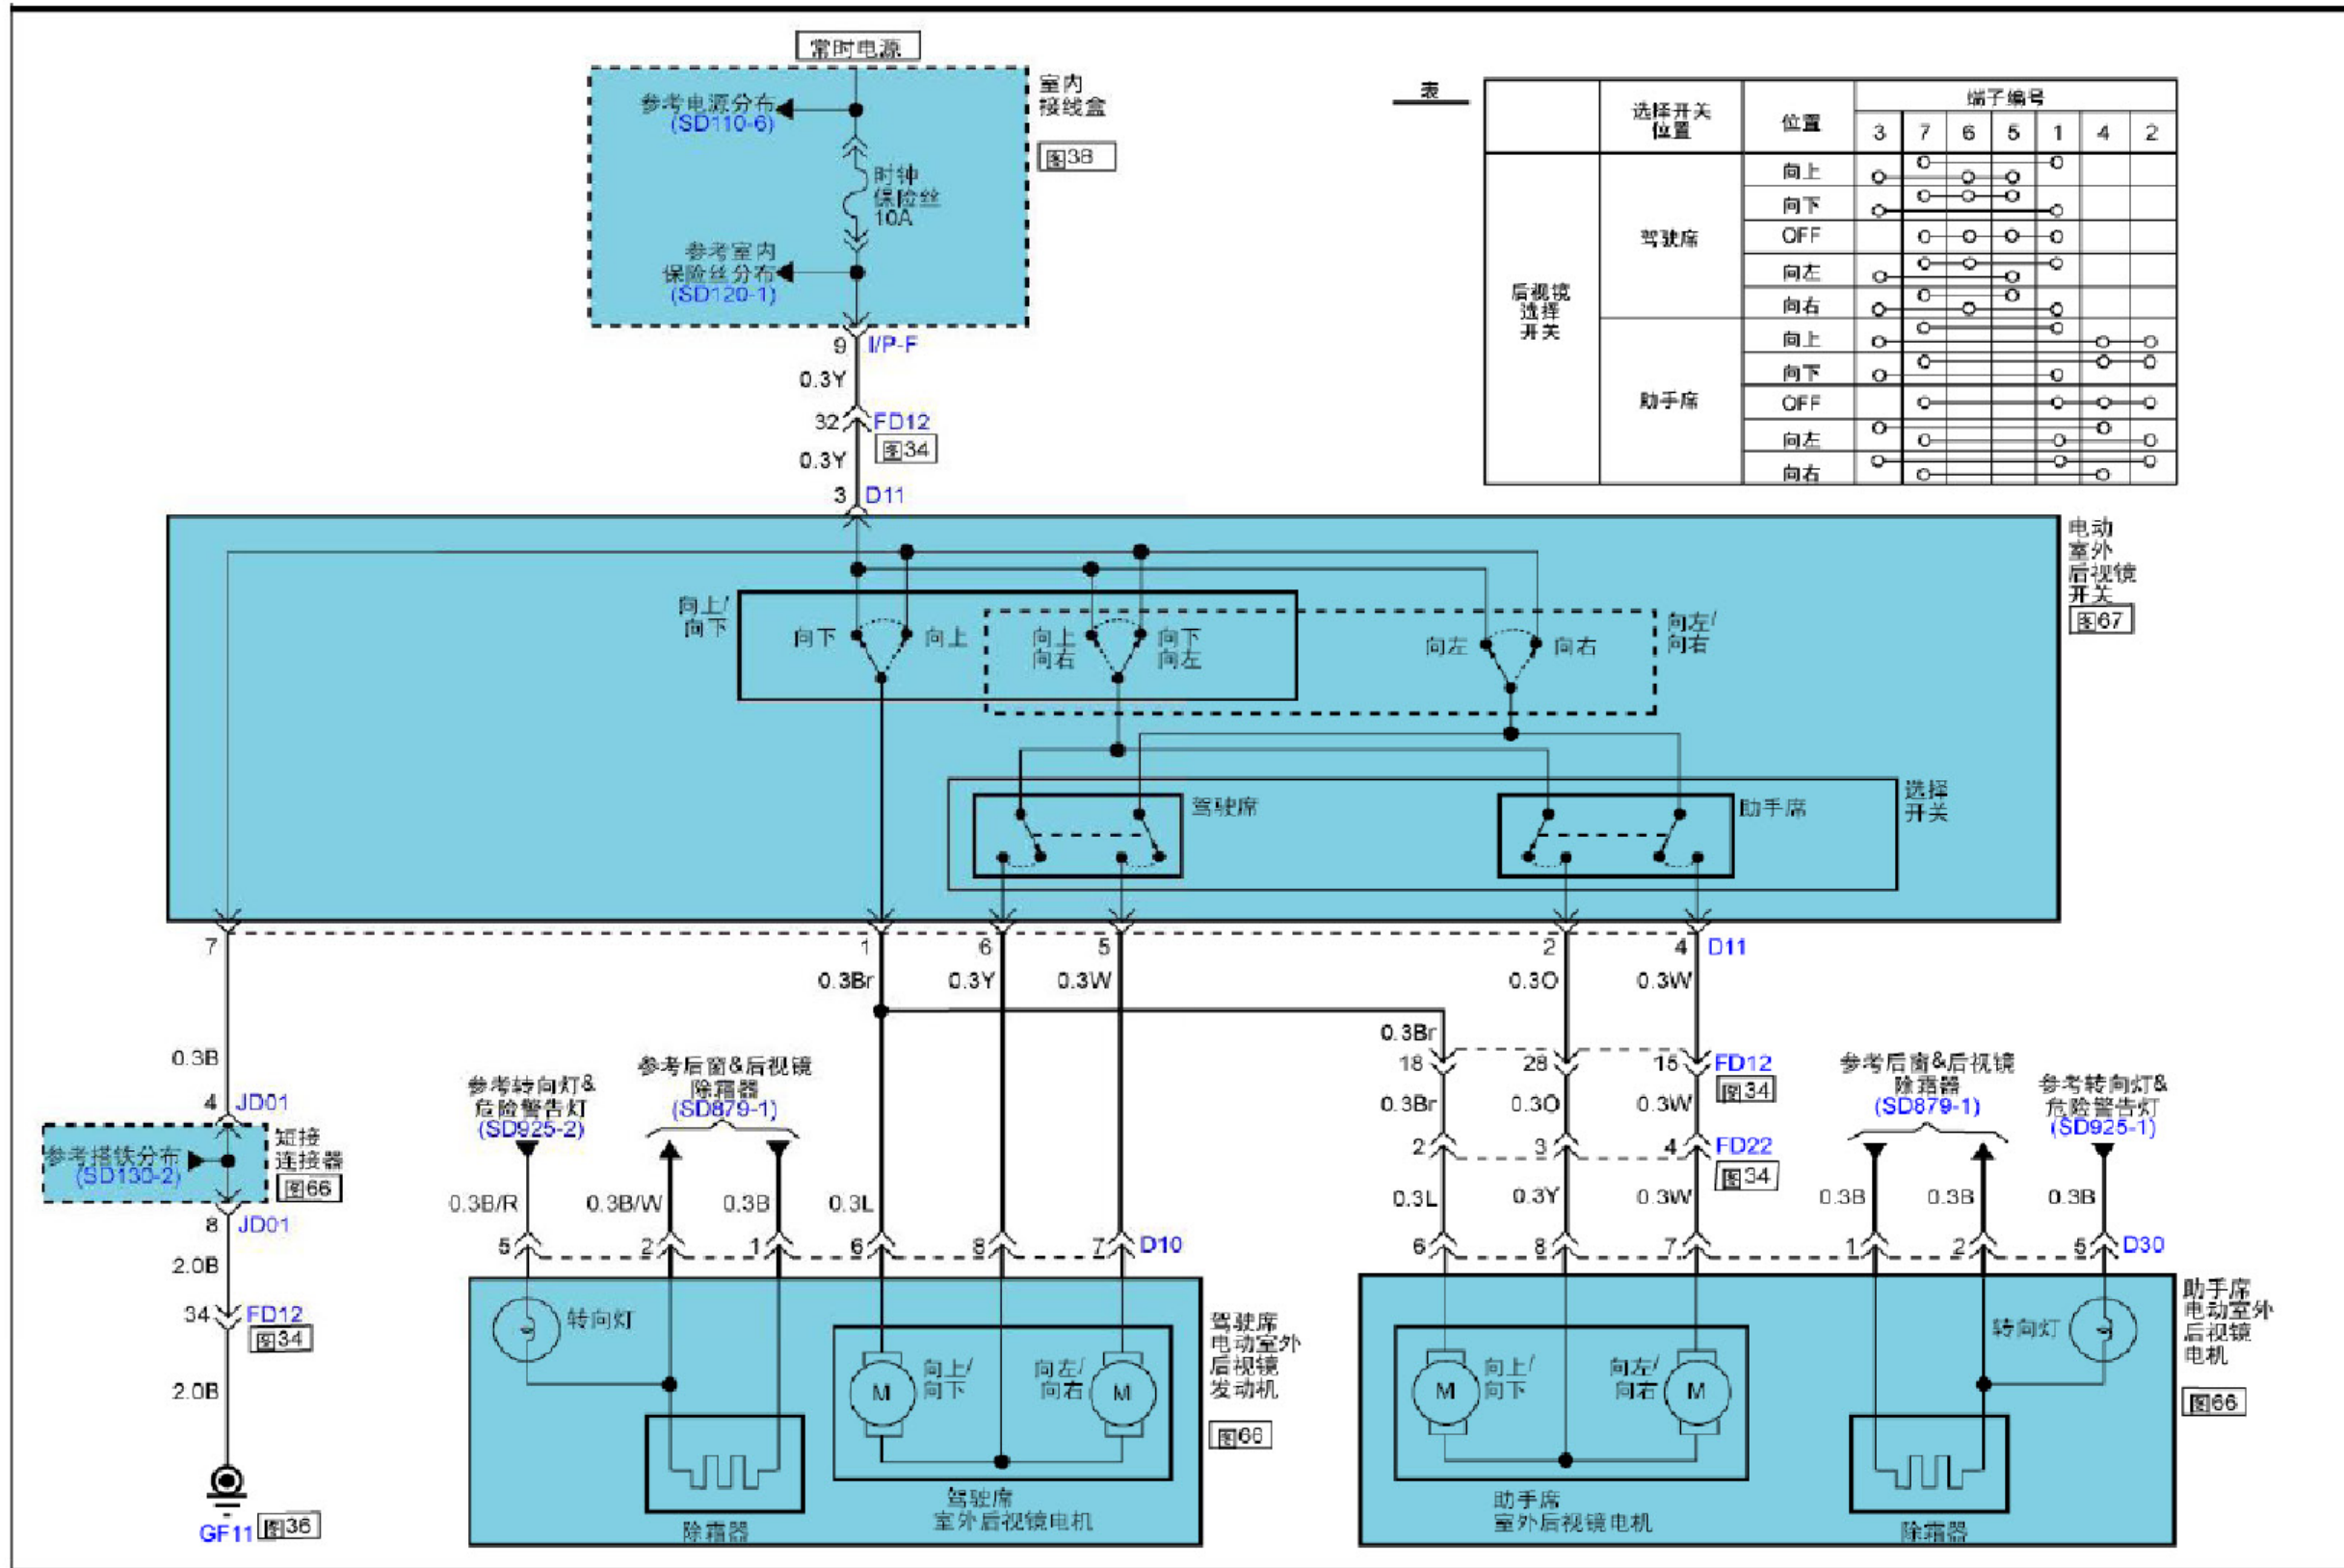
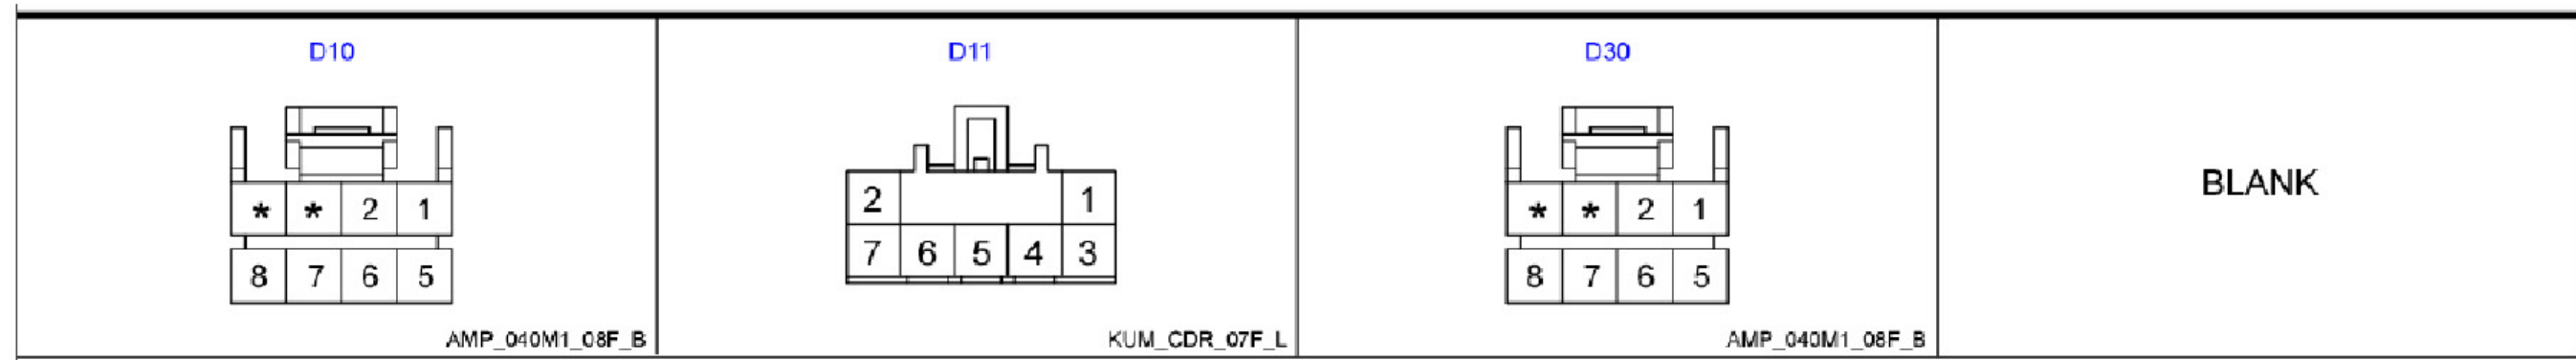


## 2.10 电动后视镜

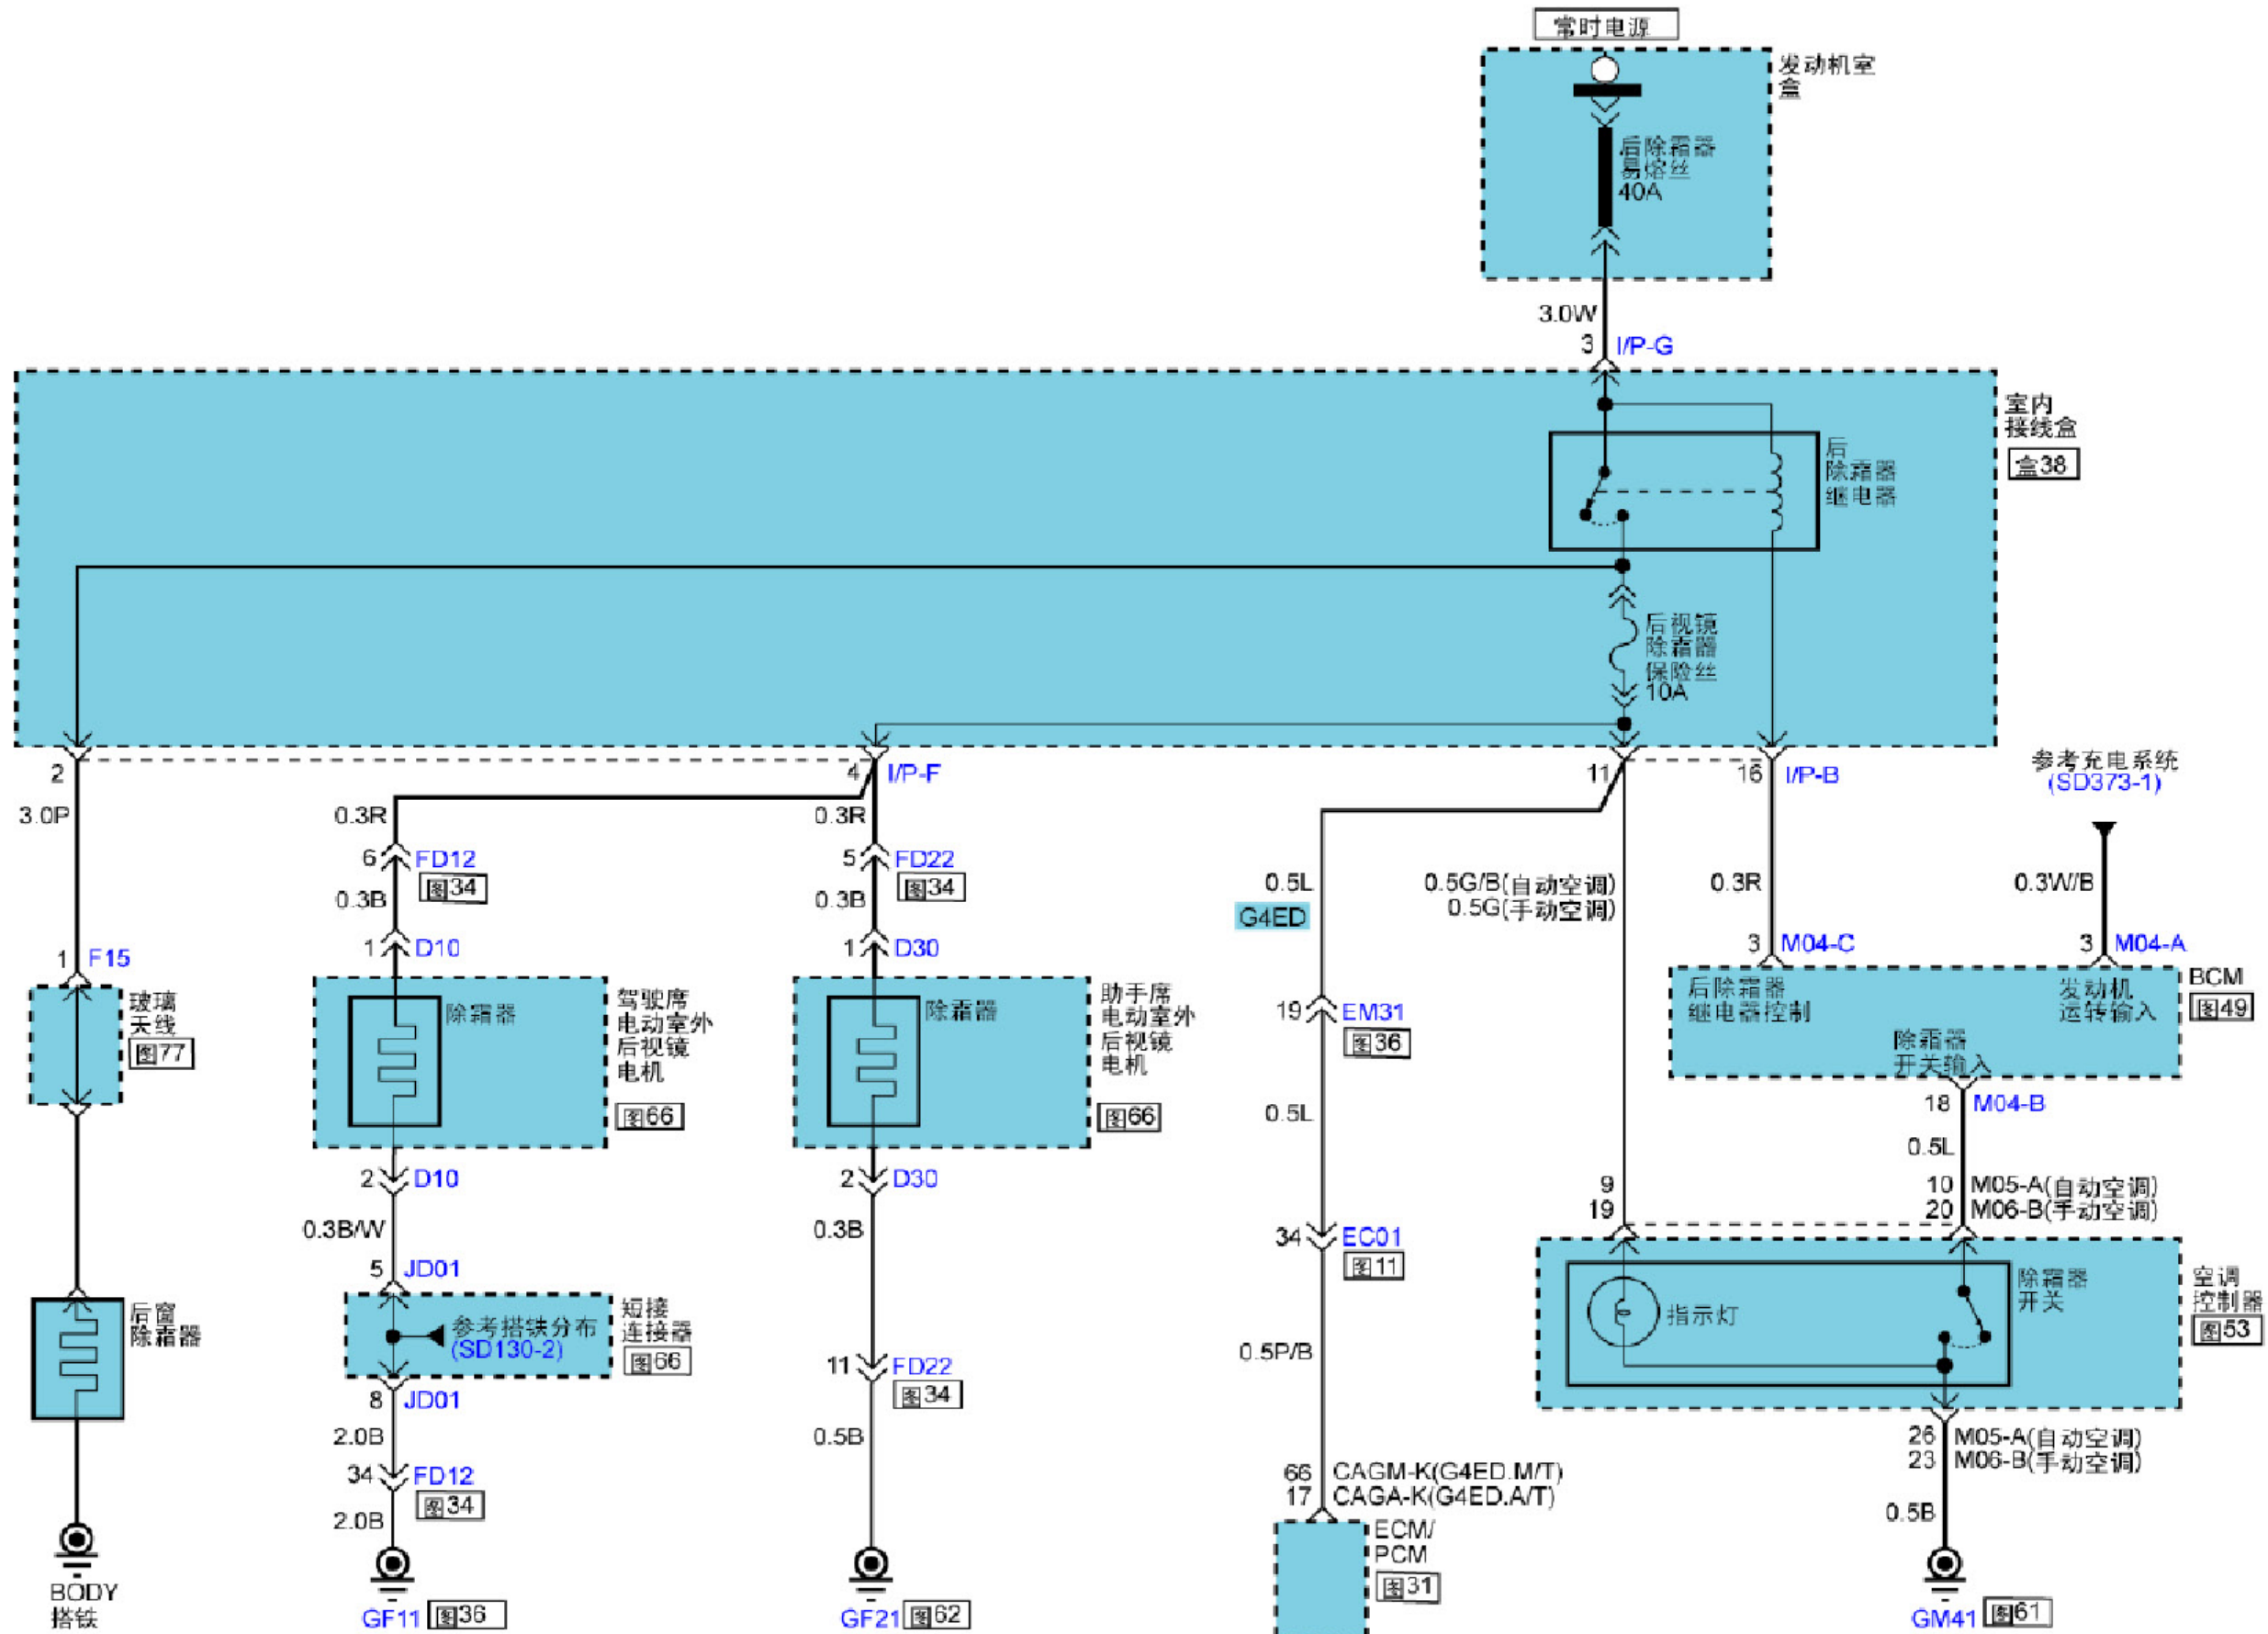


## 电动后视镜连接器介绍




LAUNCH


### 2.11 除霜加热















除霜加热连接器介绍

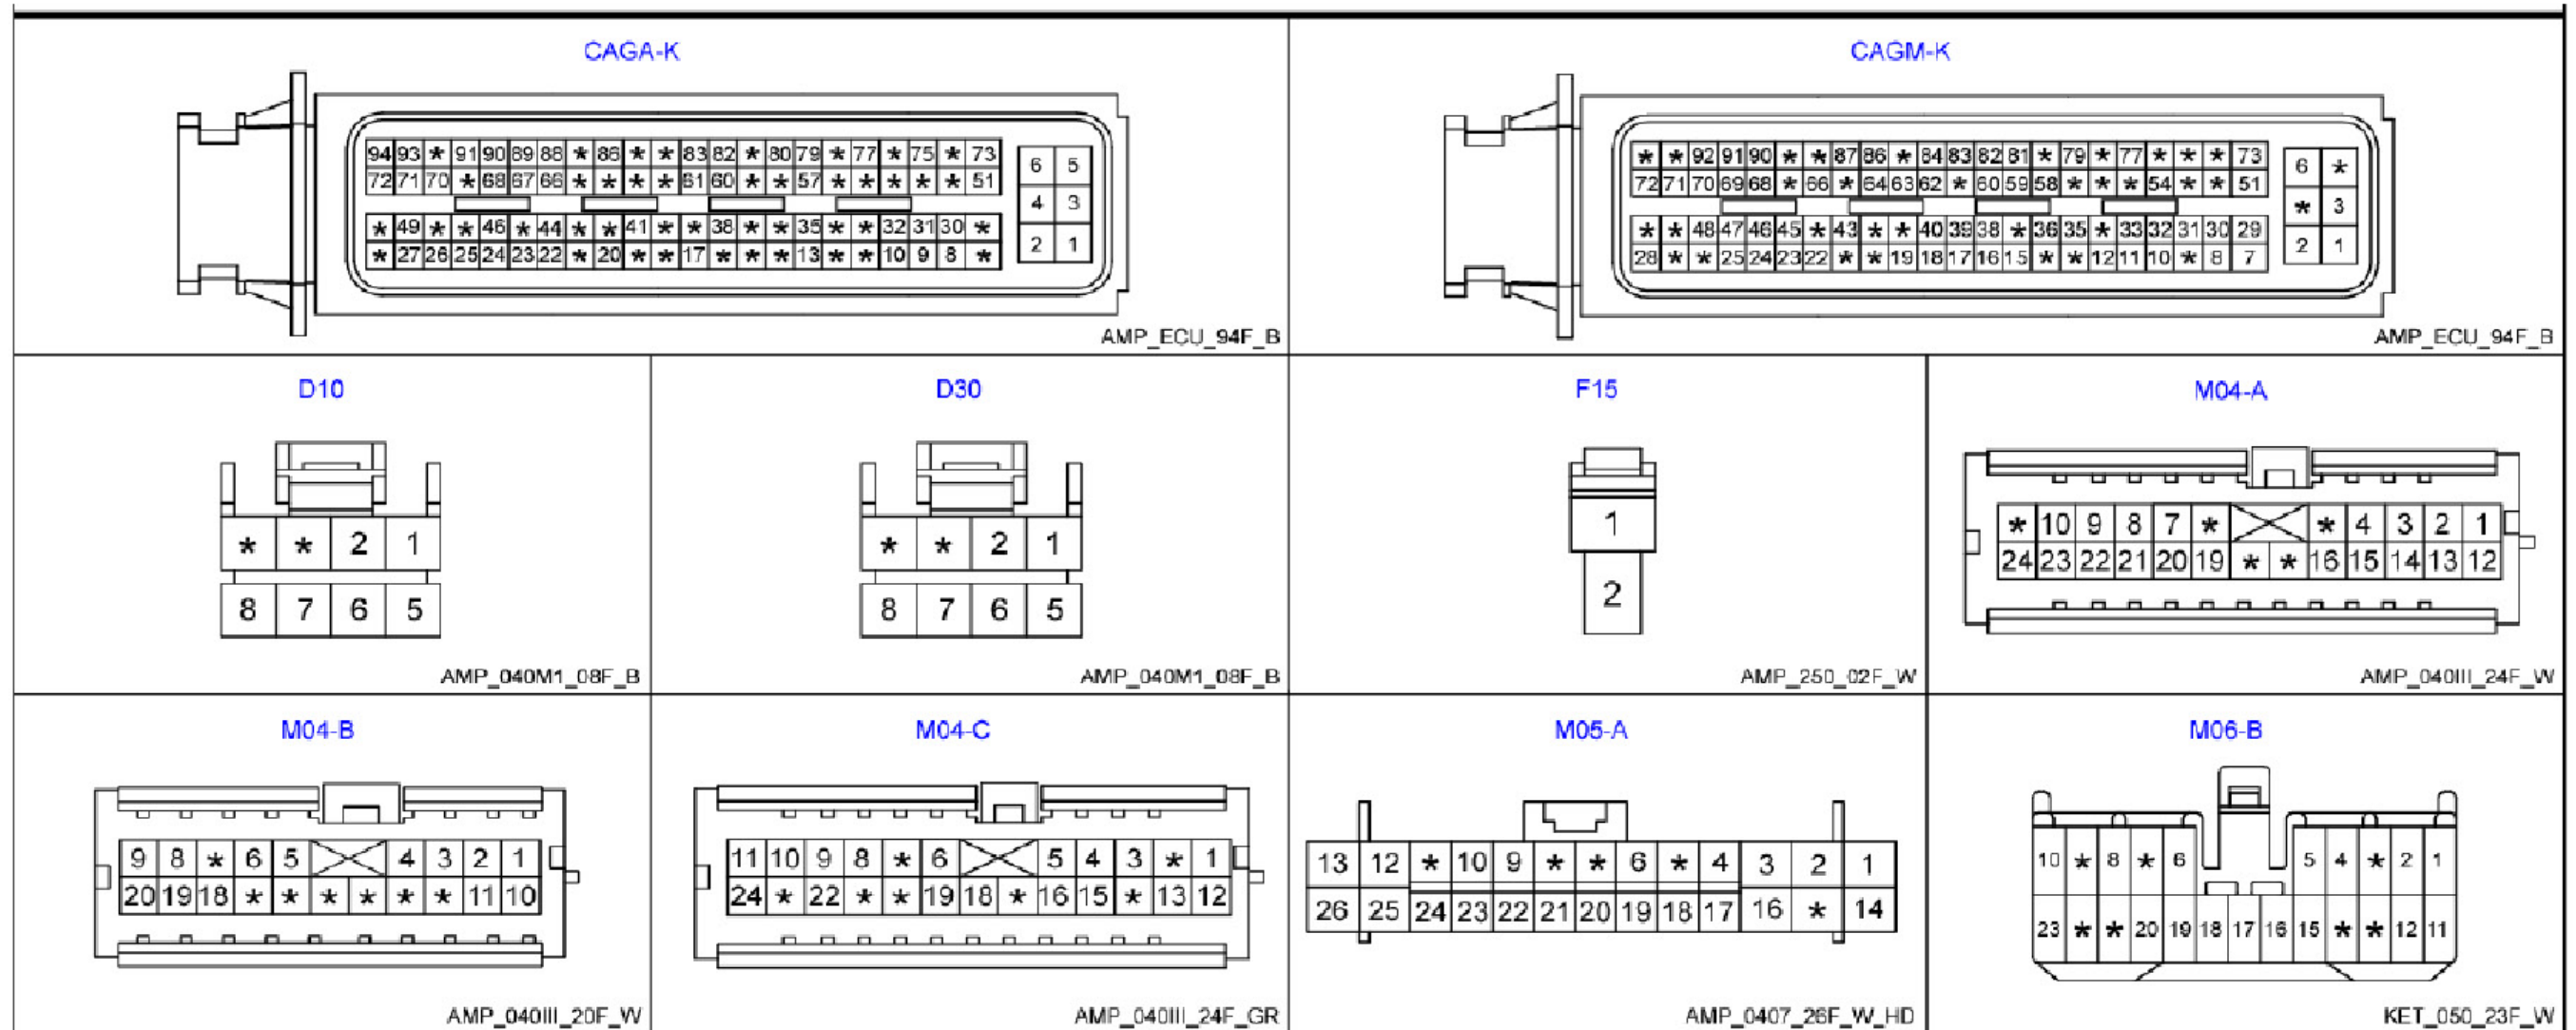


### 2.12 辅助安全系统 (SRS)

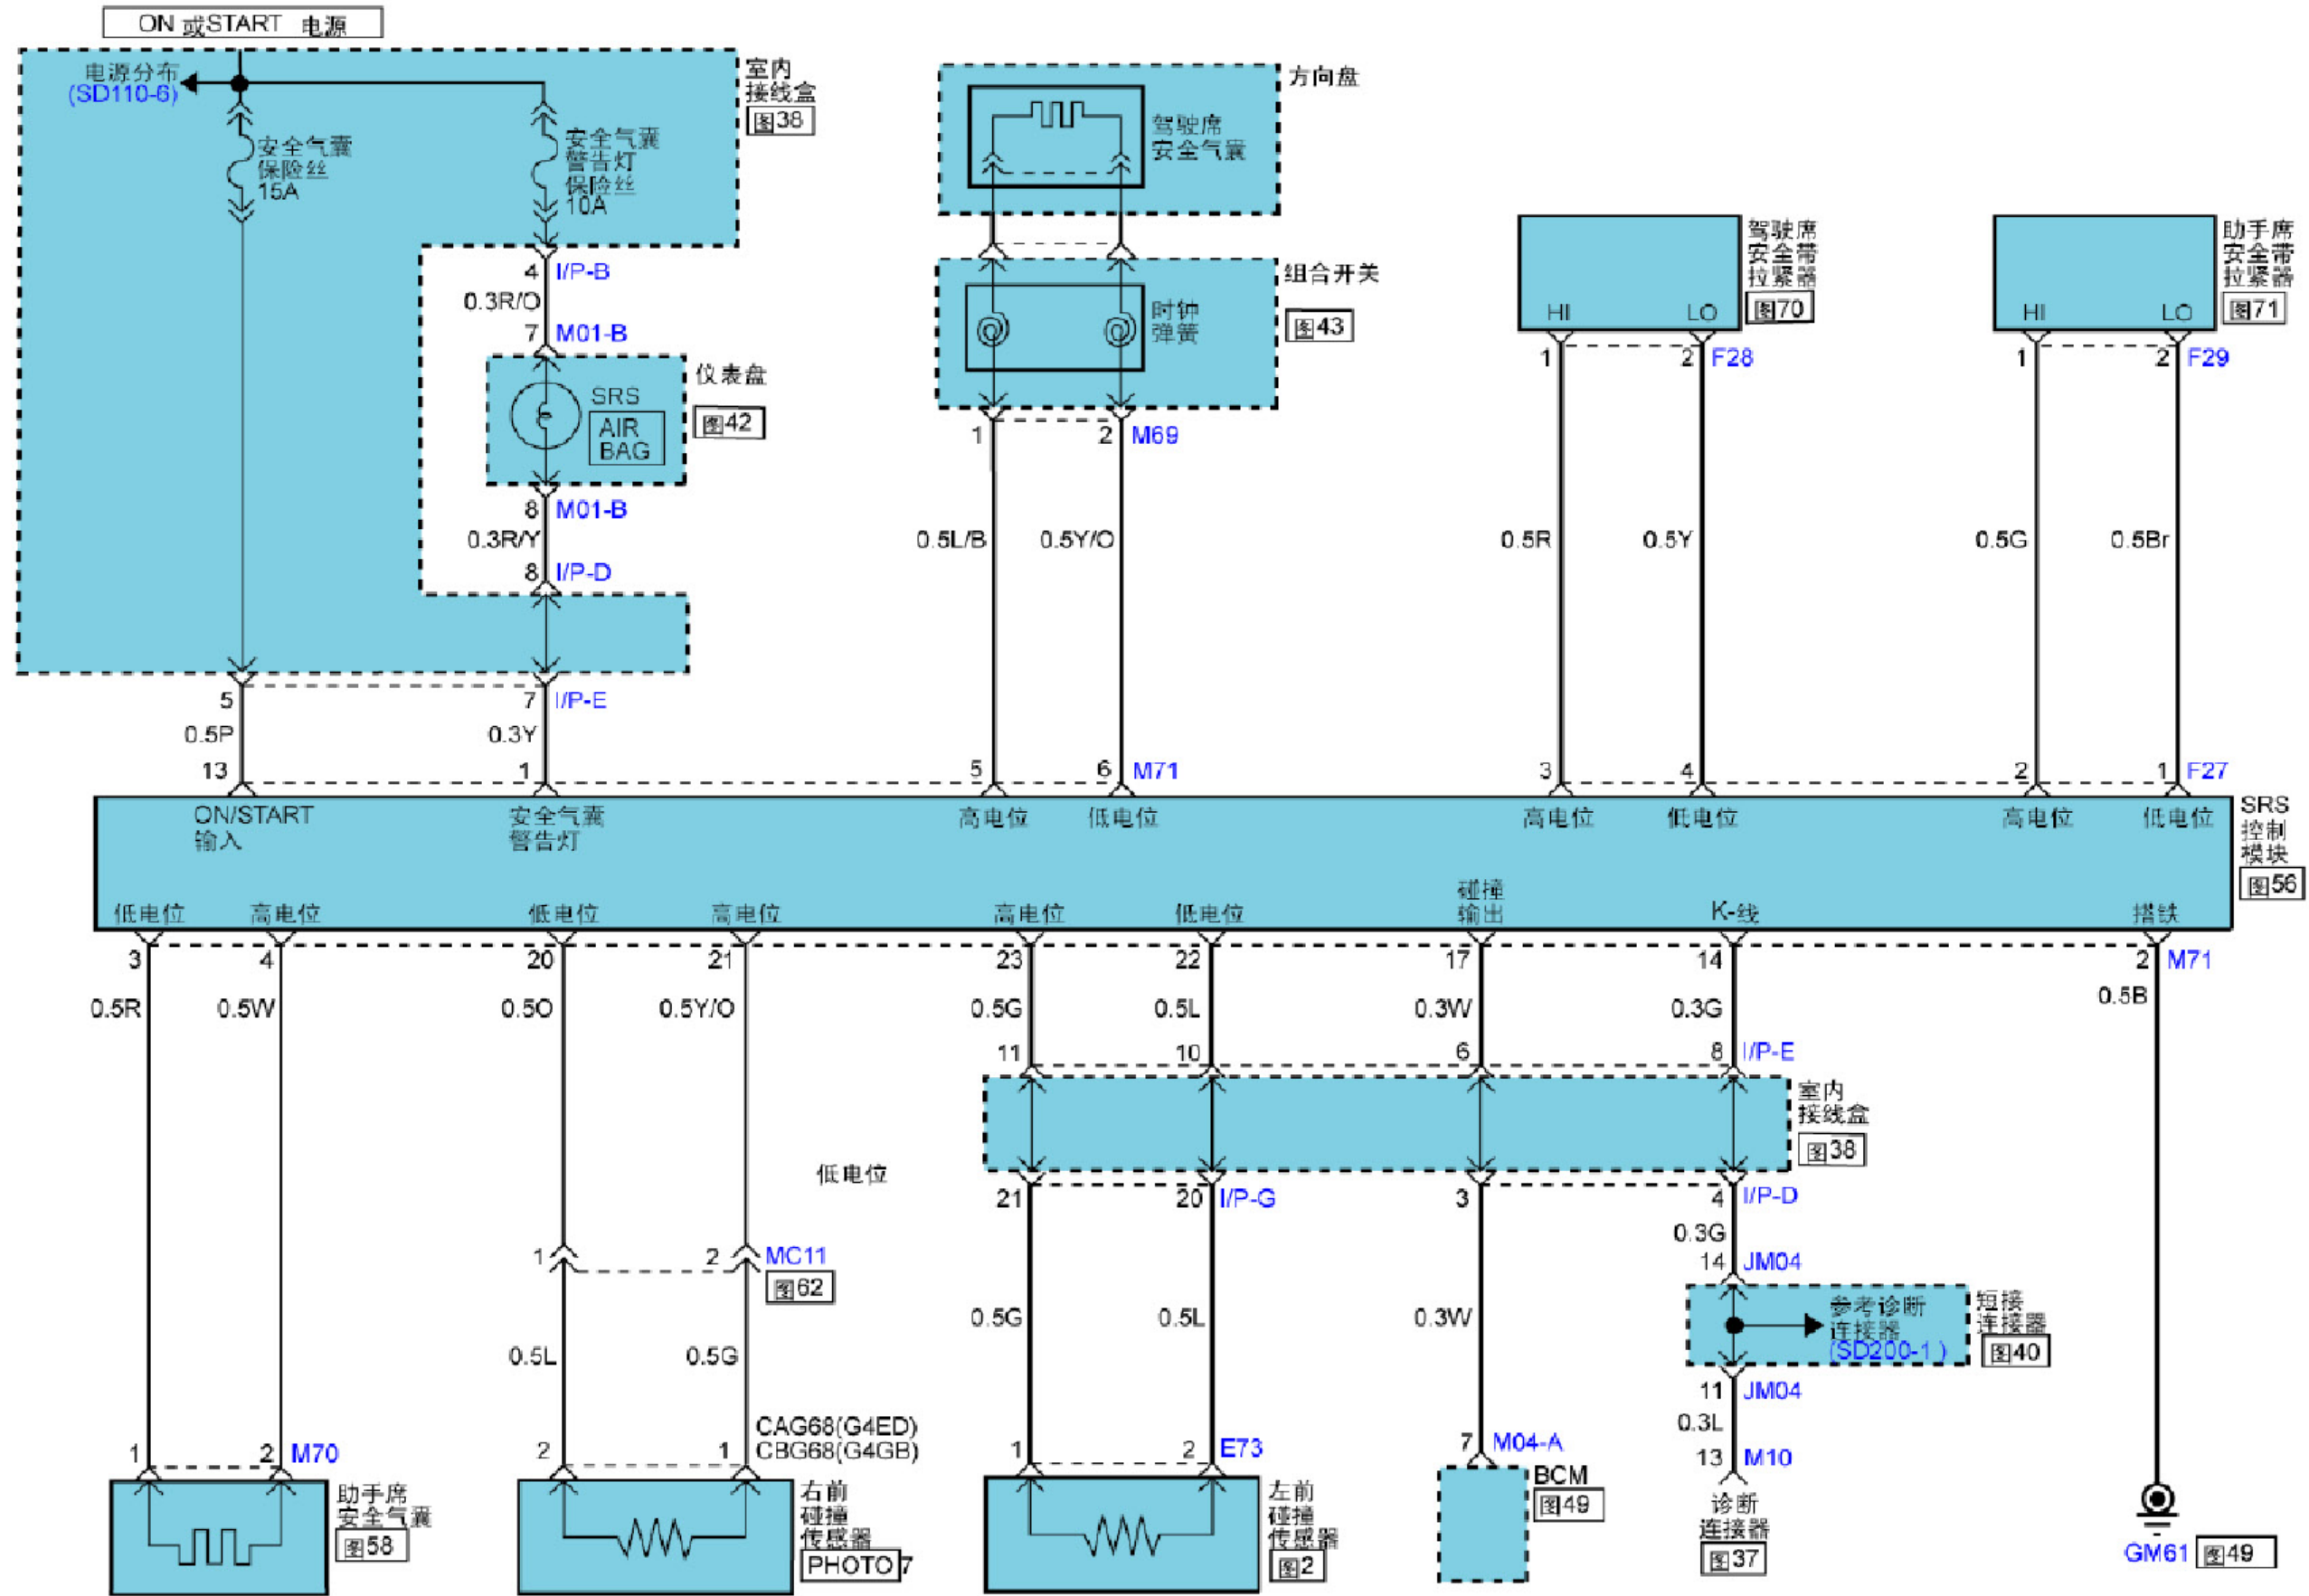

辅助安全系统连接器介绍
   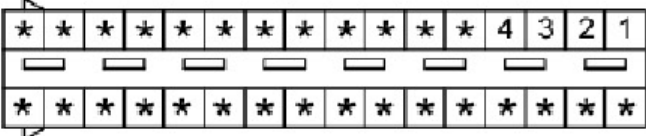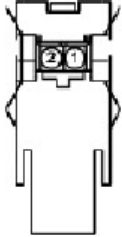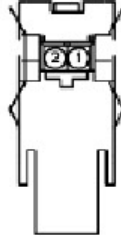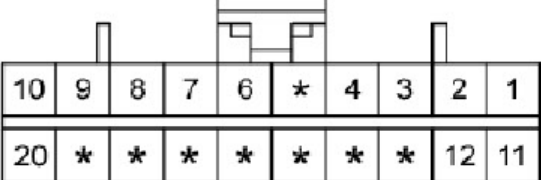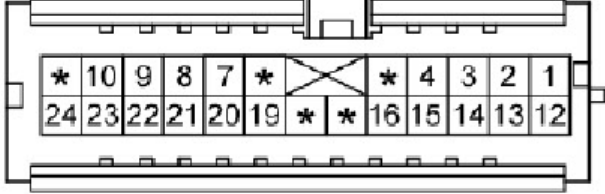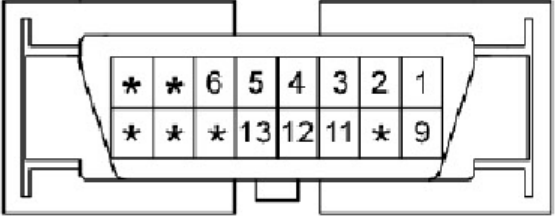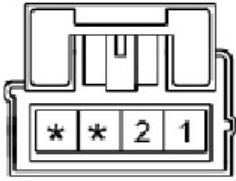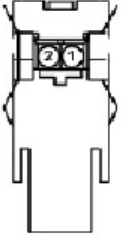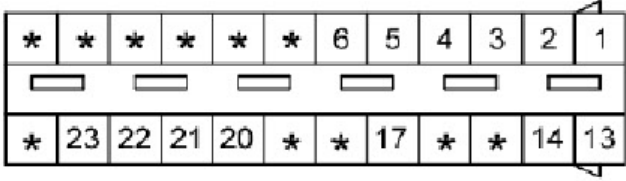
<p>CAG68</p>  <p>YAZ_ABG_02F_Y_GH</p>	<p>CBG68</p>  <p>YAZ_ABG_02F_Y_GH</p>	<p>E73</p>  <p>YAZ_ABG_02F_Y_GH</p>	<p>F27</p>  <p>AMP_ABG_32F_ECU</p>
<p>F28</p>  <p>JST_SQS_02F_B</p>	<p>F29</p>  <p>JST_SQS_02F_B</p>	<p>M01-B</p>  <p>AMP_040M1_20F_B</p>	<p>M04-A</p>  <p>AMP_040III_24F_W</p>
<p>M10</p>  <p>MLX_OBDII_16F_B</p>	<p>M69</p>  <p>YAZ_040_04F_Y</p>	<p>M70</p>  <p>JST_SQS_02F_B</p>	<p>M71</p>  <p>AMP_ABG_24F_ECU</p>

### 2.13 后倒车辅助系统

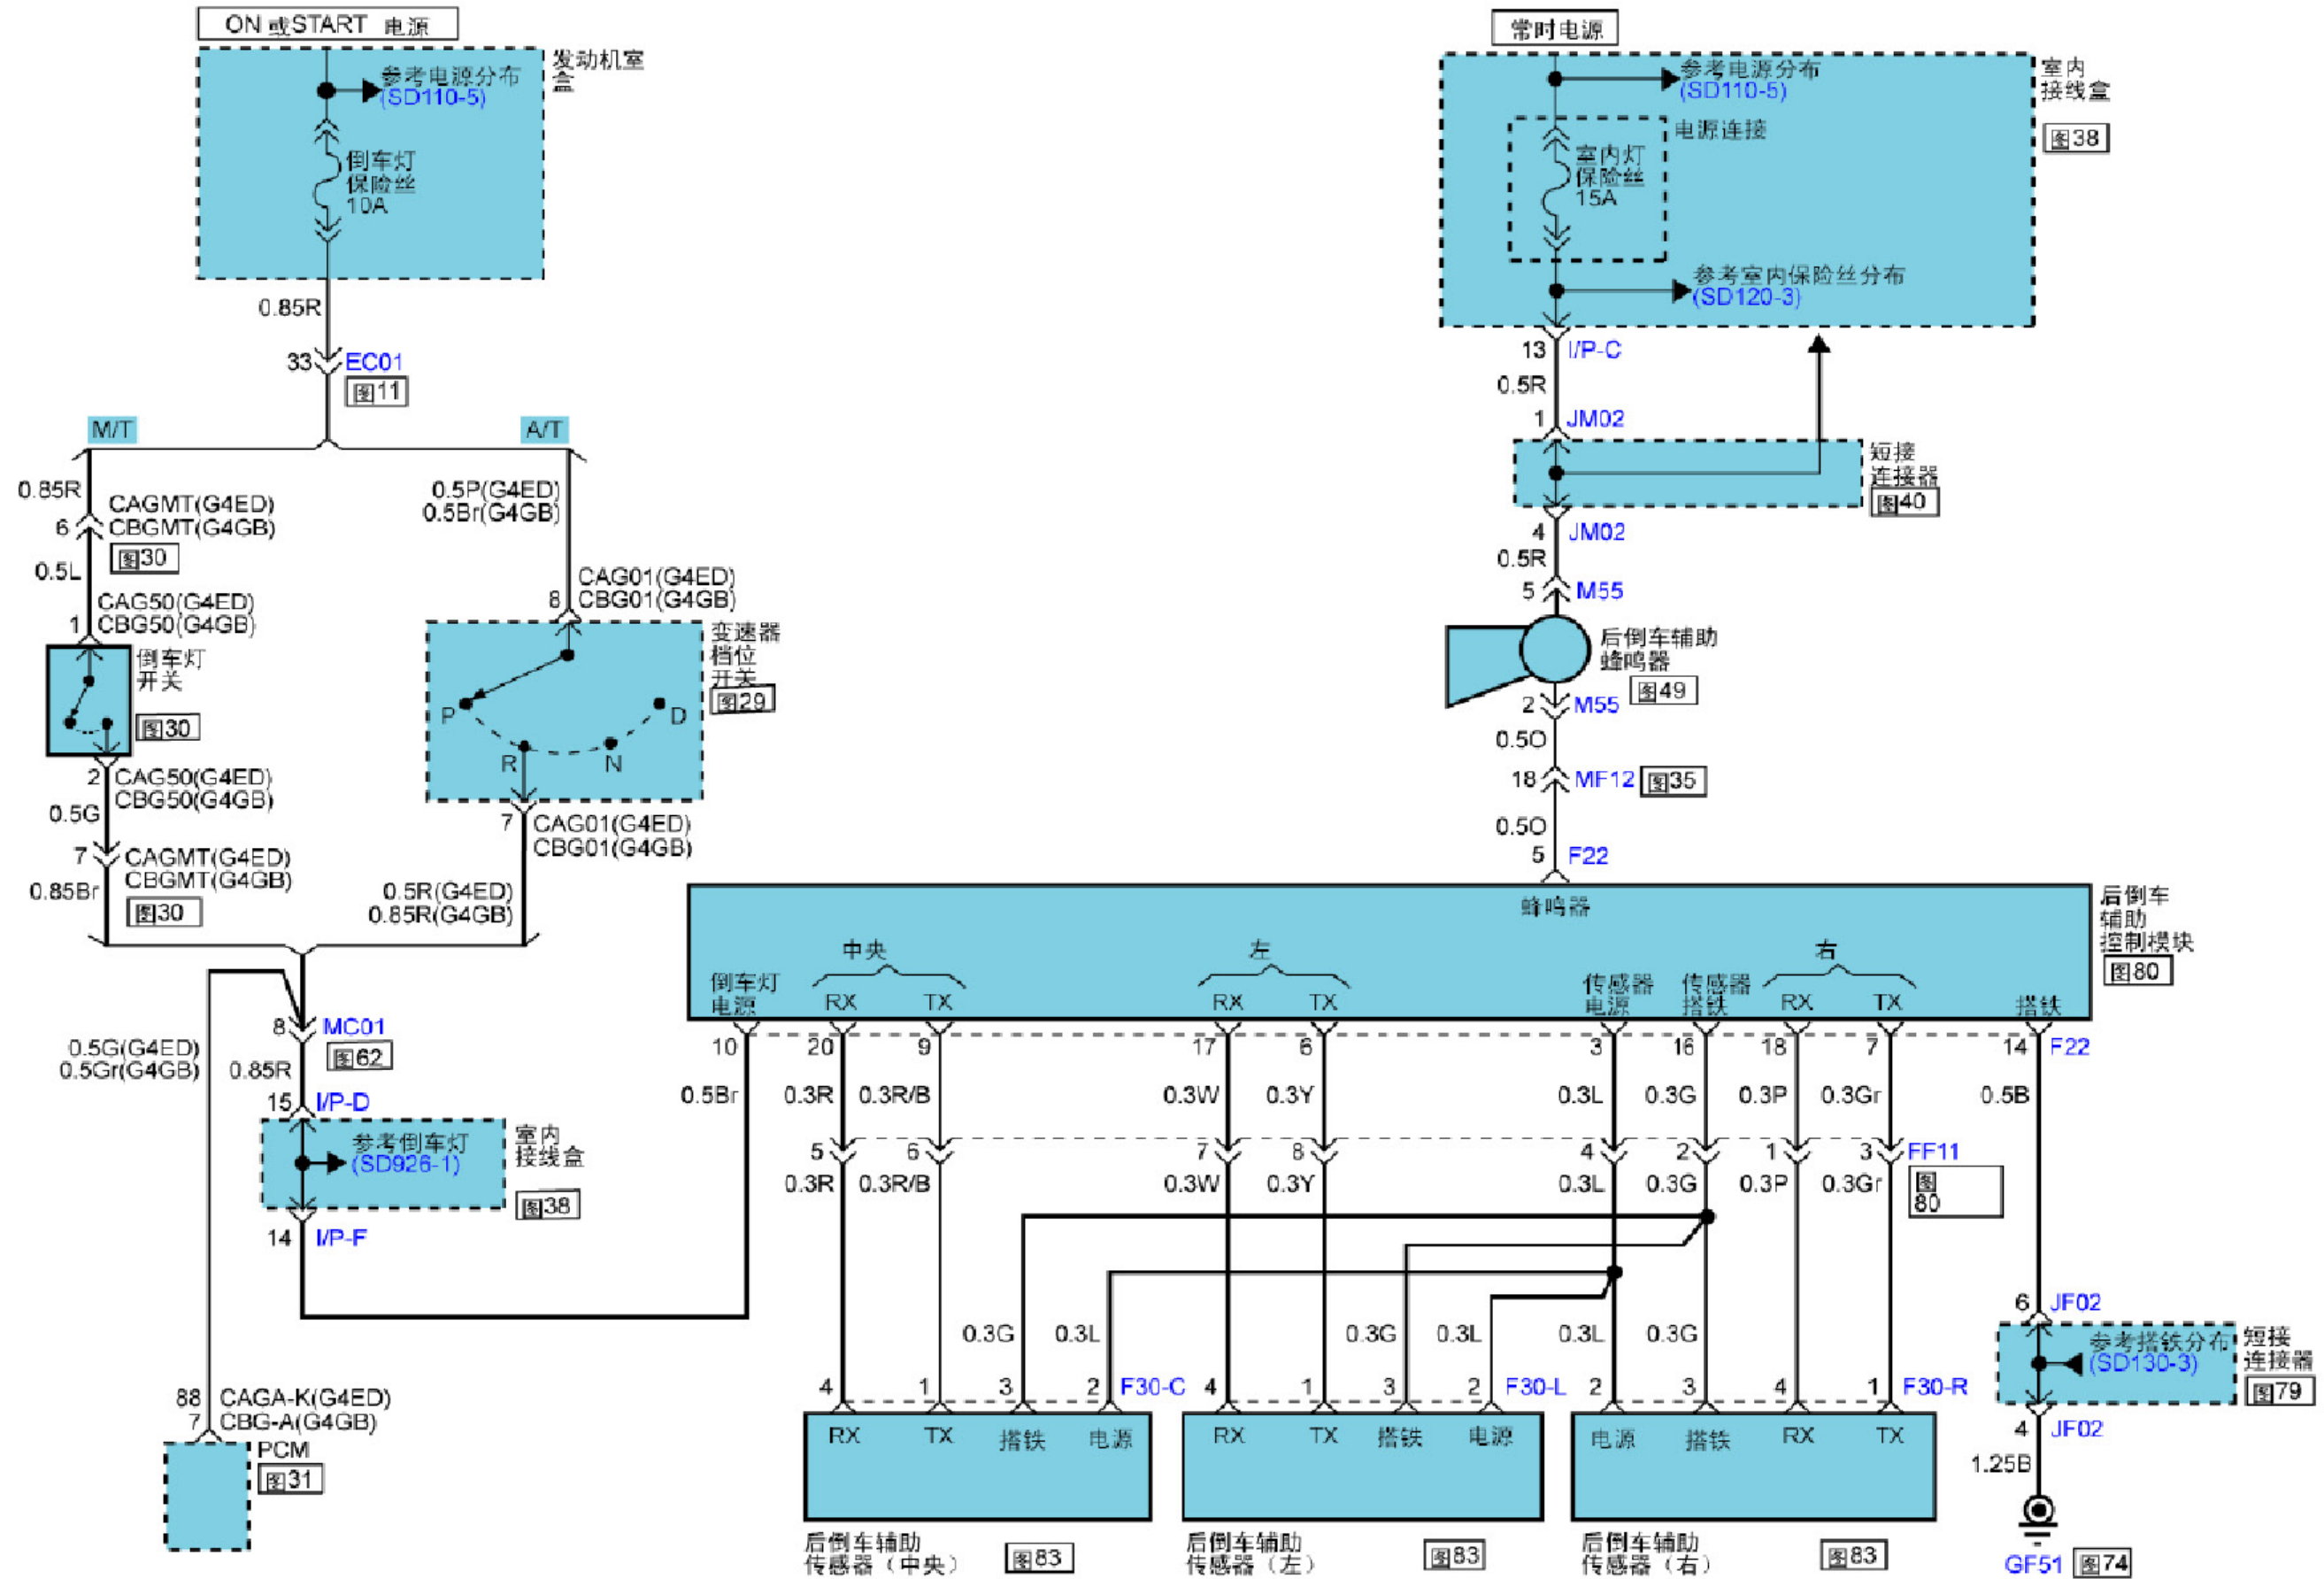


后倒车辅助系统连接器介绍


<p><b>CAGA-K</b></p> <p>AMP_ECU_94F_B</p>		<p><b>CBG-A</b></p> <p>AMP_ECU_60F_B</p>	
<p><b>CAG01</b></p> <p>KET_SSD_10F_B_A</p>	<p><b>CAG50</b></p> <p>KUM_NMWP_02F_B</p>	<p><b>CBG01</b></p> <p>KET_SSD_01F_B_A</p>	<p><b>CBG50</b></p> <p>KUM_NMWP_02F_Gr</p>
<p><b>F22</b></p> <p>KUM_040III_20F_W</p>	<p><b>F30-C</b></p> <p>MLX_060WP_04F_B</p>	<p><b>F30-L</b></p> <p>MLX_060WP_04F_B</p>	<p><b>F30-R</b></p> <p>MLX_060WP_04F_B</p>
<p><b>M55</b></p> <p>KUM_CDR_05F_W</p>	<p>BLANK</p>	<p>BLANK</p>	<p>BLANK</p>



### 2.14 变速杆锁系统

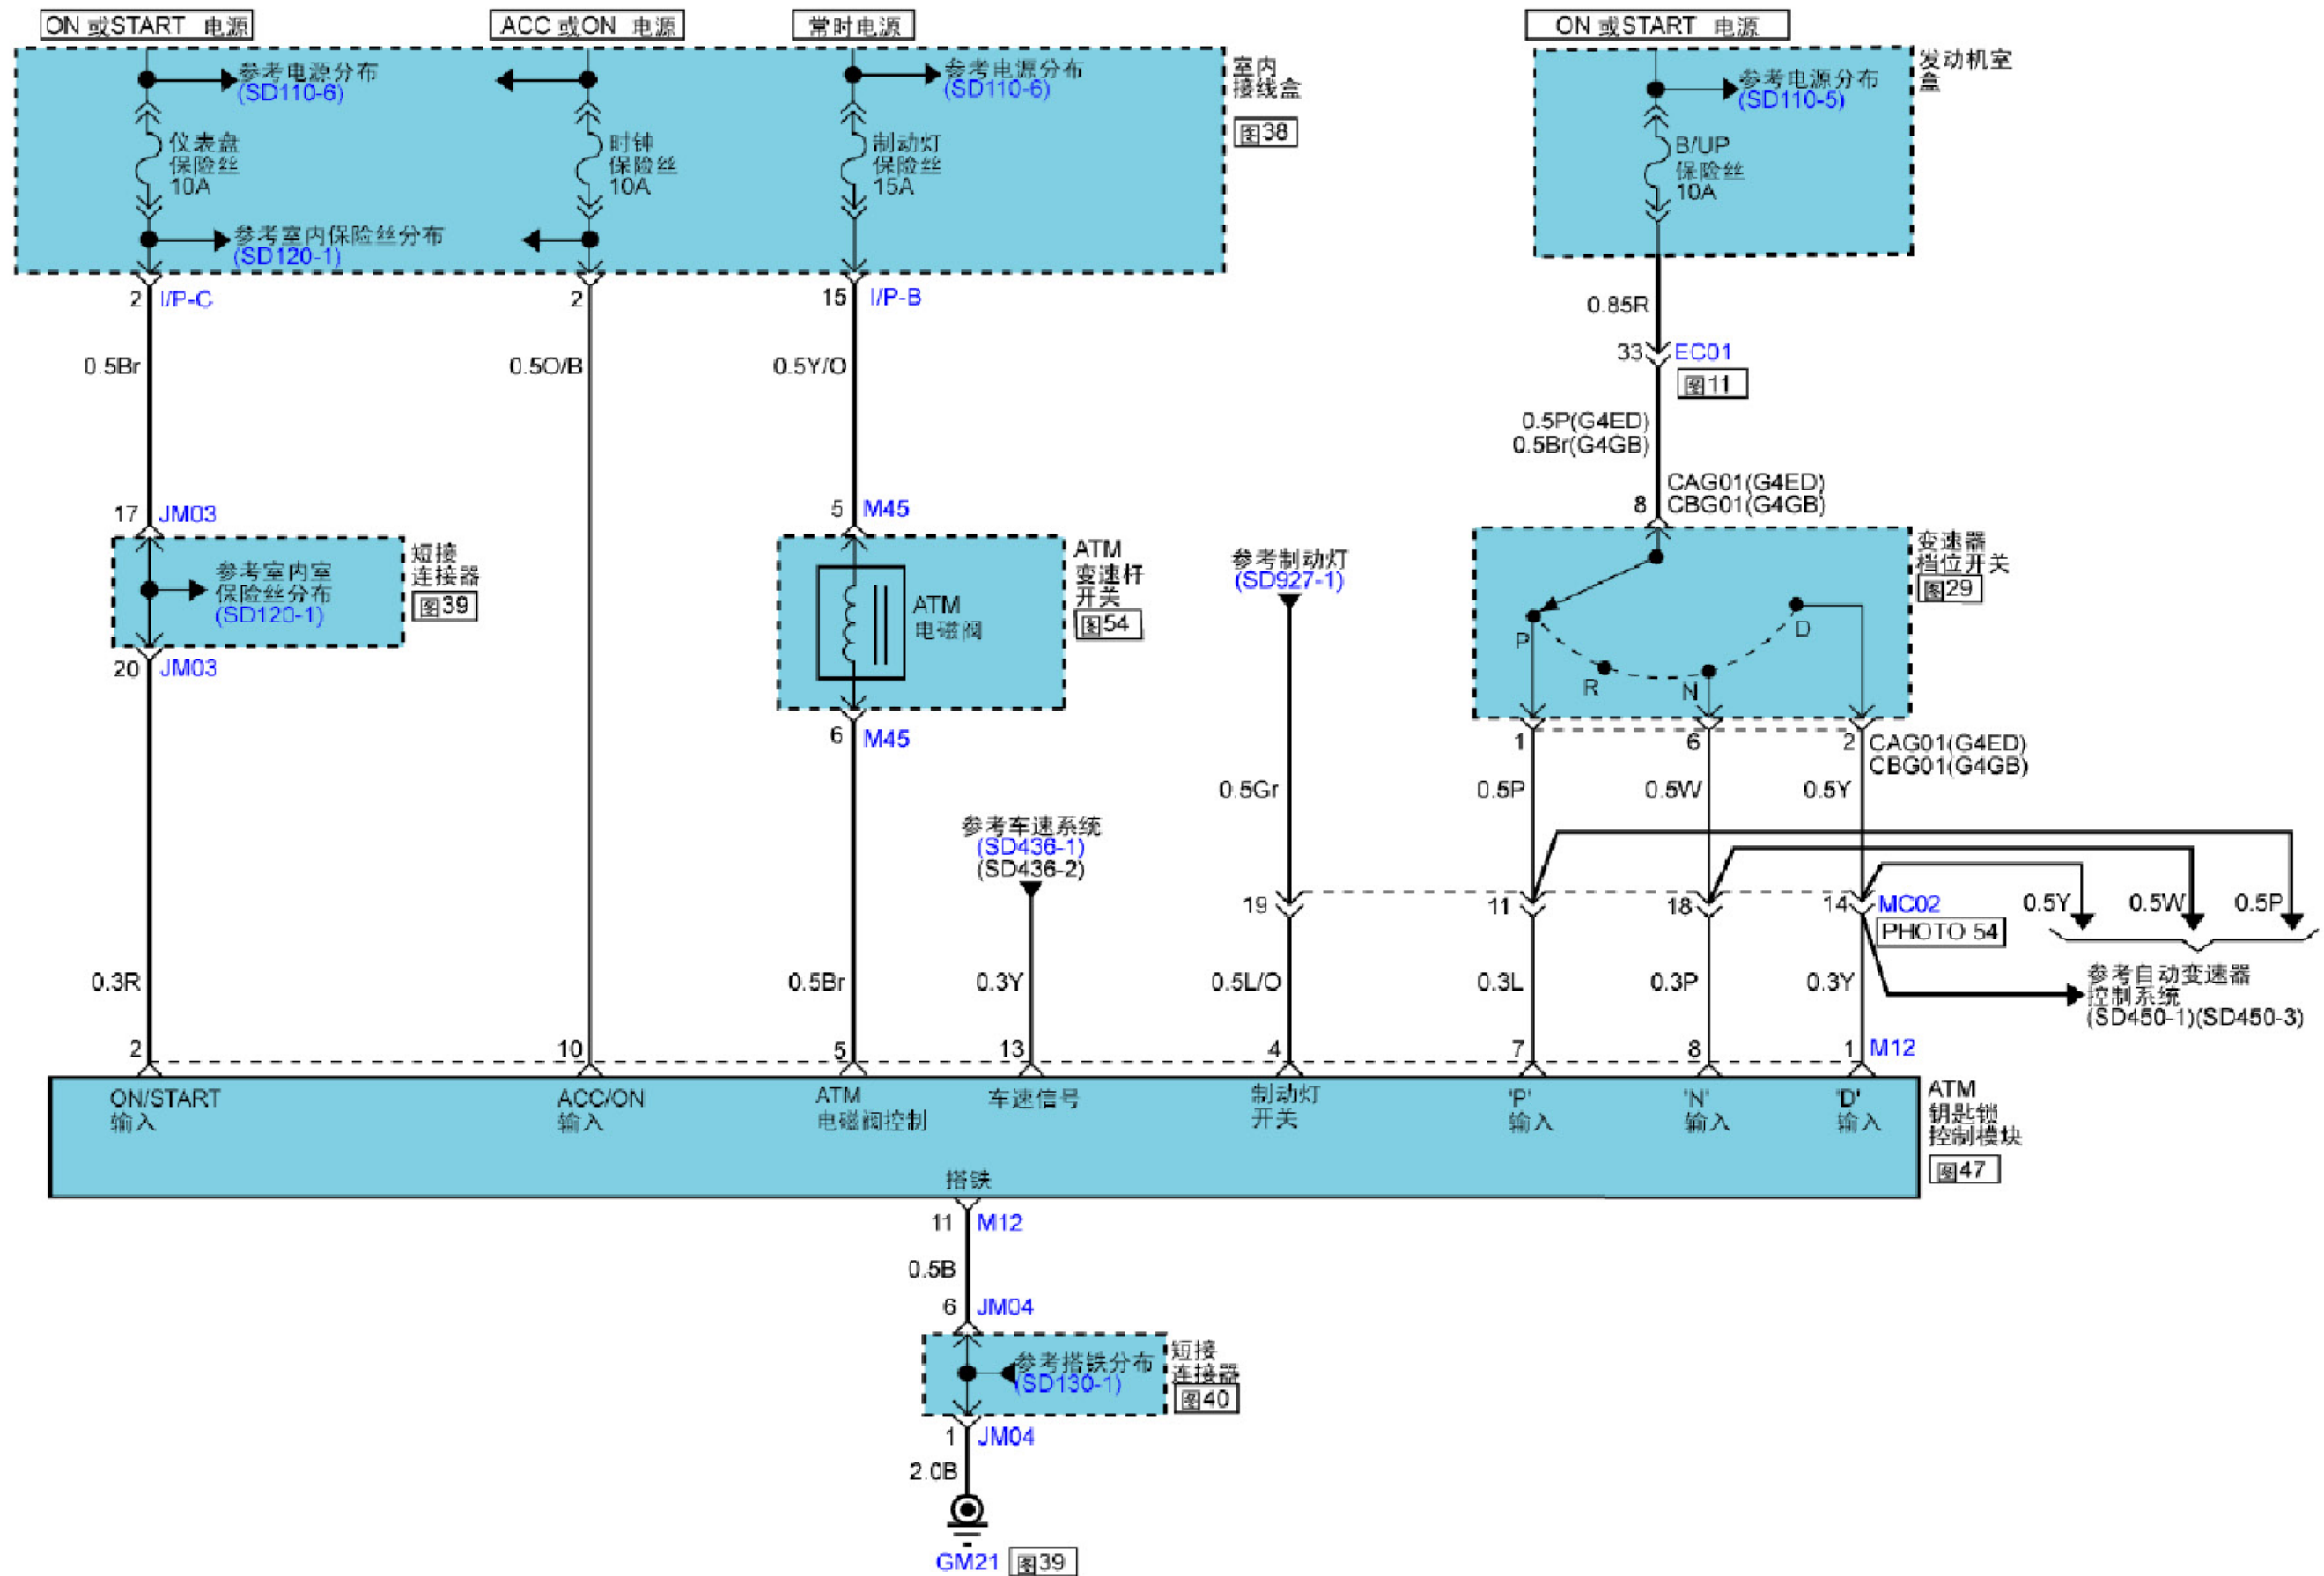

## 变速杆锁系统连接器介绍

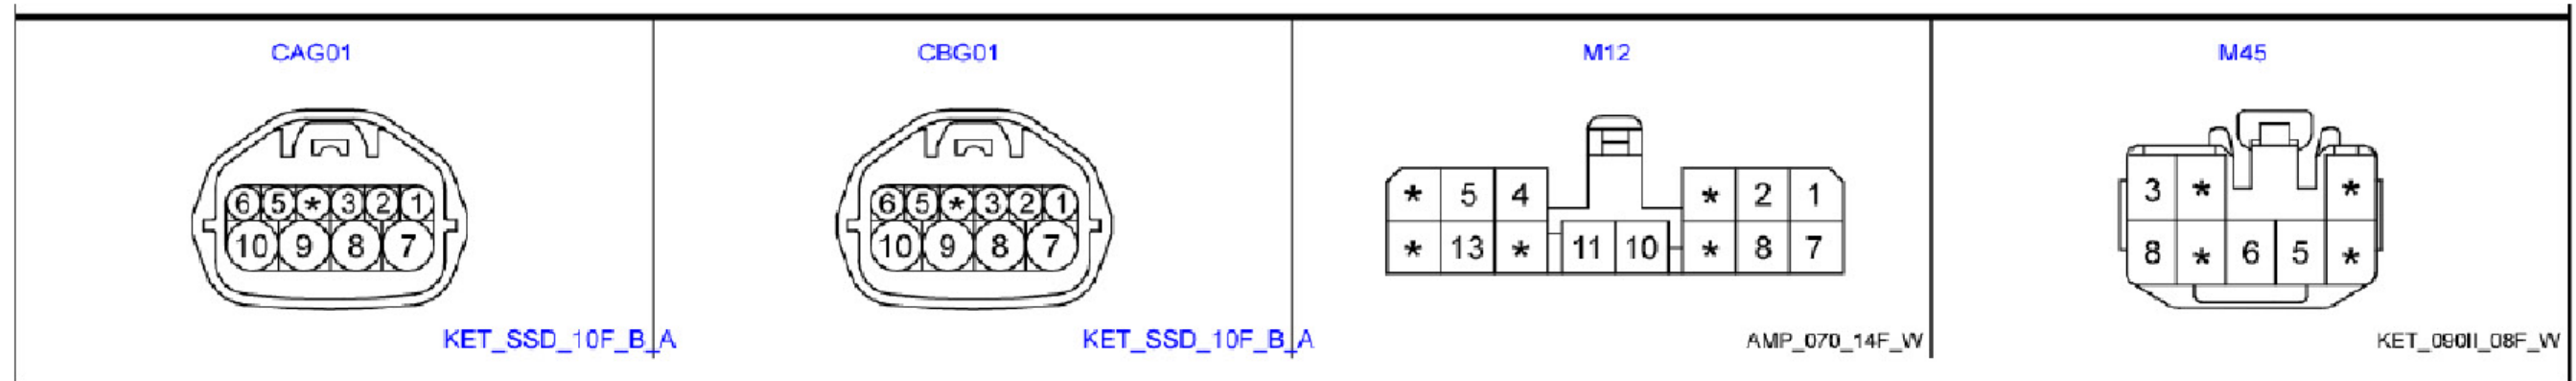

LAUNCH