




2.4 组合仪表系统

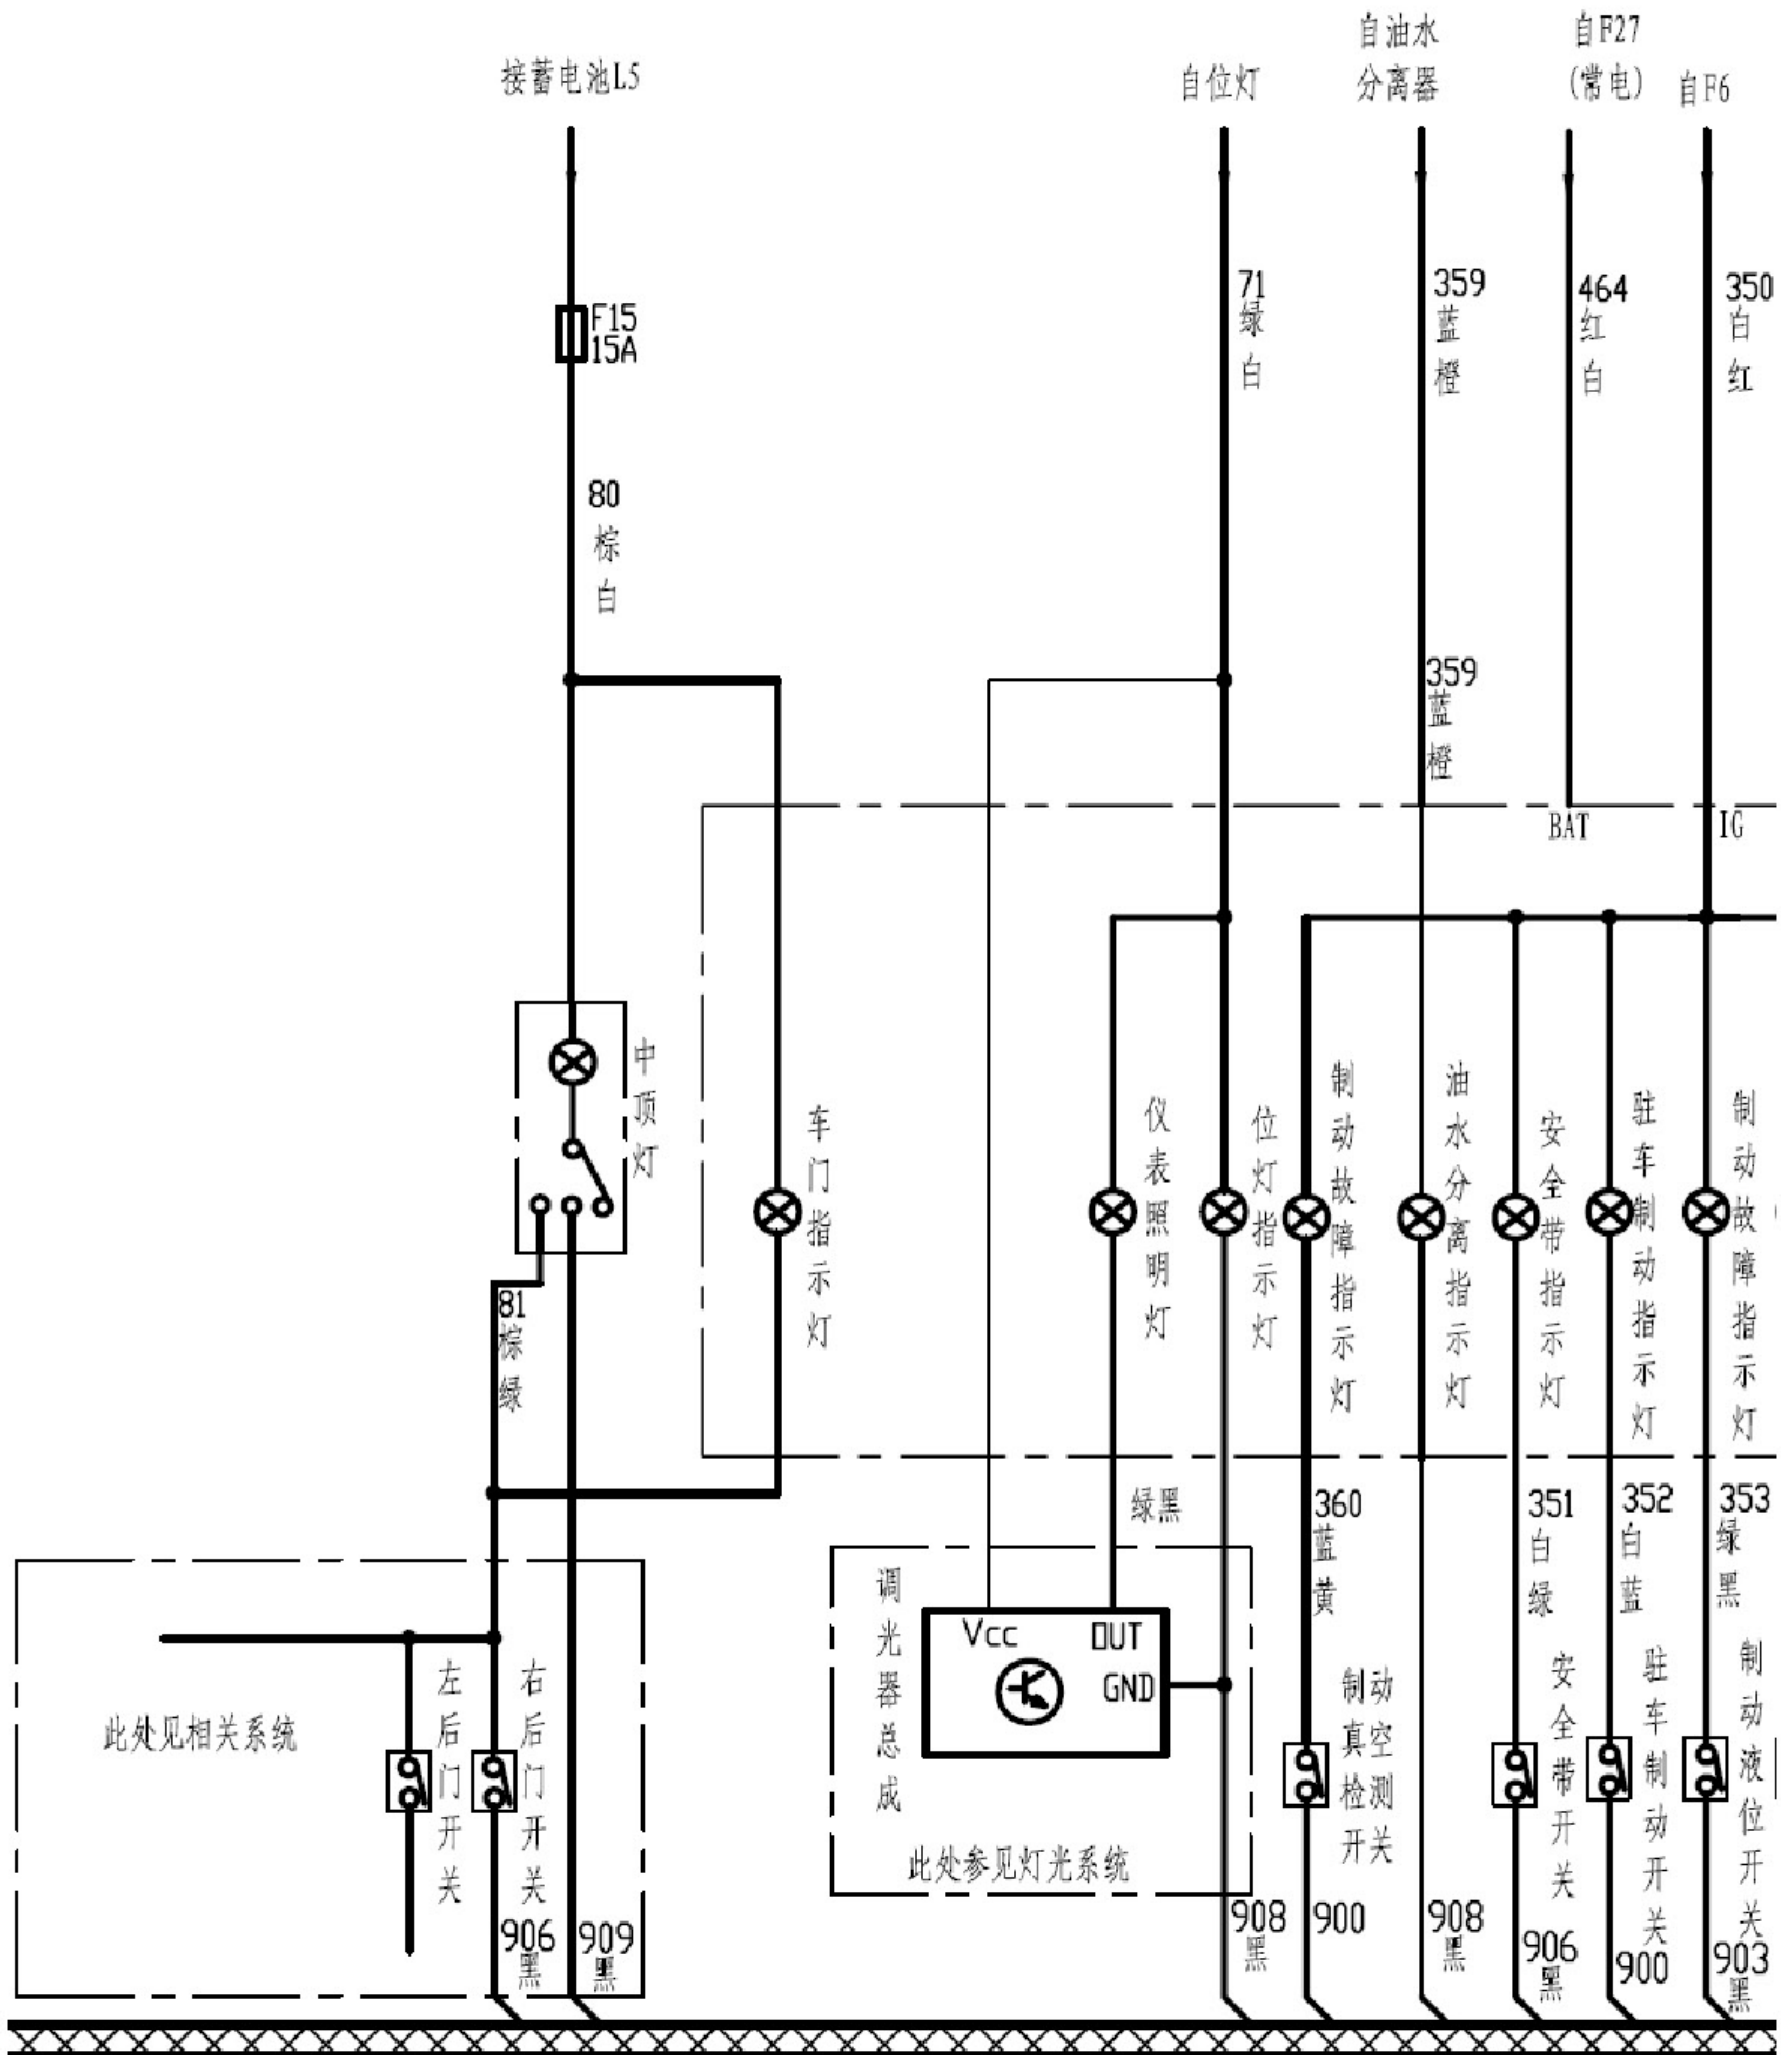

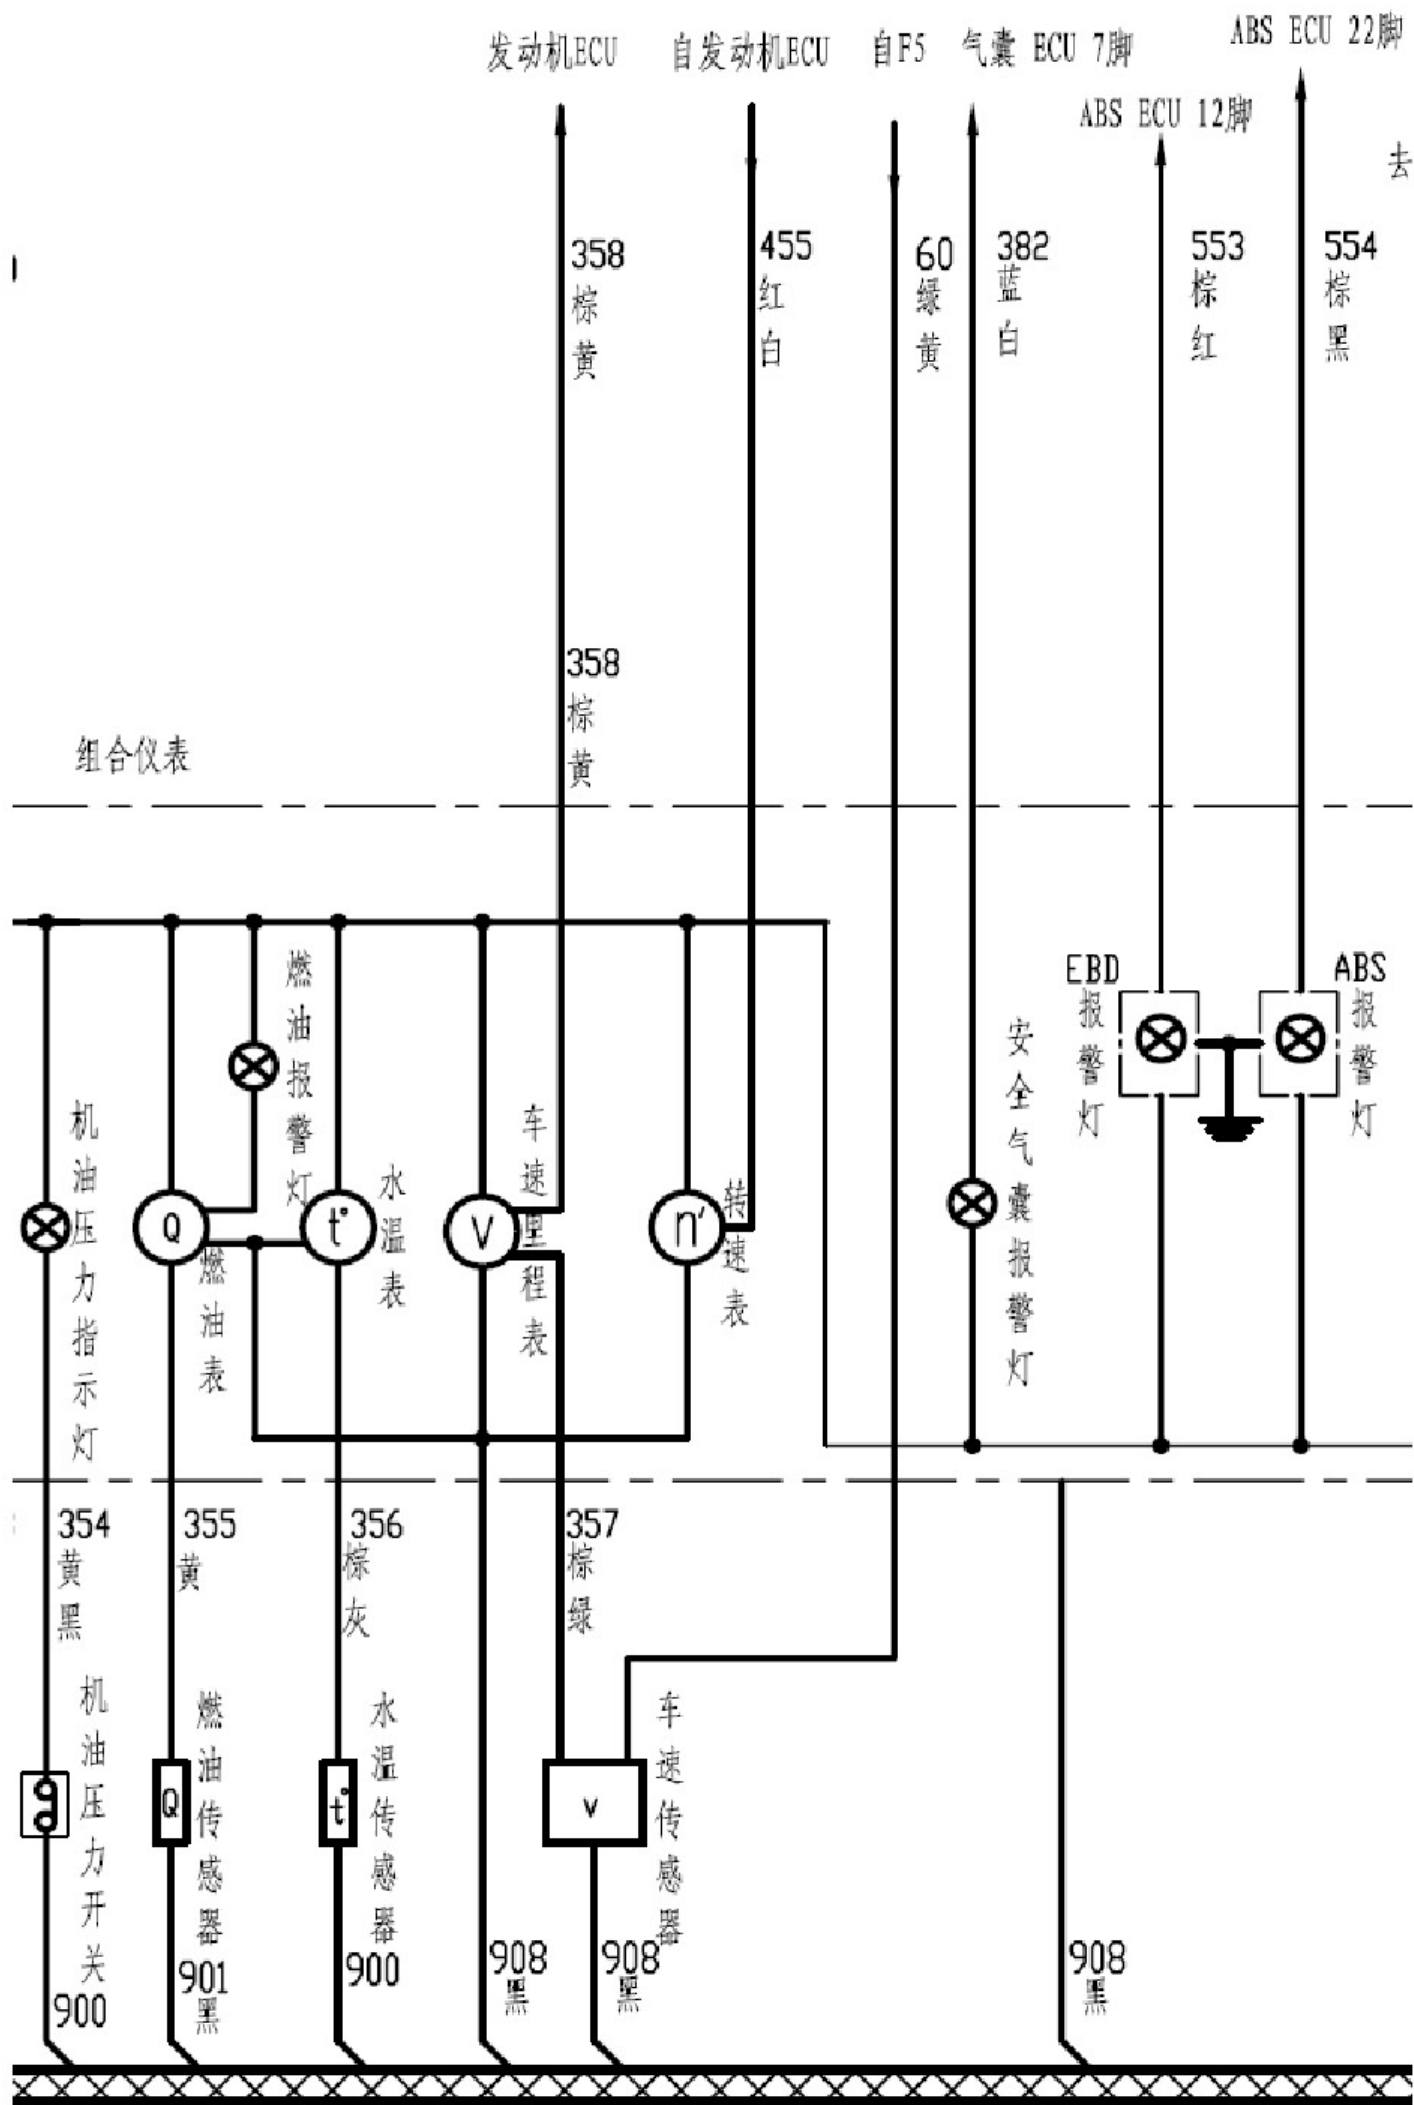

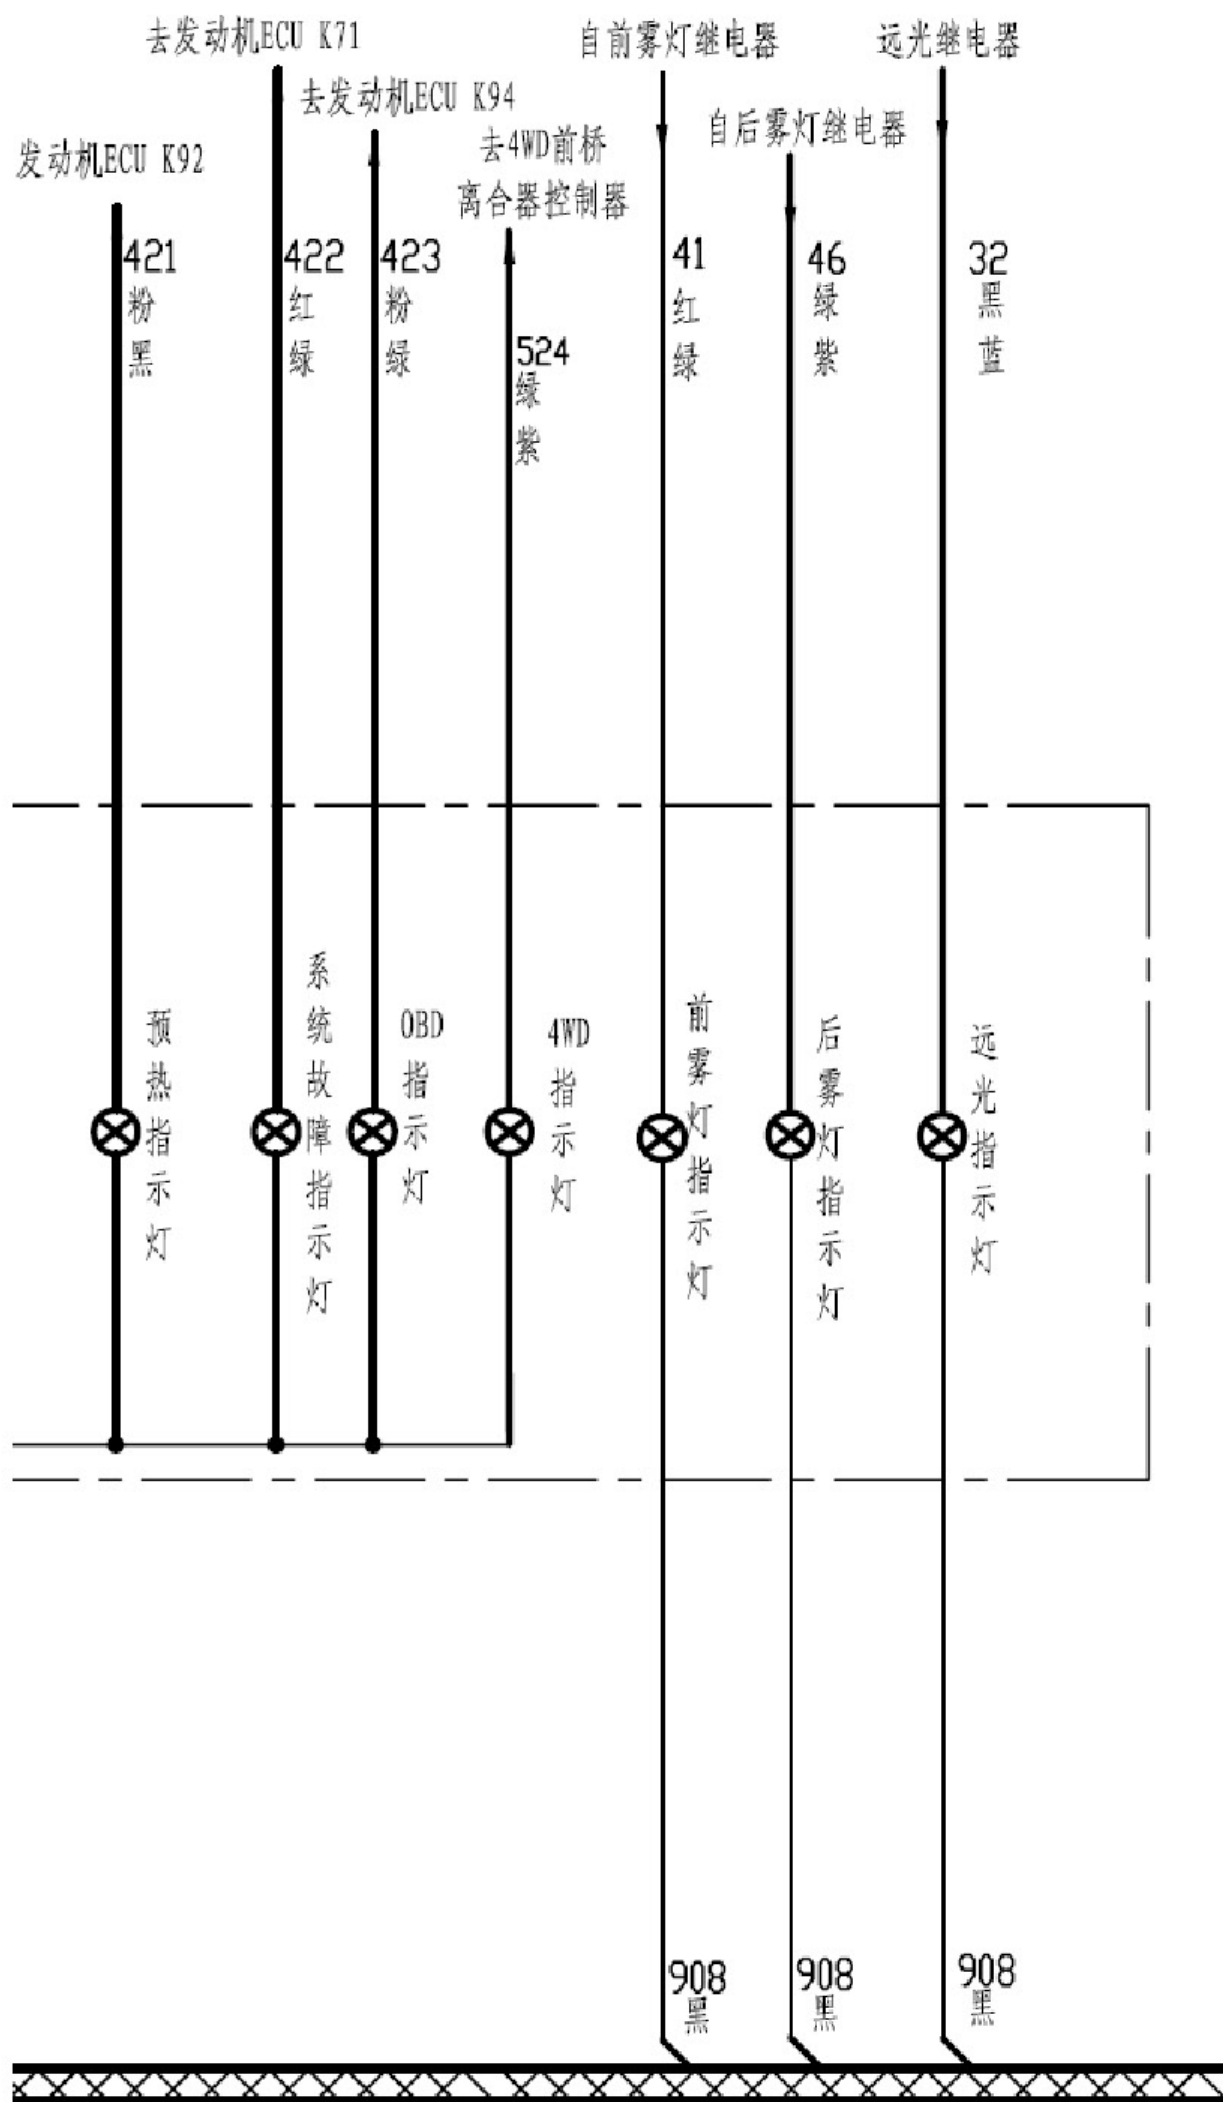

组合仪表系统连接器

组合仪表A

1									10
455A Br/G	908N B	357B Br/G	358A Br/Y		421B P/B	351B W/G	382B L/W	252D W/L	402B R
73B G/B	908P B	356B Br/G	355B Y	353B G/B	554B Br/B	352B W/L	360B L/Y	553B Br/R	54C G/R
21									30

无ABS时
指示灯接地

无EBD时
指示灯接地

									20
81C Br/G	464C R/W	350C W	908U B	359B L/Br	354B Y/B	422B R/G	423B P/G	55C G/Y	32B B/W
71F G/V	16A W/B				80D Br/W	524B G/V		41B G/R	46B G/V
									40

4WD指示灯