 



点火开关处于“ACC”或“ON”位置

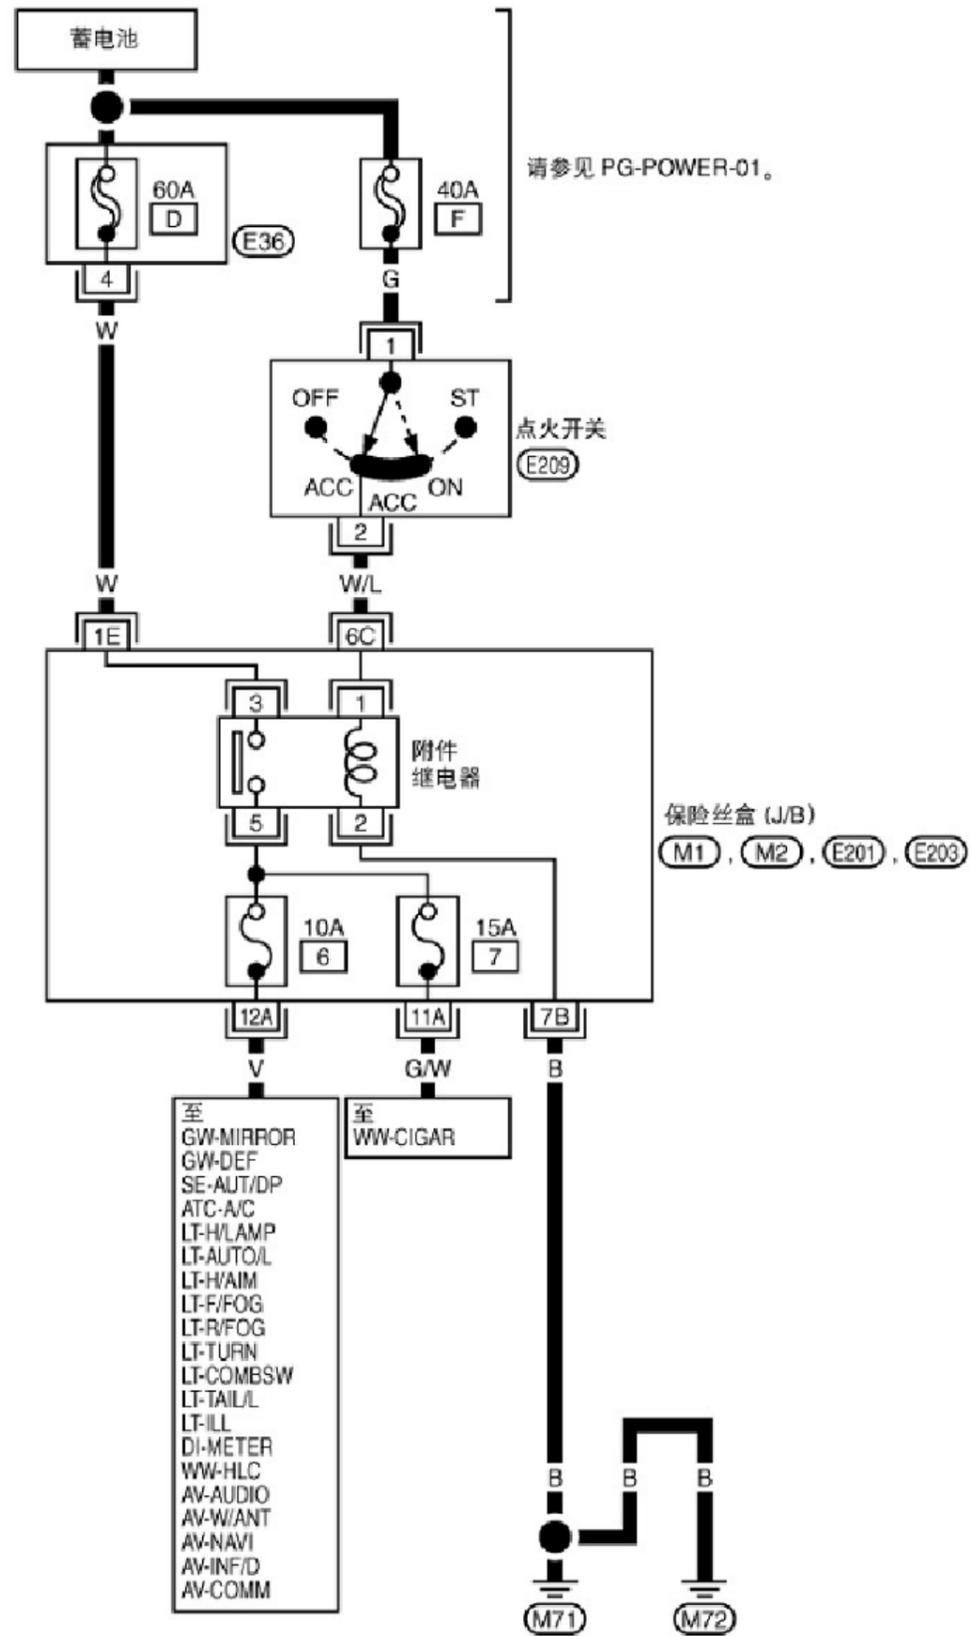

请参阅下列内容。

(M1), (M2), (E201), (E203)

- 保险丝盒 - 接线盒 (J/B)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22