



### 2.5 发动机油液位、压力、温度线路图



2.5.1 线路

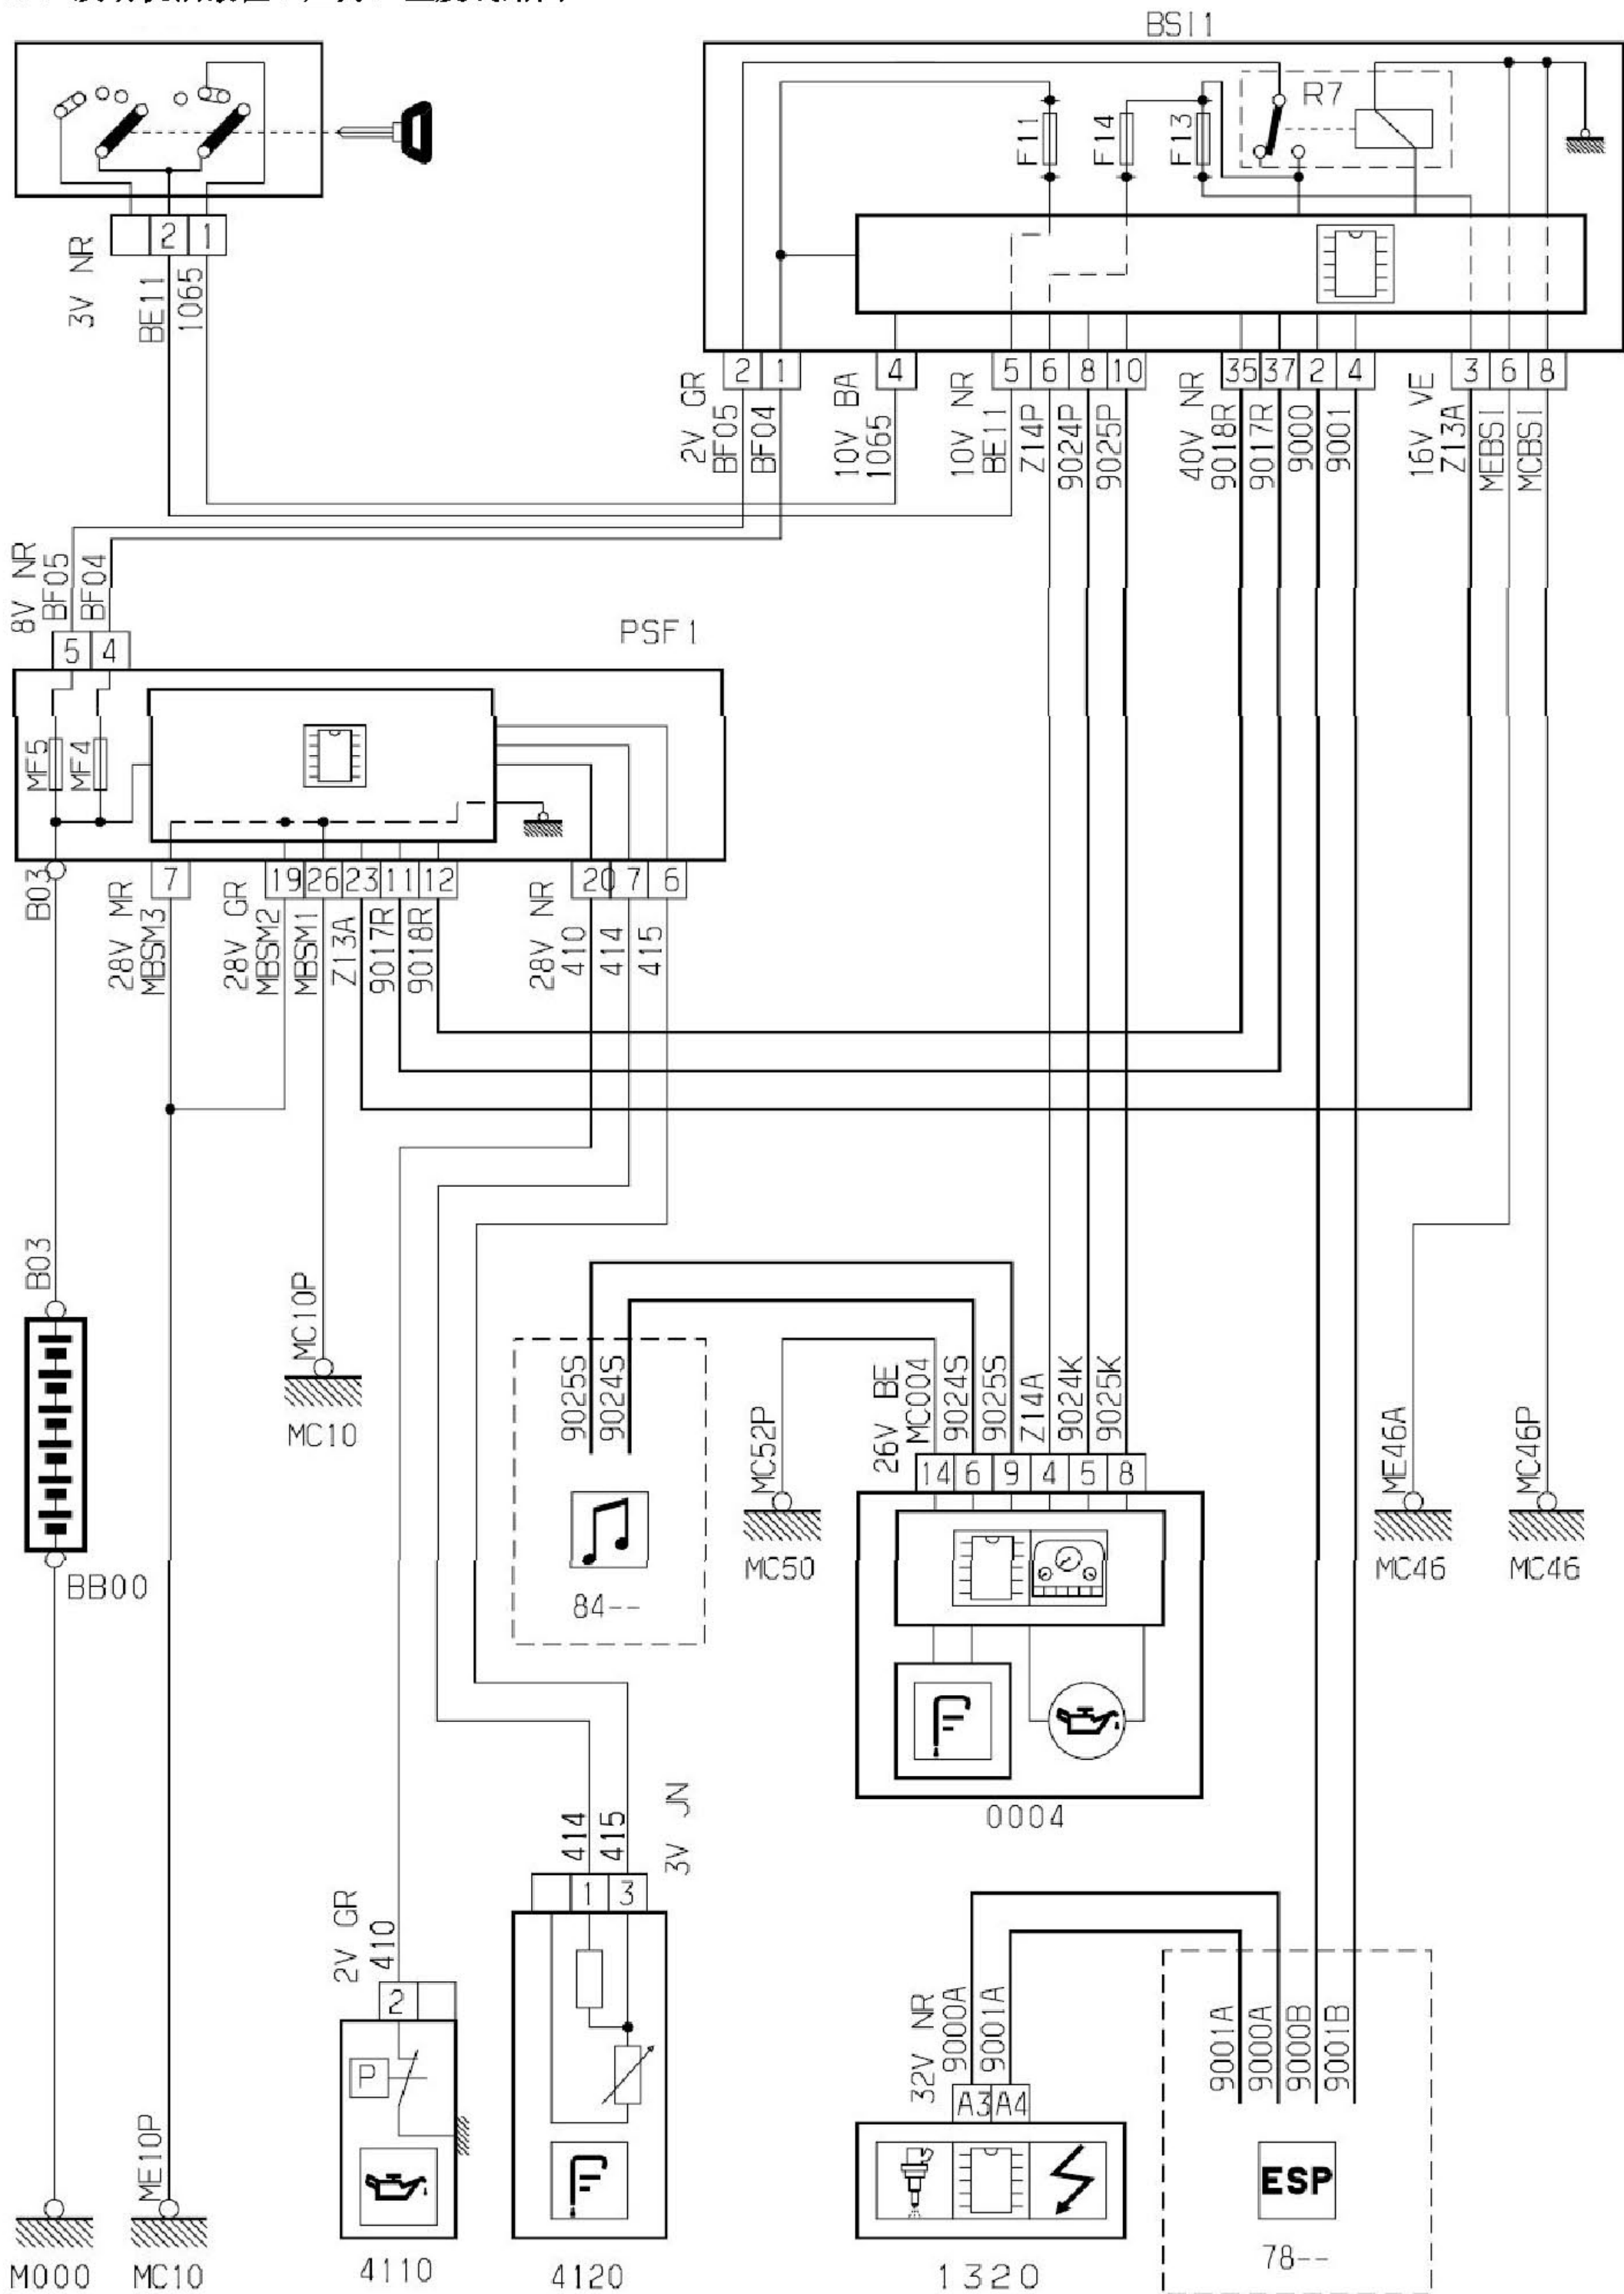

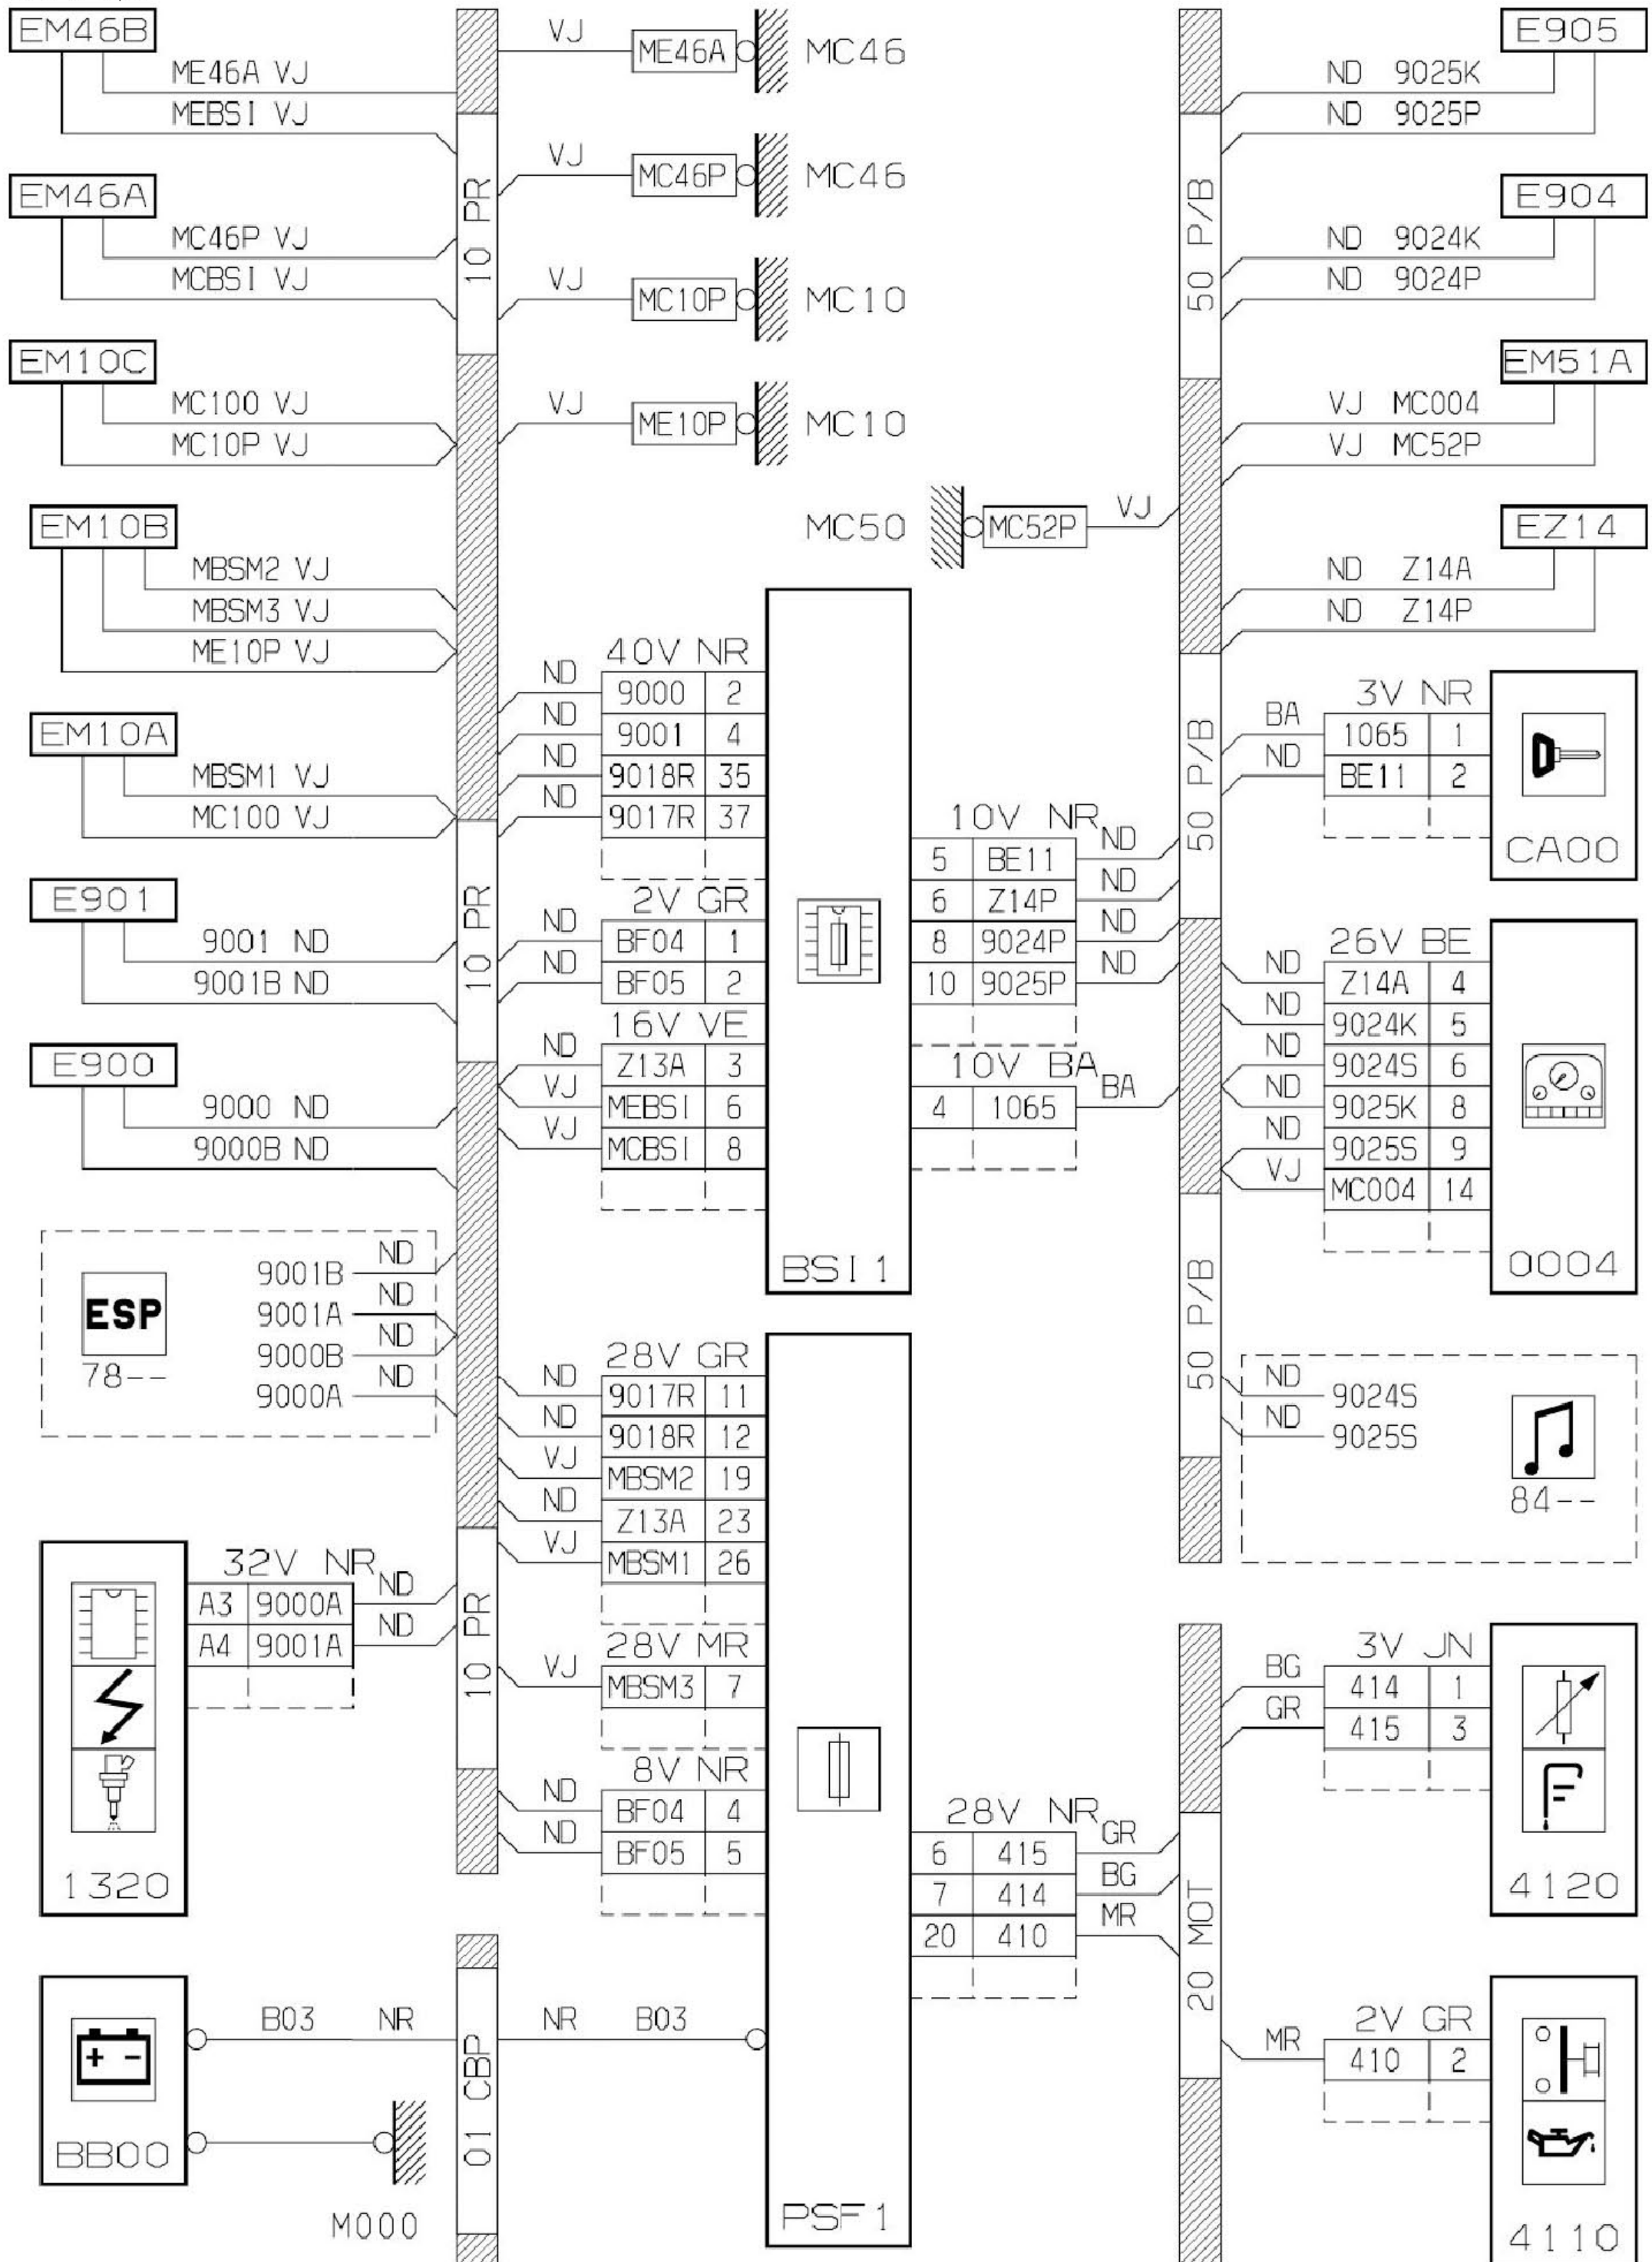

2.5.2 安装

