


2.34 启动发动机线路图

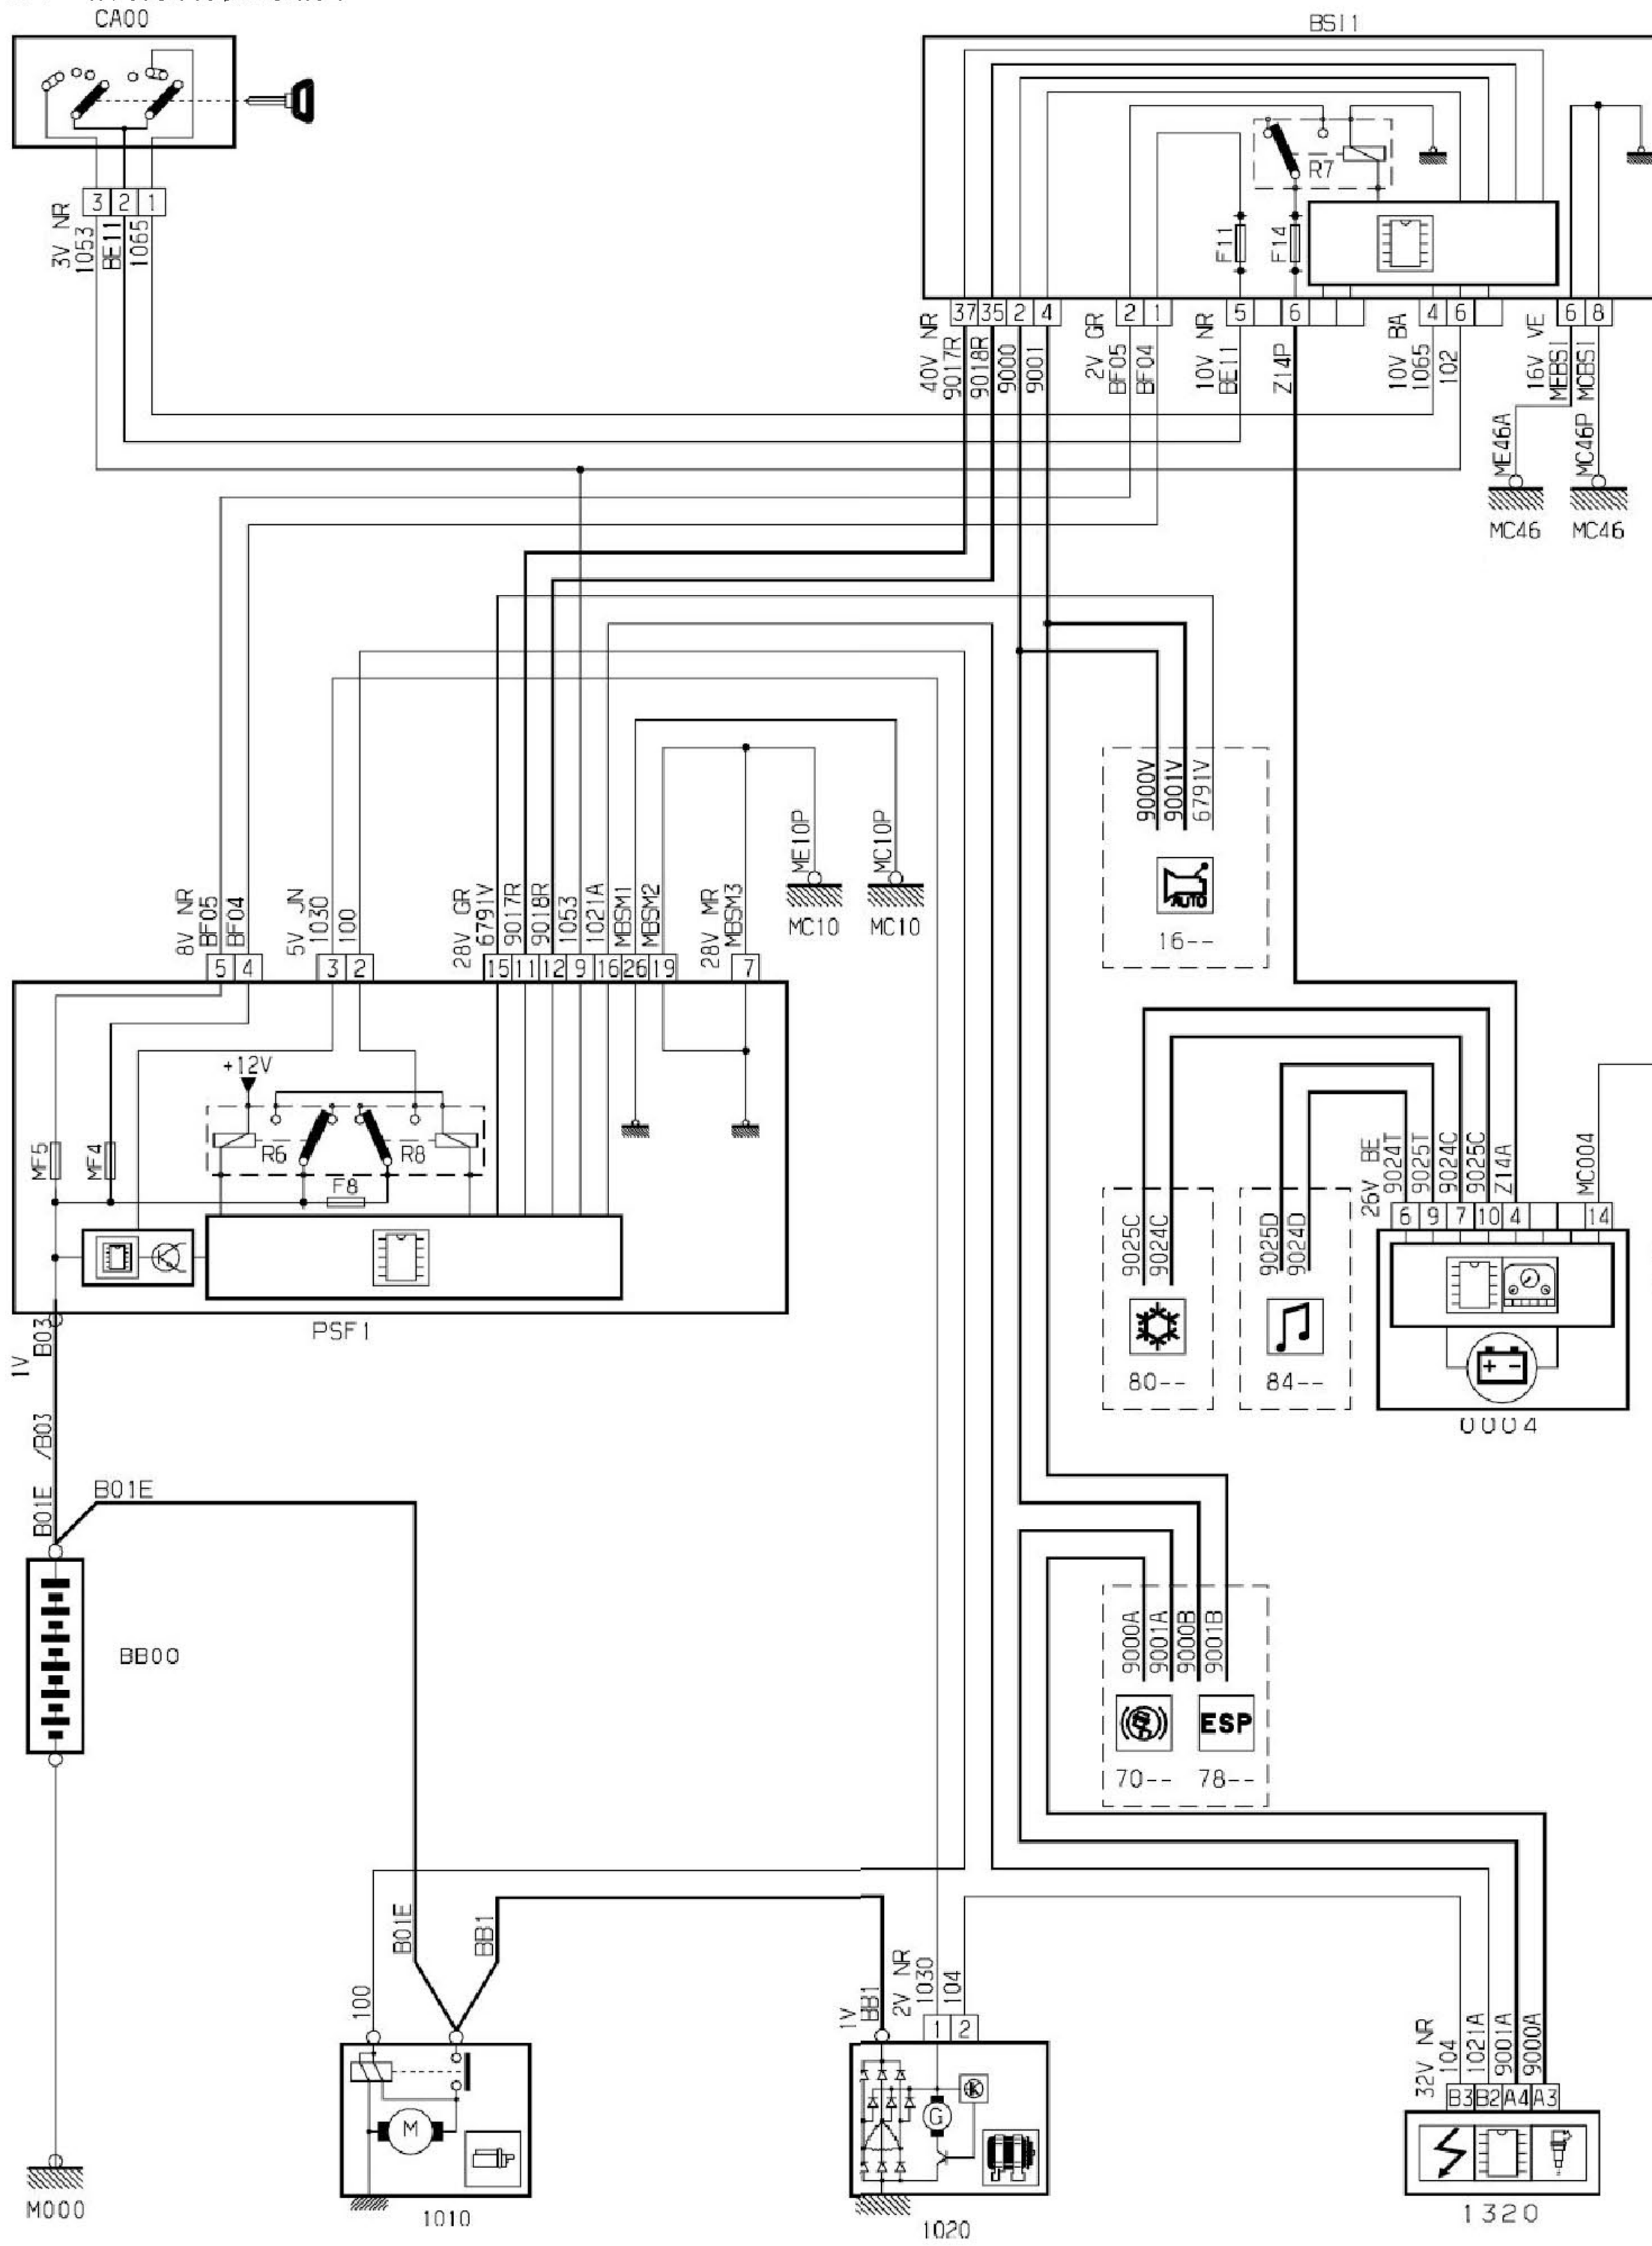

2.34.2 安装

