


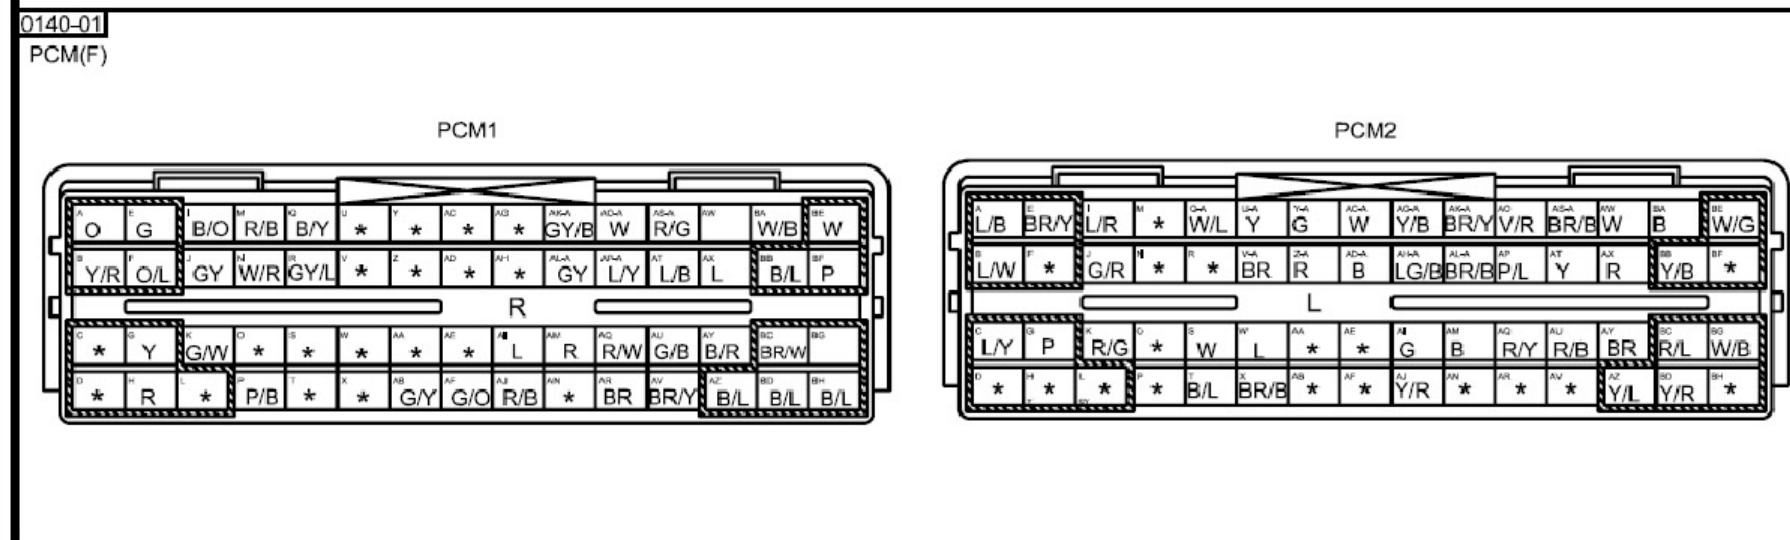
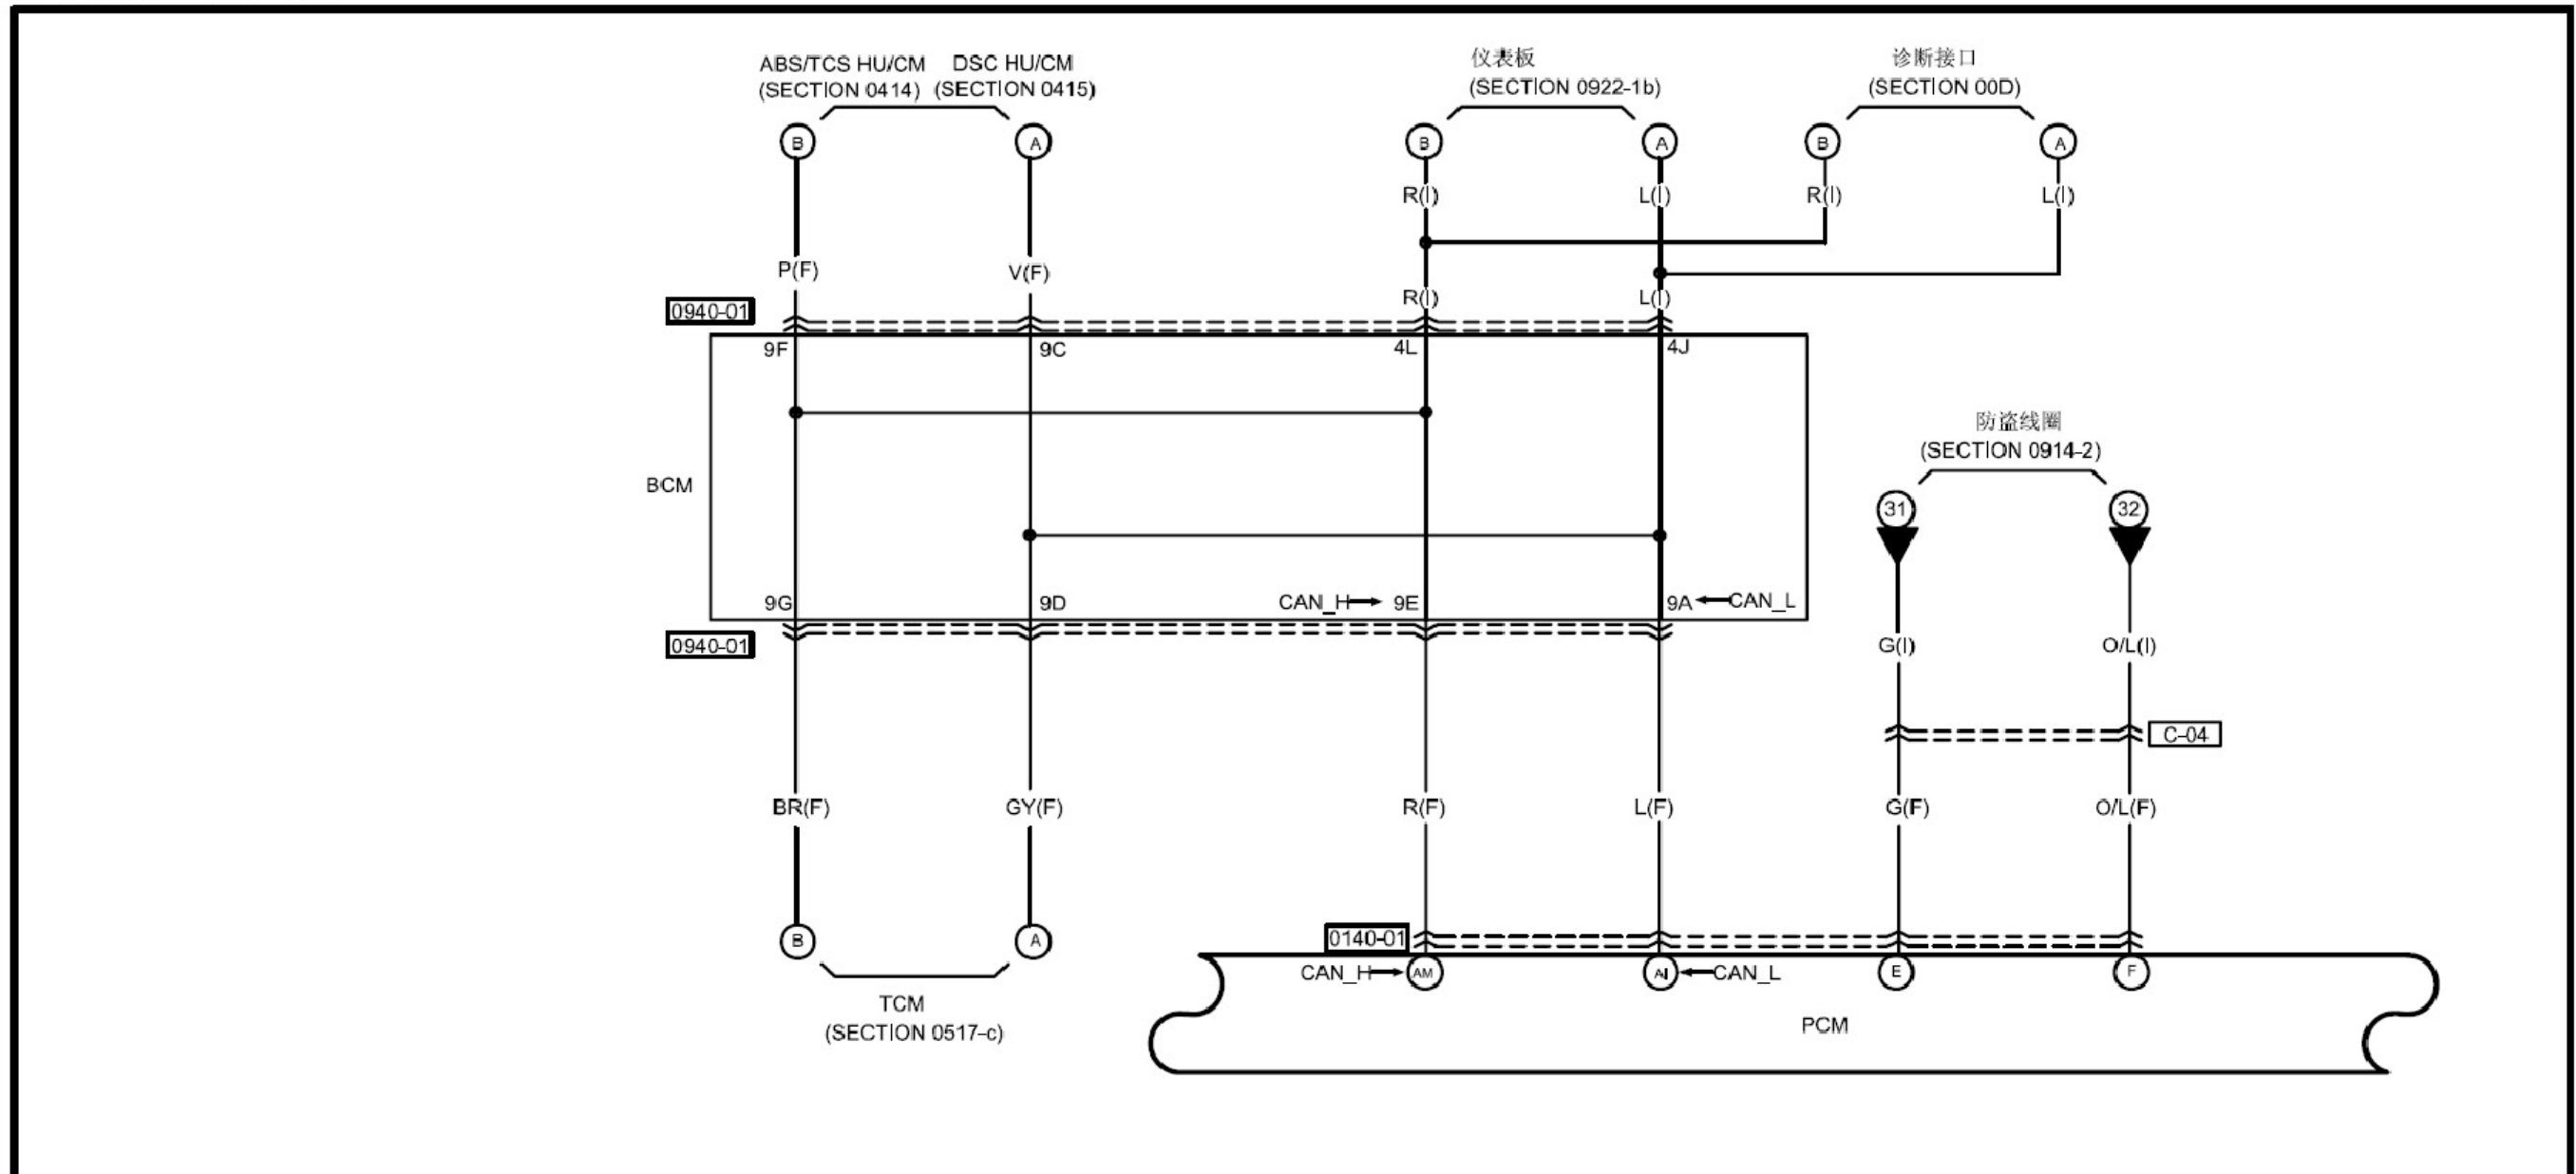


发动机控制系统 (续)


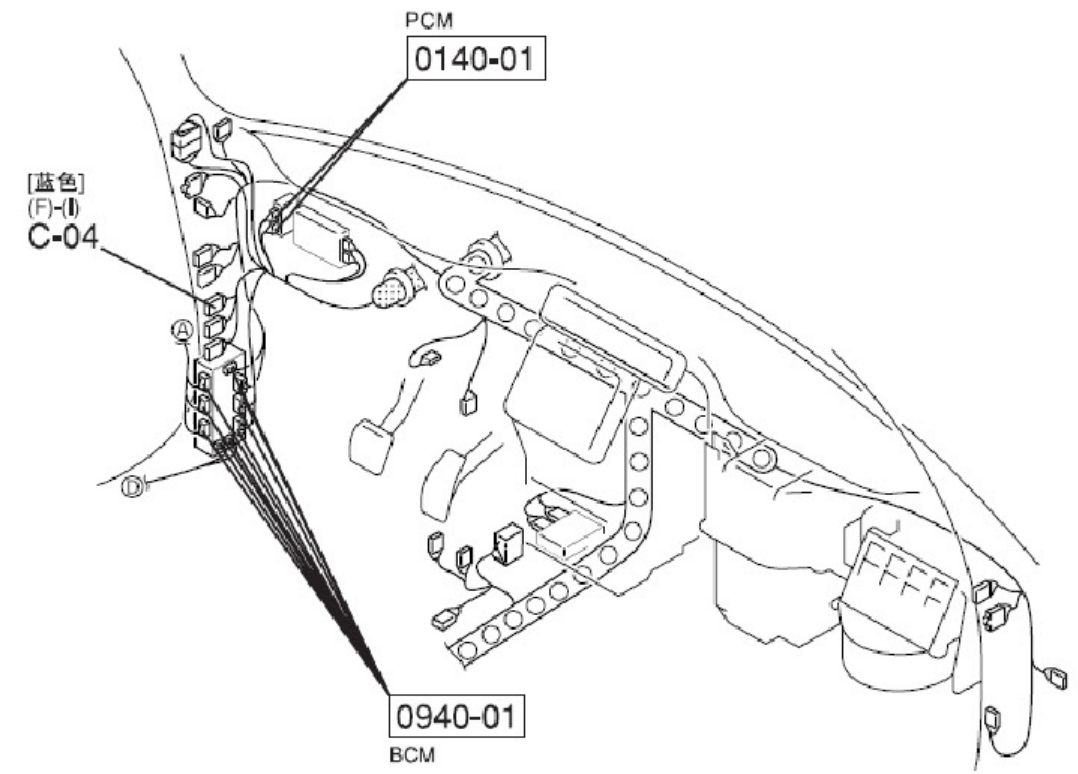


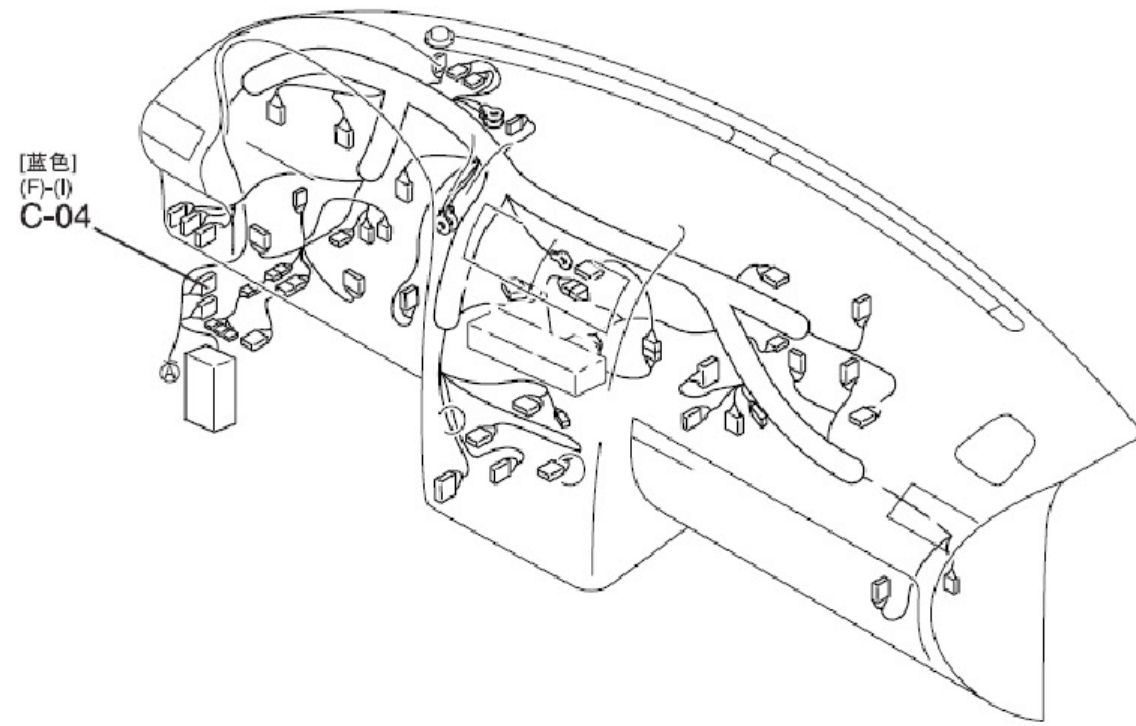

发动机控制系统 (续)

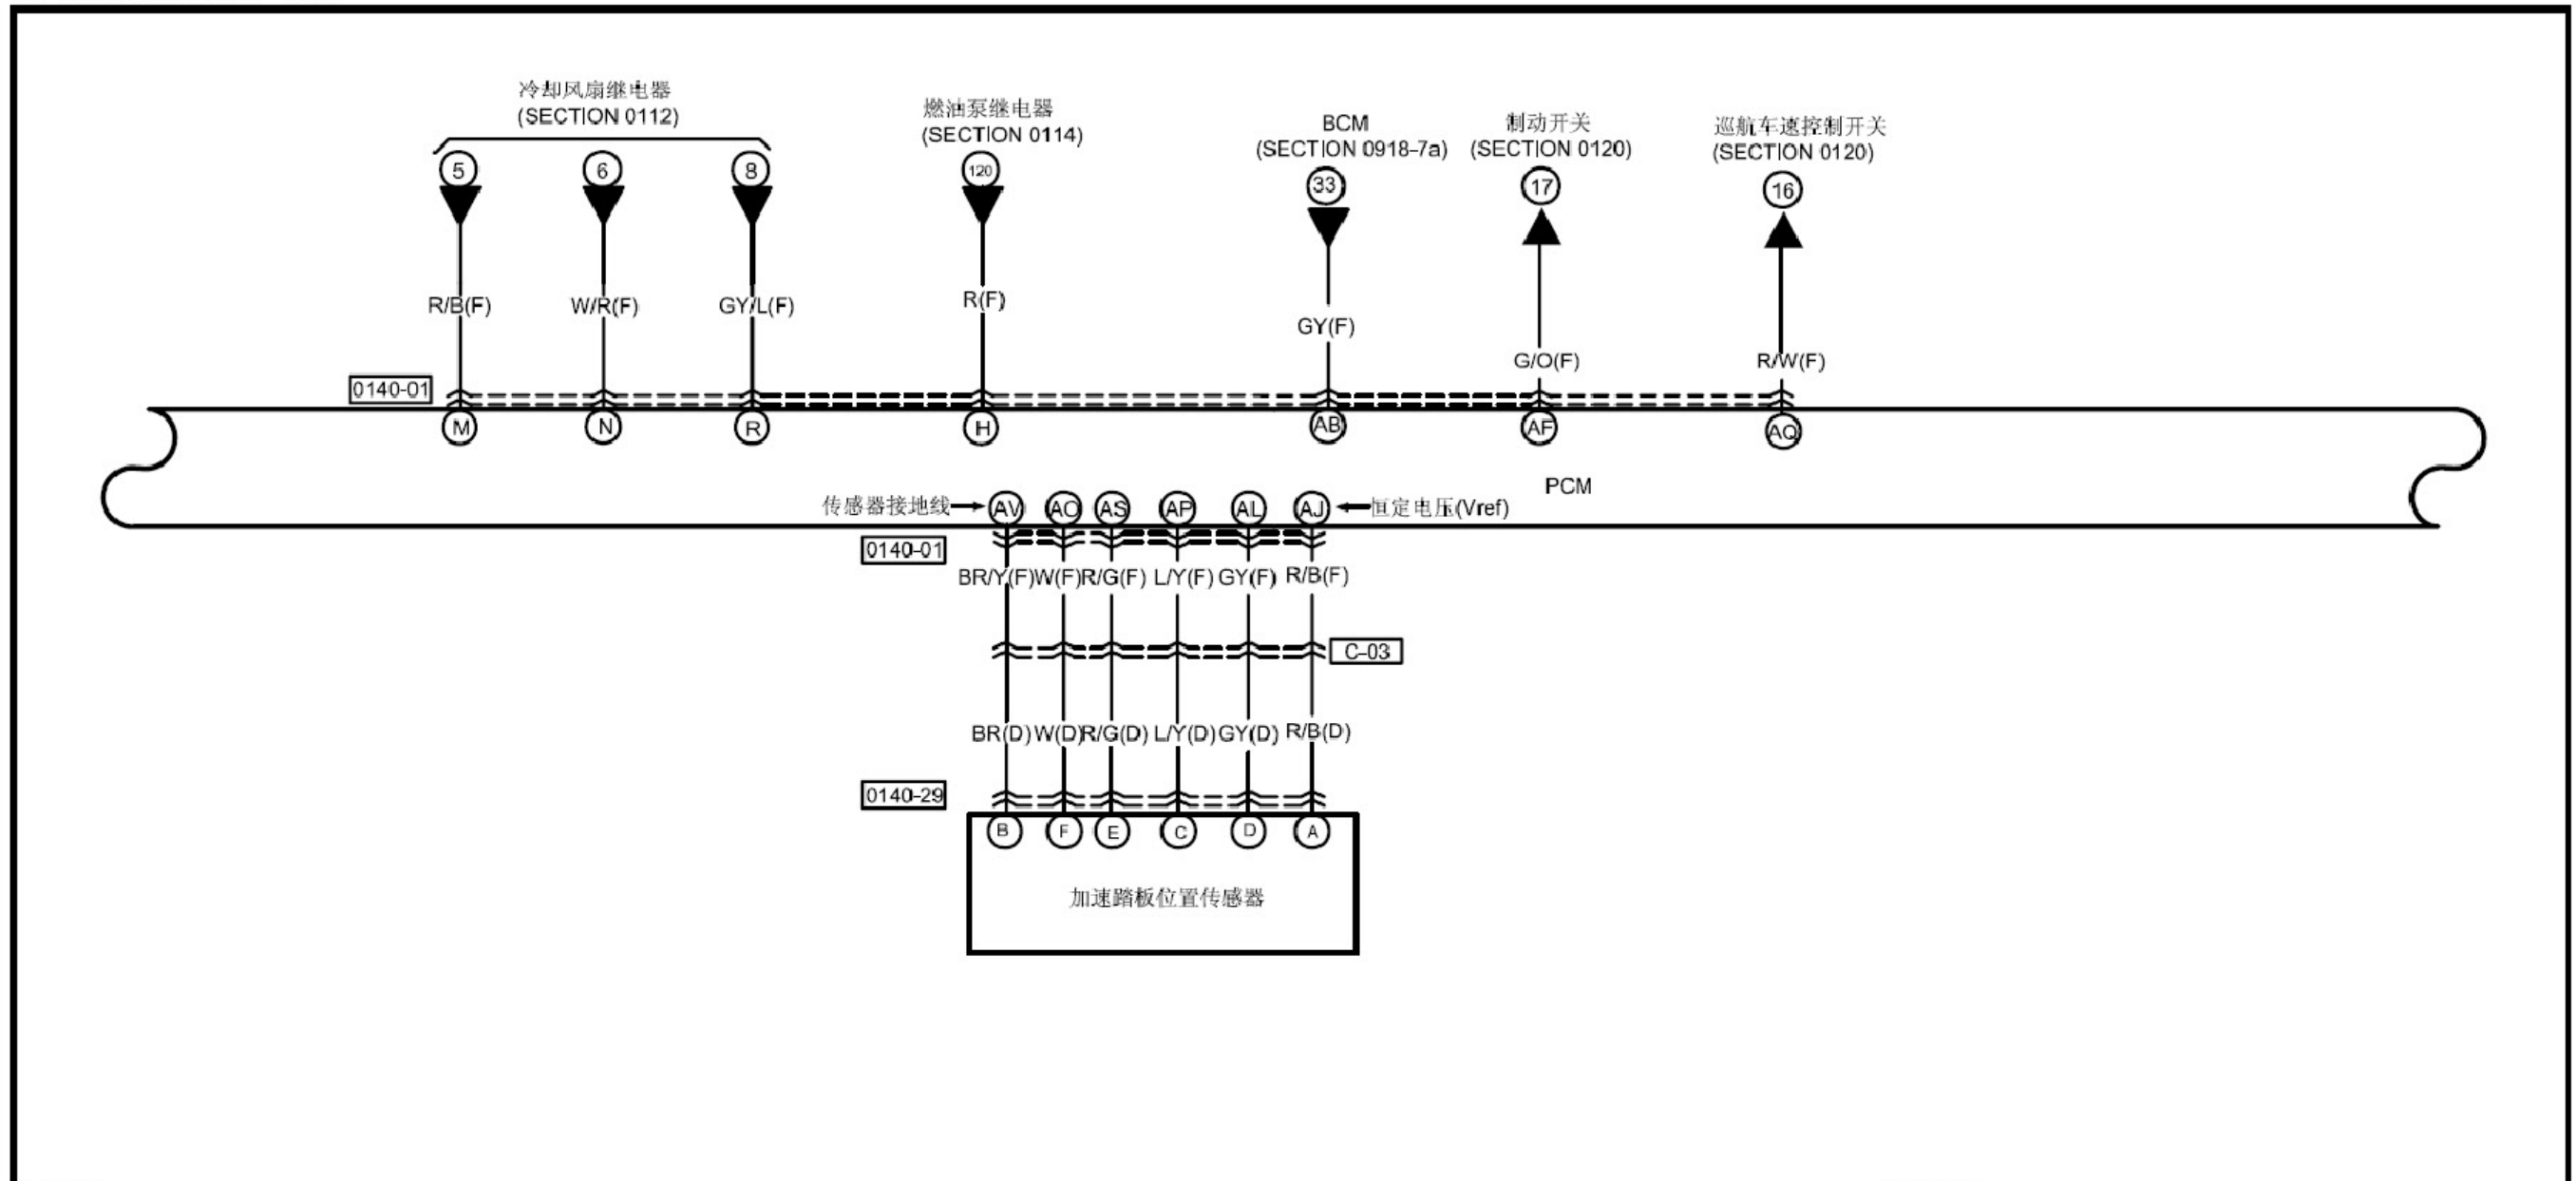

0140-01 PCM(F)

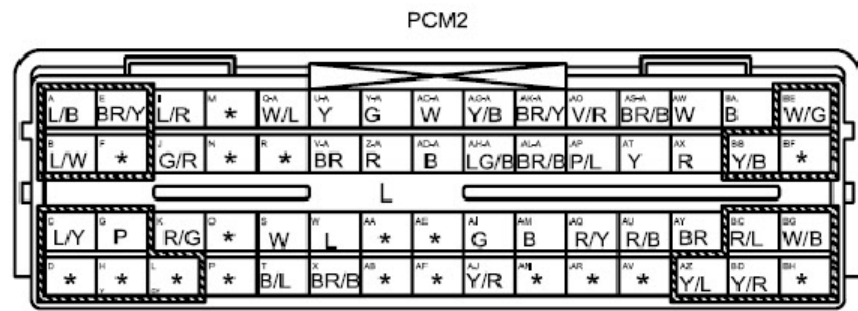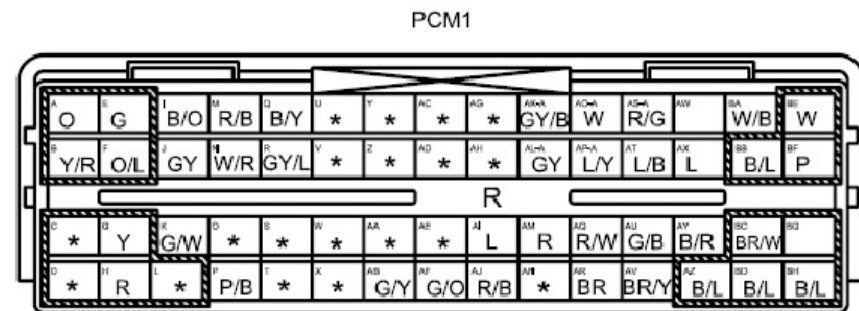

0140-29 加速踏板位置传感器 (D)

