

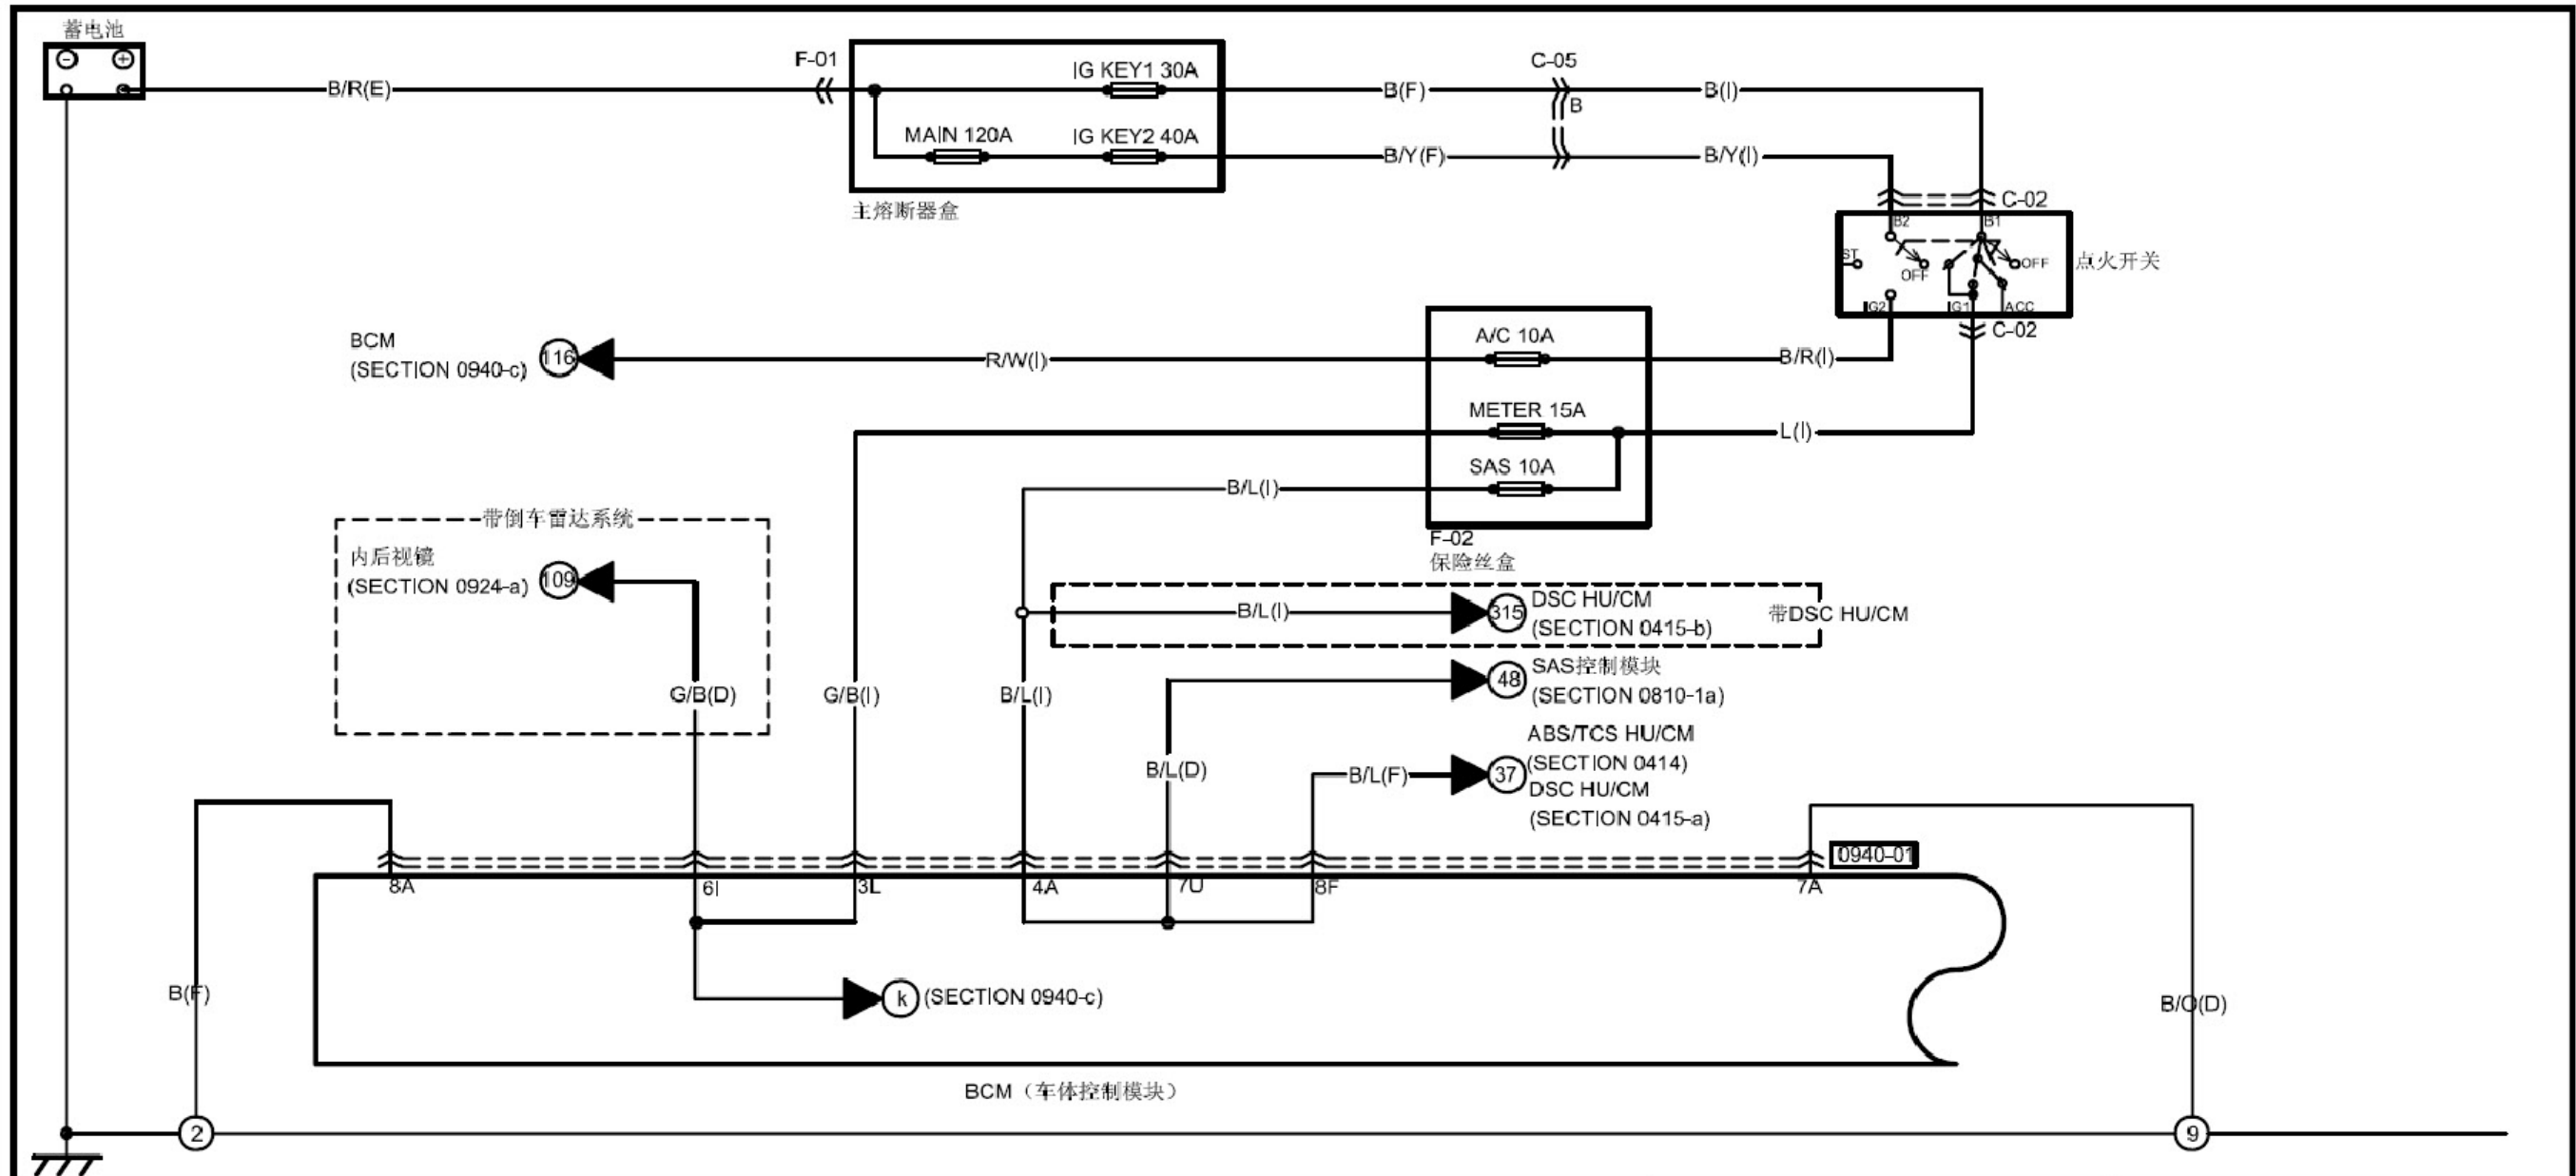
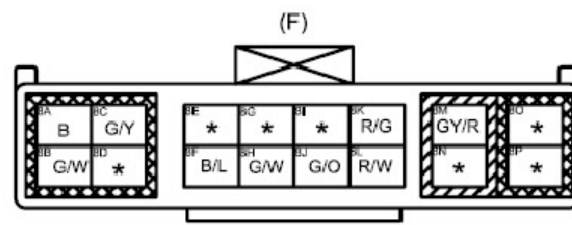
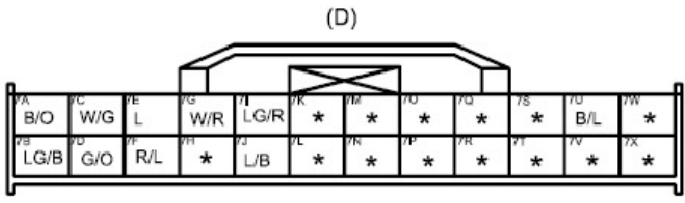
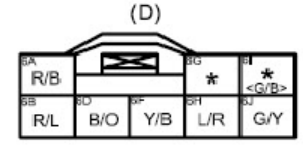



2.43 车身控制模块 (BCM)

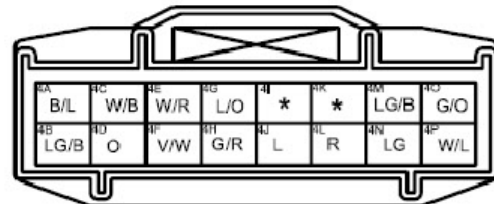


0940-01

BCM (车体控制模块)

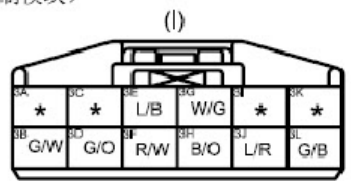







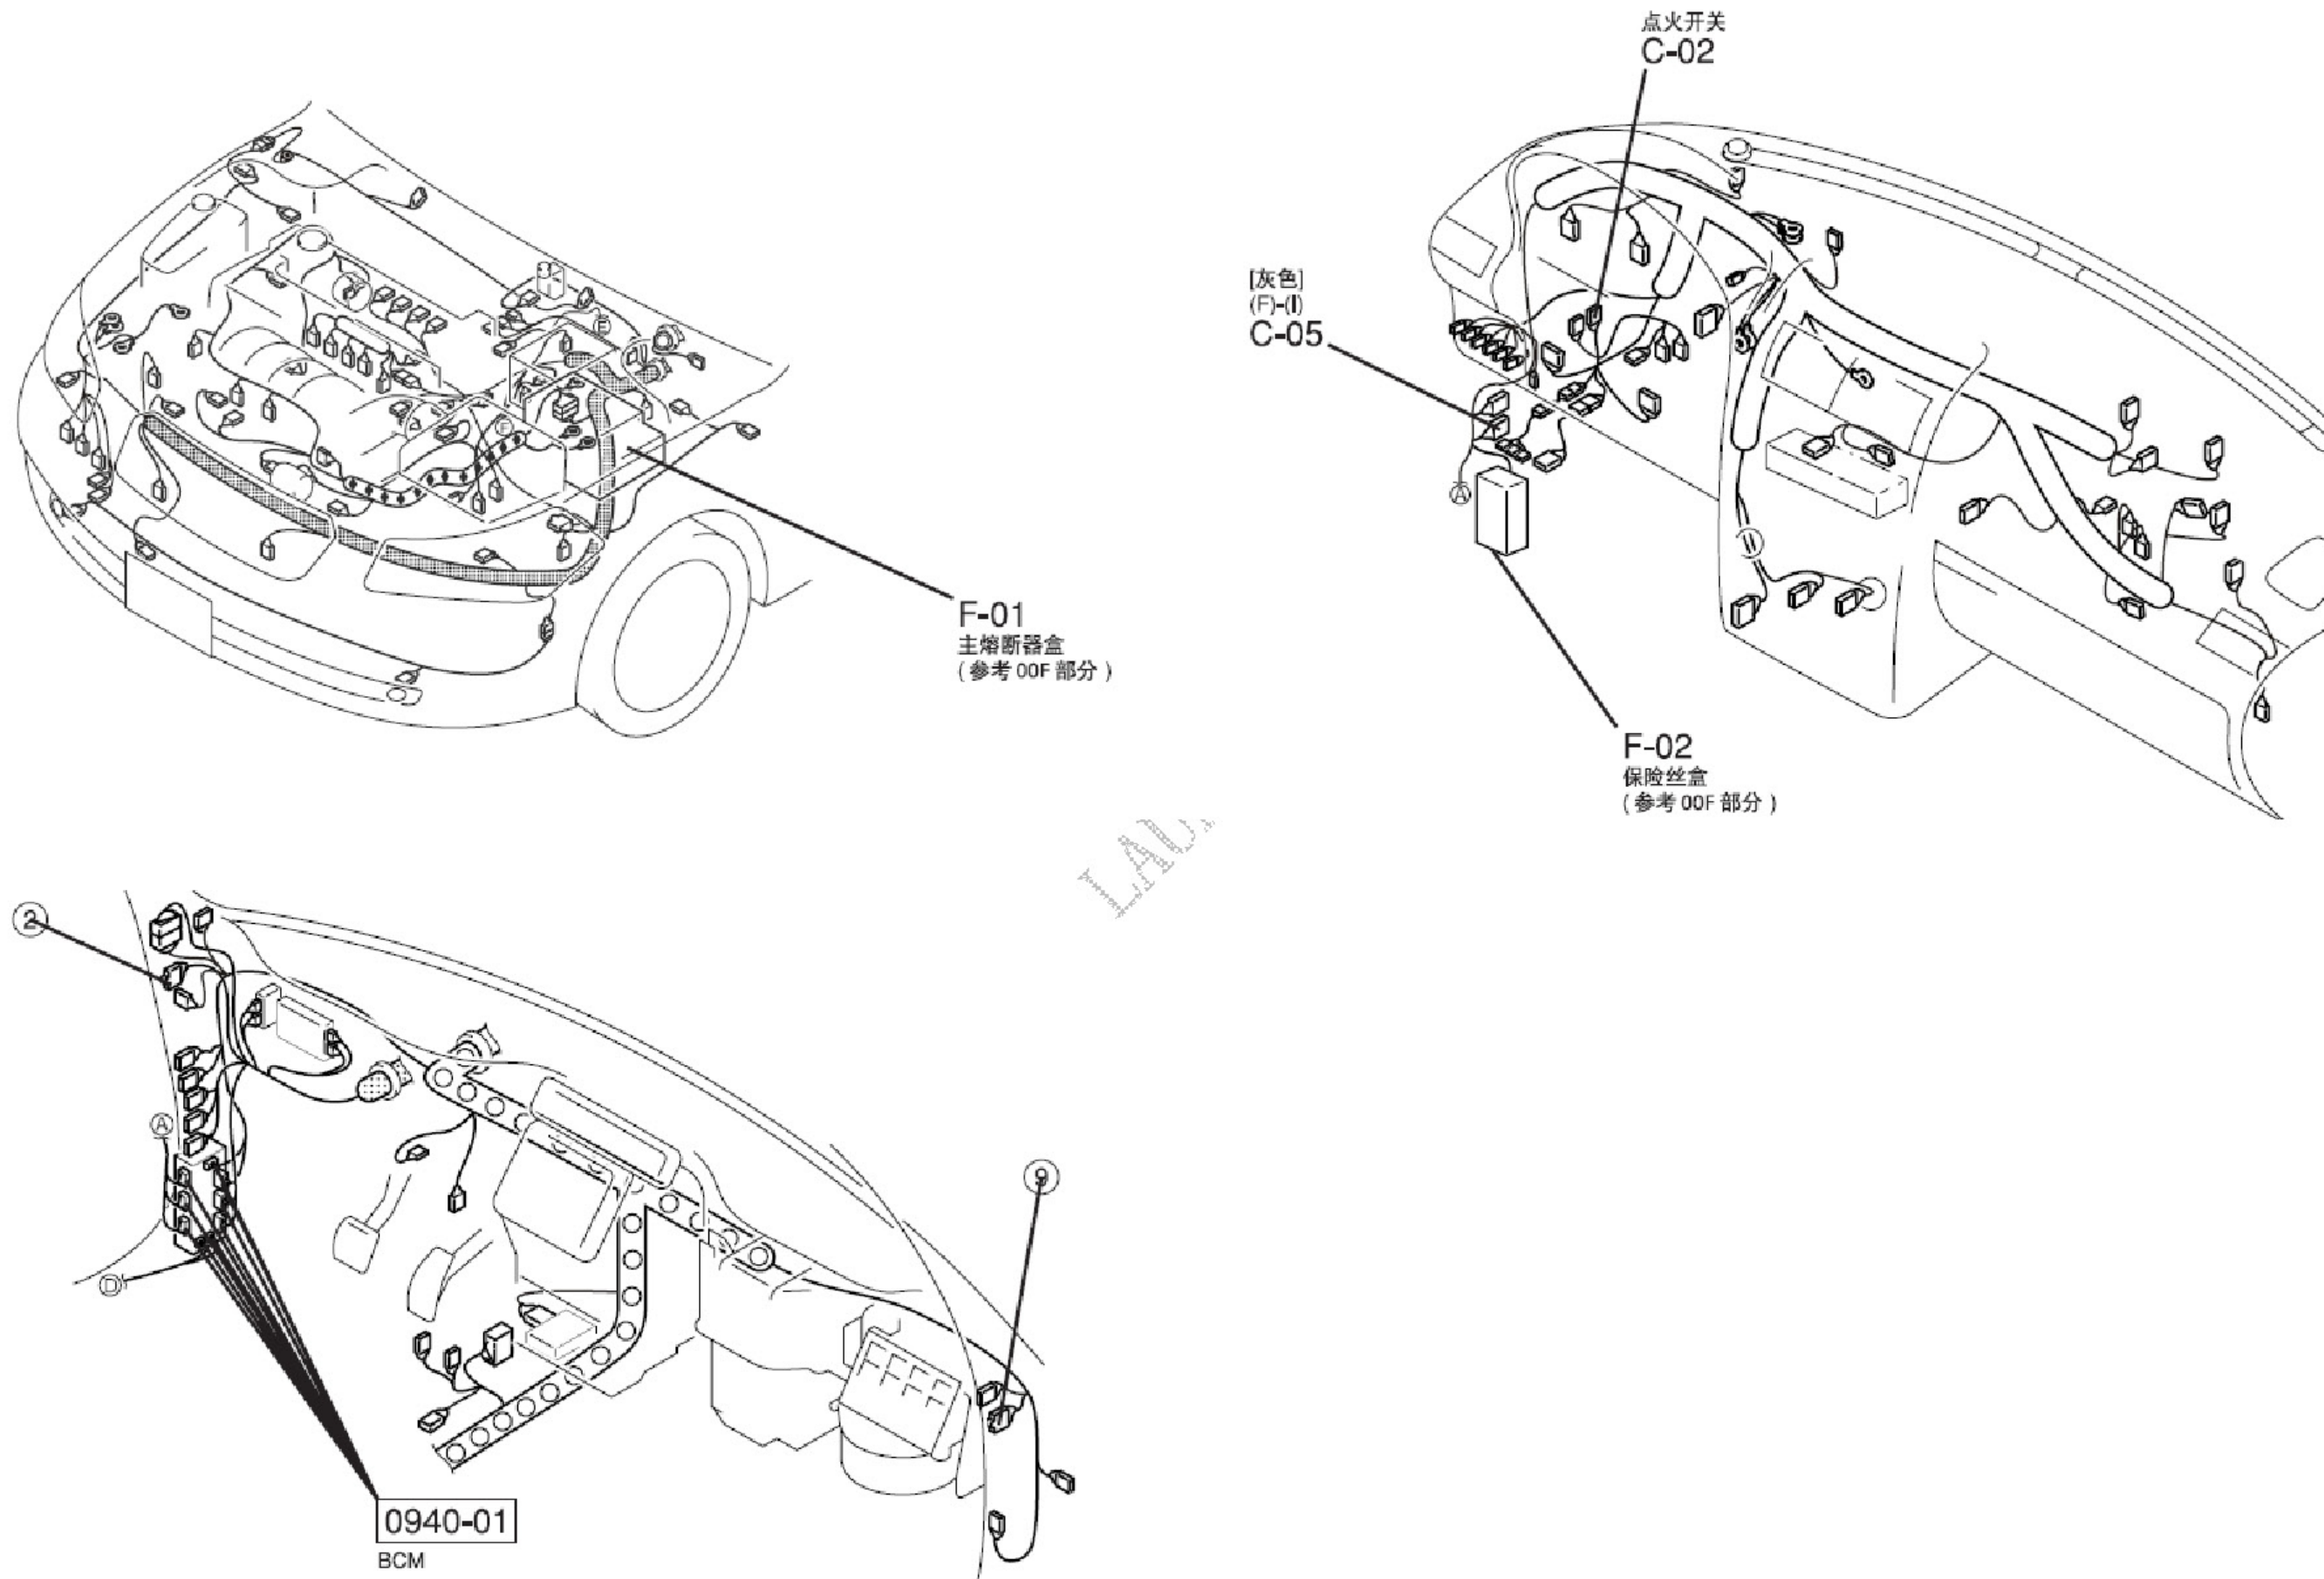





车身控制模块 (BCM) (续)

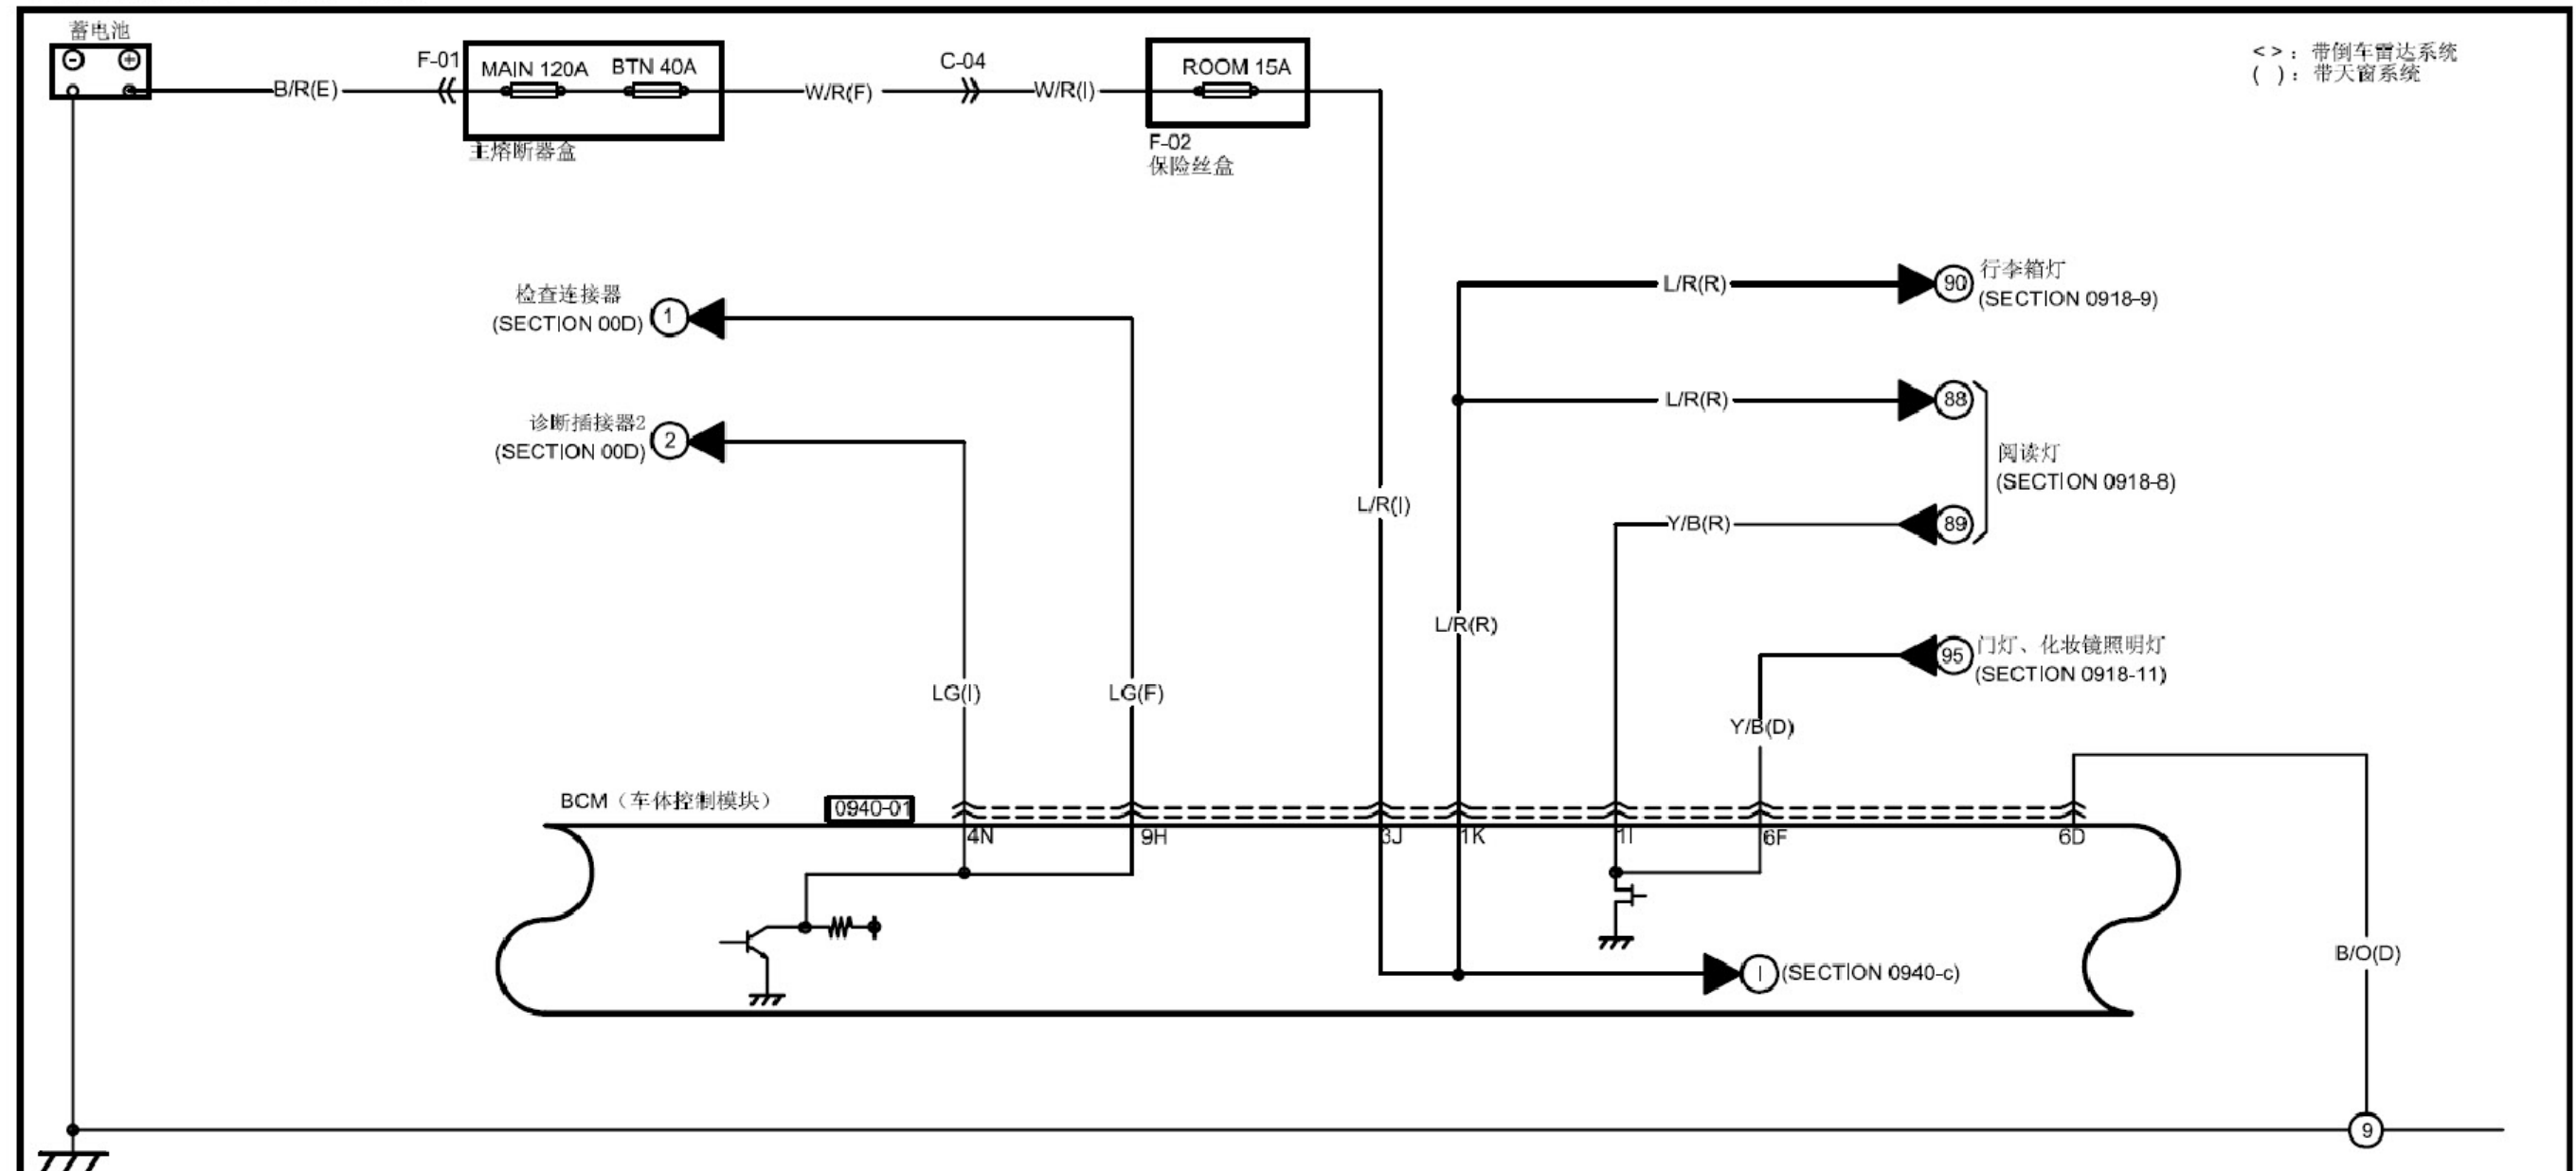

0940-01

BCM (车体控制模块)

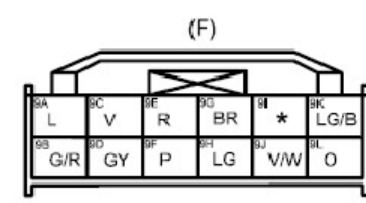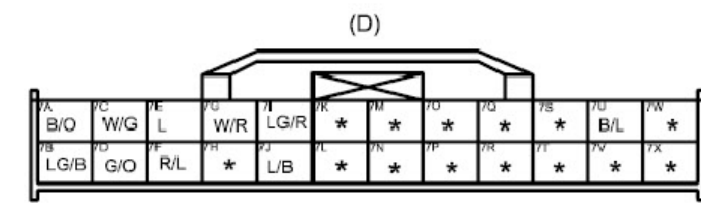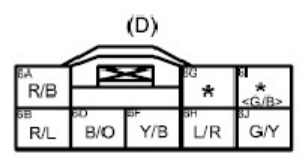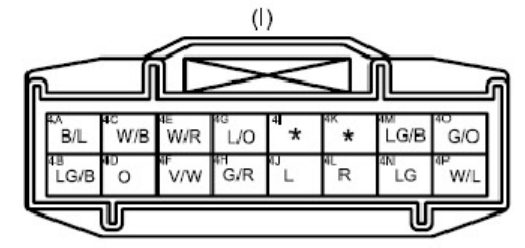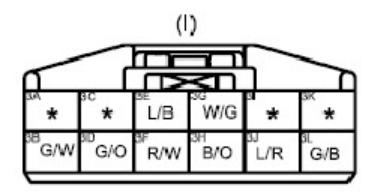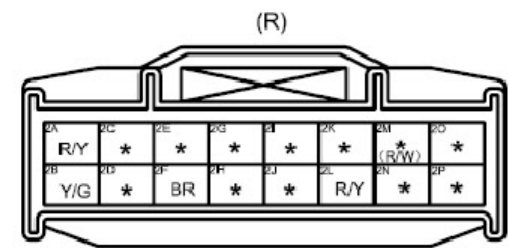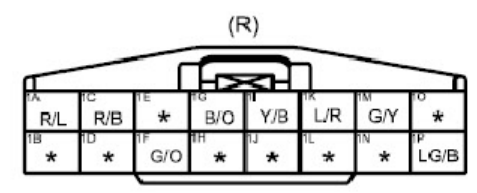

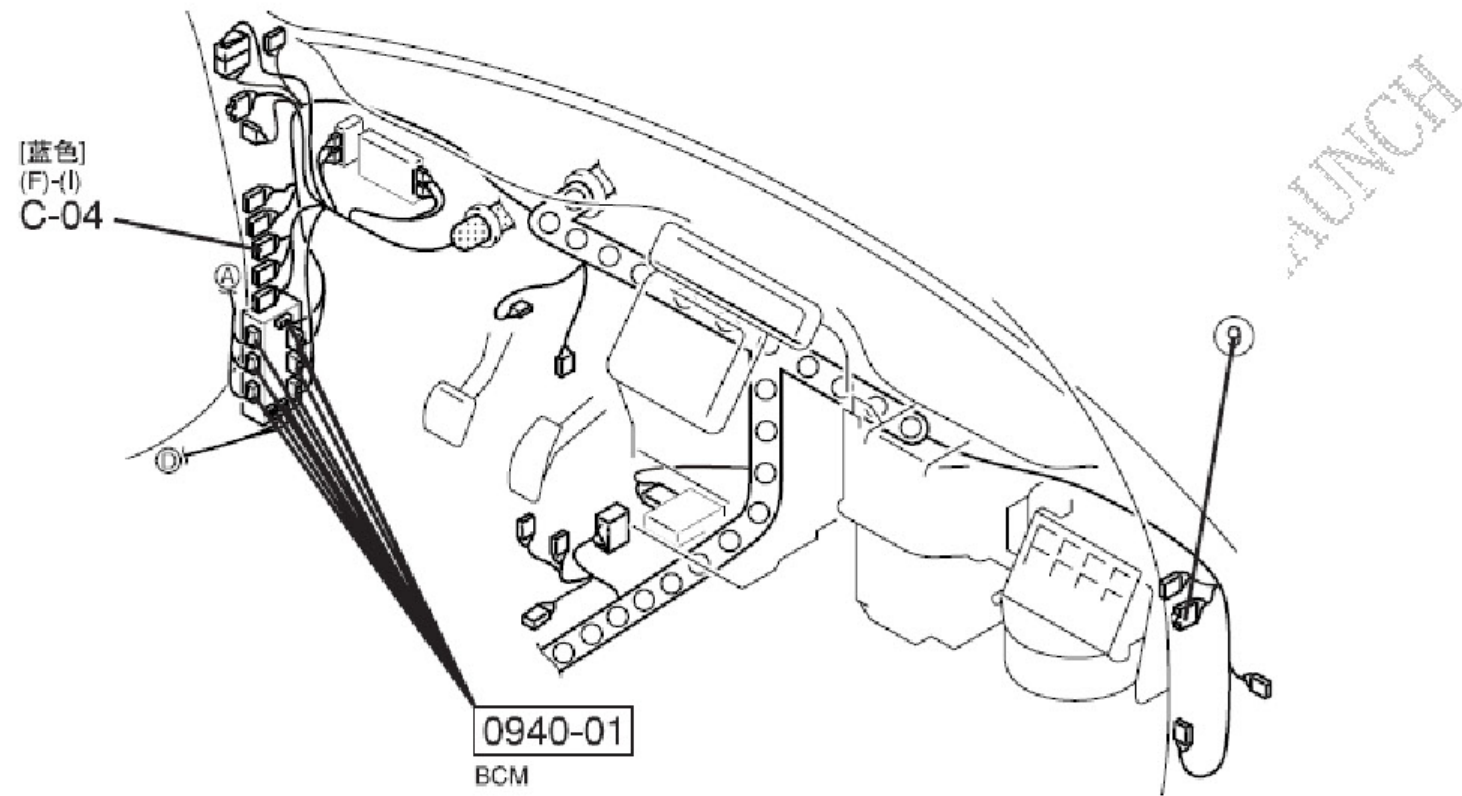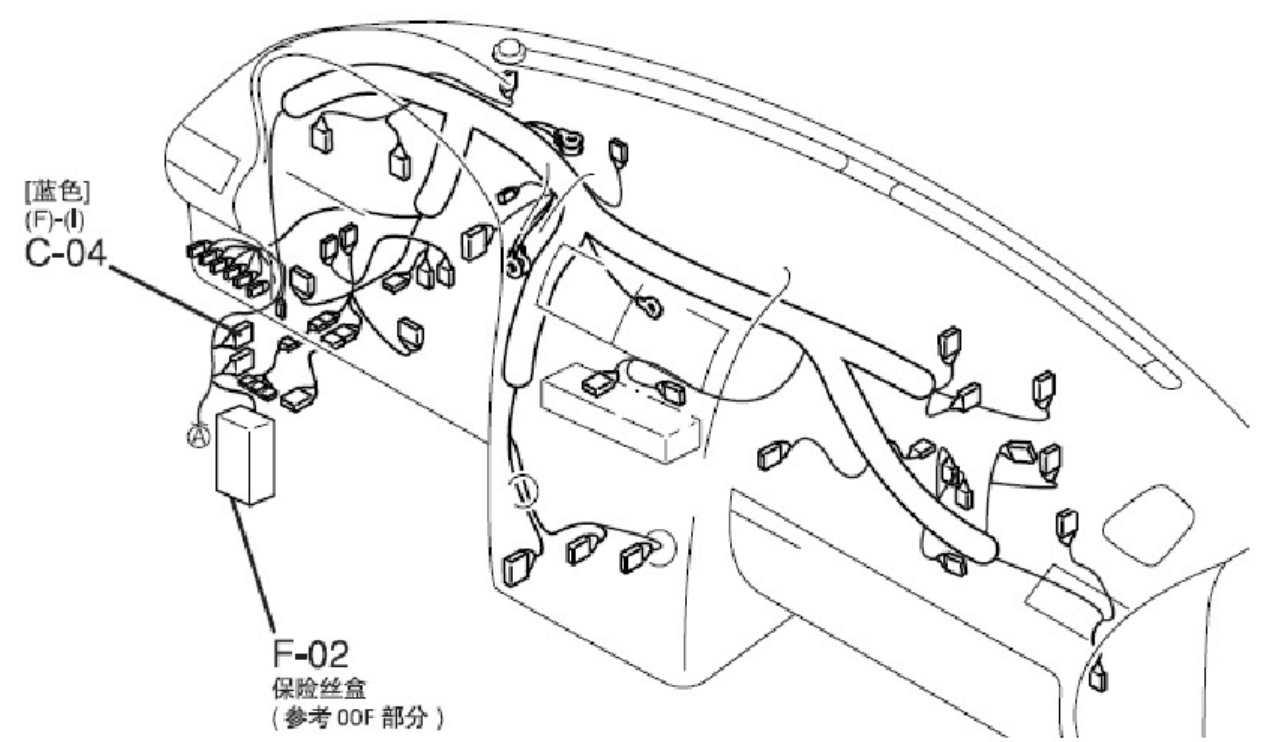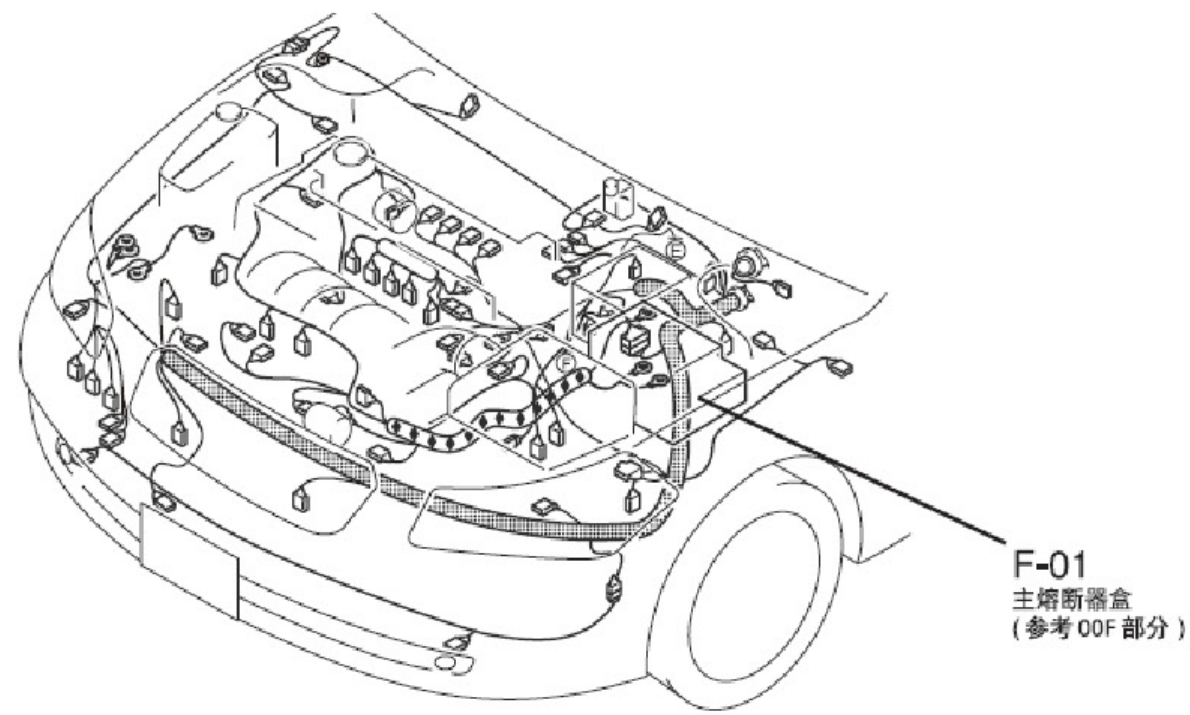

车身控制模块 (BCM) (续)

