

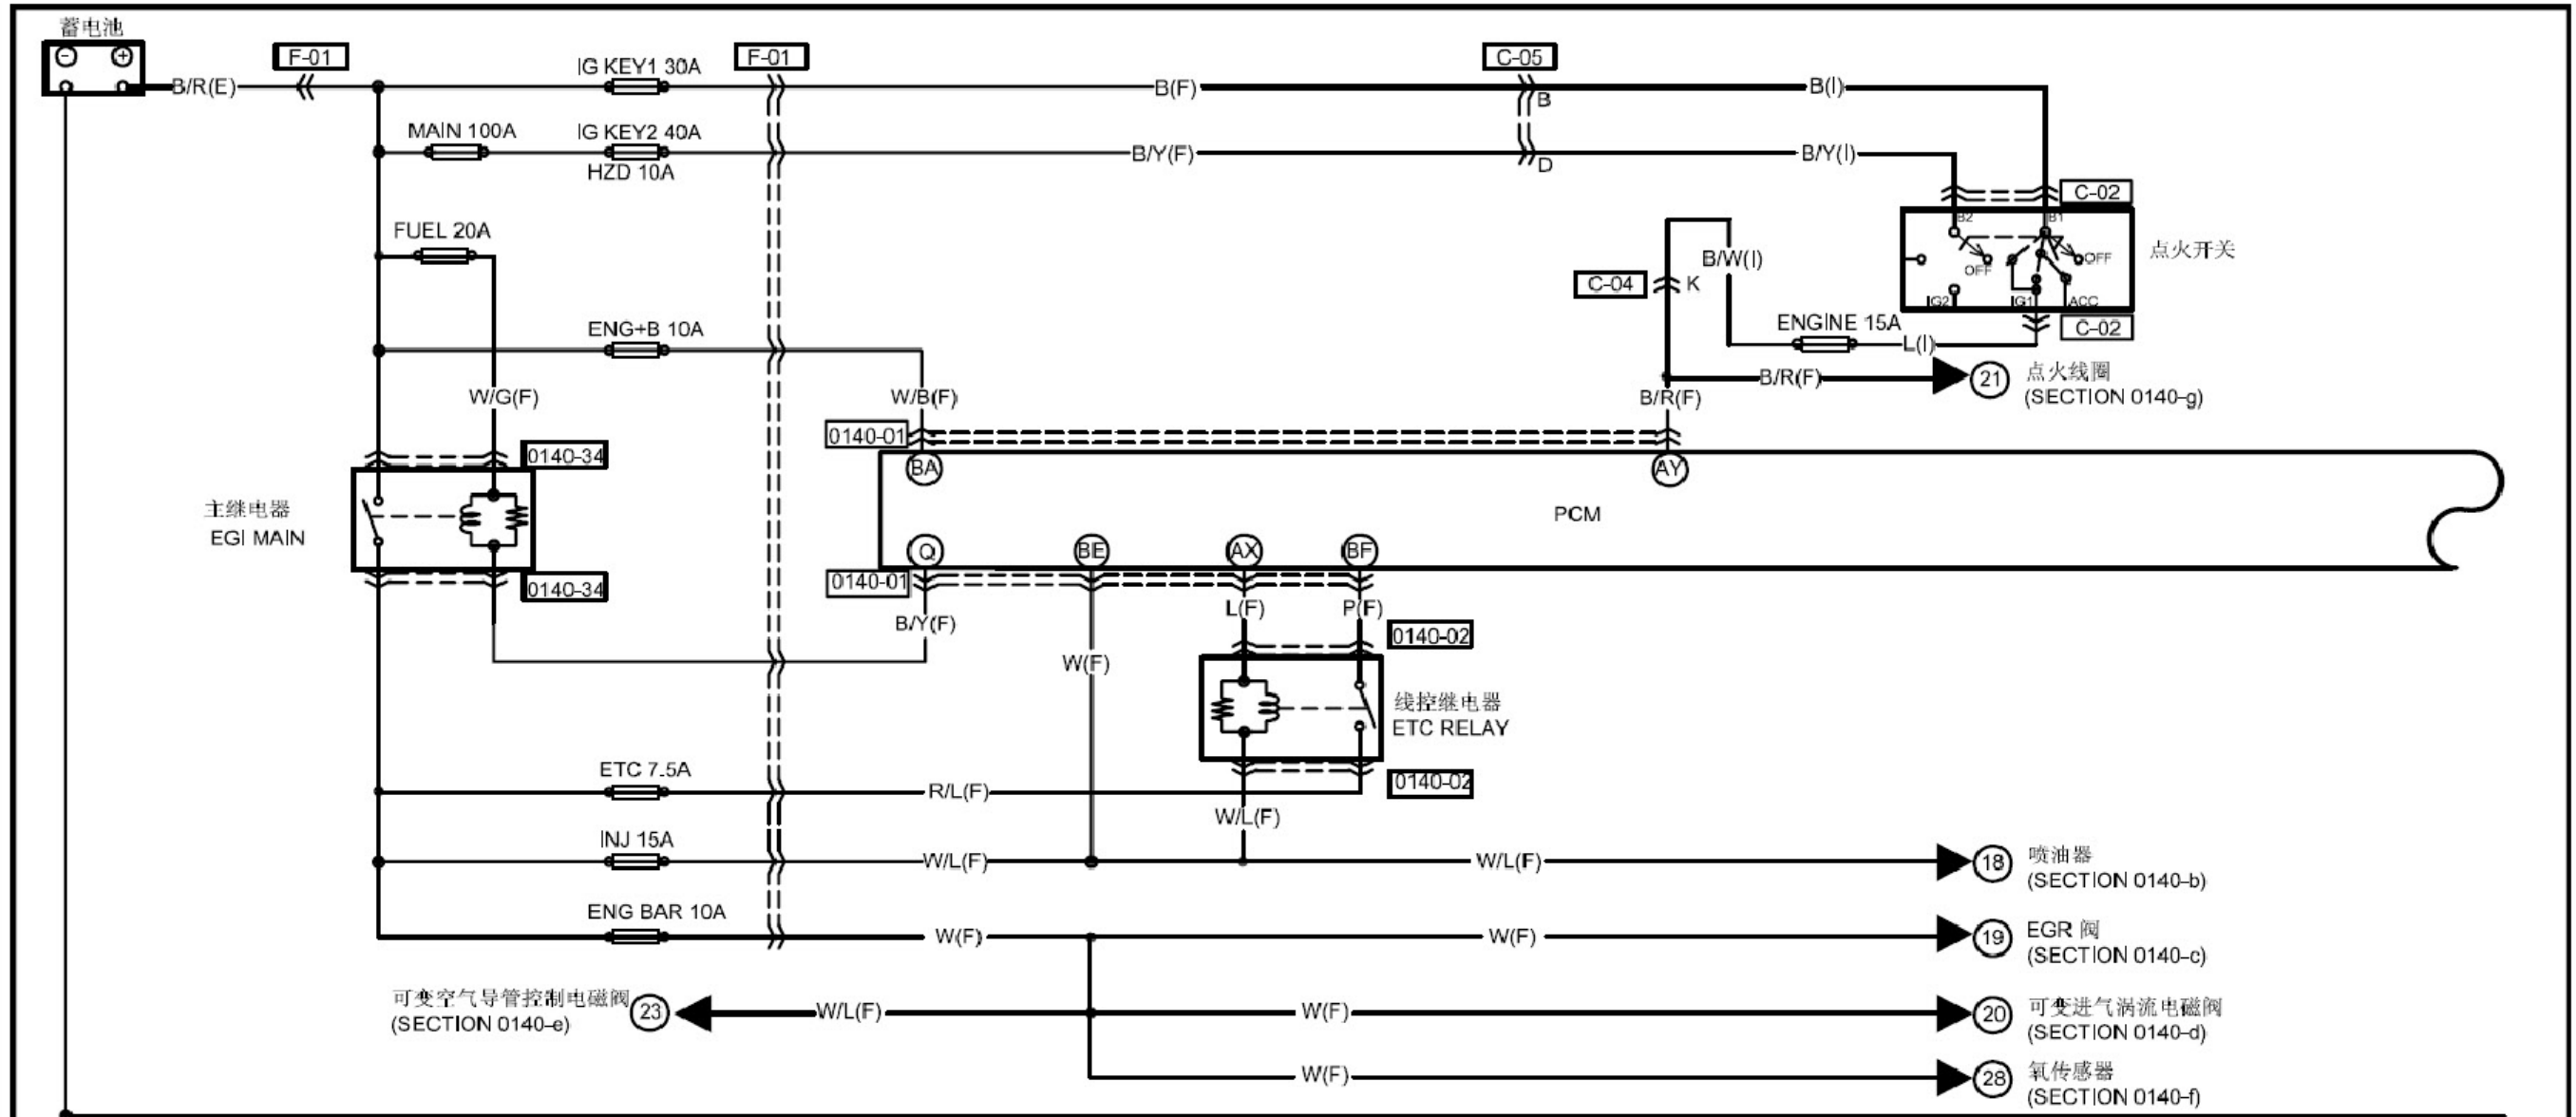


2.6 发动机控制系统

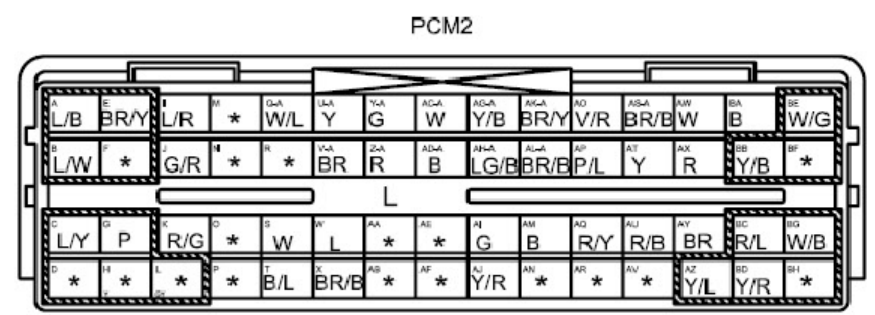


777


0140-01
PCM(F)

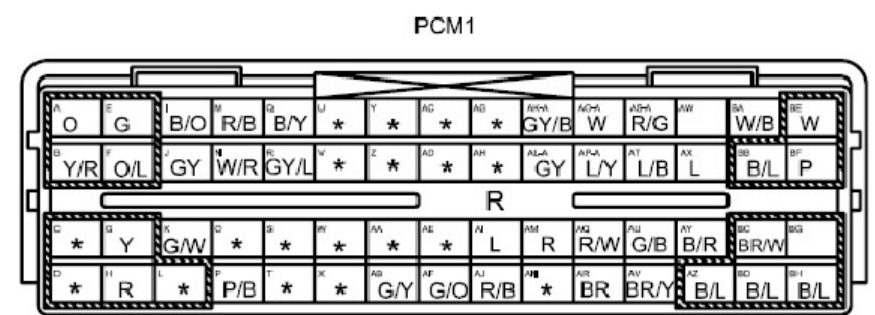

0140-02

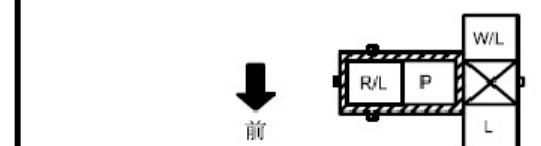

0140-34

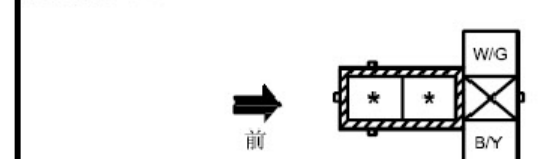

F-01

主熔断器盒


0140-02

线控继电器


0140-34


主继电器

(参考00F部分)

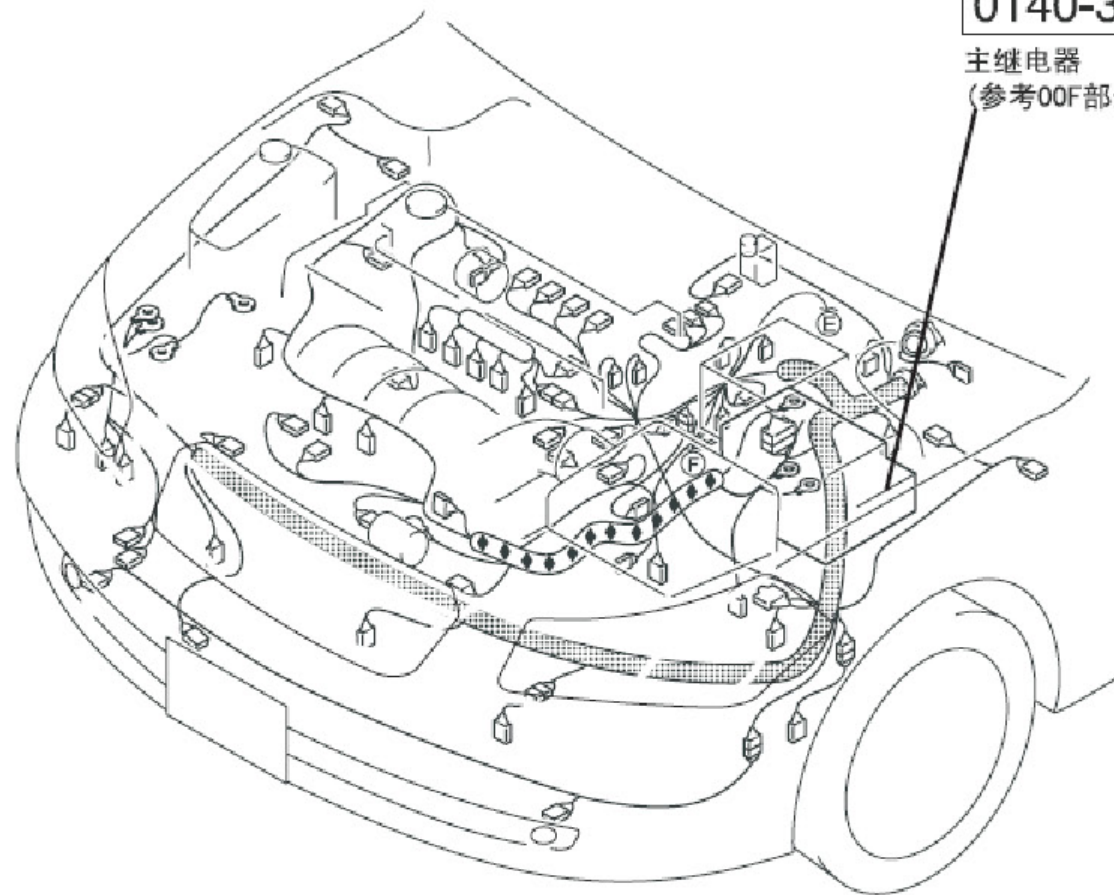


LAUNCH


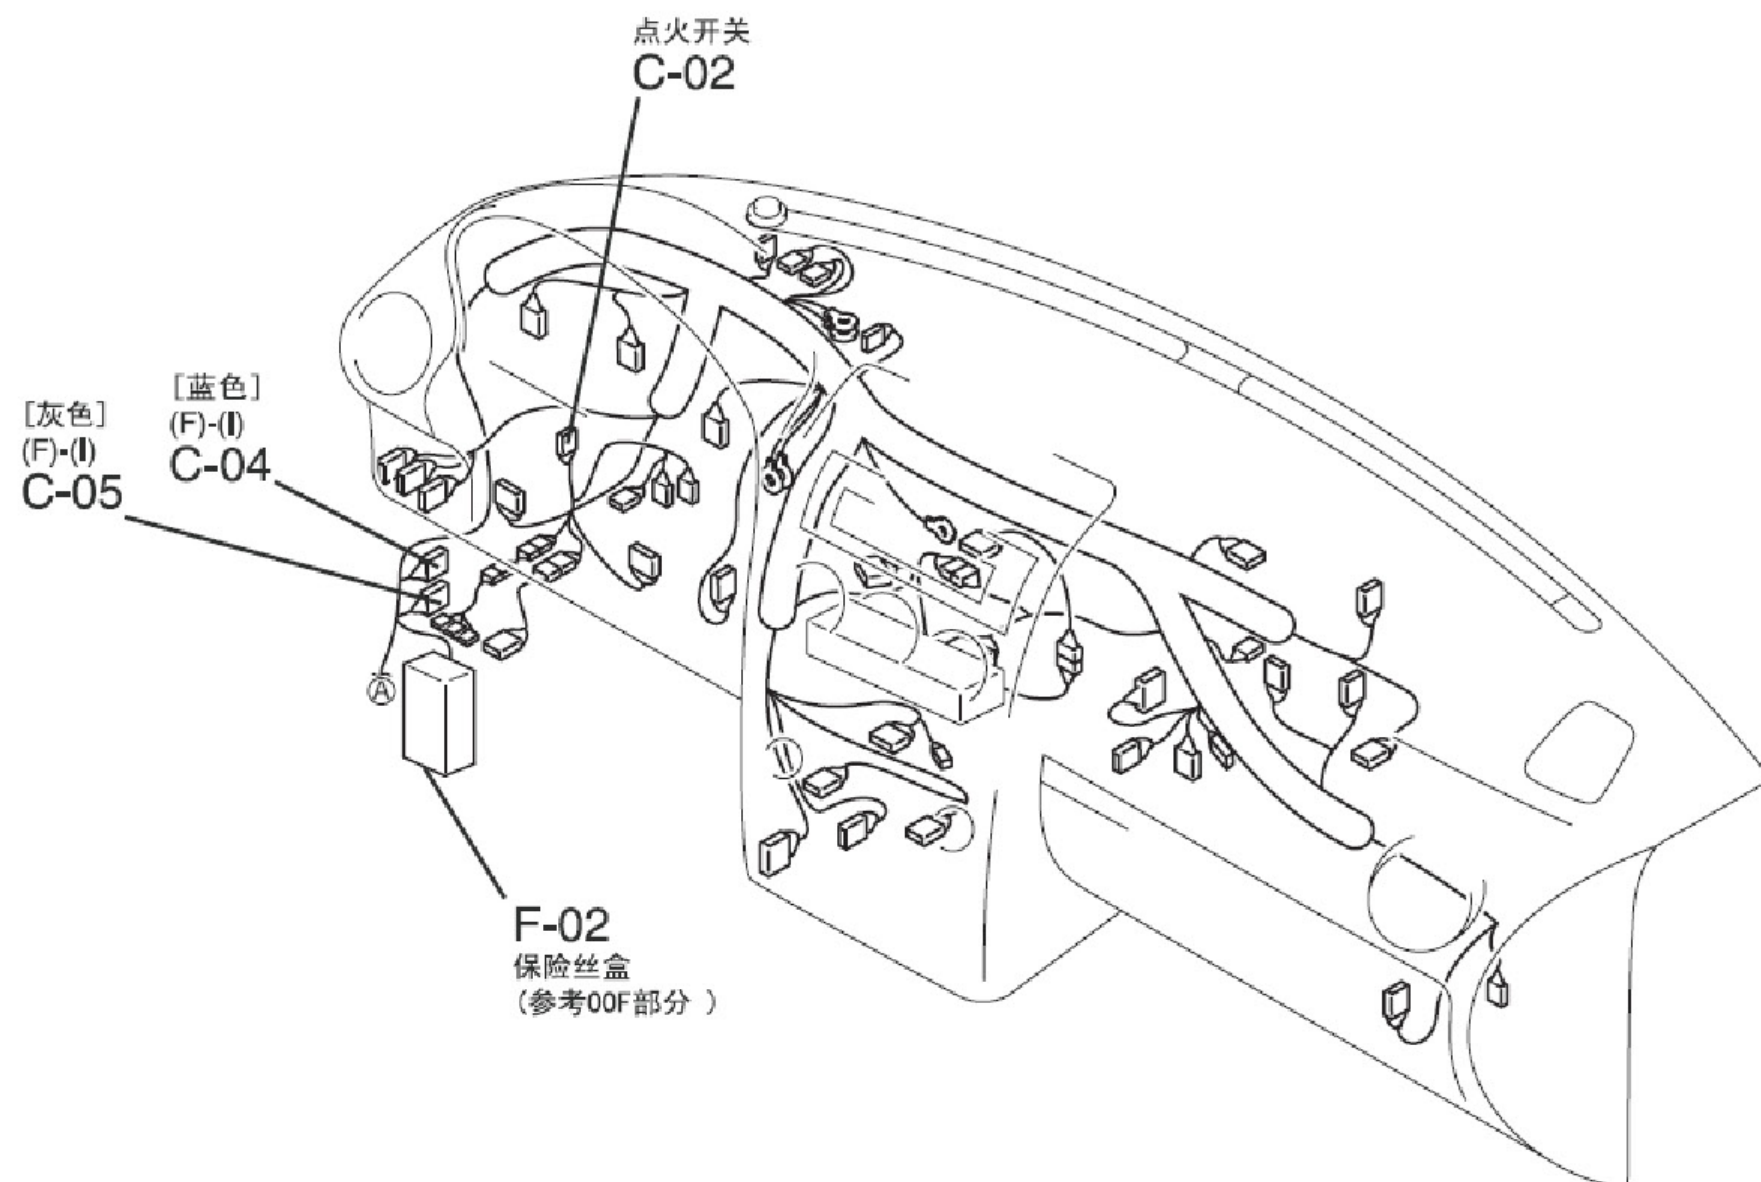


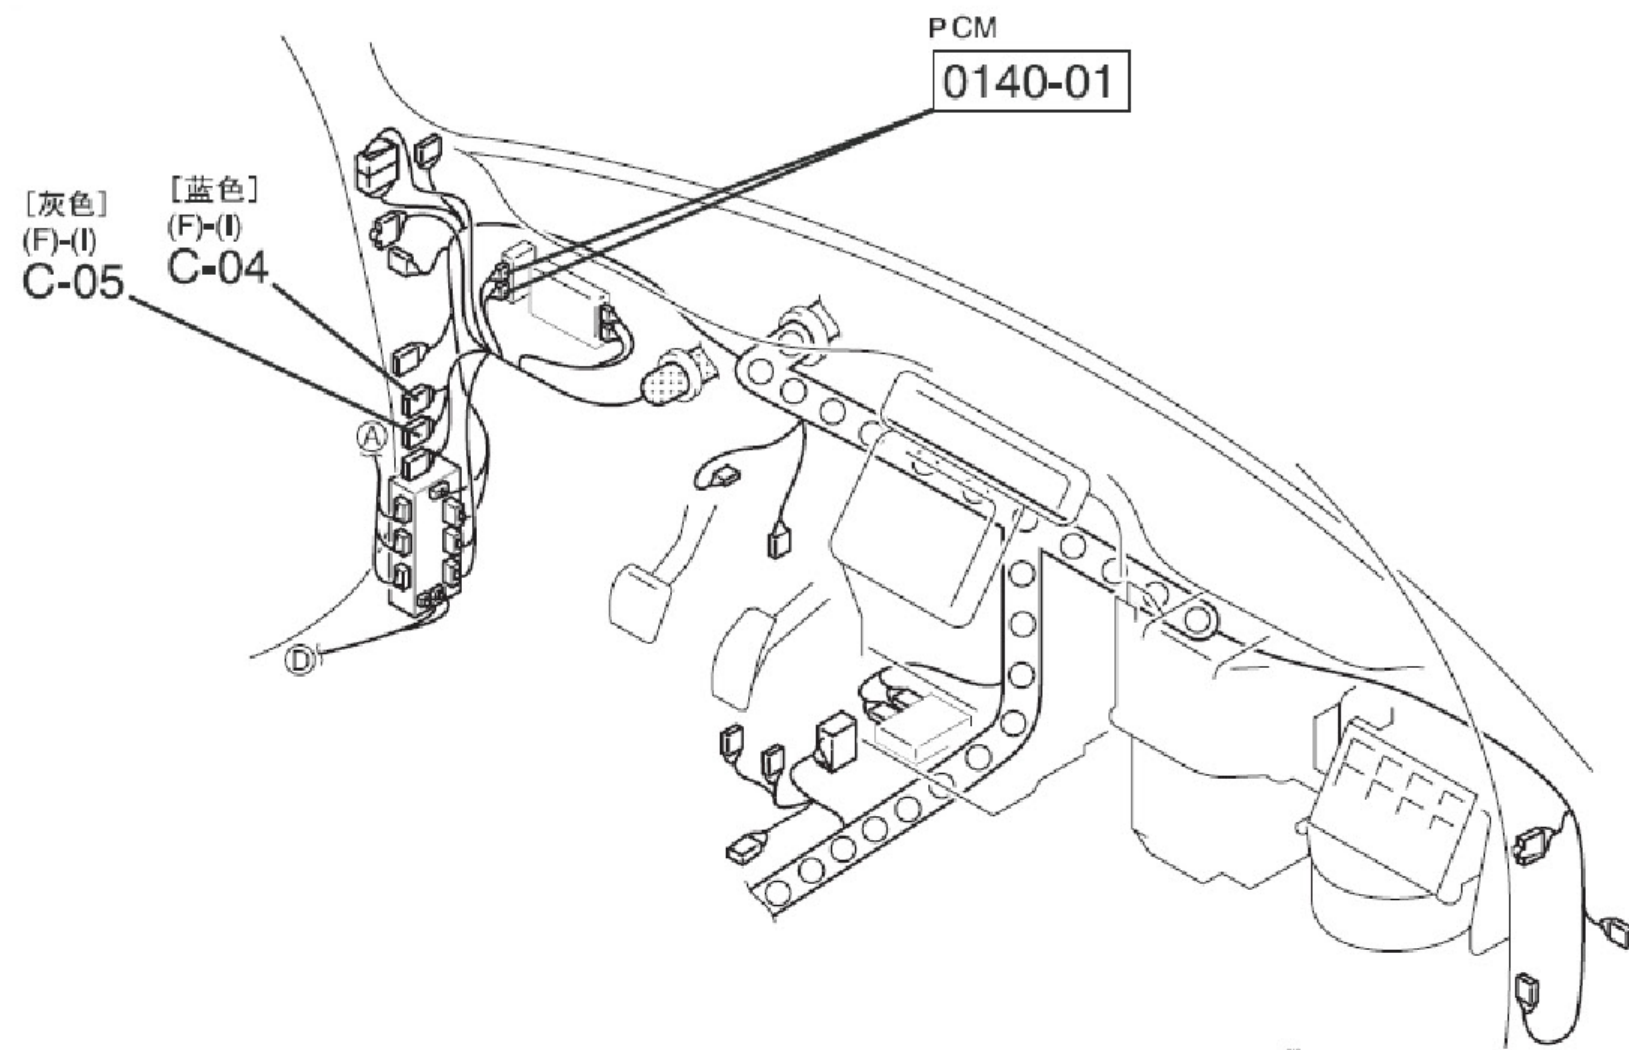

发动机控制系统 (续)

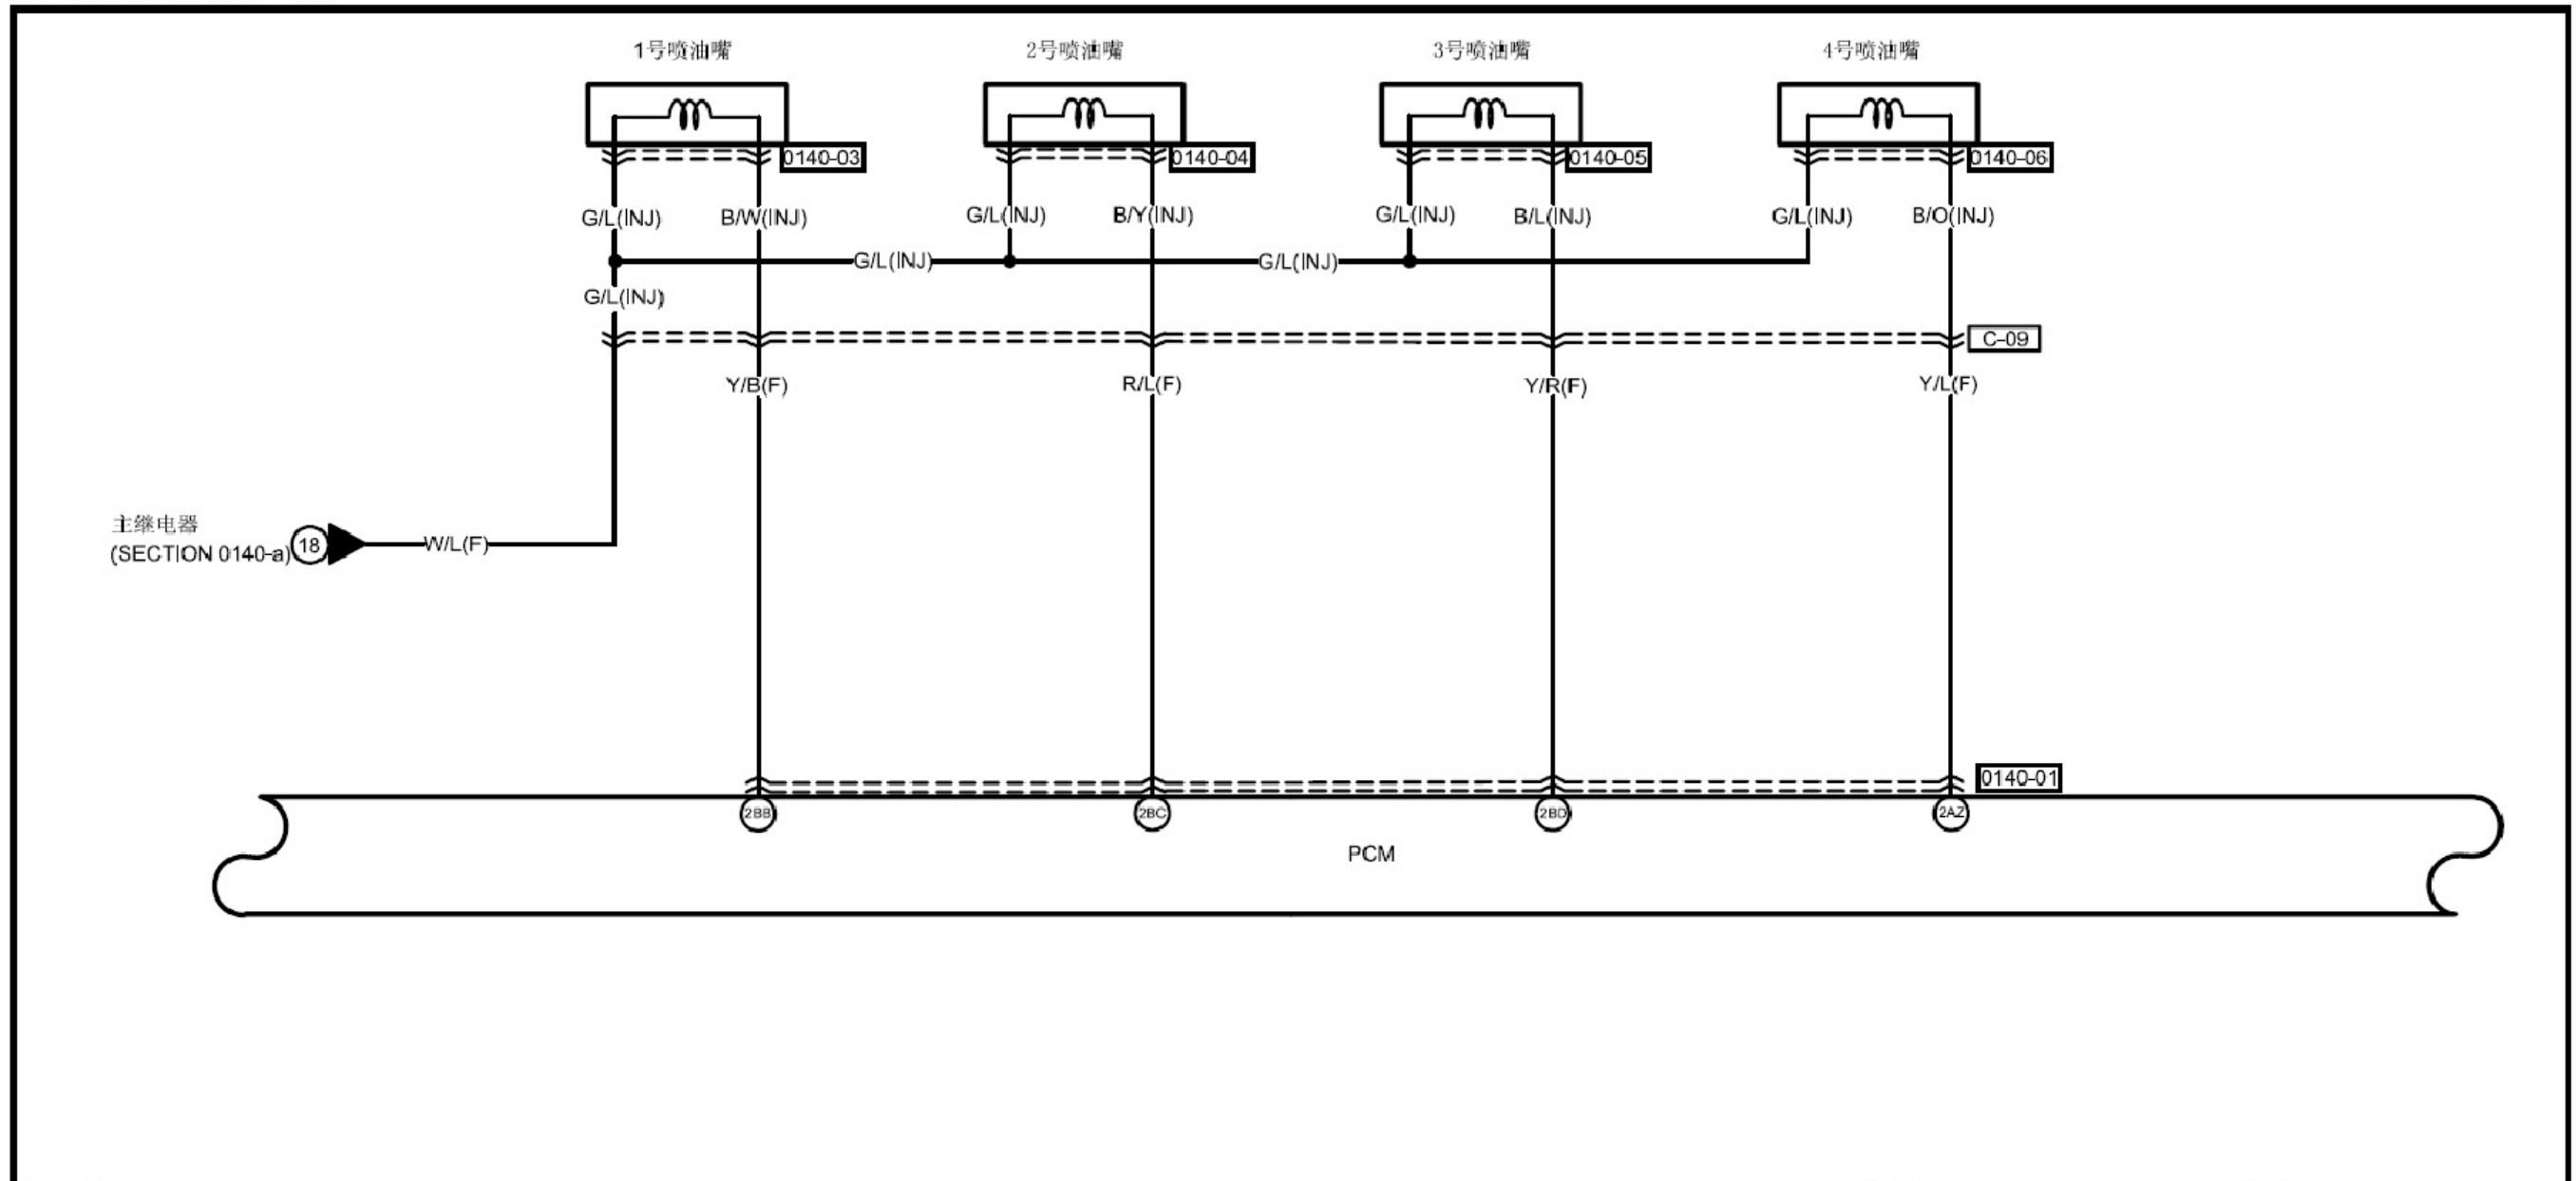

0140-01 PCM(F)

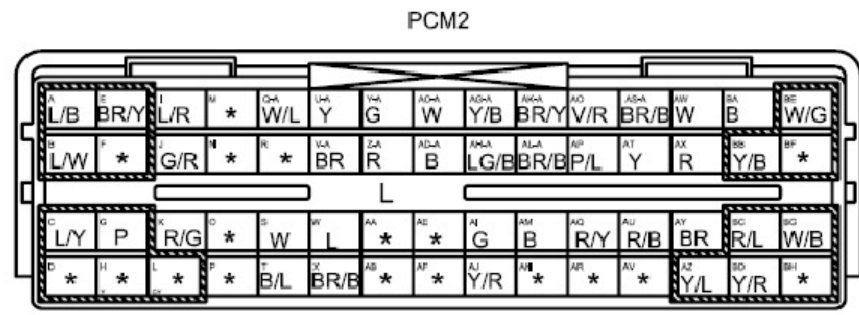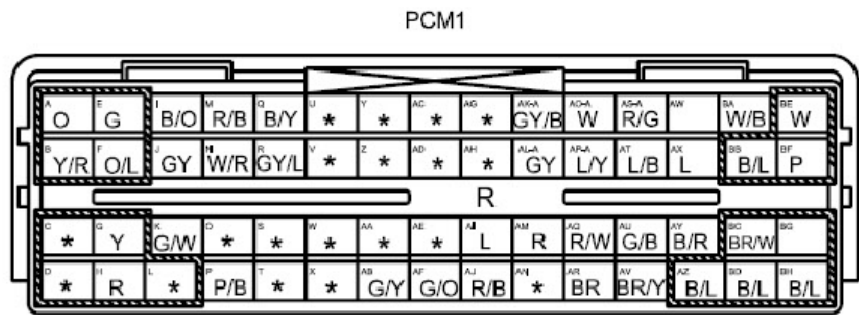

0140-03 1号喷嘴 (INJ)



0140-04 2号喷嘴 (INJ)



0140-05 3号喷嘴 (INJ)



0140-06 4号喷嘴 (INJ)



