



2.16 座椅

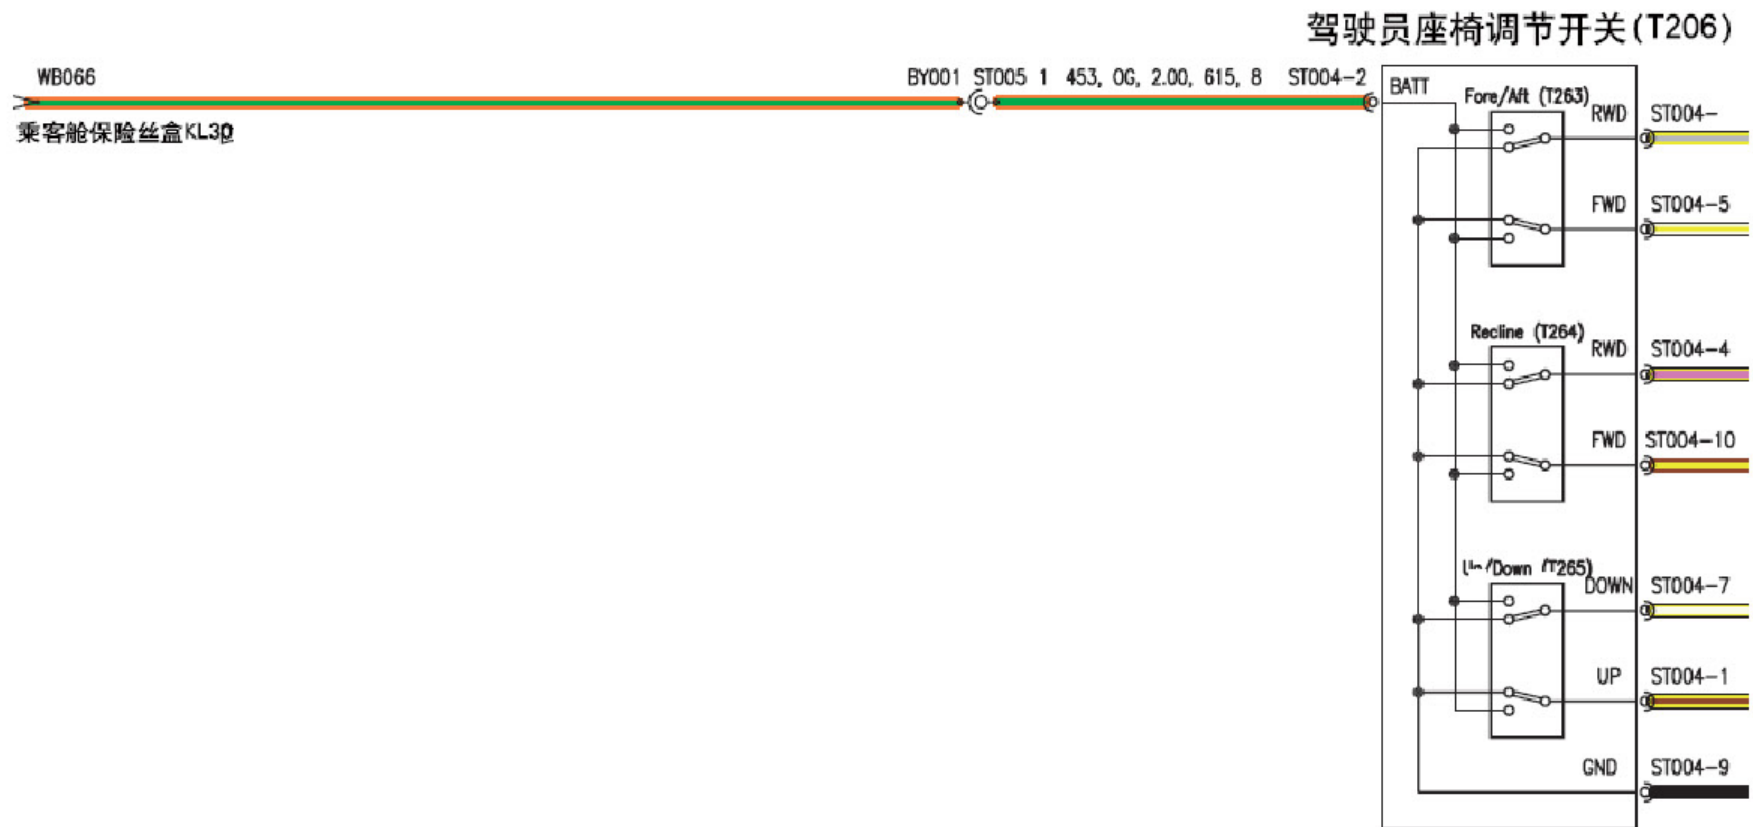

车身控制单元(T188)

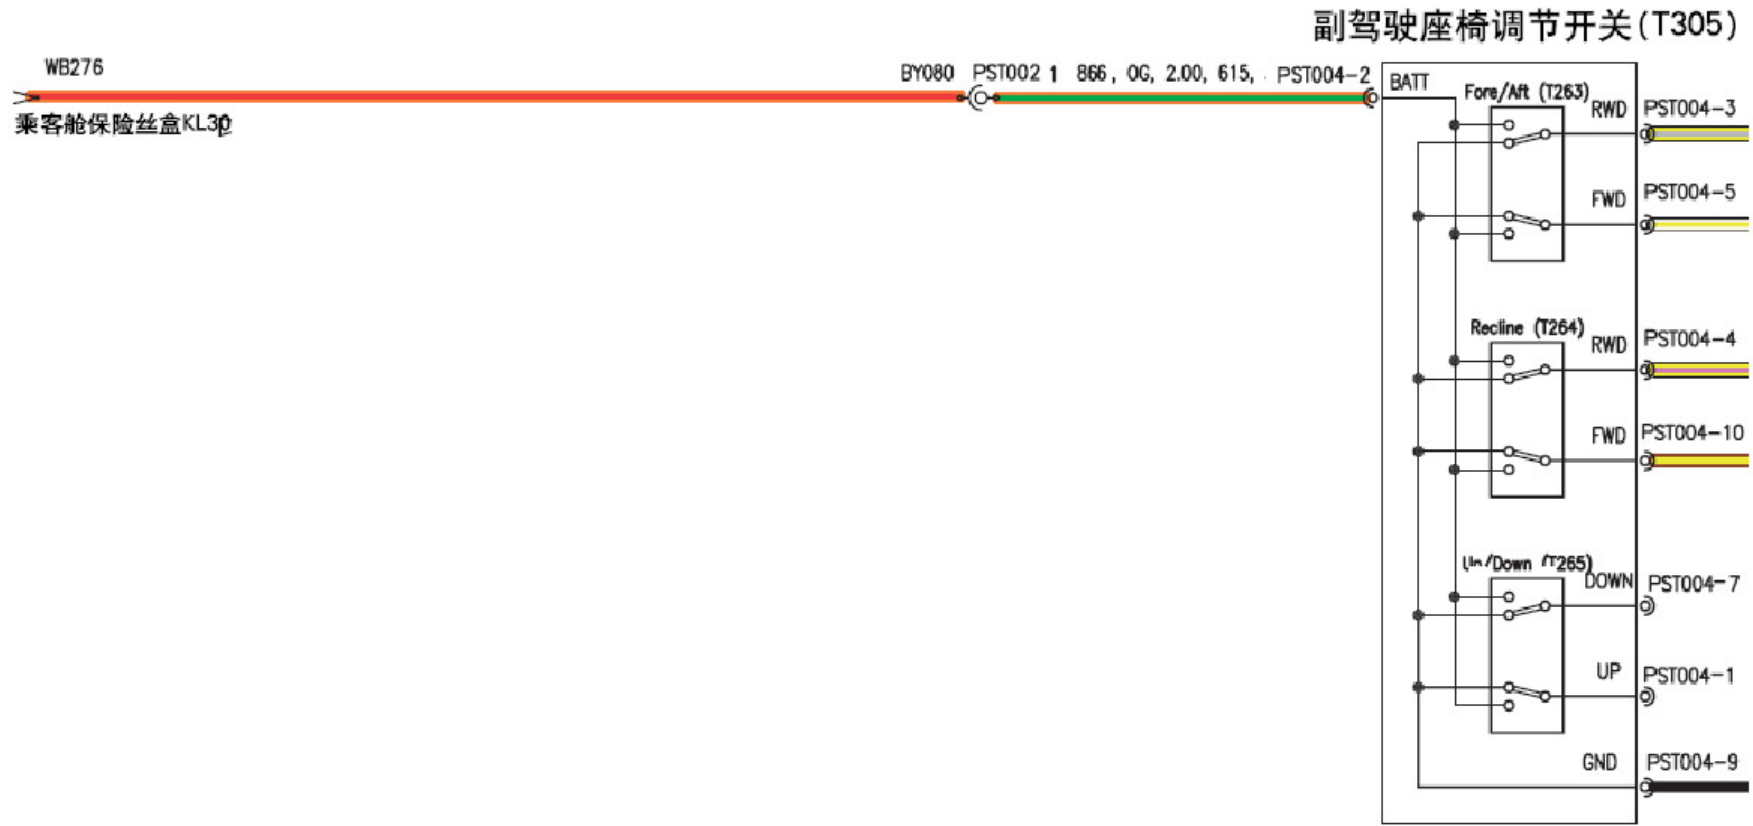

494, PB, 0.50, 1575, ALL


BY062-24

BYS21

538, PB, 0.50, 3205, ALL

BY058 1

 
驾驶员座椅安全带未系开关(T210)



818, PB, 0.50, 475, 7

BY077 1

 
副驾驶员座椅座垫感应开关



819, PG, 0.50, 120, 7


BY076 1

 副驾驶员座椅安全带未系开关




座椅 (接上页) (续)


副驾驶座椅前后调节电机(T300)

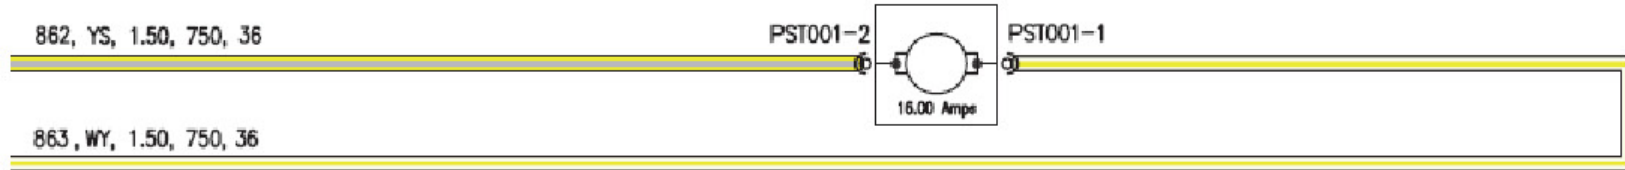


副驾驶座椅靠背电机(T301)

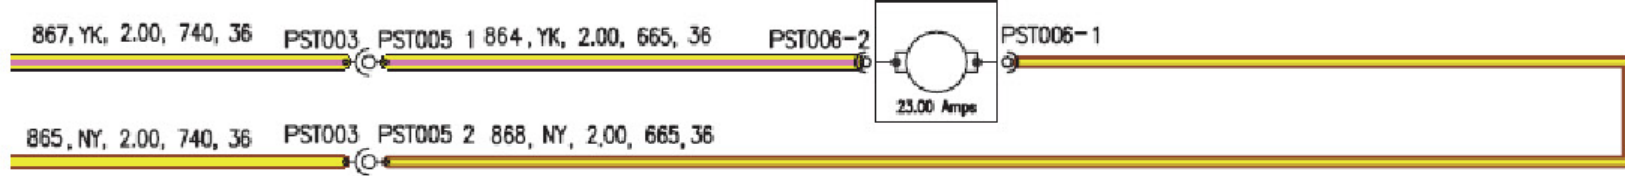

驾驶员座椅前后调节电机(T207)

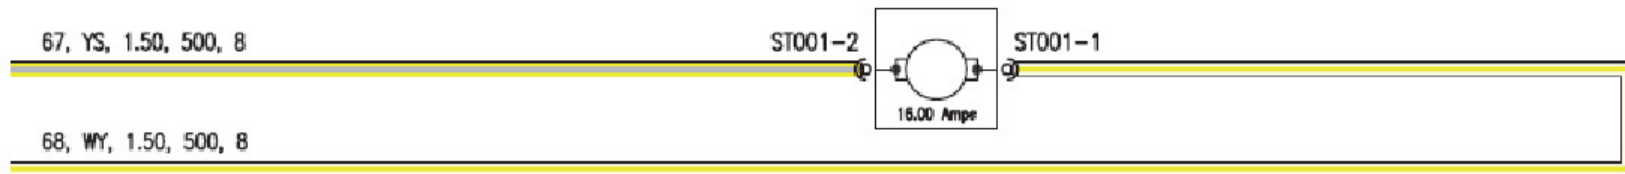

驾驶员座椅靠背电机(T208)

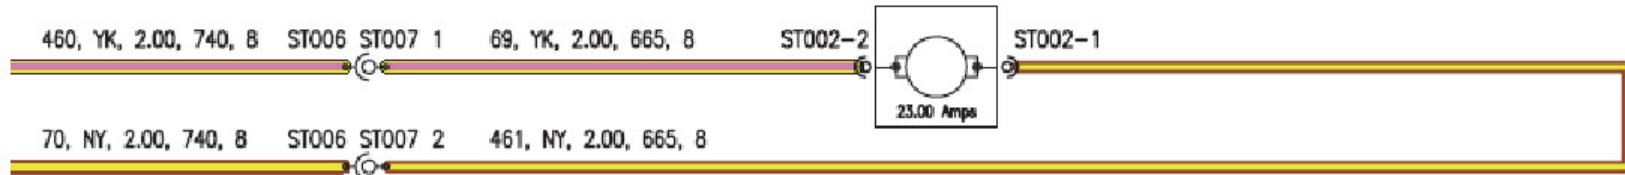

驾驶员座椅升降电机(T209)

