
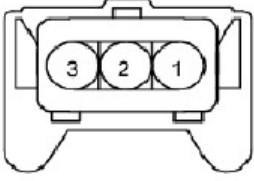
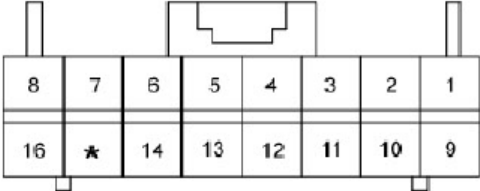
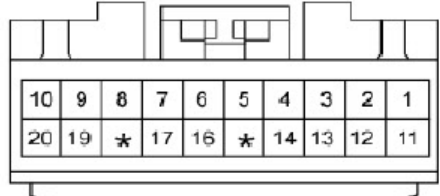
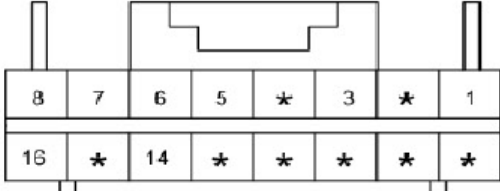


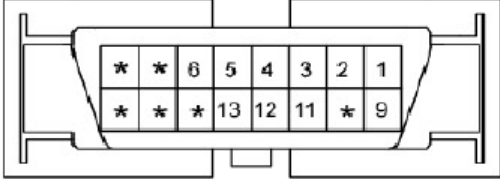

车速传感器 (续)

<p>C39/C88/C139</p>  <p>AMP_JPT_03F_B_S1</p>	<p>M04-1</p>  <p>AMP_0407_16F_W_040</p>	<p>M06-1</p>  <p>MLX_04011_20F_Gr</p>	<p>M09-2</p>  <p>AMP_0407_16F_W_040</p>
<p>M26</p>  <p>MLX_OBDII_16F_B_SIN</p>	<p>BLANK</p>	<p>BLANK</p>	<p>BLANK</p>

LAUNCH