 
 
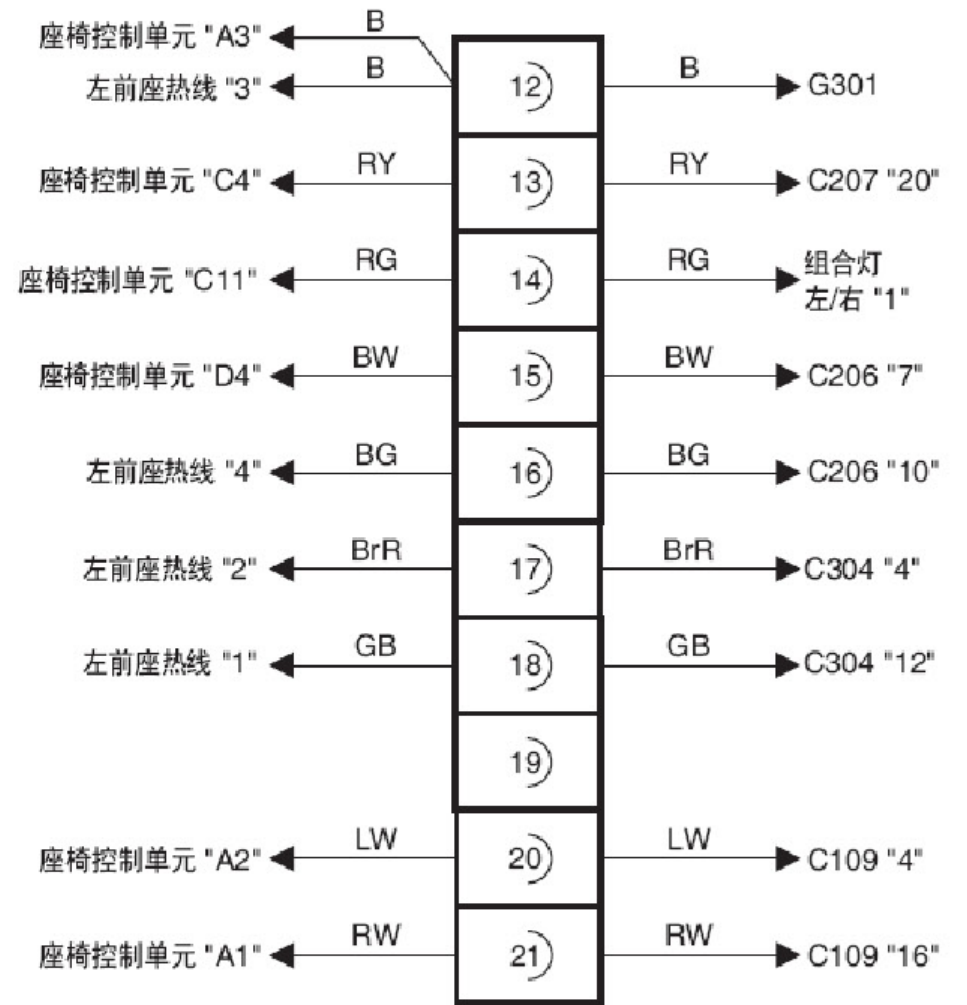 


• C302

(W/ Memory, Power)

 
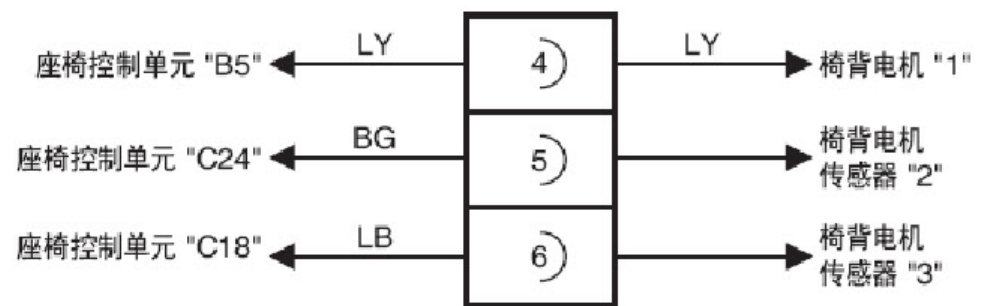 


• C303


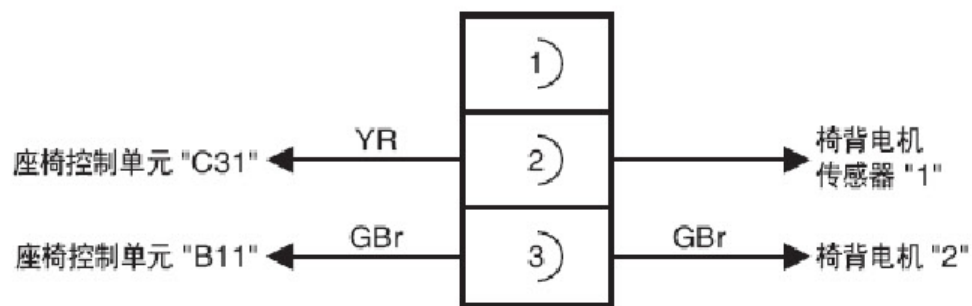


• C304

(配备记忆, 电动)

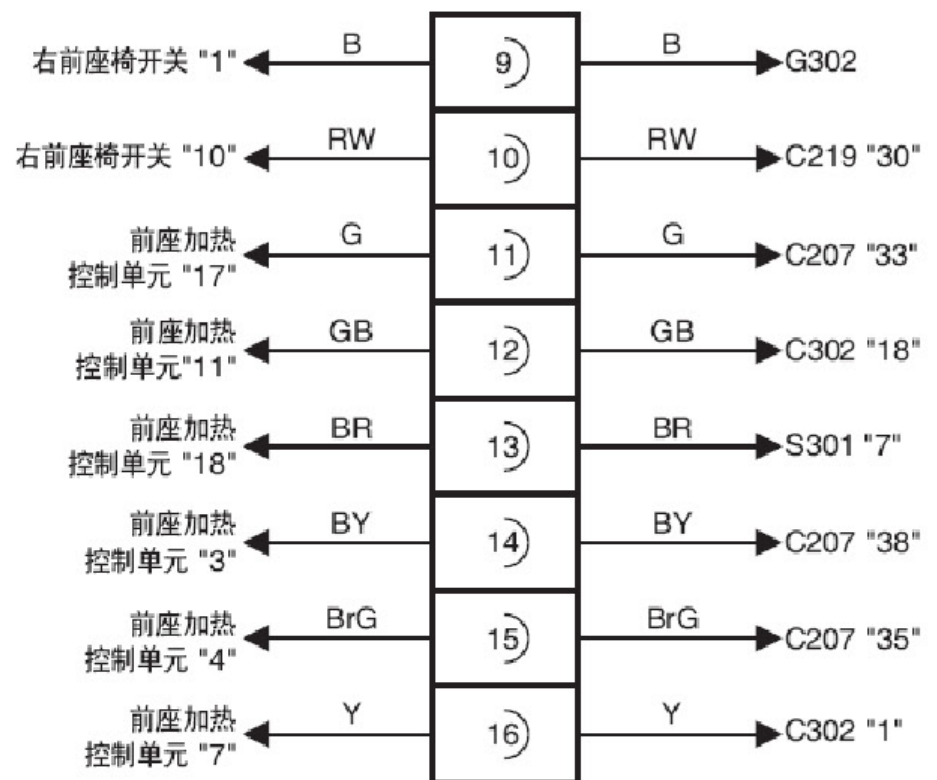
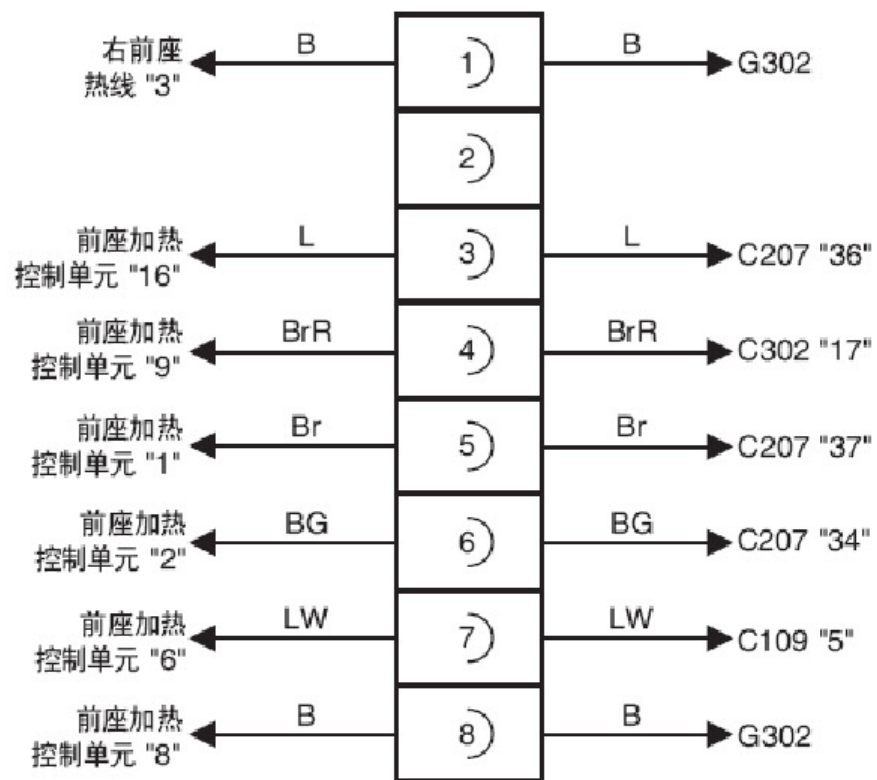


(无记忆)

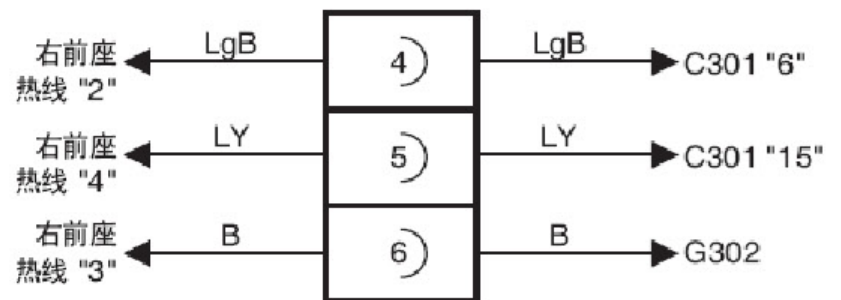 
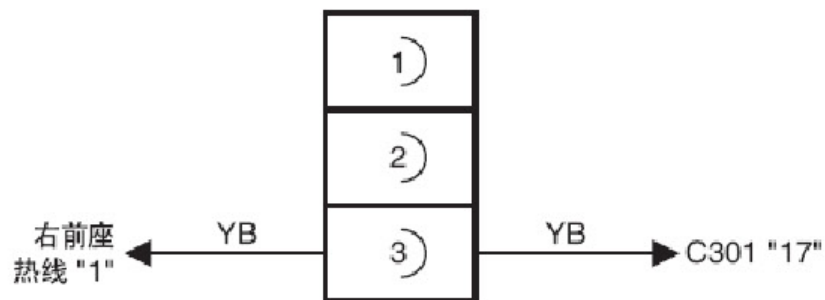 


• C305

  
(配备记忆, 电动)

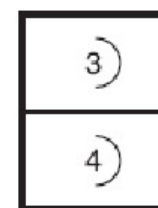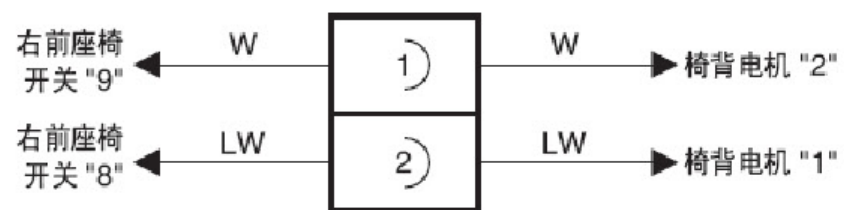


• C306

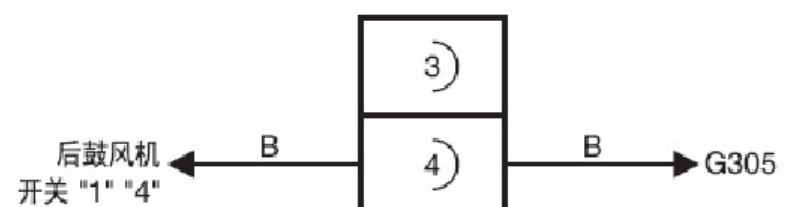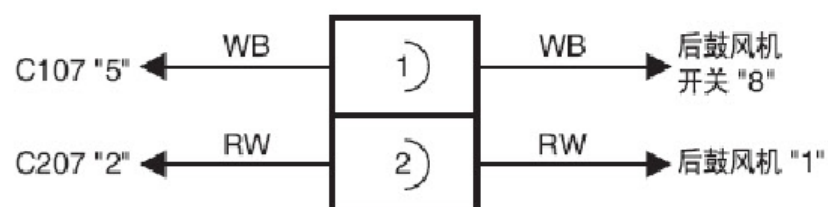  


## • C351

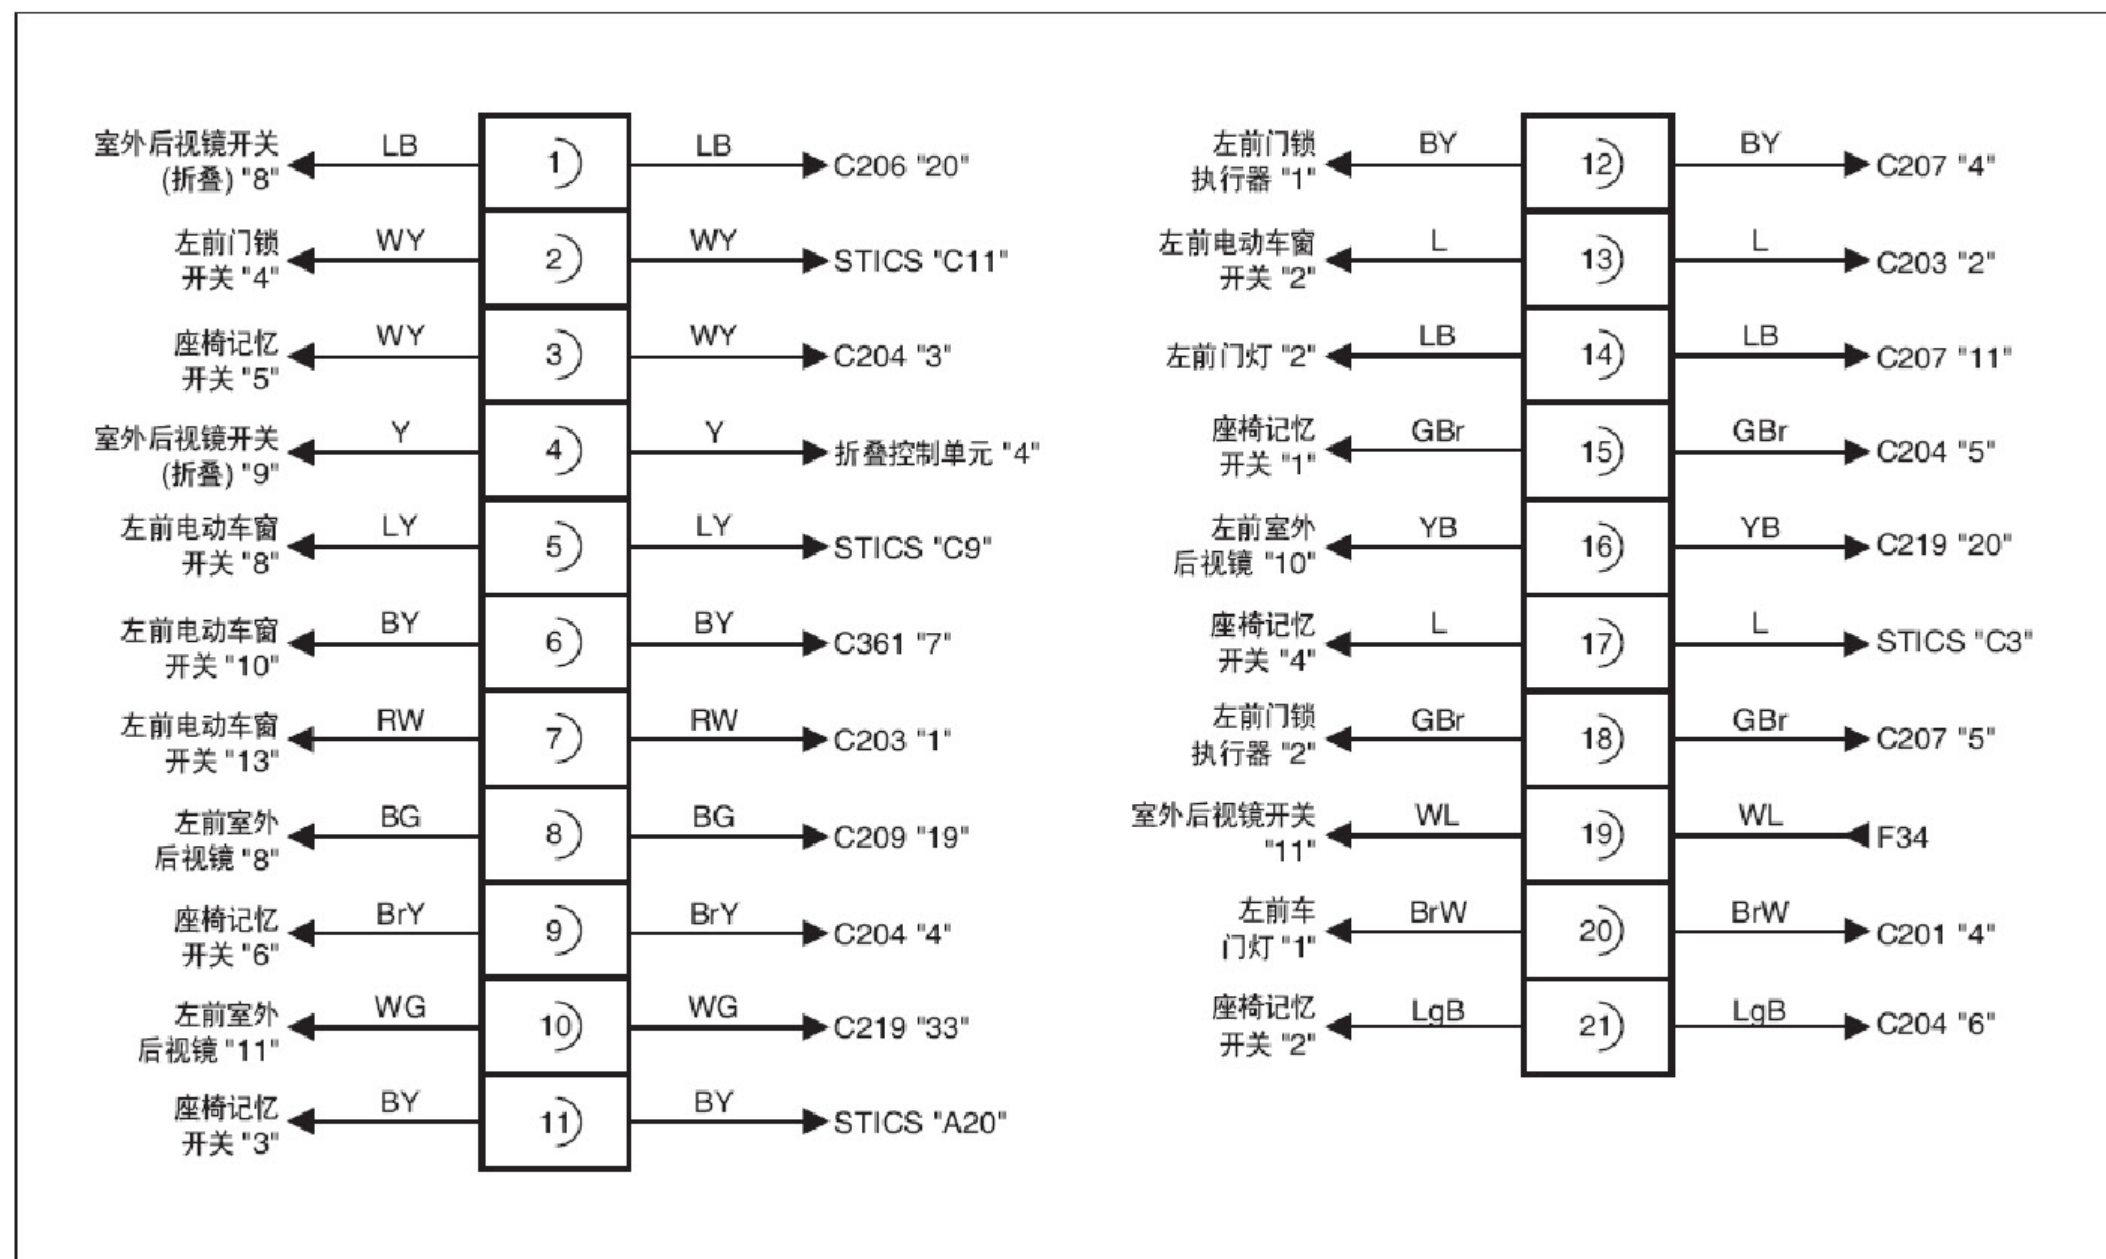 


## • C352

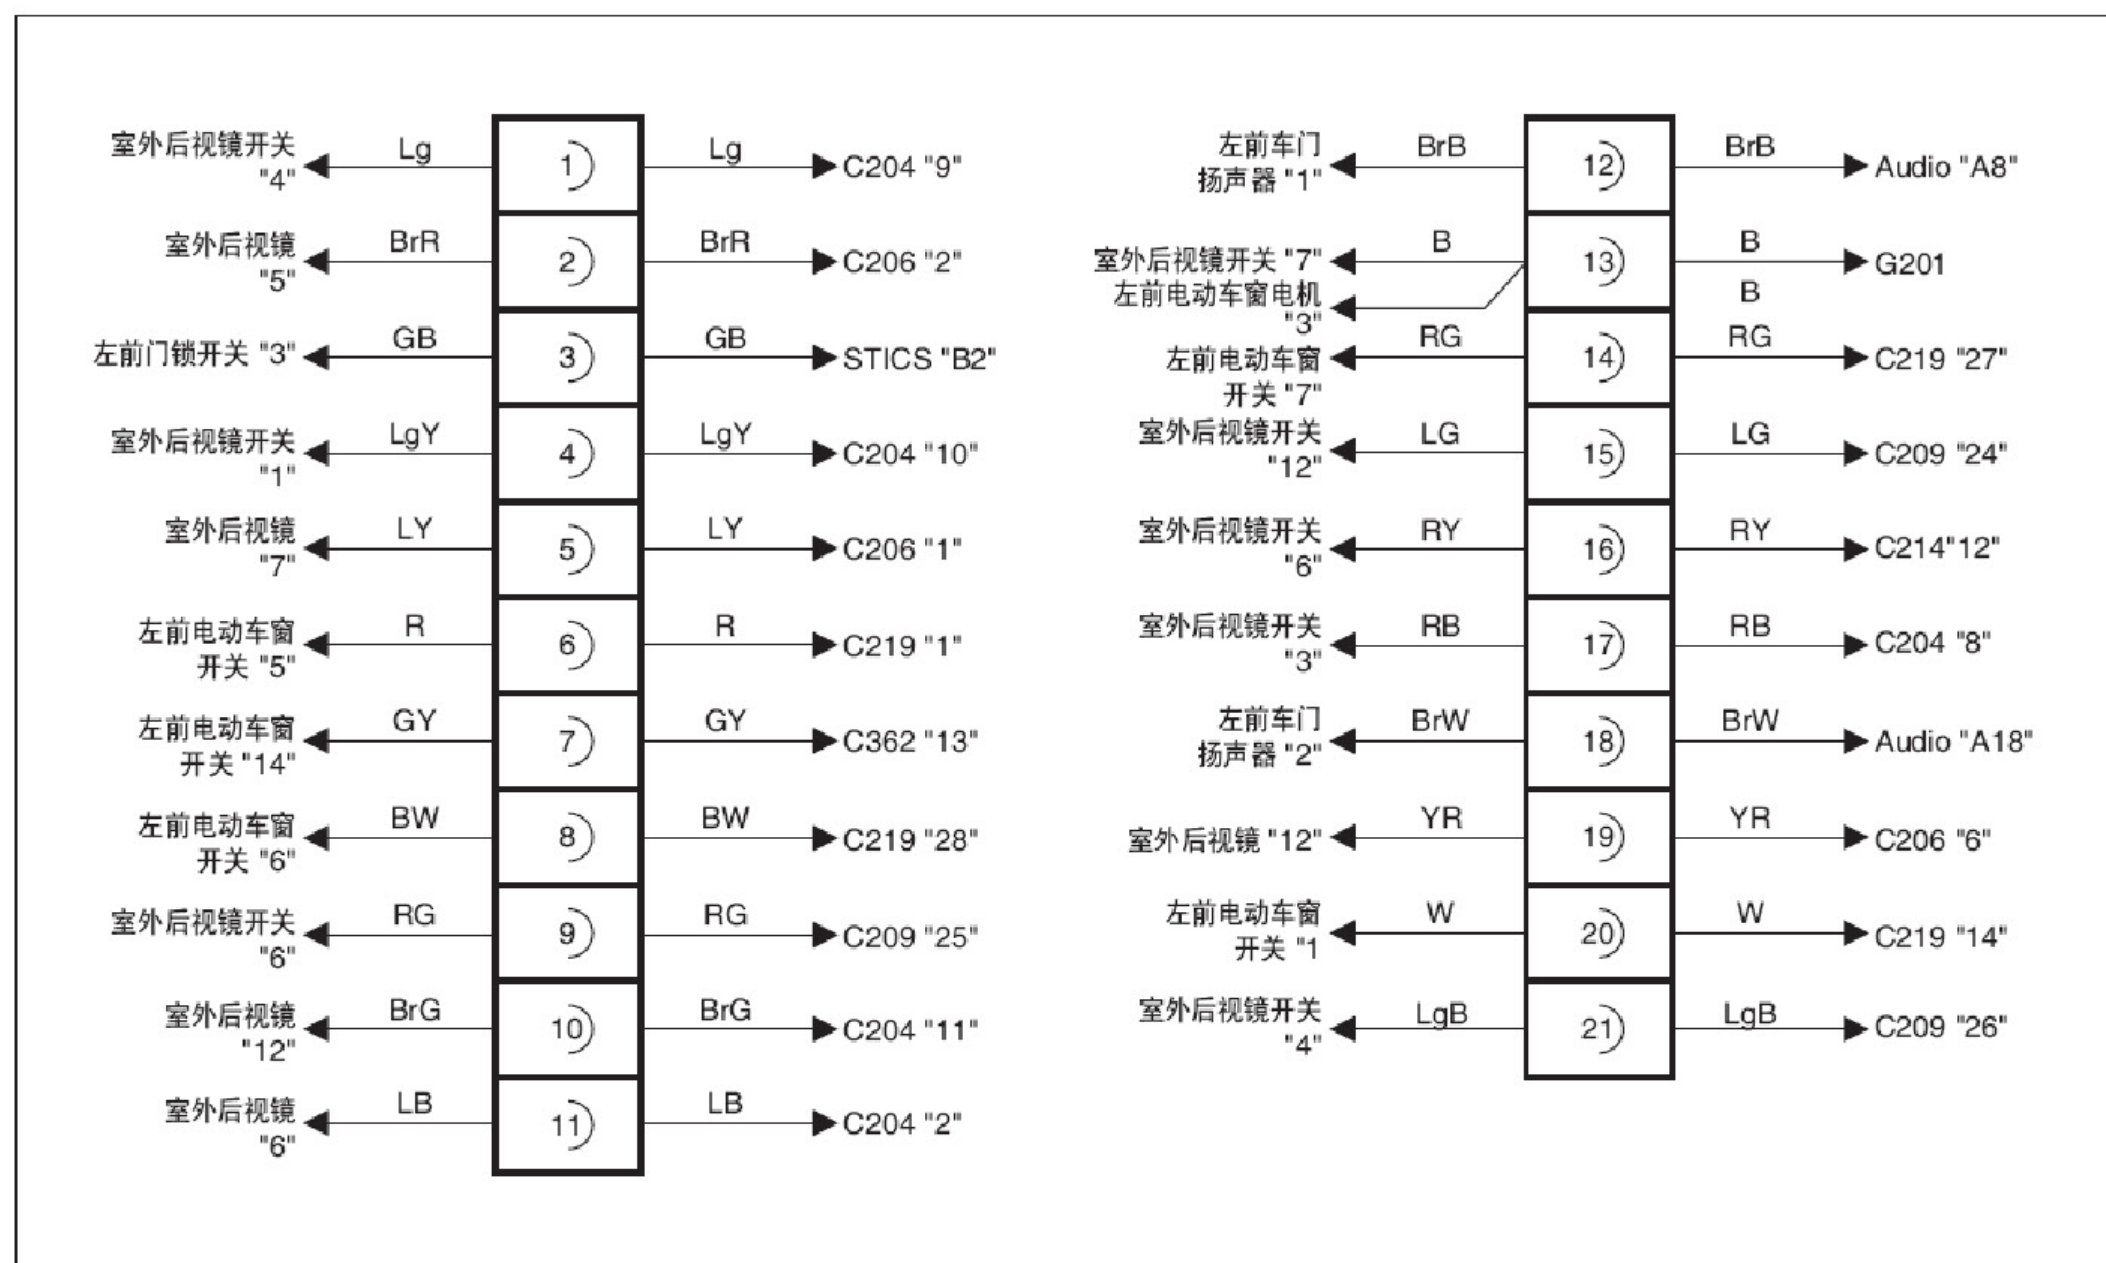 


• C361

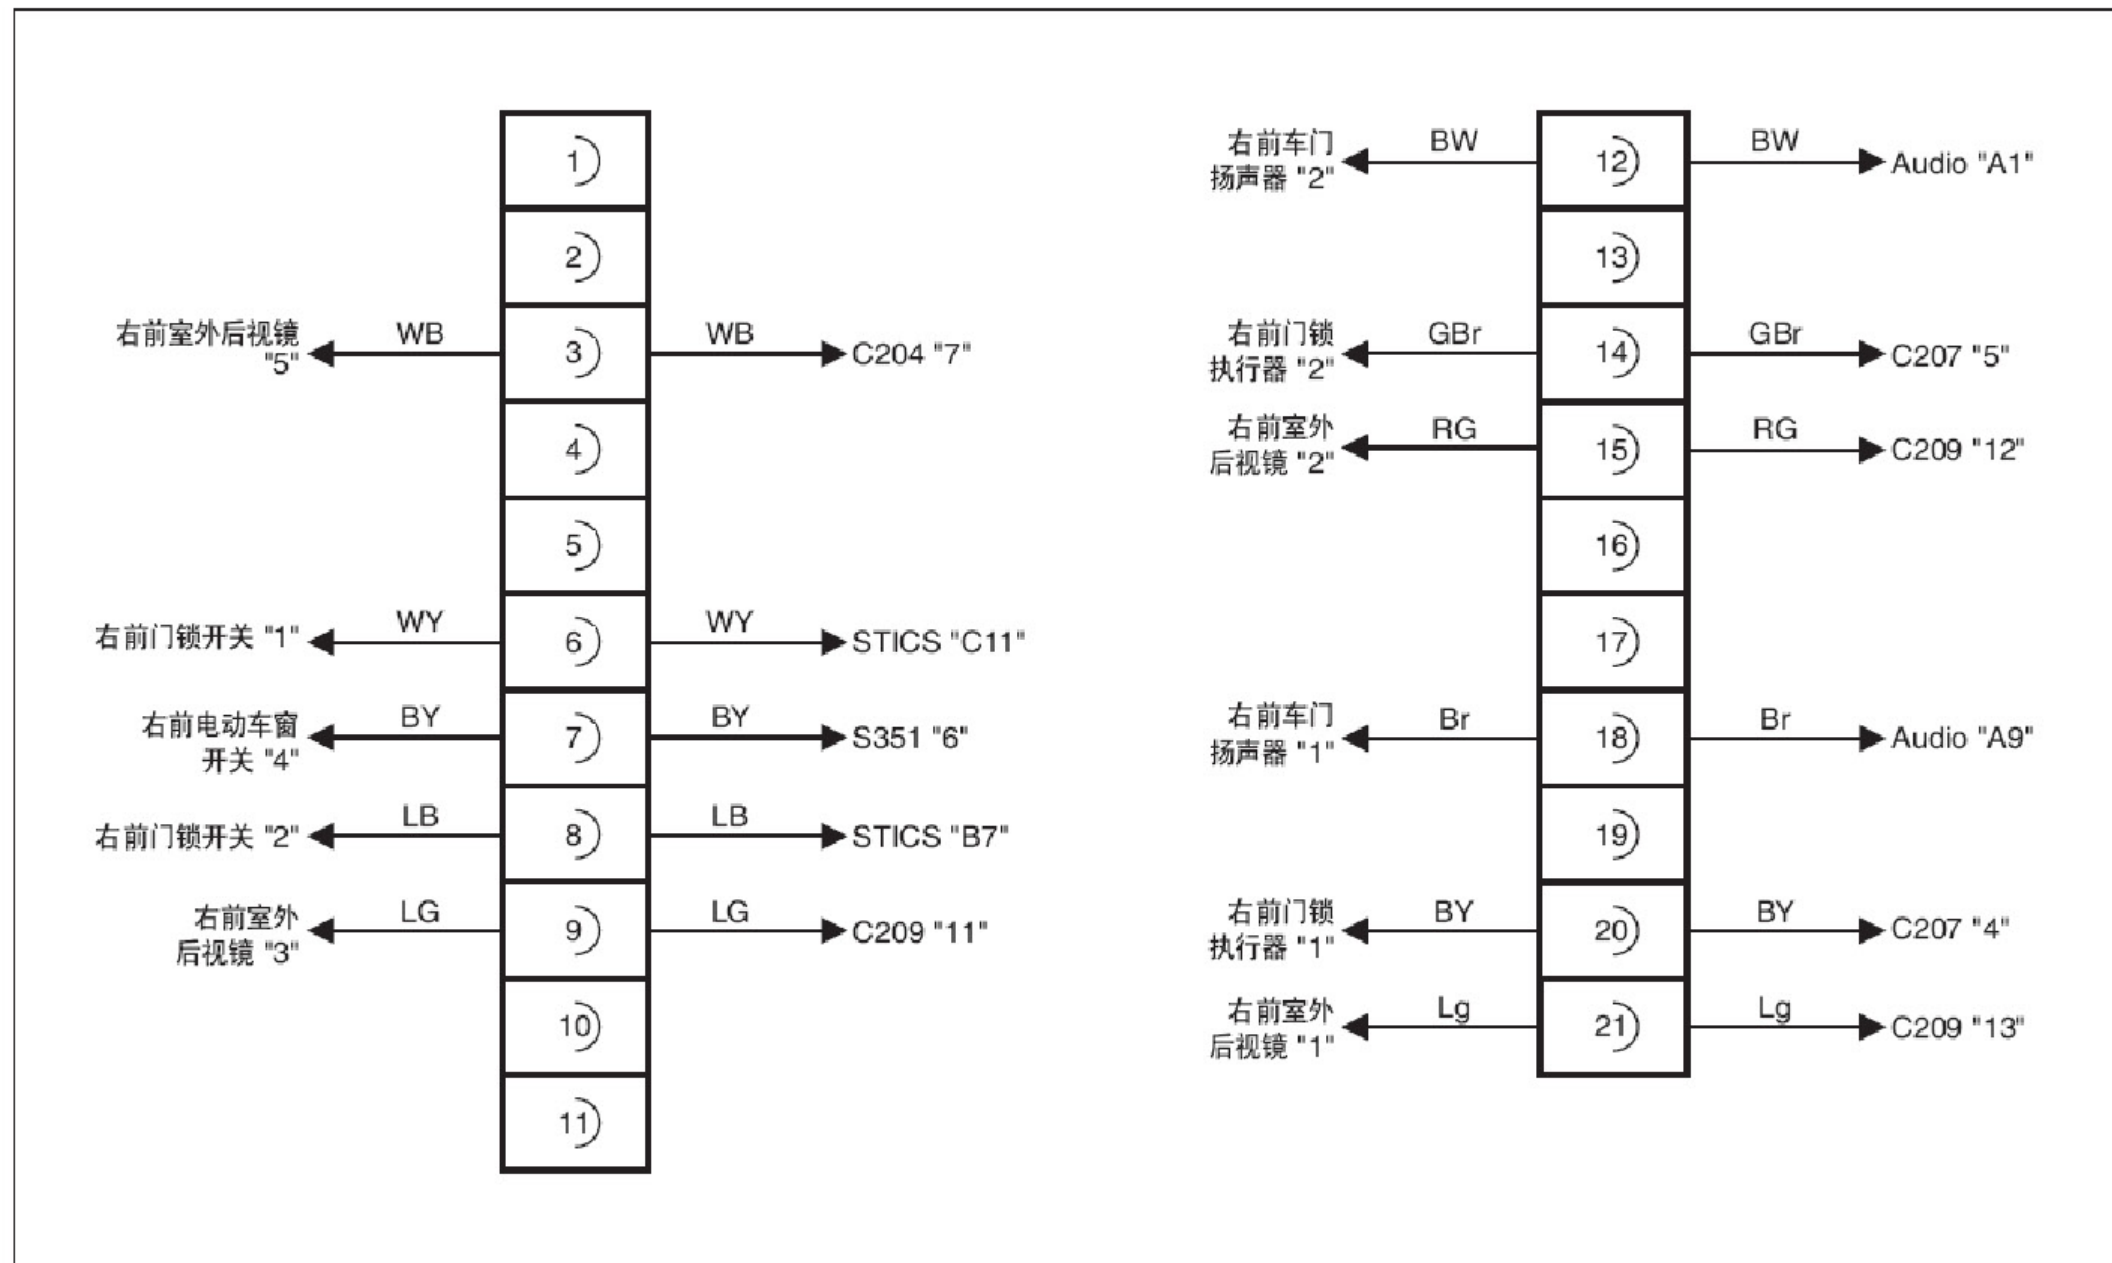 


• C362

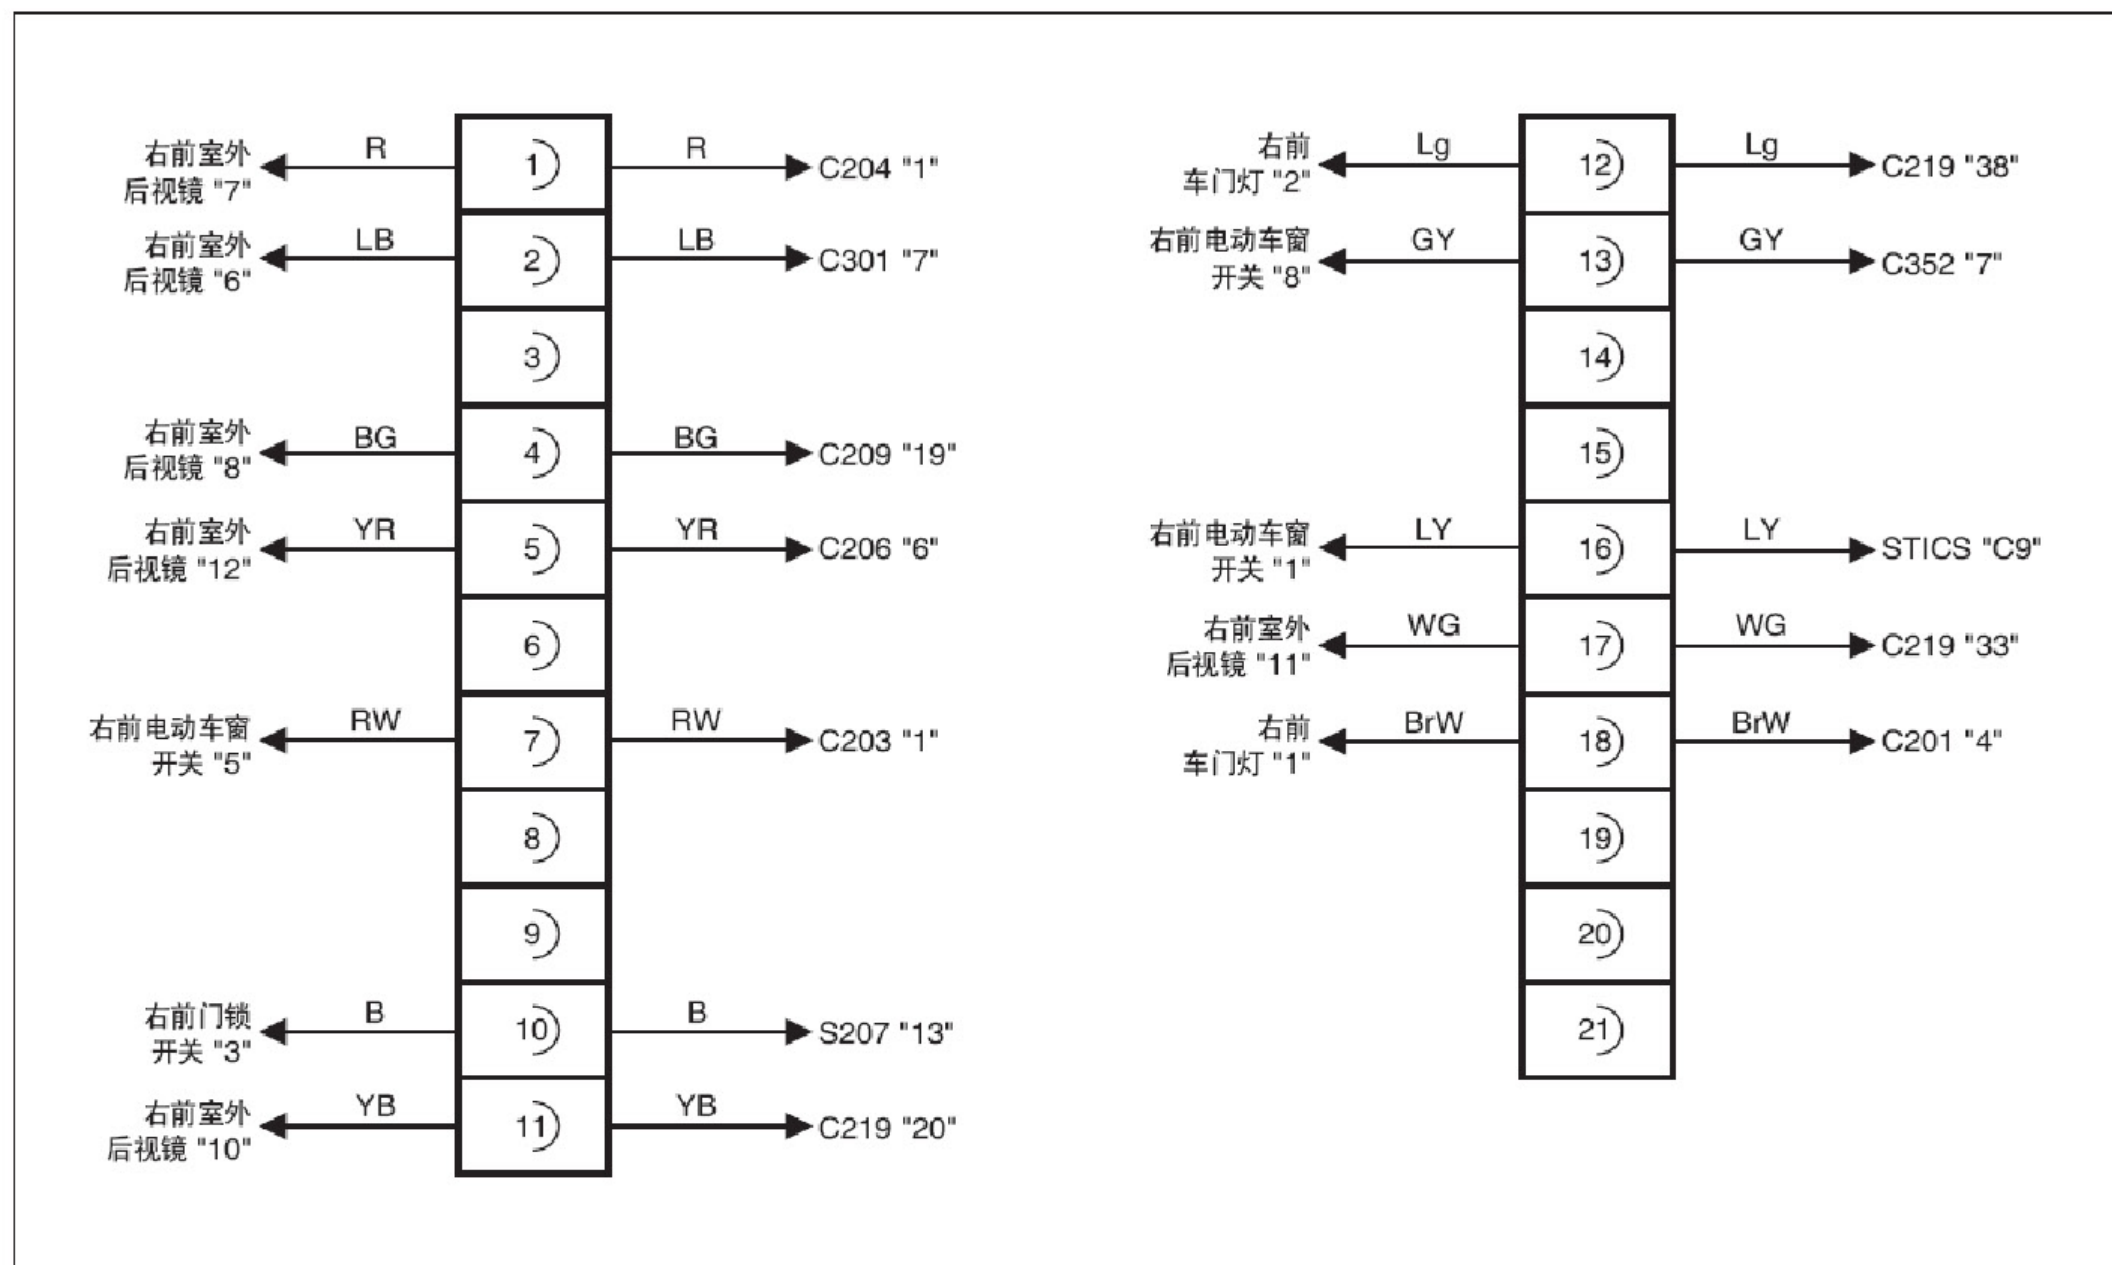 


## • C371

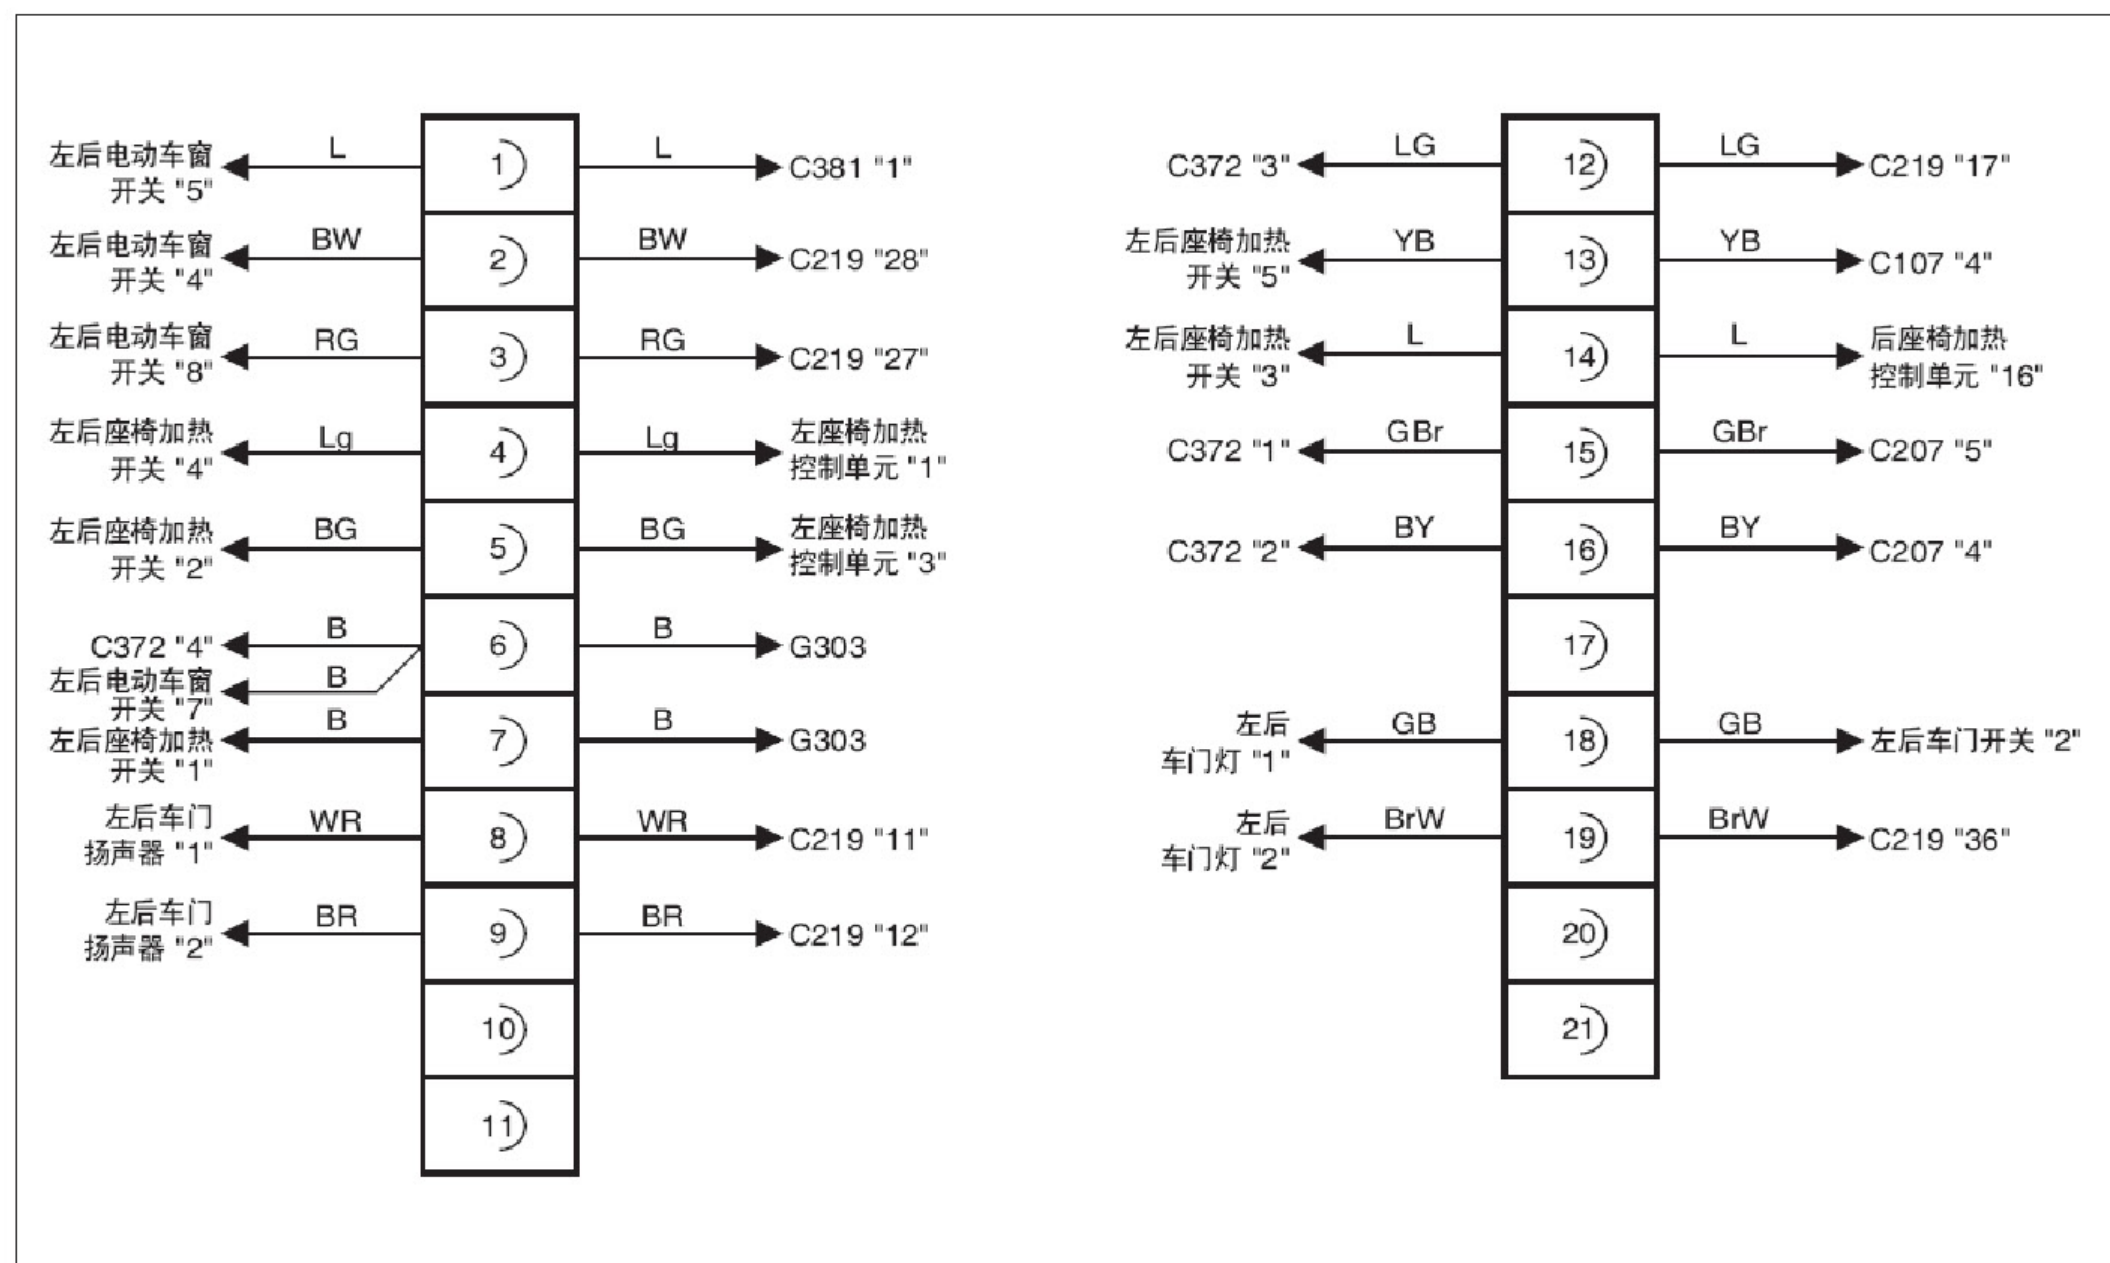 


## • C381

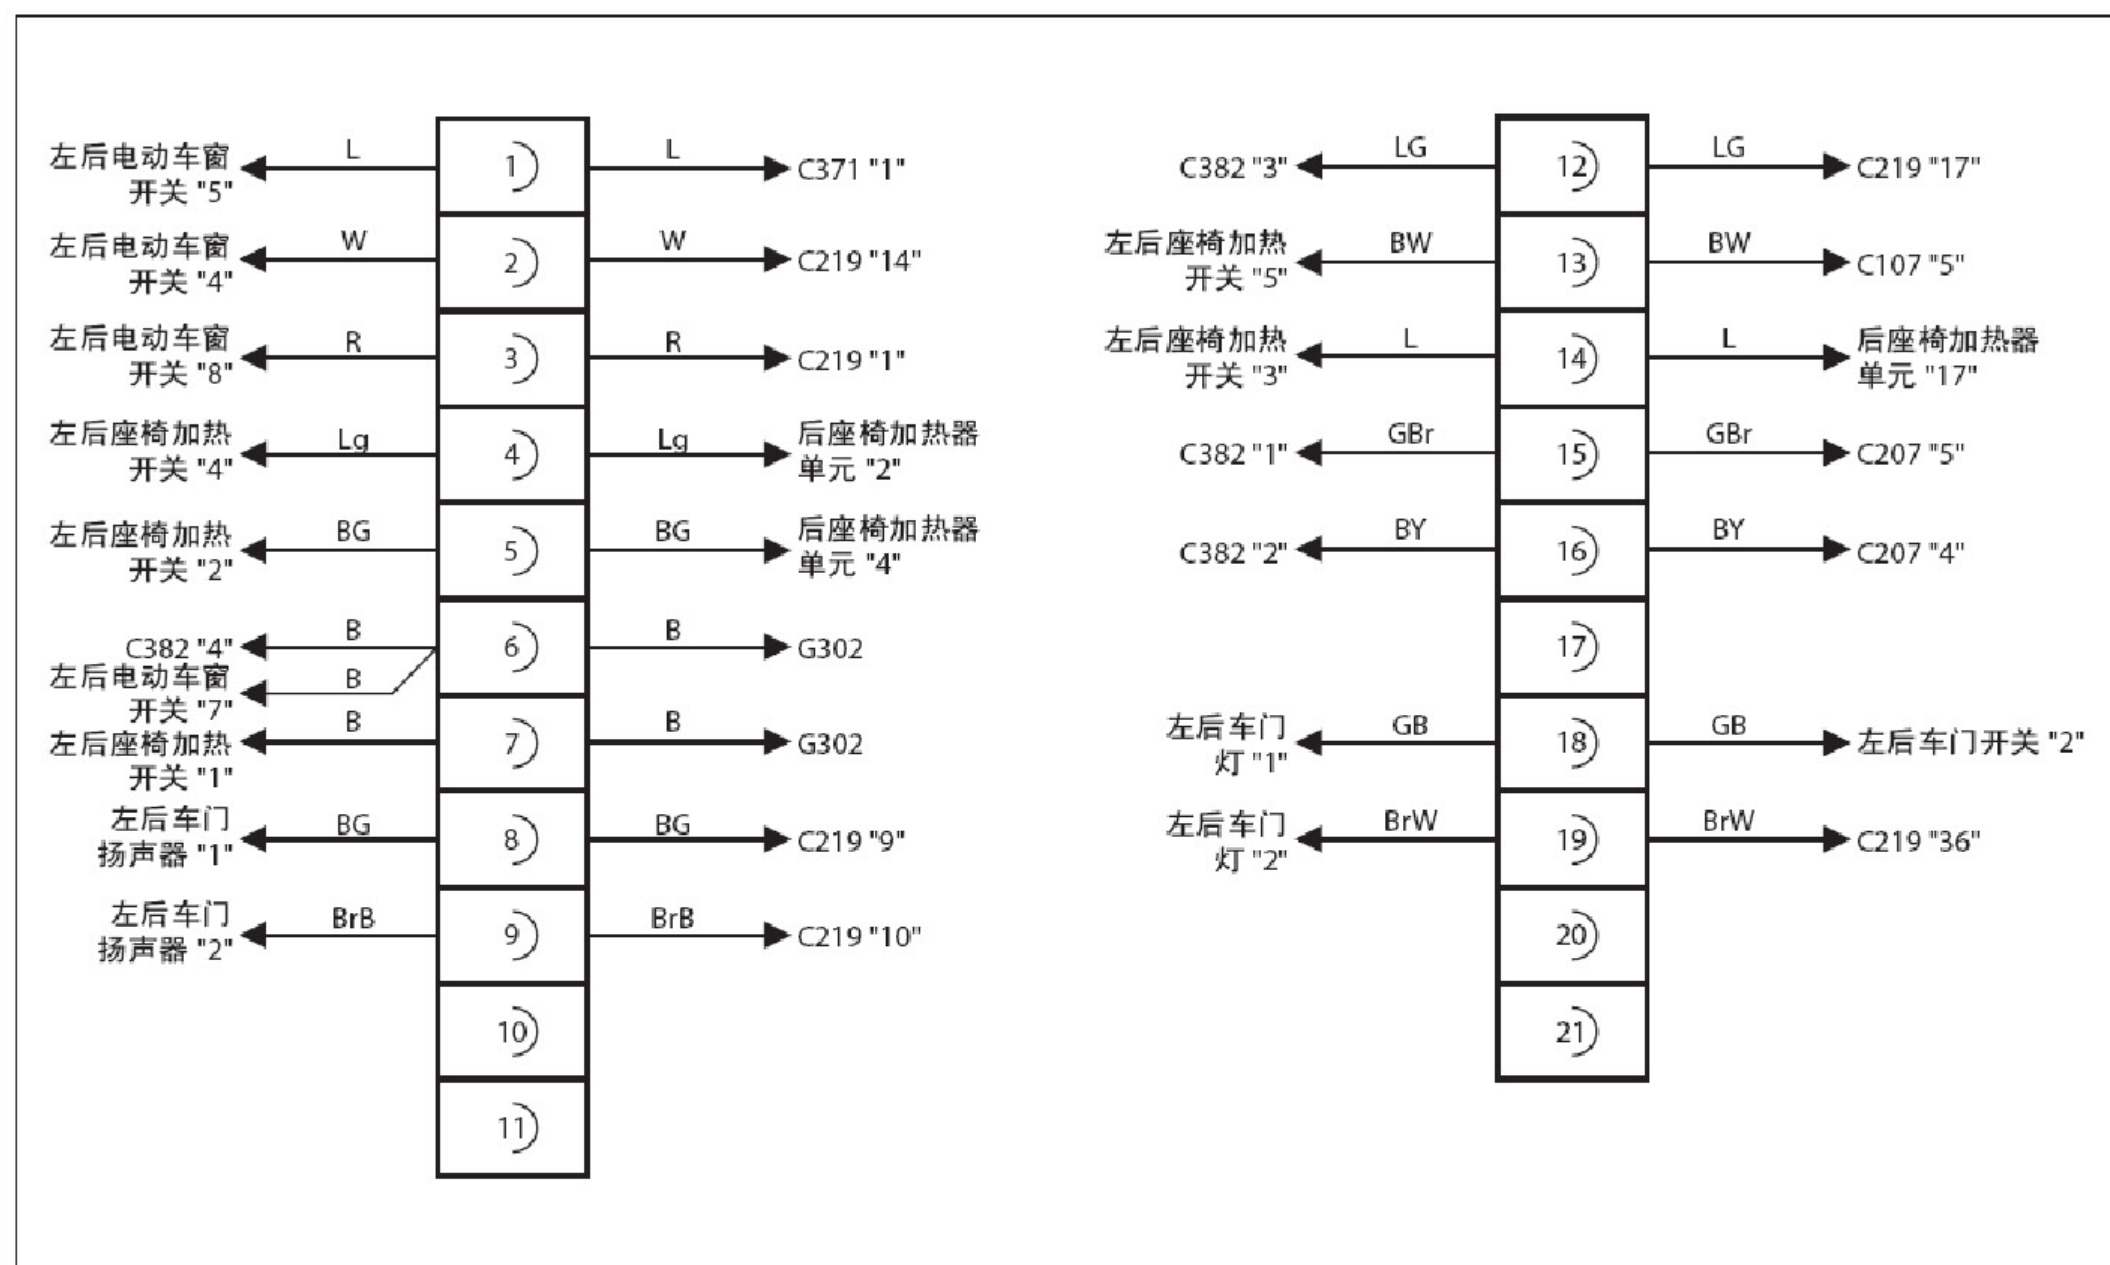 


## • C372

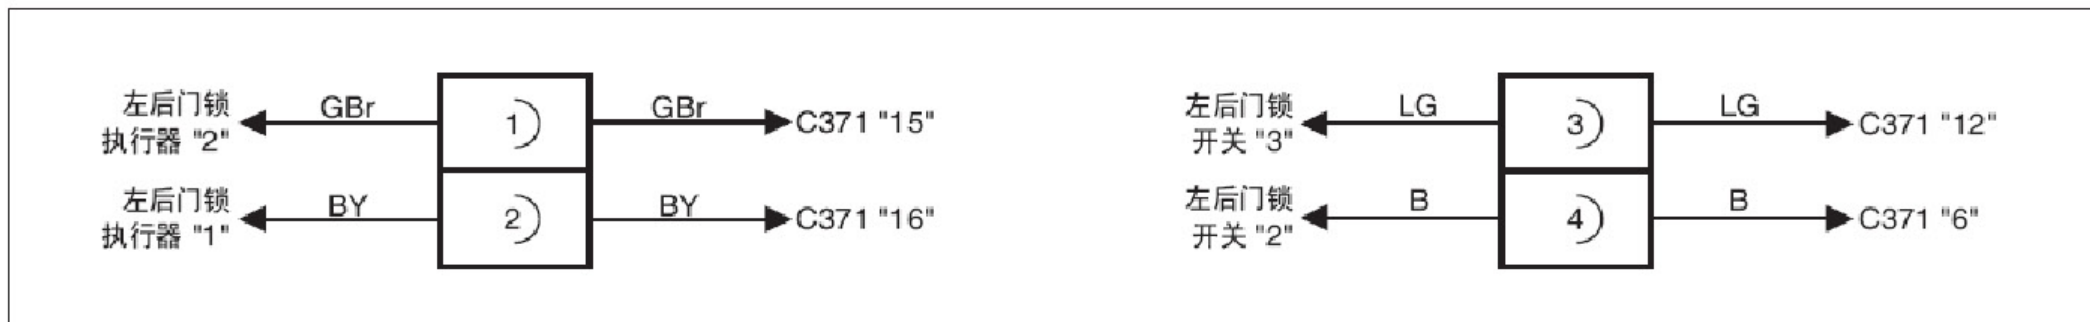 


## • C382

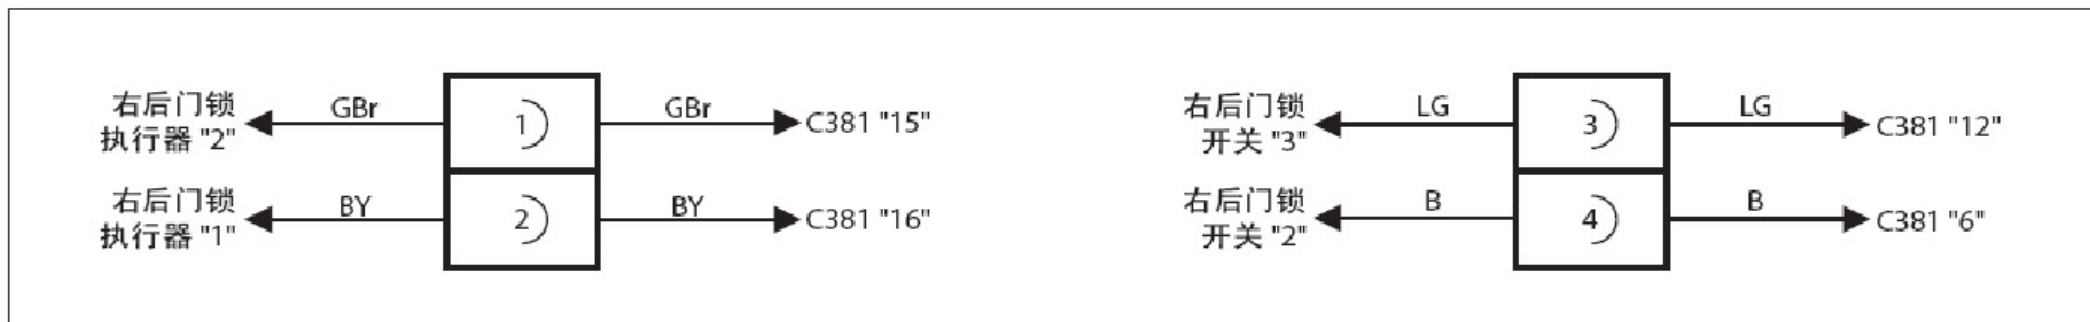 


## • C391

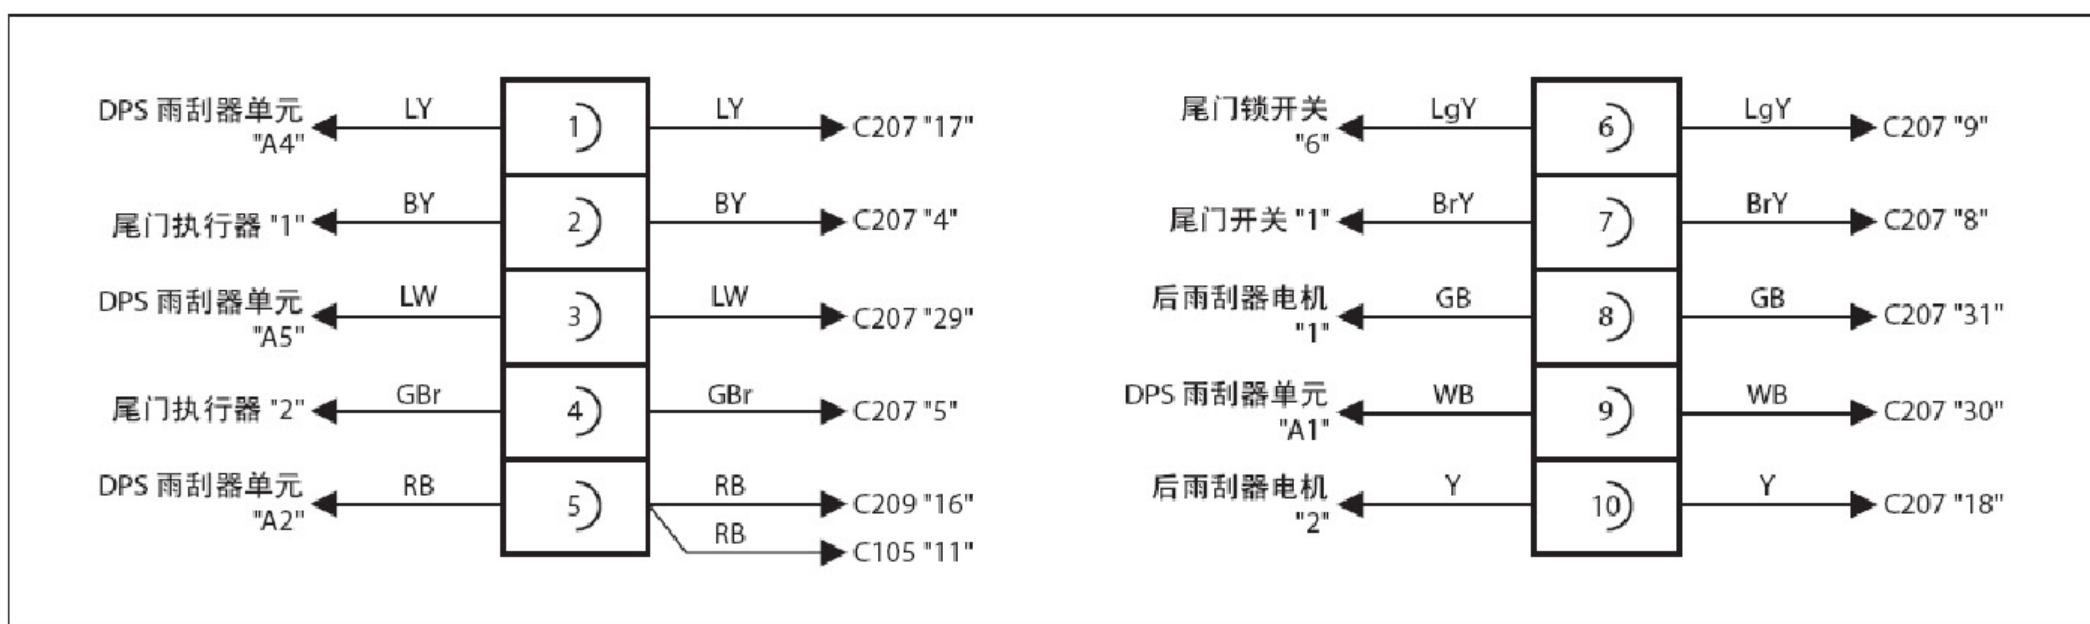 

## • C392

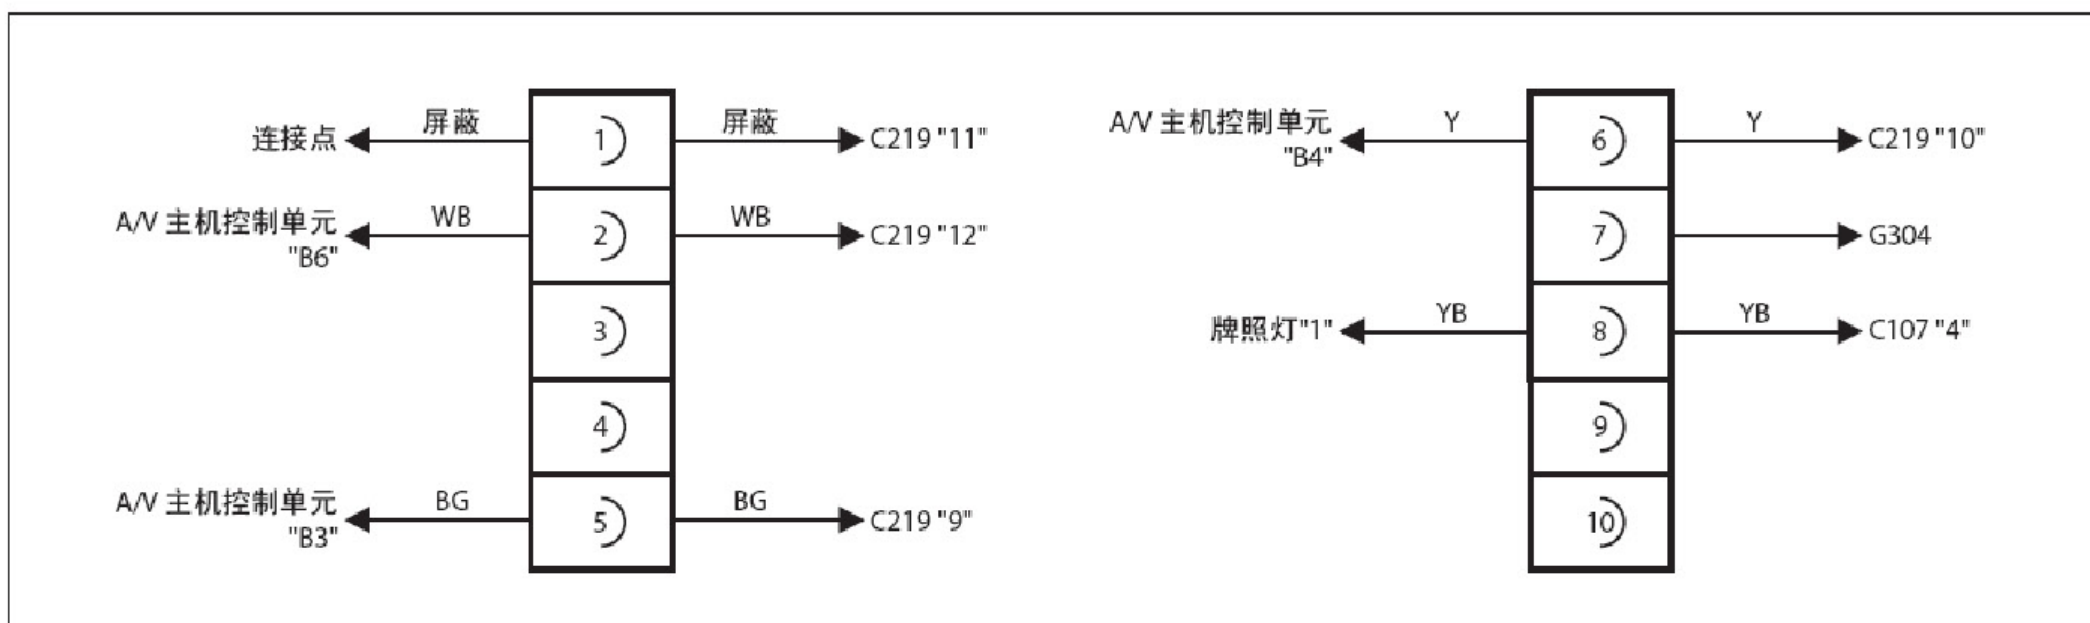 



## • C393

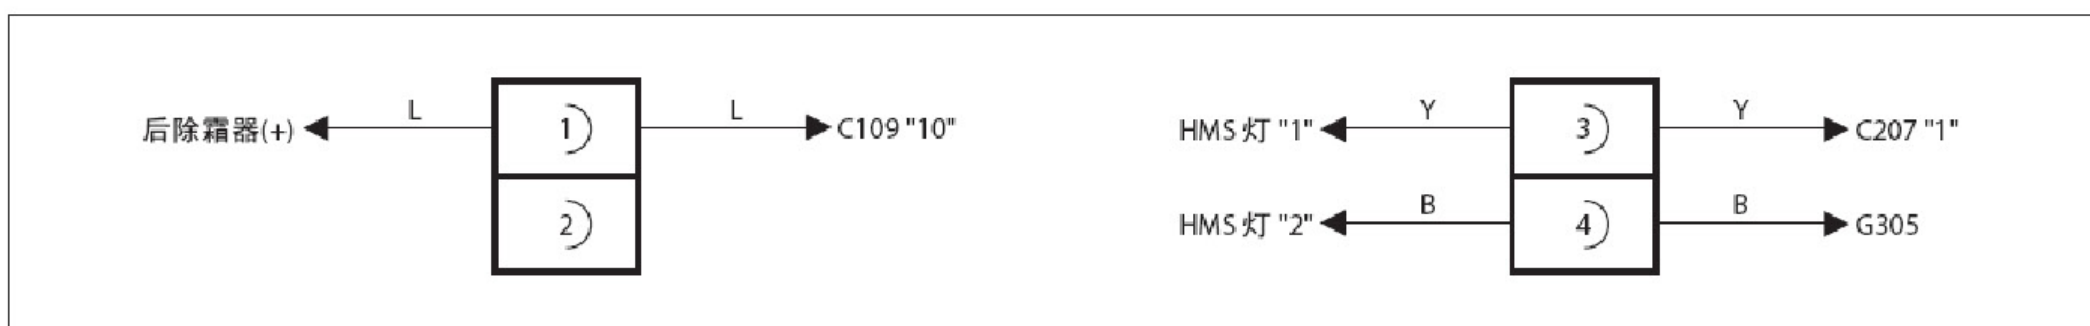 

• C394



  
• C901

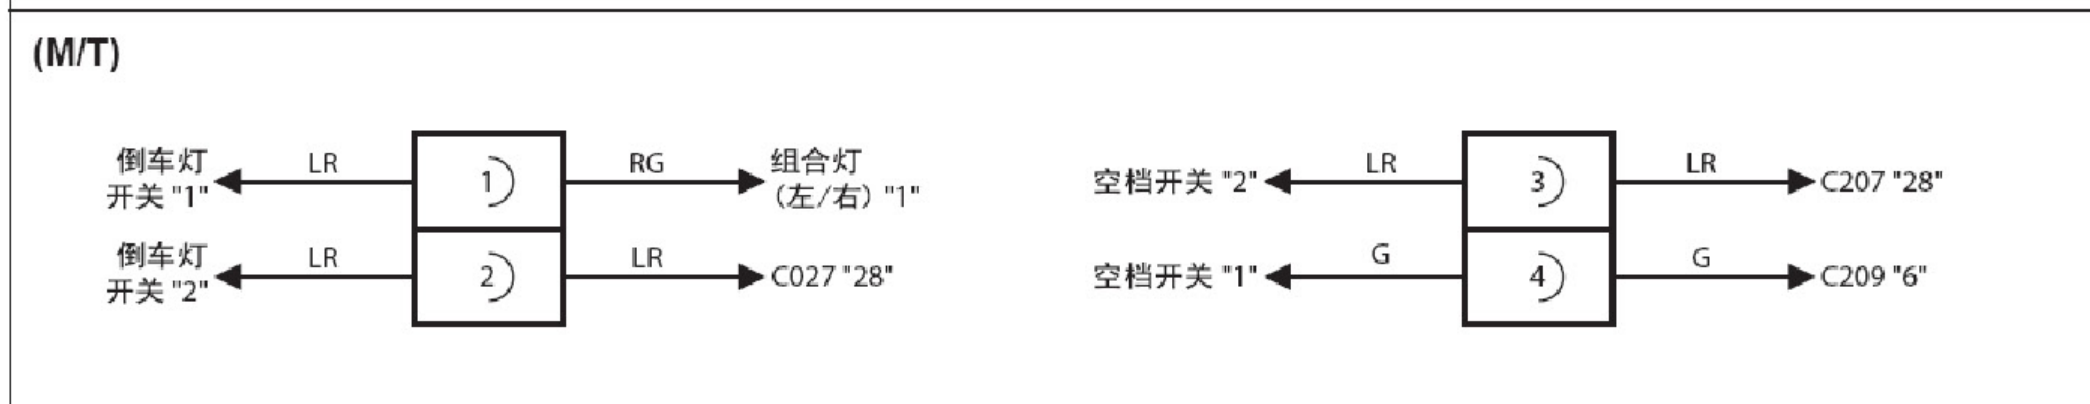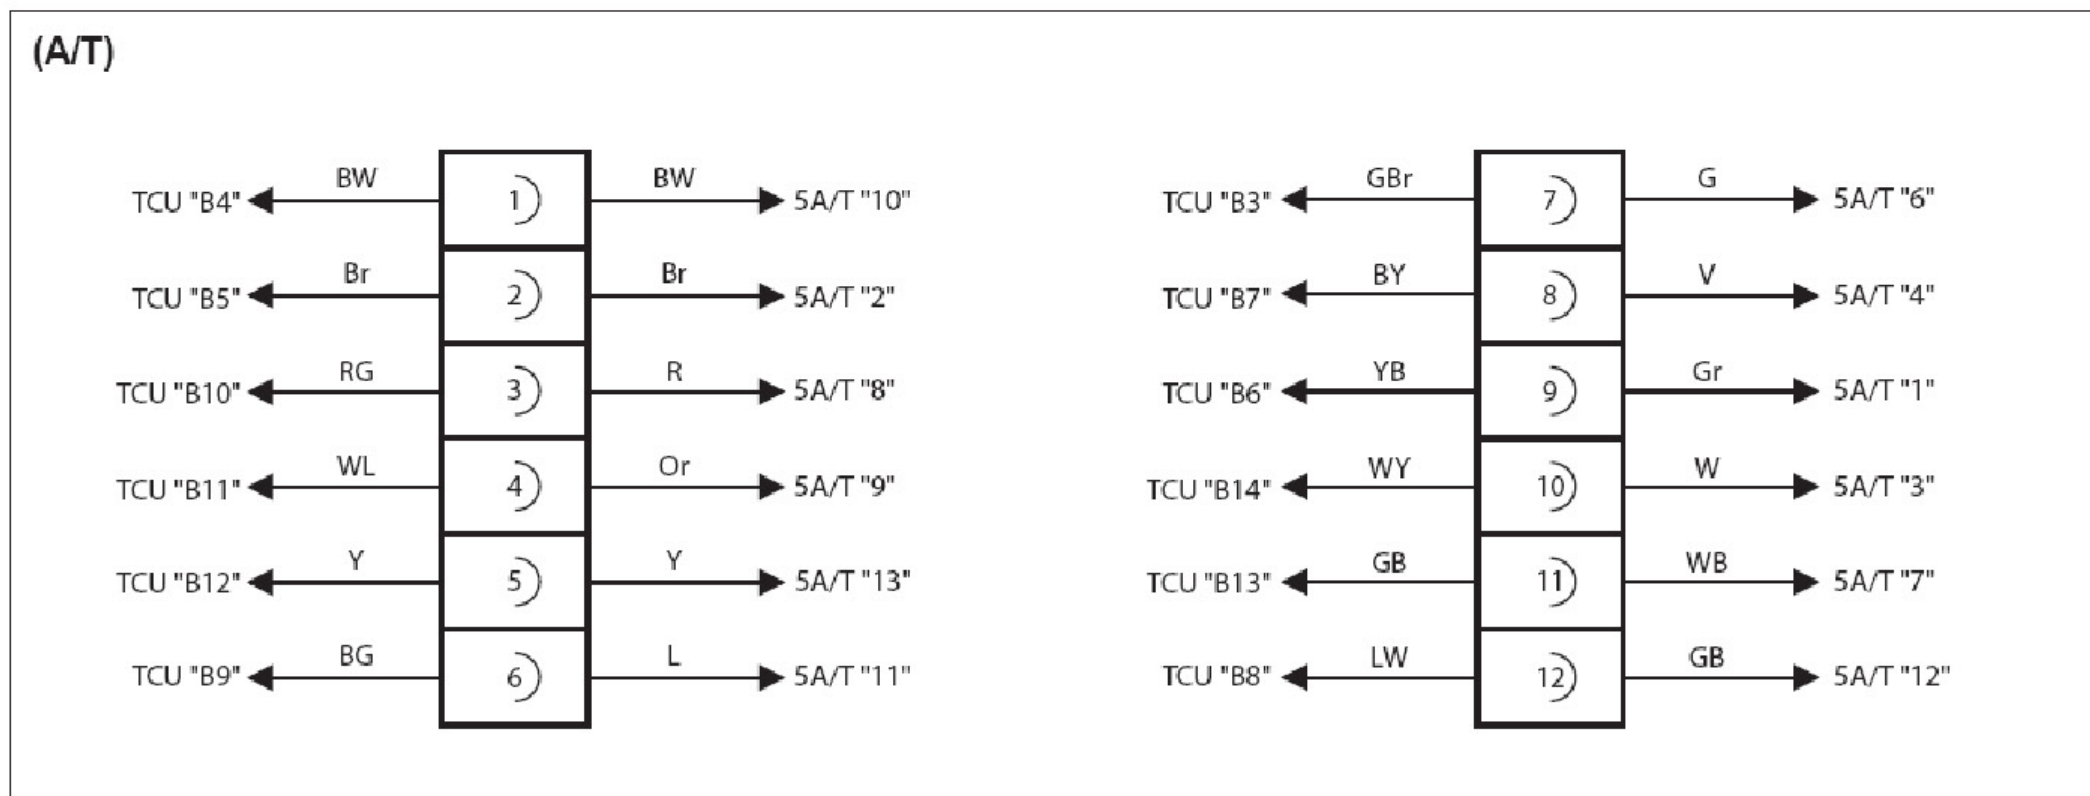


• C902




## • C903

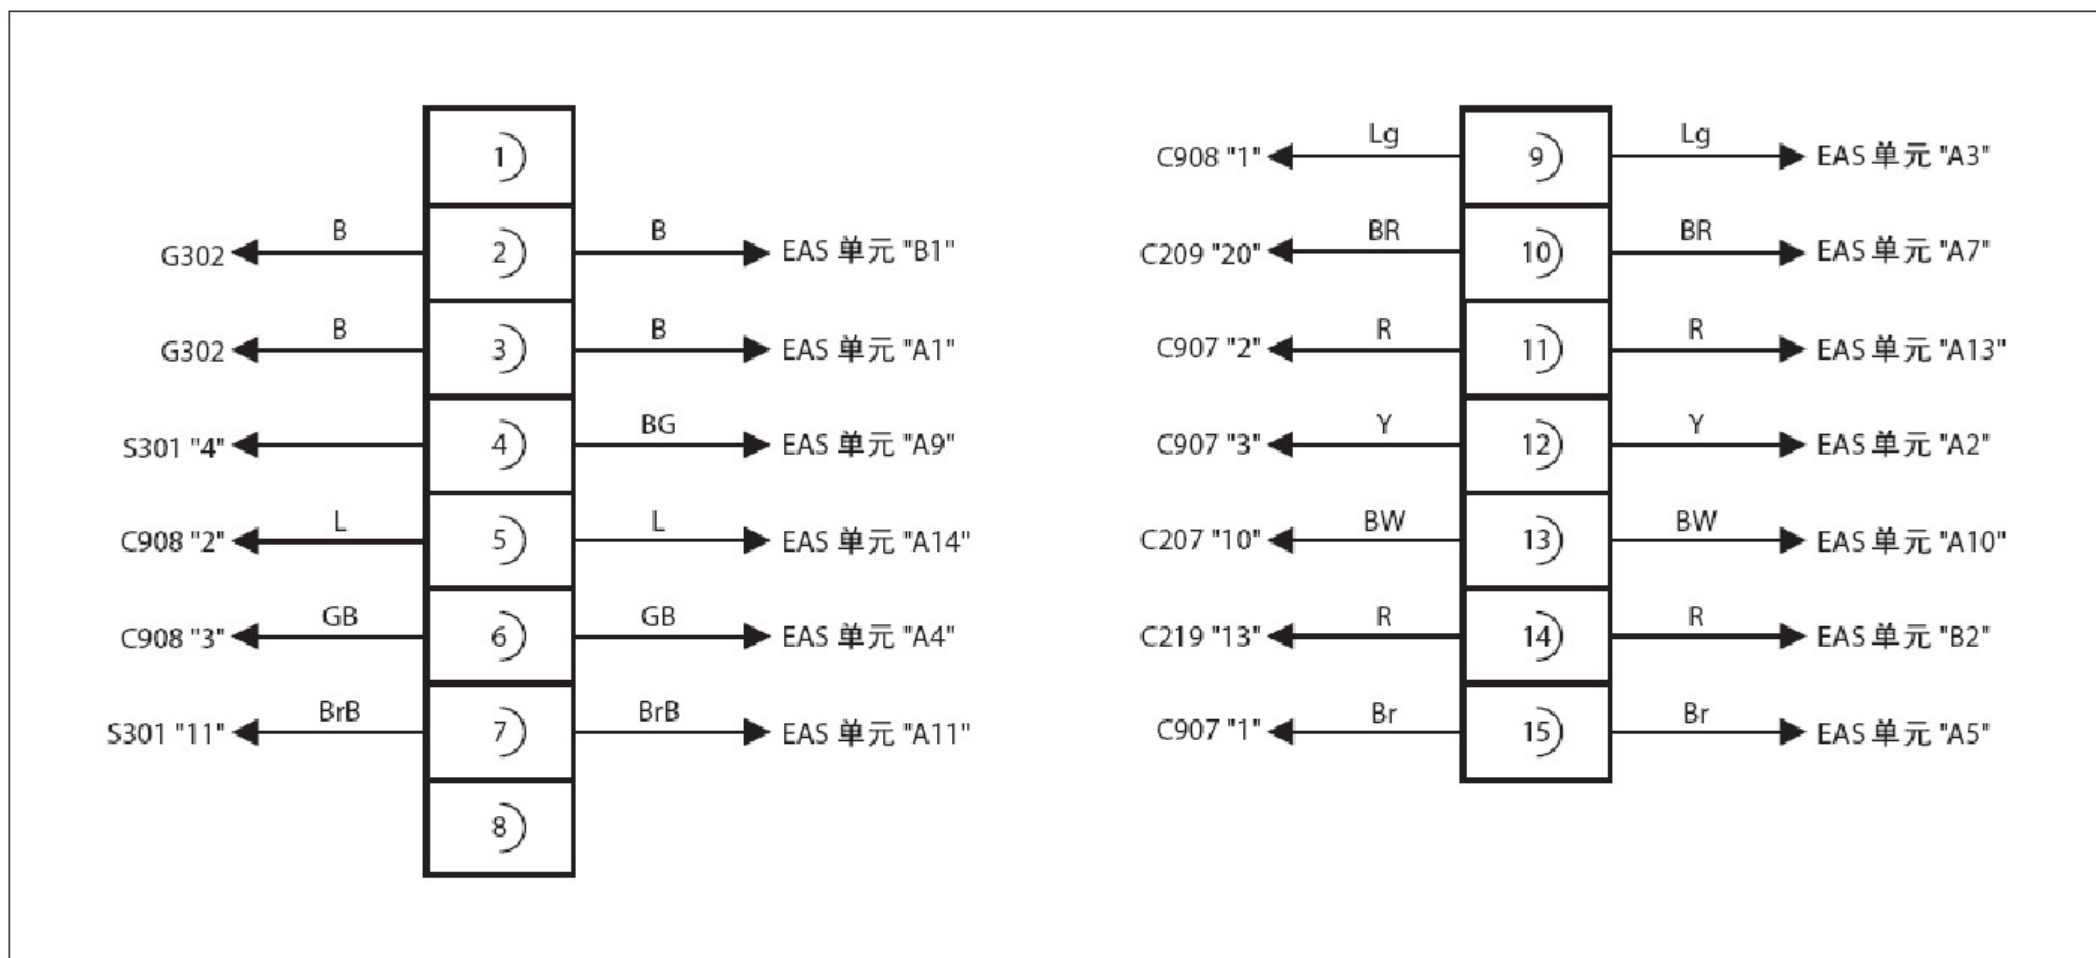 

## • C904

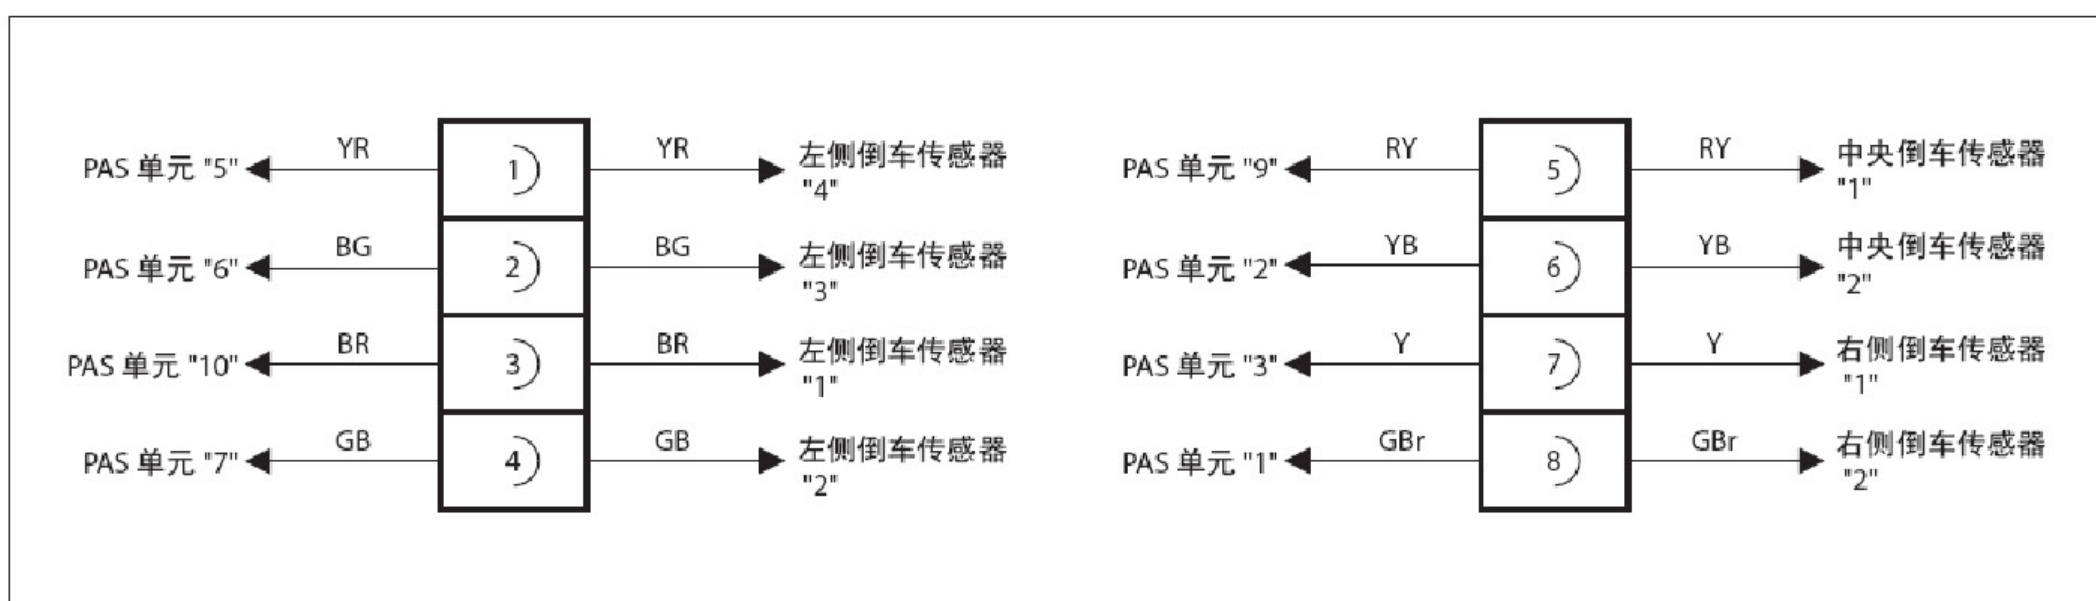 


## • C905

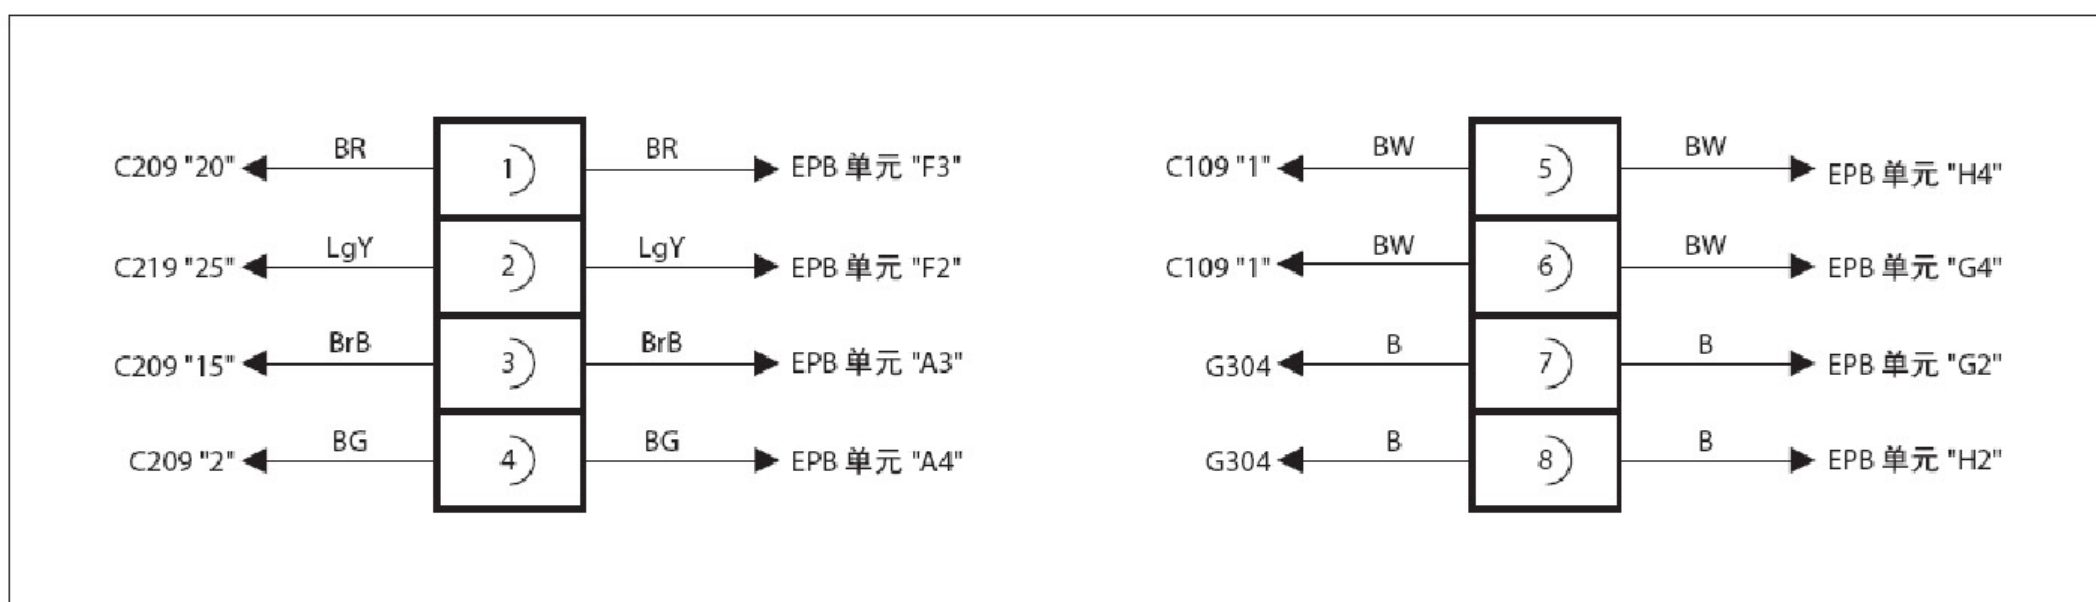 



## • C906

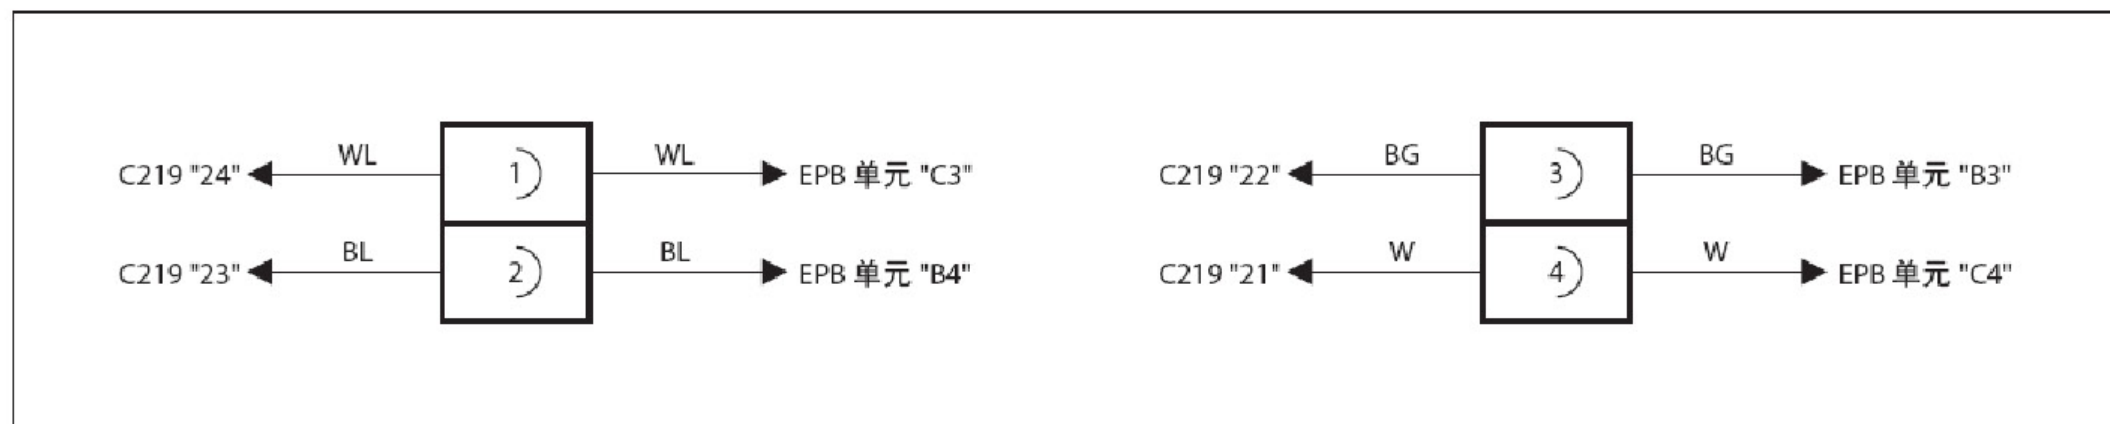 

## • C907



## • C908

