


2.26 电动后视镜及加热系统

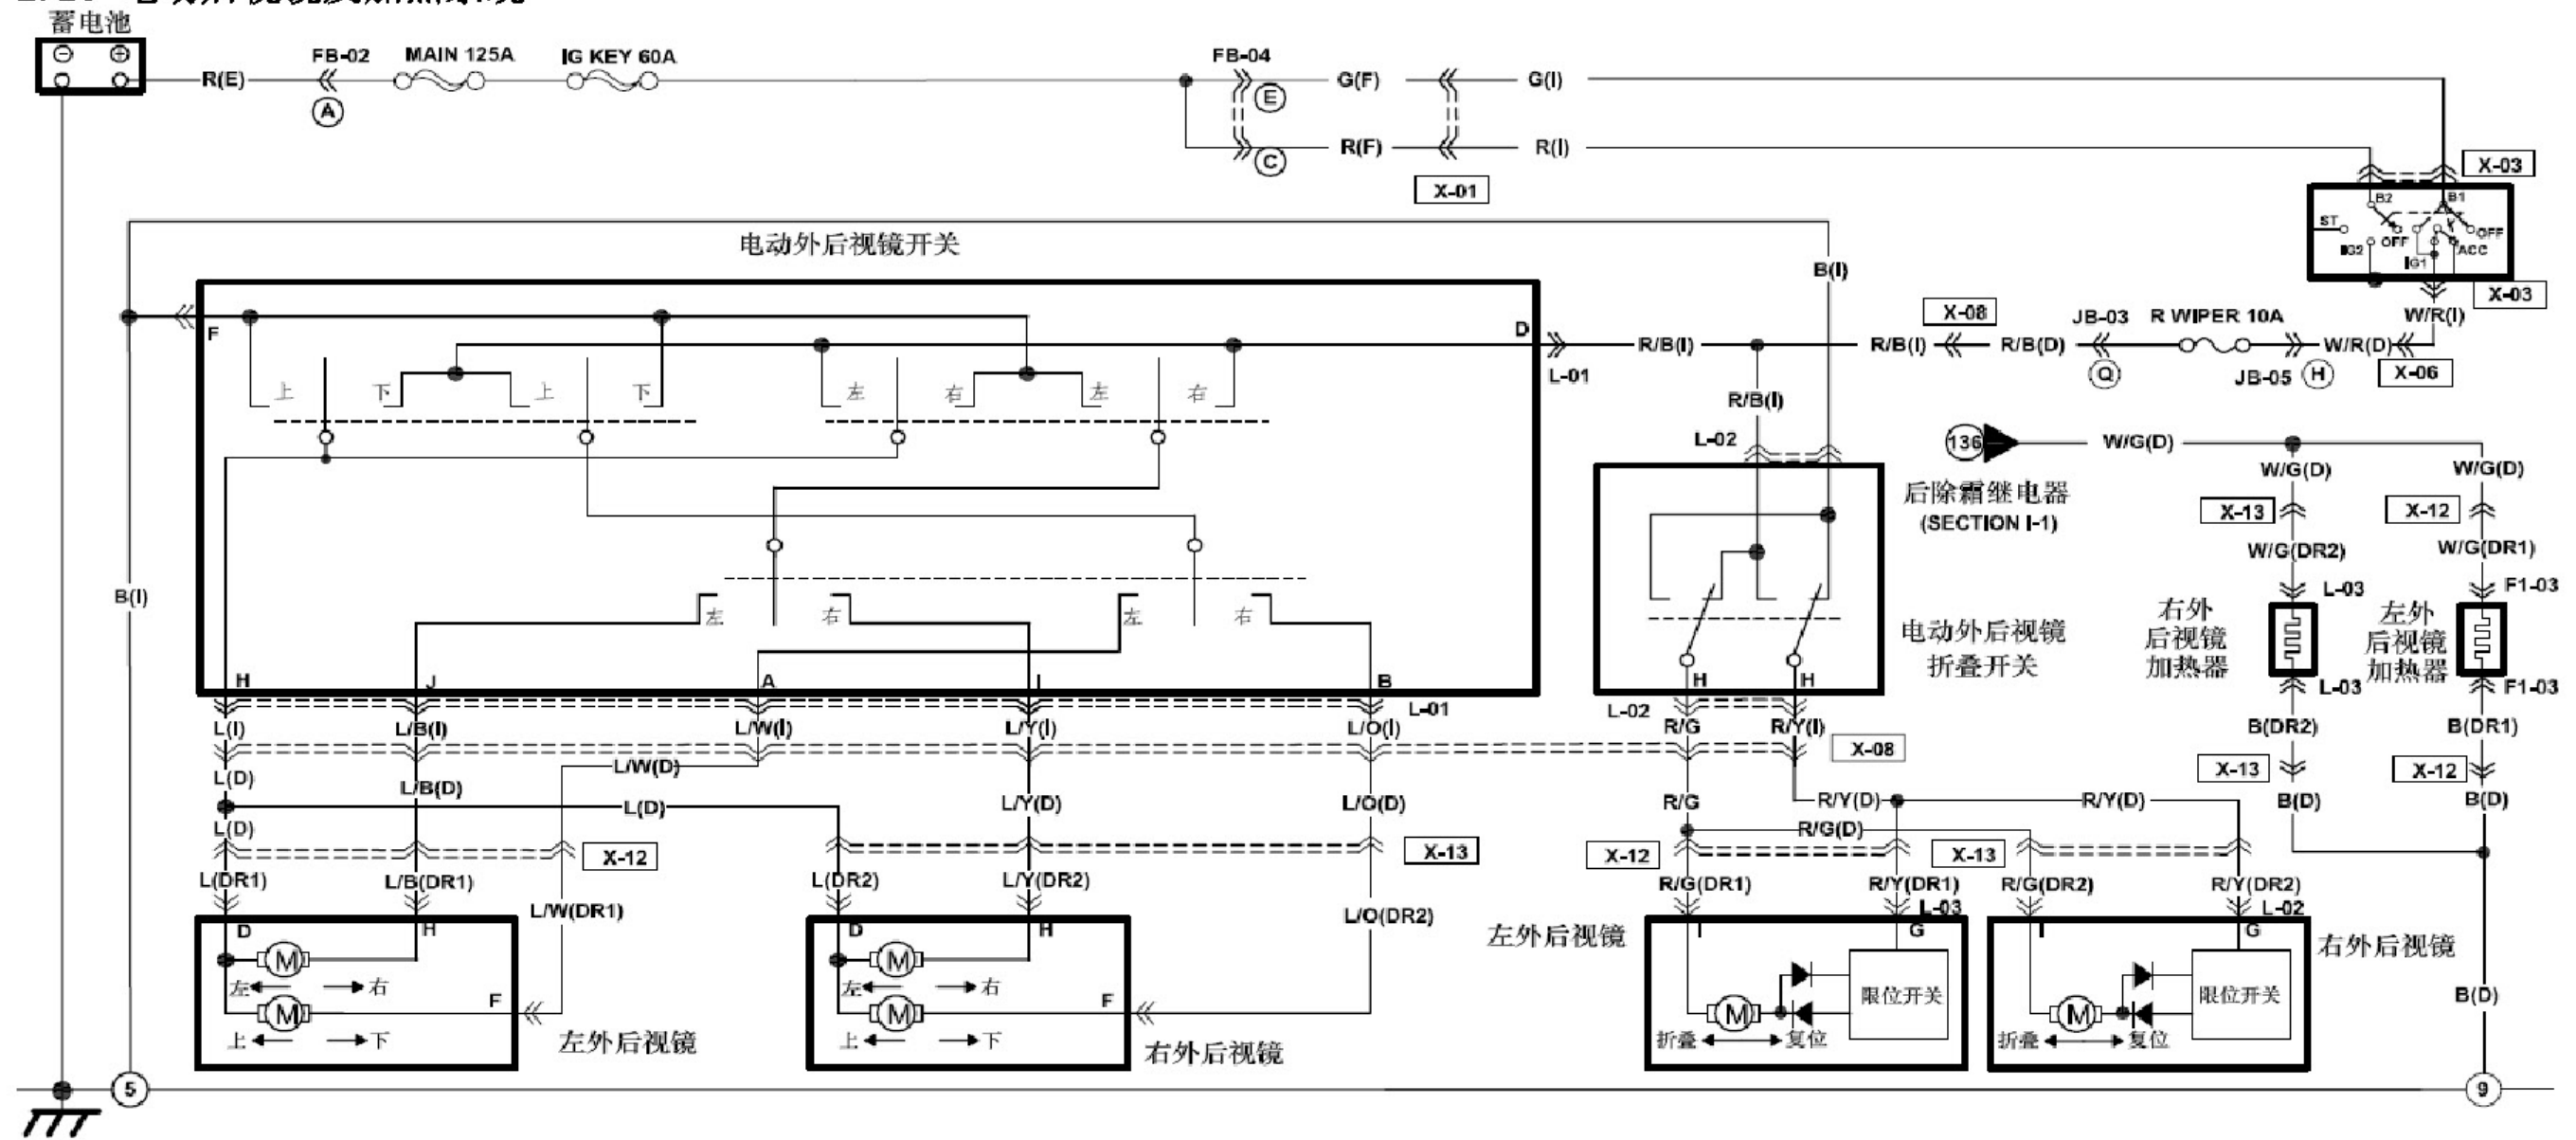

<p>L-01 电动外后视镜开关(I)</p> <table border="1"> <tr> <td>I</td> <td>C</td> <td>A</td> </tr> <tr> <td>L/Y</td> <td>*</td> <td>L/W</td> </tr> <tr> <td>L/B</td> <td>L</td> <td>R/B</td> </tr> <tr> <td>J</td> <td>H</td> <td>F</td> </tr> <tr> <td></td> <td>D</td> <td>B</td> </tr> </table>	I	C	A	L/Y	*	L/W	L/B	L	R/B	J	H	F		D	B	<p>F1-03 左外后视镜(DR1)</p> <table border="1"> <tr> <td>A</td> <td>I</td> </tr> <tr> <td>* Y/L</td> <td>W/G R/Y R/G</td> </tr> <tr> <td>* L</td> <td>L/W L/B B</td> </tr> <tr> <td>B</td> <td>J</td> </tr> </table>	A	I	* Y/L	W/G R/Y R/G	* L	L/W L/B B	B	J	<p>F1-04 右外后视镜(DR2)</p> <table border="1"> <tr> <td>A</td> <td>I</td> </tr> <tr> <td>* Y/B</td> <td>W/G R/Y R/G</td> </tr> <tr> <td>* L</td> <td>L/O L/Y B</td> </tr> <tr> <td>B</td> <td>J</td> </tr> </table>	A	I	* Y/B	W/G R/Y R/G	* L	L/O L/Y B	B	J	
I	C	A																																
L/Y	*	L/W																																
L/B	L	R/B																																
J	H	F																																
	D	B																																
A	I																																	
* Y/L	W/G R/Y R/G																																	
* L	L/W L/B B																																	
B	J																																	
A	I																																	
* Y/B	W/G R/Y R/G																																	
* L	L/O L/Y B																																	
B	J																																	
<p>L-02 后视镜折叠开关(I)</p> <table border="1"> <tr> <td>K</td> <td>I</td> <td>C</td> <td>A</td> </tr> <tr> <td>* *</td> <td>⊗</td> <td>*</td> <td>*</td> </tr> <tr> <td>LG</td> <td>R/B</td> <td>R/G</td> <td>B</td> </tr> <tr> <td>L</td> <td>J</td> <td>H</td> <td>F</td> </tr> <tr> <td></td> <td>D</td> <td>B</td> <td></td> </tr> </table>	K	I	C	A	* *	⊗	*	*	LG	R/B	R/G	B	L	J	H	F		D	B															
K	I	C	A																															
* *	⊗	*	*																															
LG	R/B	R/G	B																															
L	J	H	F																															
	D	B																																

