



## 5. 线束之间插接插件引脚功能图

### 5.1 连接插接1


C01

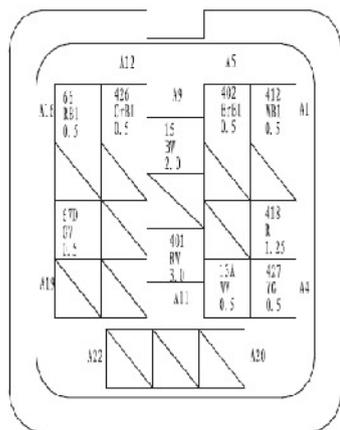

MT

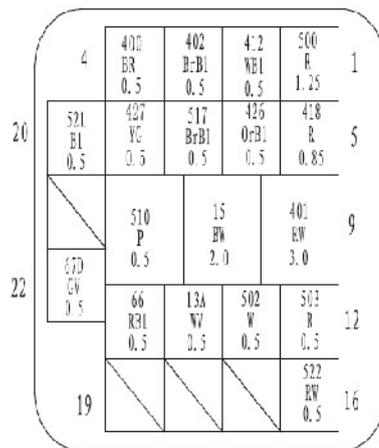


MT

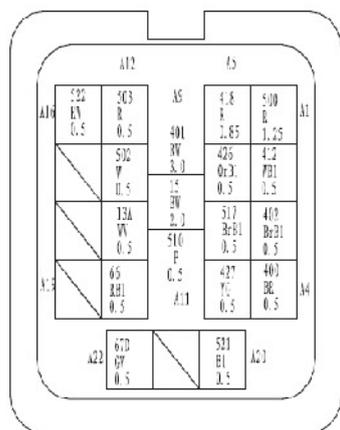

CVT


接发动机线束

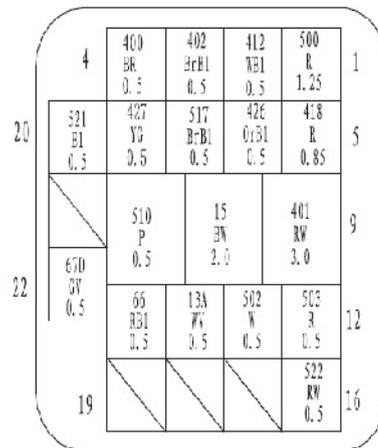


CVT

接前机舱线束

 C02




接驾驶室保险丝盒

 


接发动机机舱线束

## 5.2 连接插接2


—C03—

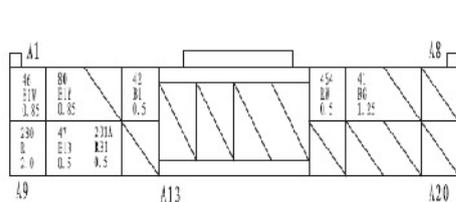


MT

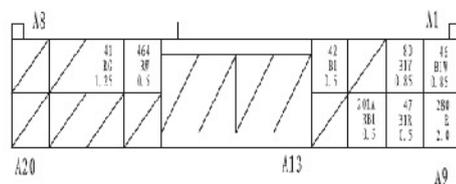

MT

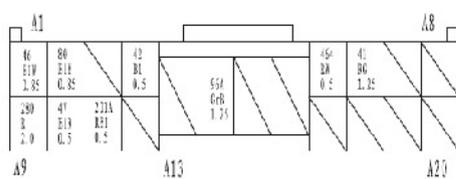

CVT

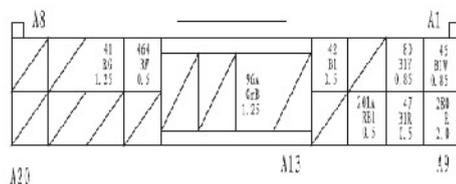


CVT


接驾驶室保险丝盒-A20

接仪表盘线束

—C04—

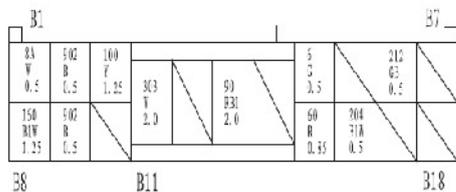


接驾驶室保险盒B-18

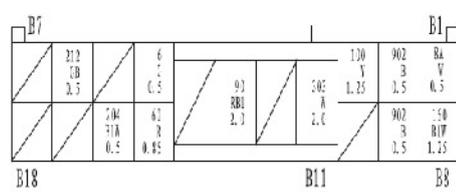


接仪表盘线束

—C05—


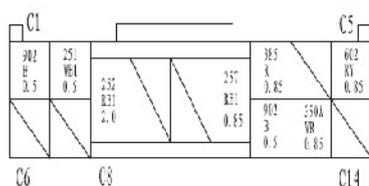


接驾驶室保险盒c-14

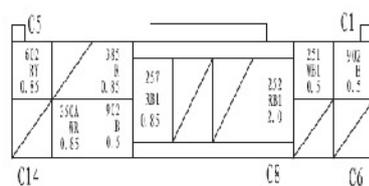


接仪表盘线束


### 5.3 连接插接3

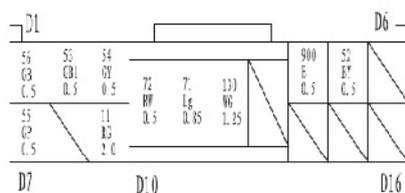 


MT

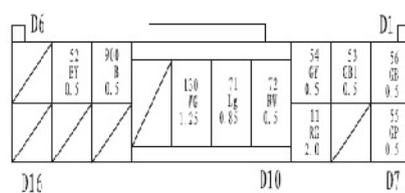

MT

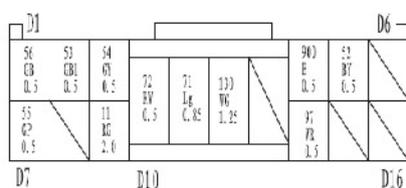



CVT

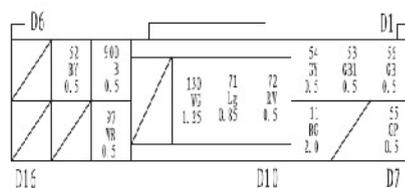


CVT

接驾驶室保险盒D-16

 
接仪表盘线束

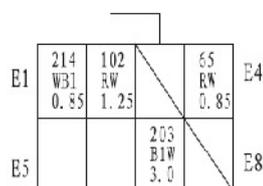


接驾驶室保险盒E-8

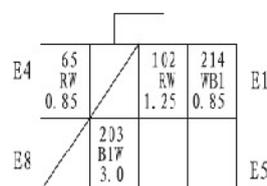

接仪表盘线束

 

接驾驶室保险丝盒H-1

 

接仪表盘线束

### 5.4 连接插接4

C09

8	71 Lg 0.5	41 MG 1.25	30 BY 0.5		65 XW 0.85	603 7P 0.5	421 Bw6 0.5	1
16	235 VW 0.5	336 XB 0.5	504 YR 0.5	605 B17 0.5	418 R 0.5		352 GB1 0.5	9

MT

1	422 YB 0.5	207 BY 0.5			60 E 0.85	51 XV 0.85	416 F/G 0.5	206 P/V 0.5	35C YR 0.85	9
10			502 YF 0.5	503 YV 0.5	408 V 0.5		214 V61 0.85	353 YB 0.5	423 P-31 0.5	18

MT

8	71 Lg 0.5	41 MG 1.25	30 BY 0.5		65 XW 0.85	603 7P 0.5	421 Bw6 0.5	51 XV 0.85	1
16	235 VW 0.5	336 XB 0.5	504 YR 0.5	605 B17 0.5	418 R 0.5	519 Or 0.5	352 GB1 0.5	50 R 0.85	9

CVT

1	51 XV 0.85	421 Bw6 1.5	603 7P 0.5	55 XV 0.85		30 BY 0.5	41 DG 1.25	71 Lg 0.5	8
9	61 R 0.85	352 GB1 0.5	519 Or 0.5	418 R 0.5	605 B17 0.5	414 V6 0.5	236 RB 0.5	235 VW 0.5	16

CVT

接仪表盘线束A

接发动机舱线束A

C10

9	55 GZ 0.5	54 F7 1.5	102 B1E 1.25	161 3/V 1.25	160 B1P 1.25	11 Z 2.0	12 V6 0.5	47 XW 0.5	1
18	602 ZL 0.45		36 RW 0.5	4E V 0.5	35 R1 0.5	34 X1 0.5		167 B17 2.85	163 W6 1.25

MT

不一致

1	465 H Or 0.5	38 A 0.85	409 P 0.5	453 F/B 1.5	454 V6 0.5			355 2w6r 0.5	15 V6 1.5	10
11	414 2w6r 0.5	401 BY 1.25	452 Vw81 1.25	2.2 CB 0.5	480 2e 0.5	437 B3 0.5	463 EwV 1.5	480 30 0.5	434 R7 0.5	20

MT

9	55 GZ 0.5	54 F7 1.5	102 B1E 1.25	161 3/V 1.25	160 B1P 1.25	11 Z 2.0	12 V6 0.5		330 30 0.5	1
18	602 ZL 0.45	96 Ew 1.25	36 RW 0.5	4E V 0.5	35 R1 0.5	34 X1 0.5		167 B17 2.85	163 W6 1.25	10

CVT

1	13 EB 0.5		12 W 0.5	10 Y 2.1	140 B/V 1.25	151 B11 1.25	163 E1R 1.25	54 G1 0.5	35 GP 0.5	9
10	143 P/V 1.25	157 207 0.85		34 X1 0.5	35 R1 0.5	86 A 0.5	35 XW 0.5	56 R7 1.25	302 XV 0.85	18

CVT

接仪表盘线束B

接发动机舱线束B

### 5.5 连接插接5

—(C11)—

9	350 NR 0.5	205 PT 0.5	435 Gr 0.5	531 VE 0.5	528 EB1 0.5	527 YR 0.5	526 TG 0.5	207 PT 0.5	425 YR 0.5	1
18	423 PE1 0.5	355 VB 0.5	214 P31 0.85	/	503 TW 0.5	503 R 0.5	503 Y 0.5	/	/	10

MT

不一致

16 NB 0.5	/	355 3rdCr 0.5	/	515 Lg 0.5	429 Gr31 0.5	430B BB 0.5	419 P 0.5	3 A 0.85	435 B1Cr 0.5	1
434A Gr31 0.5	442C EV 0.85	439A BR 0.5	440 B-3 0.5	430C F 0.5	441 V 0.5	212 GB 0.5	431 NB 0.85	411 RT 0.85	420 OrCr 0.5	11

MT

9	350 NR 0.85	206 FT 0.5	435 Gr 0.5	521 VB 0.5	528 YR 0.5	527 YE 0.5	526 TG 0.5	207 R 0.5	422 VB 0.5	1
18	423 P31 0.5	353 VB 0.5	214 AB1 0.85	/	503 TW 0.5	503 R 0.5	502 A 0.5	/	/	10

CVT

1	425 VB 0.5	207 RT 0.5	525 TC 0.5	527 YR 0.5	528 YR1 0.5	531 YP 0.5	435 Gr31 0.5	205 PT 0.5	350 PR 0.85	9
10	/	/	502 VP 0.5	503 PT 0.5	422 YV 0.5	/	214 NB1 0.85	355 VE 0.5	425 P31 0.5	18

CVT

接仪表板线束A

接发动机线束A(白)

—(C12)—

10	15 NB 0.5	/	356 3rdCr 0.5	/	437 Gr31 0.5	430B B1A 0.5	419 F 0.5	4 Y 2.0	445 B1Cr 0.5	1
20	434A Gr31 0.85	442C RT 0.85	439A BB 0.5	440 Ev7 0.5	430C * 0.5	441 CB 0.5	431 YR1 0.85	401 R 0.85	358 B. 0.5	11

MT

1	464 B1Cr 0.5	3 V 2.0	415 P 0.5	430B B1A 0.5	429 Gr31 0.5	/	356 3rdCr 0.5	16 VB 0.5	10	
11	358 B1 0.5	401 RV 0.85	431 YR1 0.85	212 GB 0.5	441 YR 0.5	430C T 0.5	440 Ev7 0.5	439A BB 0.5	442C RT 0.85	20

MT

10	15 NB 0.5	/	355 3rdCr 0.5	/	515 Lg 0.5	425 Gr31 0.5	430B 30 0.5	419 P 0.5	4 Y 0.85	445 E1Cr 0.5
20	434A Gr31 0.5	442C RT 0.85	439A BR 0.5	440 Br7 0.5	430C T 0.5	441 7 0.5	212 GB 0.5	431 YR1 0.85	401 R 0.85	11

CVT

10	445 B1Cr 0.5	3 V 0.85	415 P 0.5	430B BB 0.5	429 Gr31 0.5	515 Lg 0.5	355 3rdCr 0.5	16 NB 0.5	10	
11	426 OrCr 0.5	401 RW 0.85	430 YR1 0.85	212 CB 0.5	441 F 0.5	430C Y 0.5	440 Ev7 0.5	439A BB 0.85	442C RT 0.85	20


CVT

接仪表板线束B


接发动机线束B

### 5.6 连接插接6

C13

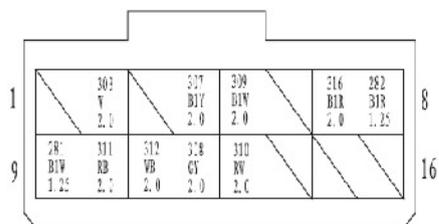


接仪表线束A

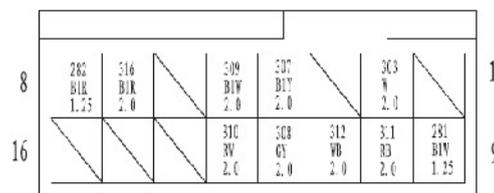


接左前车门线束A(白)

C14

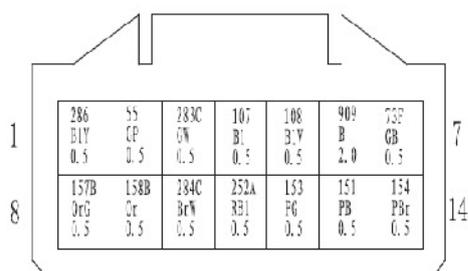


接仪表线束B

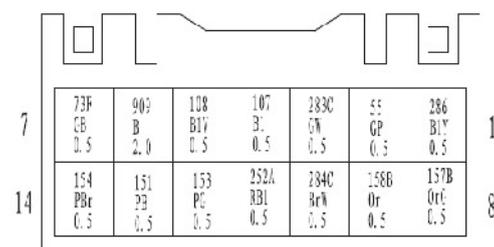


接左前车门线束B

C15

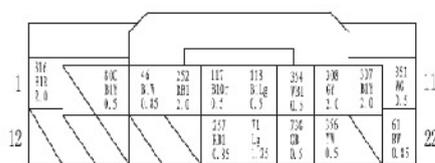


接仪表盘线束A

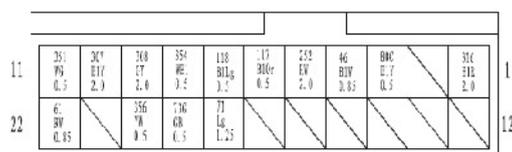


接车身线束A

C16

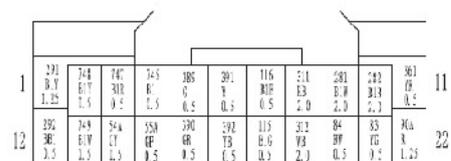


接仪表盘线束B

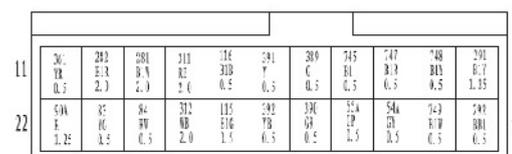


接车身线束B

### 5.7 连接插接7

C17

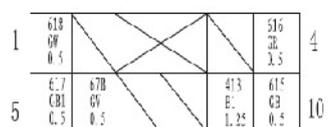


接车身线束

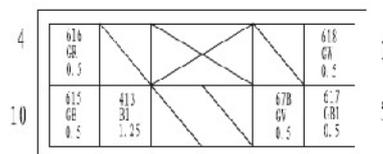


接发动机舱线束

C18

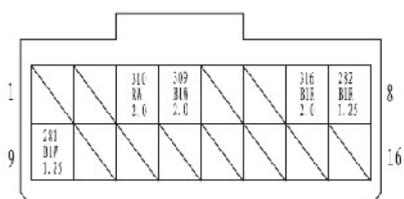


接仪表线束A

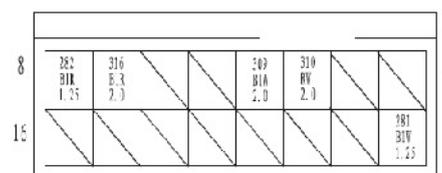


接右前车门线束A

C19

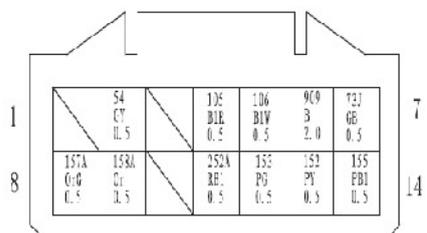


接仪表线束B

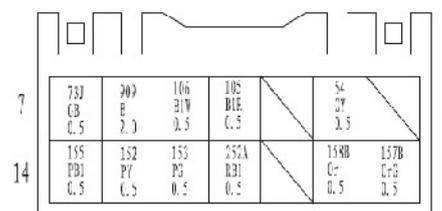


接右前车门线束B

C20

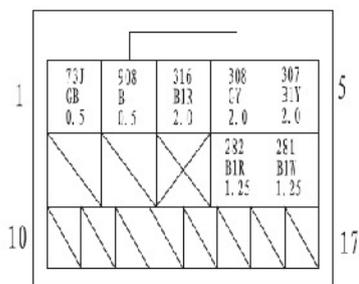


接车身线束

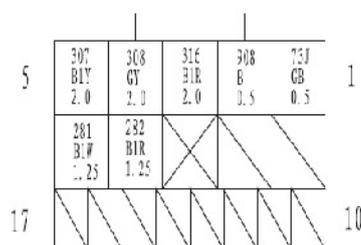


接左后门线束

### 5.8 连接插接8

C21

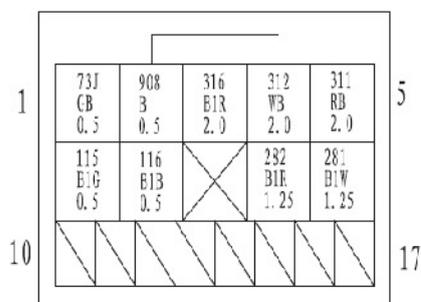


接车身线束

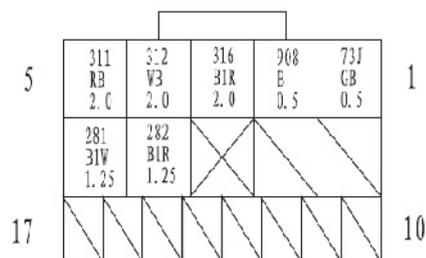


接右后门线束

C22

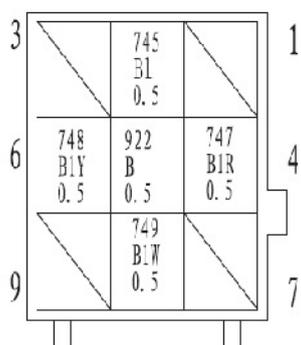


接后车身线束

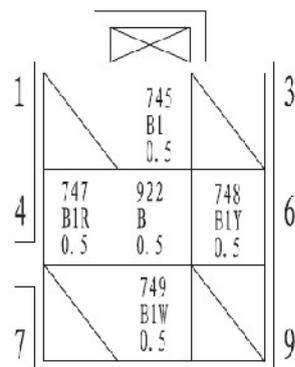


接车身线束


C23

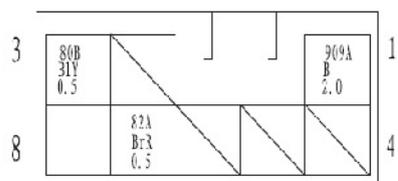

MT

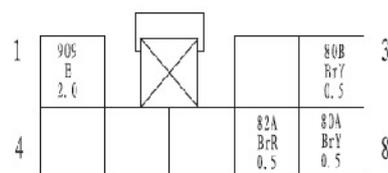


MT

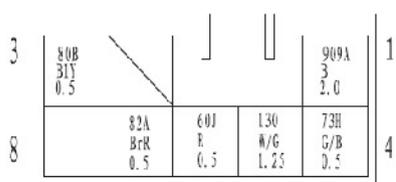

CVT

接顶篷线束

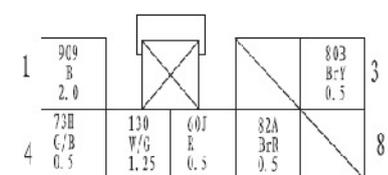

CVT

仪表板线束