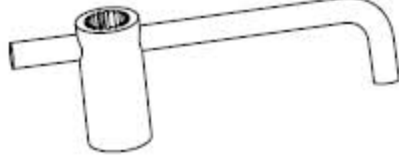
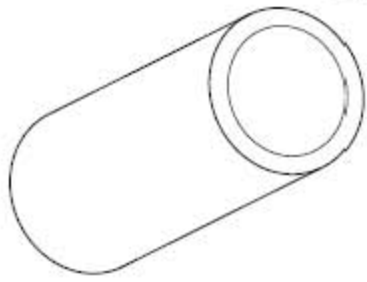
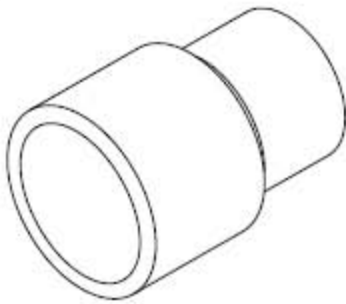
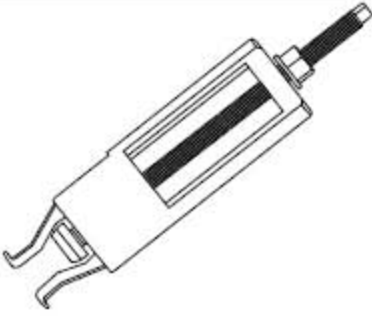
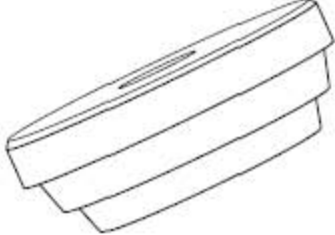

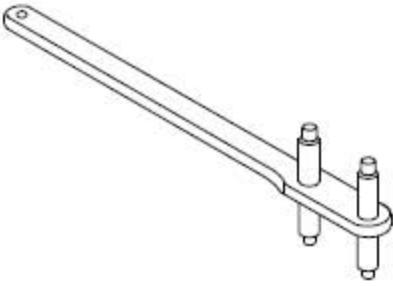
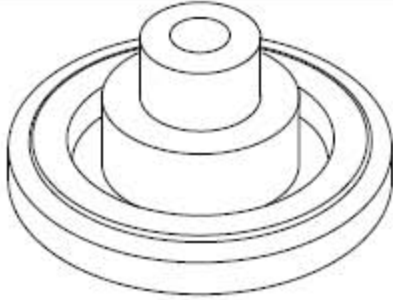


3.9 专用工具和设备

3.9.1 专用工具列表

序号		工具号	名称
1	 <p>FC01-2001b</p>	GL201-001	输入轴固定工具
2	 <p>FC01-2002b</p>	GL201-002	输入轴油封安装工具
3	 <p>FC01-2003b</p>	GL201-003	输入输出轴系零件用装配工具
4	 <p>FC01-2004b</p>	GL201-004	输入轴变速器头轴承拆装工具

5	 <p>FC01-2005b</p>	GL201-005	输出轴离合器头轴承外环拆卸工具
6	 <p>FC01-2006b</p>	GL201-006	输出轴轴承外环装配工具
7	 <p>FC01-2007b</p>	GL201-007	输出轴轴承拆装工具
8	 <p>FC01-2008b</p>	GL201-008	输出轴调整工具

9	 FC01-2010b	GL201-009	差速离合器壳体油封拆装工具
10	 FC01-2010b	GL201-010	差速变速器壳体油封拆装工具
11	 FC01-2011b	GL201-011	差速器轴承拆装工具
12	 FC01-2028b	GL201-014	换档杆及选档杆油封安装工具