

B1017, B1020, B1021 OCCUPANT SENS C/U

Description

Suppresses the deployment of front passenger air bag when the condition of passenger seat is empty or child and child-seat. And turns on front passenger air bag OFF indicator (Cut-off telltale) lamp when the condition of passenger seat is child-seat and child. In case of malfunction the blinking of the air bag warning lamp report the malfunction to driver and by the on board self-diagnosis system or electro-diagnosis tester CONSULT-III can detect the cause.

OPERATION

This unit classifies occupant in passenger seat and detects electrical malfunctions in Occupant Classification System (OCS), and transmits malfunction information to air bag control unit.

STRUCTURE

It is integrated into the seat sensor mat and detects the occupants with Occupant Classification System (OCS) control unit that classifies the occupants.

INSTALLATION

Occupant Classification System (OCS) control unit is installed in the passenger seat cushion.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
B1017 B1020 B1021	OCCUPANT SENS C/U [UNIT FAIL]	Trouble occurs in OCS-C/U	<ul style="list-style-type: none"> • Disconnection of wiring harness • Internal breakdown in occupant classification system (C/U)

DTC CONFIRMATION PROCEDURE

1).INSPECTION START

Turn ignition switch ON.

2).CHECK SELF-DIAG RESULT

A).Check the screen of CONSULT-III.

B).Is malfunctioning part detected?

YES >> Refer to SRC-29, "Diagnosis Procedure".

NO >> INSPECTION END.

3).INSPECTION START

Turn ignition switch ON.

4).CHECK AIR BAG WARNING LAMP

A).Check the air bag warning lamp status.

B).Is malfunctioning part detected?

YES >> Refer to warning lamp flash code chart.

NO >> INSPECTION END.

Diagnosis Procedure

1).CHECK HARNESS CONNECTOR

A).Check the connection of harness connector.

B).Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness connectors.

2).CHECK WIRING HARNESS

A).Check the wiring harness externals.

B).Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace wiring harness.

3).CHECK AIR BAG DIAGNOSIS SENSOR UNIT

A).Replace air bag diagnosis sensor unit.

B).Check the screen of CONSULT-III.

C).Is the inspection result normal?

YES >> INSPECTION END.

NO >> Check the intermittent incident. Refer