

B1211 ROLLOVER DETECTION

Description

When detect a component damage resulting from a side collision, brinks or illuminates the air bag warning lamp to inform the driver. Malfunctioning can be detected by the CONSULT-III.

OPERATION

The front seat belt pre-tensioner and side curtain air bag are operated by the decision of the air bag diagnosis sensor unit signal of the rollover.

STRUCTURE

It consists of front seat belt pre-tensioner, side curtain air bag and air bag diagnosis sensor unit.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
B1211	ROLLOVER DETECTION	Front seat belt pre-tensioner, side curtain air bag module are deployed because of rollover detection	—

DTC CONFIRMATION PROCEDURE

1) INSPECTION START

Turn ignition switch ON.

2) CHECK SELF-DIAG RESULT

A) Check the screen of CONSULT-III.

B) Is malfunctioning part detected?

YES >> Refer to SRC-134, "Diagnosis Procedure".

NO >> INSPECTION END.

Diagnosis Procedure

1).CHECK FRONT SEAT BELT PRE-TENSIONER

- A).Check front seat belt pre-tensioner.
- B).Is the front seat belt pre-tensioner deployed?
 - YES >> Replace front seat belt pre-tensioner.
 - NO >> GO TO 2.

2).CHECK SIDE CURTAIN AIR BAG MODULE

- A).Check side curtain air bag module.
- B).Is the side curtain air bag module deployed?
 - YES >> Replace side curtain air bag module.
 - NO >> GO TO 3.

3).CHECK AIR BAG DIAGNOSIS SENSOR UNIT

- A).Check air bag diagnosis sensor unit.
- B).Is the front seat belt pre-tensioner and/or side curtain air bag module deployed?
 - YES >> Replace air bag diagnosis sensor unit.
 - NO >> GO TO 4.

4).FINAL CHECK

- A).Check the screen of CONSULT-III and/or Air bag warning lamp status.
- B).Is the inspection result normal?
 - YES >> INSPECTION END.
 - NO >> Check the intermittent incident.