



# Turn Signal and Hazard Warning Light

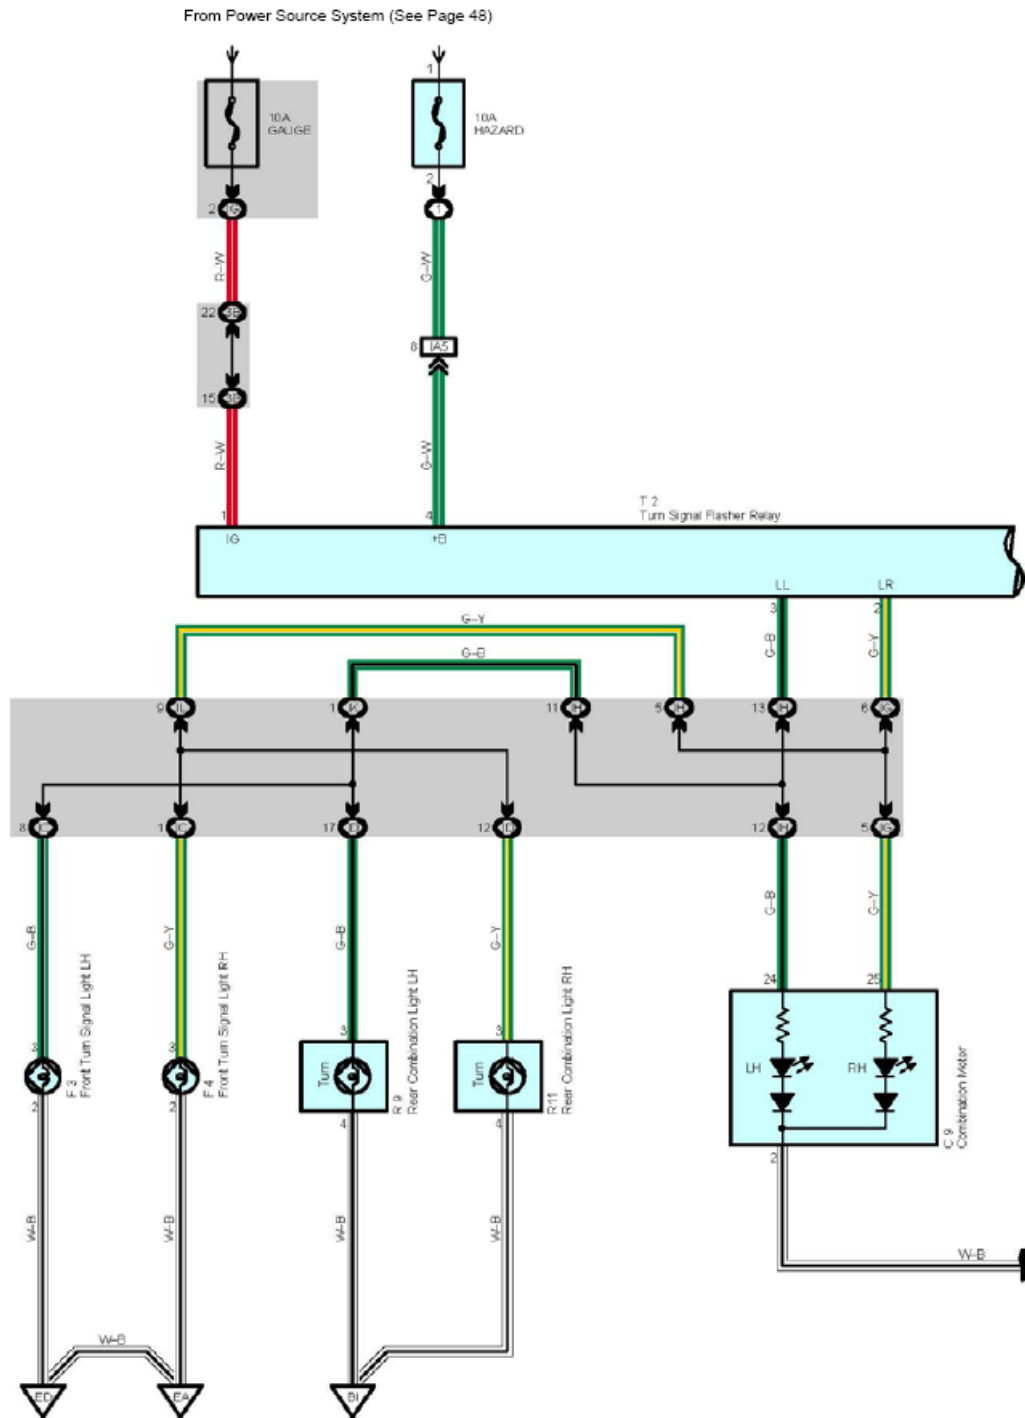

\* 1 : w/ Wireless Door Lock  
\* 2 : w/o Wireless Door Lock

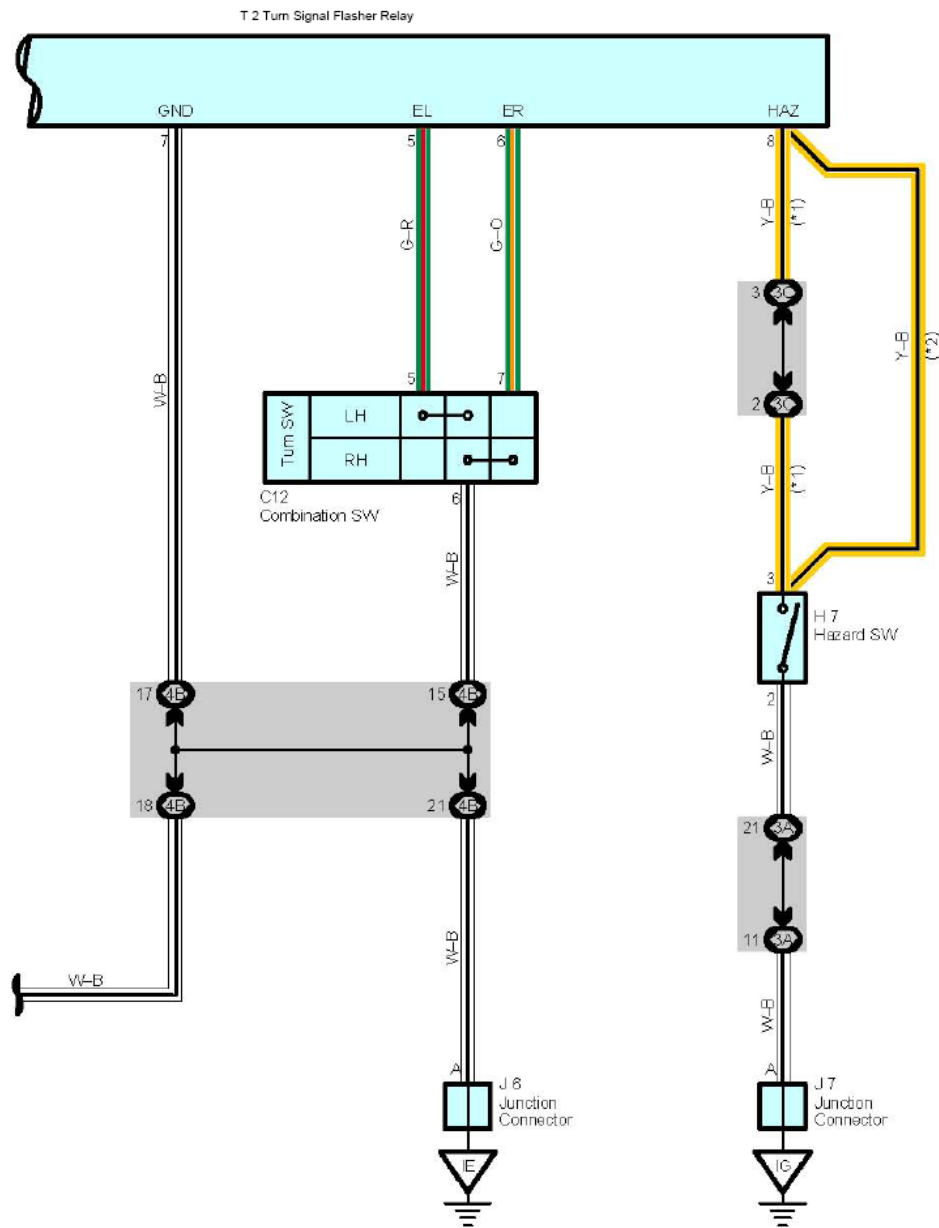

**Service Hints****T2 Turn Signal Flasher Relay**

1-Ground : Approx. 12 volts with the ignition SW at ON position

7-Ground : Always continuity

4-Ground : Always approx. 12 volts

**Relay Blocks**

Code	Relay Blocks (Relay Block Location)
1	Engine Room R/B (Engine Compartment Left)

**Junction Block and Wire Harness Connector**

Code	Junction Block and Wire Harness (Connector Location)
IC	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IG	
IH _	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel) Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IK	
IL _	
3A	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)(g )
3B _	
3C _	
4B	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

**Connector Joining Wire Harness and Wire Harness**

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA5	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)

**Ground Points**

Code	Ground Points Location
EA	Front Right Fender
ED	Front Left Suspension Tower
IE	Behind the Combination Meter
IG	Right Kick Panel
BI	Lower Back Panel