

## Fuel Cutoff Switch Reset

Vehicles are equipped with Fuel Cutoff Switch. In case of vehicle crash, it activates this switch to cut off fuel supply and prevent more severe disaster due to fuel leakage. After repair, please reset the switch according to the following procedures to recover the fuel supply:

- 1). Turn ignition switch to OFF position;
- 2). Make sure no leakage with fuel system;
- 3). Fuel Cutoff Switch is installed behind driver foot pedal. Press RESET button on the Fuel Cutoff Switch to reset;
- 4). Turn ignition switch to ON position;
- 5). Few seconds must be allowed to elapse before turning ignition switch to OFF position again.

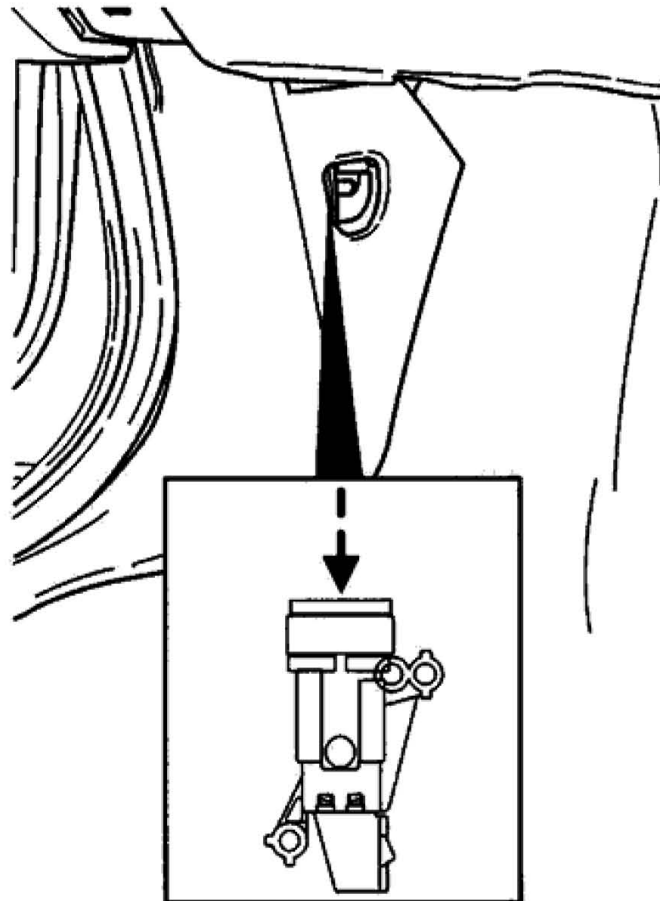


Figure of Fuel Cutoff Switch