


Clock without Automatic Air Conditioning

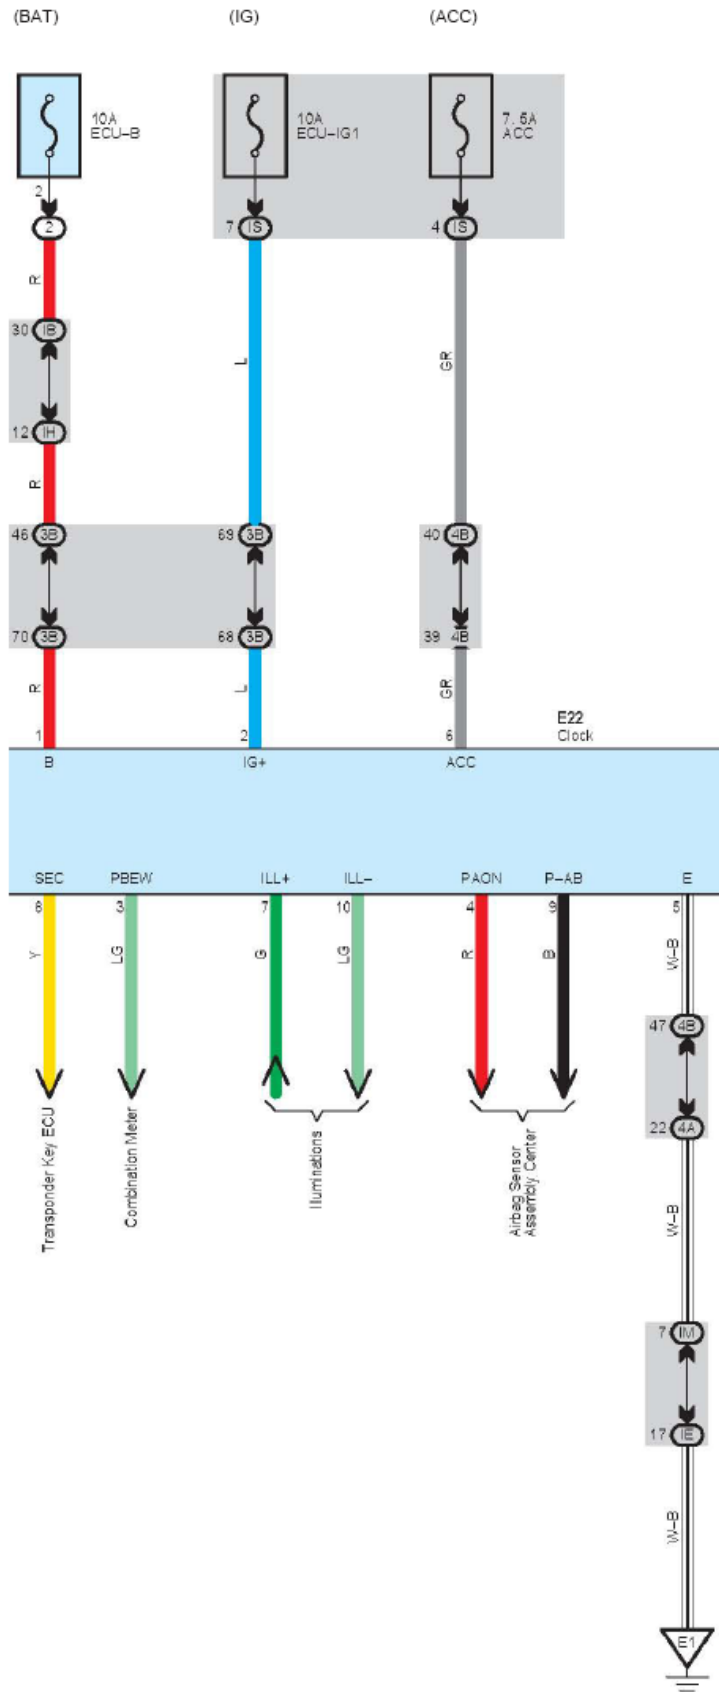

Relay Blocks

Code	Relay Blocks (Relay Block Location)
2	Engine Room R/B No.2 (Engine Compartment Right)Engine Room R/B No.2 (Engine Compartment Right)

Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
3B	Instrument Panel Wire and J/B No.3 (Instrument Panel Center)
4A	Instrument Panel Wire and J/B No.4 (Instrument Panel Center)Instrument Panel Wire and J/B No.4 (Instrument Panel Center)
4B_	
IB	Engine Room Main Wire and Instrument Panel J/B (Cowl Side Left)
IE	
IH_	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)
IM	
IS_	

Ground Points

Code	Ground Points Location
E1	Left Kick Panel

LAUNCH