


### Light Auto Turn Off System

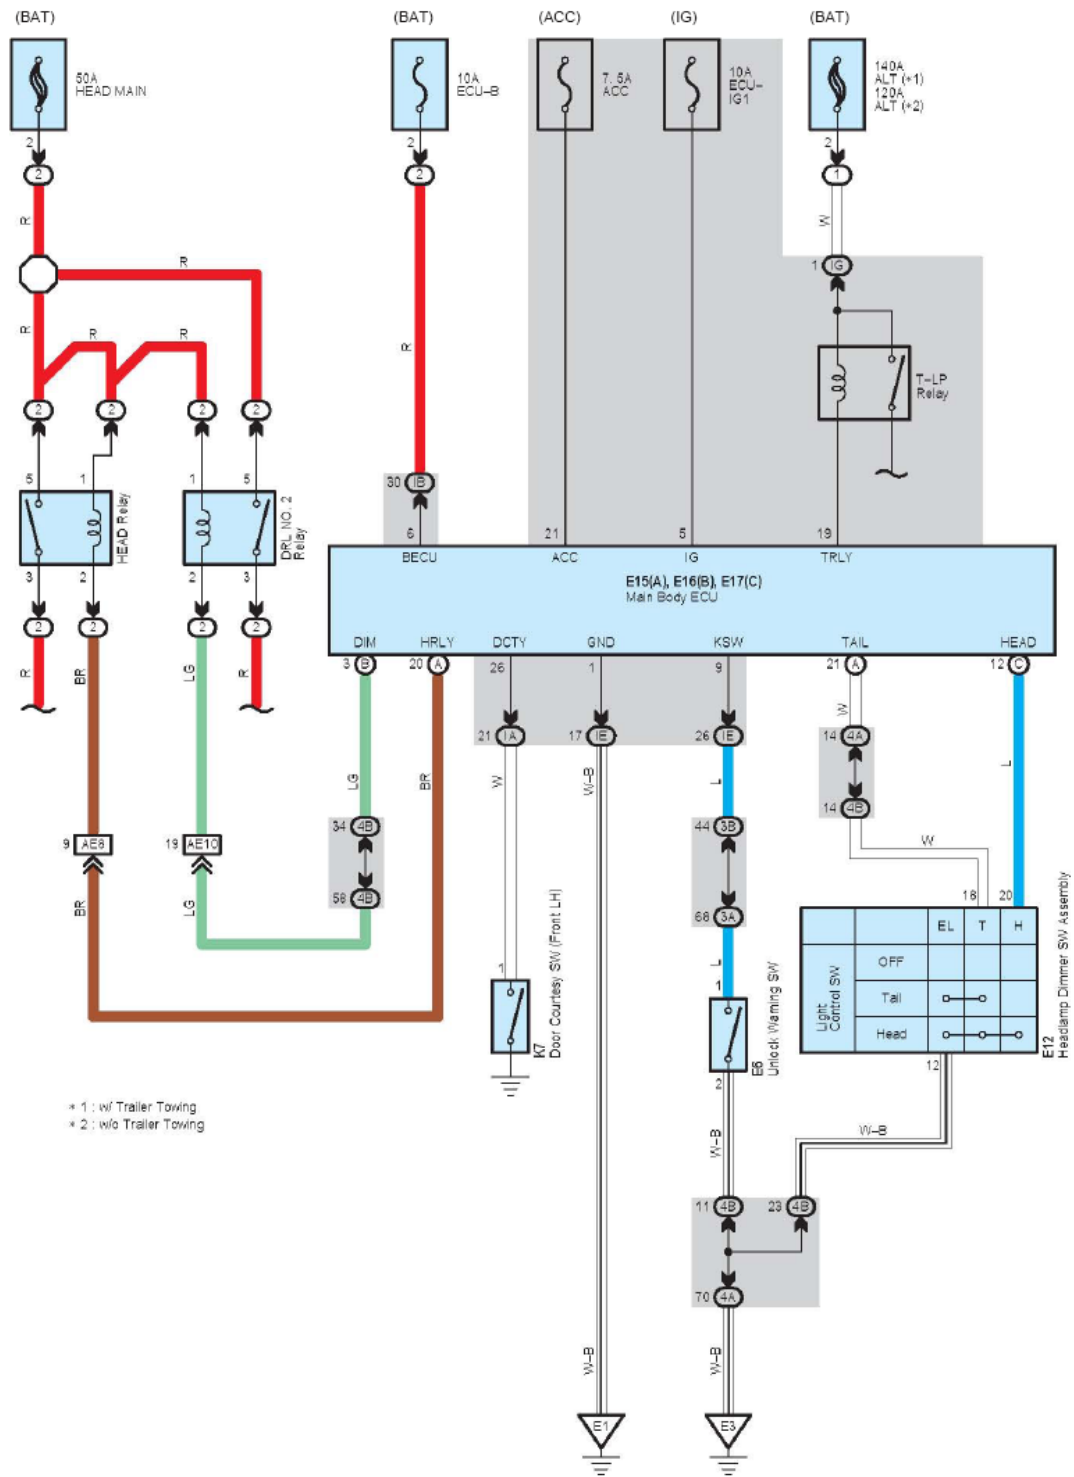

## Relay Blocks

Code	Relay Blocks (Relay Block Location)
1	Engine Room R/B No.1 (Engine Compartment Left)Engine Room R/B No.1 (Engine Compartment Left)
2	Engine Room R/B No.2 (Engine Compartment Right)Engine Room R/B No.2 (Engine Compartment Right)

## Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
AE8	Engine Room Main Wire and Instrument Panel Wire (Right Side of the Instrument Panel)Engine Room Main Wire and Instrument Panel Wire (Right Side of the Instrument Panel)

## Ground Points

Code	Ground Points Location
E1	Left Kick Panel
E3	Instrument Panel Reinforcement Center

LAUNCH