

B1414、 B1415、 B1416、 B1417 SIDE IMPACT SENSOR

DTC DESCRIPTION

The detecting system for side crash consists of the SRSCM and four Side Impact Sensors (SIS). The SRSCM sets above DTC(s) if it detects that wrong SIS is used.

DTC	FAULT DESCRIPTION
B1414	SIDE IMPACT SENSOR [REAR-DRIVER] WRONG ID
B1415	SIDE IMPACT SENSOR [REAR-PASSENGER] WRONG ID
B1416	SIDE IMPACT SENSOR [REAR-DRIVER] WRONG ID
B1417	SIDE IMPACT SENSOR [REAR-PASSENGER] WRONG ID

DTC DETECTING CONDITION

DTC	Condition	Probable cause
B1414 B1415 B1416 B1417	<ul style="list-style-type: none"> • Wrong Side Impact Sensor (SIS) • SRSCM Malfunction 	<ul style="list-style-type: none"> • Side Impact Sensor (SIS) • SRSCM

TERMINAL & CONNECTOR INSPECTION

Refer to the DESCRIPTION in this TROUBLESHOOTING section.

INSPECTION PROCEDURE

If above DTC is detected replace the side impact sensor.