


Back-Up Light

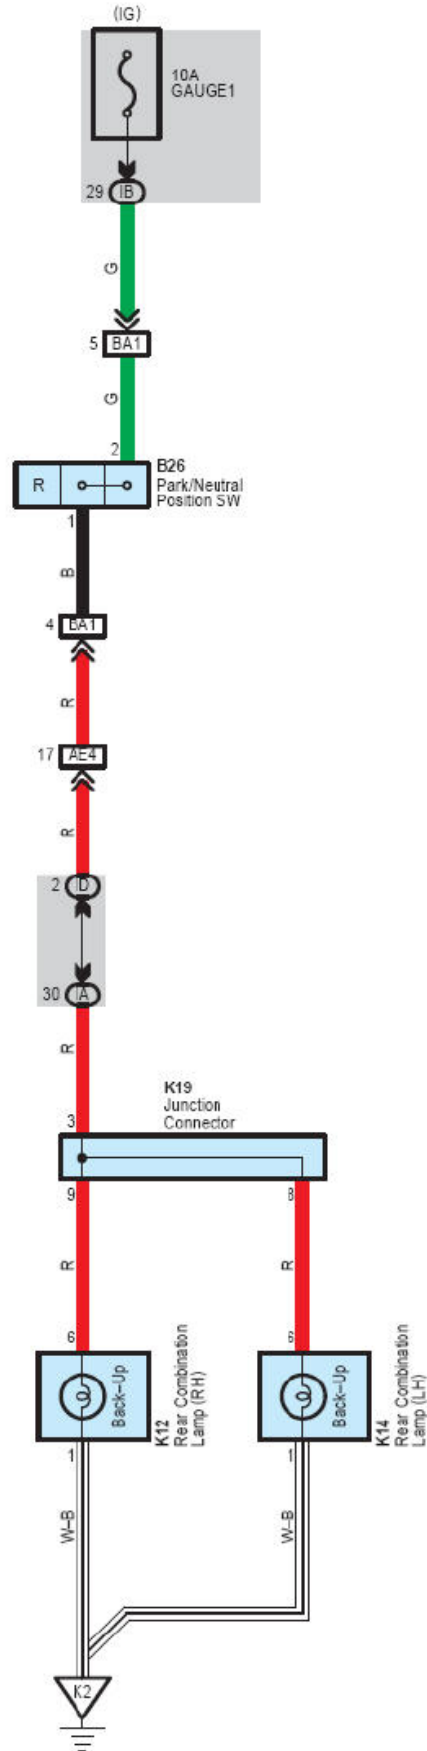

Code	Junction Block and Wire Harness (Connector Location)
IA	Floor Wire and Instrument Panel J/B (Cowl Side Left)
IB	Engine Room Main Wire and Instrument Panel J/B (Cowl Side Left)
ID	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)

Code	Joining Wire Harness and Wire Harness (Connector Location)
AE4	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
BA1	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B No.1 and Engine Room J/B No.1) Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B No.1 and Engine Room J/B No.1)

Code	See Page	Ground Points Location
K2	67	Left Quarter Panel