


# Radio and Player

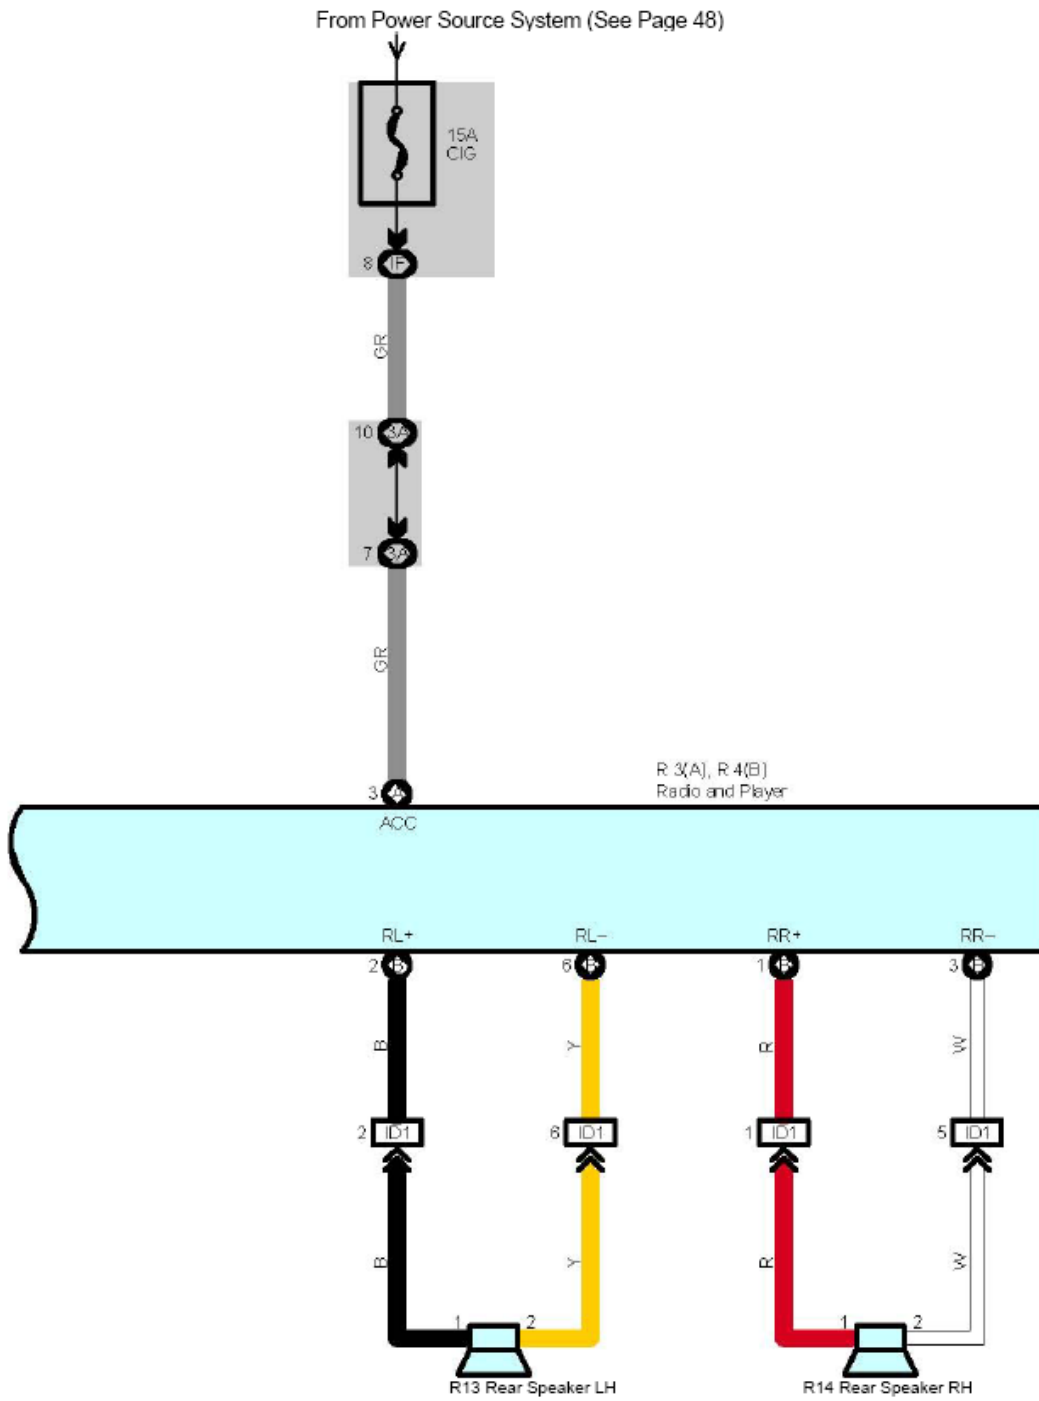

## Service Hints

### R3 (A) Radio and Player

(A) 4–Ground : Always approx. 12 volts

(A) 3–Ground : Approx. 12 volts with the ignition SW at ACC or ON position

(A) 7–Ground : Always continuity

## Relay Blocks

Code	Relay Blocks (Relay Block Location)
1	Engine Room R/B (Engine Compartment Left)

## Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
IC	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IF	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel) Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	
3A	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
4C	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

## Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
IC2	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID1	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IJ1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BE1	Speaker Tweeter LH Wire and Front Door LH Wire (Inside of the Front Door LH)
BF1	Speaker Tweeter RH Wire and Front Door RH Wire (Inside of the Front Door RH)

## Ground Points

Code	Ground Points Location
IF	Behind the Combination Meter