


Remote Control Mirror

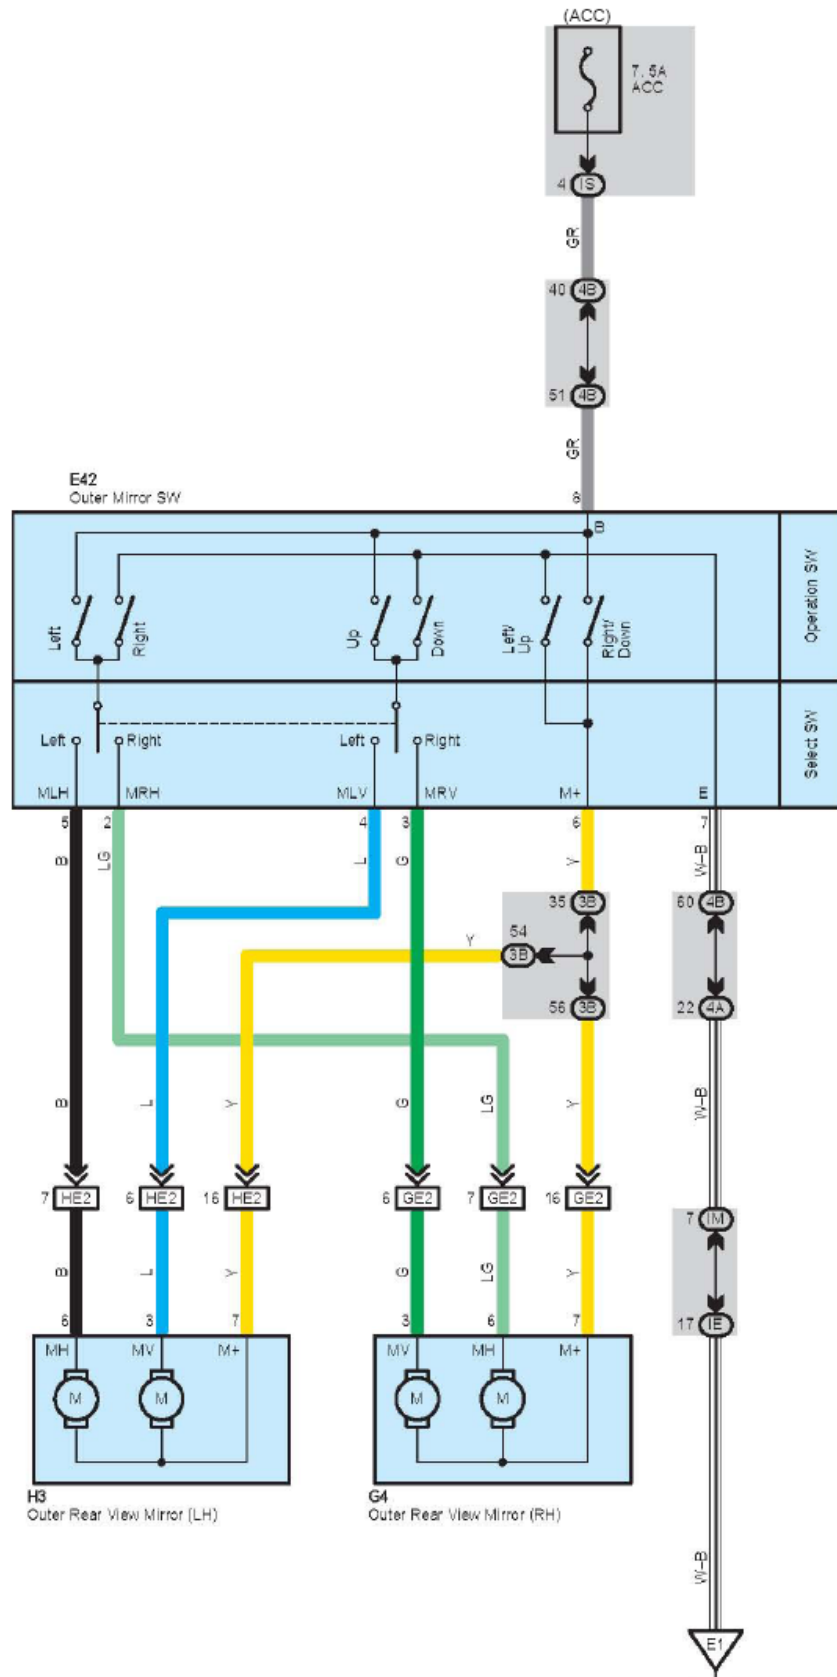

Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
3B	Instrument Panel Wire and J/B No.3 (Instrument Panel Center)
4A 4B _	Instrument Panel Wire and J/B No.4 (Instrument Panel Center)Instrument Panel Wire and J/B No.4 (Instrument Panel Center)
IE	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)
IM	
IS	

Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
GE2	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
HE2	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)

Ground Points

Code	Ground Points Location
E1	Left Kick Panel

LAUNCH