Resetting the counter for Transmission oil, change

This function is intended to reset oil degradation counter status.


Now we take XC90 2007 30759315 AA (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.

1. step 1: XC90

SELECT MENU				
V70 XC(-00	0)		(a	
V70 XC(O1-	-) /XC70 (-01	7)		
XC70 (08-)				
790				
XC90				
XC90 V8				
C30				
C70 (06-)				
PAGE UP		PAGE DOWN		
HOME	BACK	PRIMI	HELP	
Start		₽ ×	፷ 16:40	

2. step 2: select year

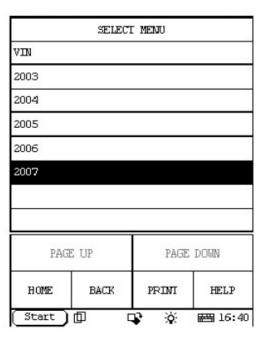


3. step 3: select TCM


SELECT MENU				
General Service				
ECM(Engine Control Module)				
DIESEL ENG(Fuel system/Combined system)				
TCM(Transmission Control Module)				
ABS/BCM(Anti-brake System Module)				
SRS(Supplemental Restraint System Module)				
CEM(Central electrical module)				
PAGE UP		PAGE DOWN		
HOME	BACK	PRINT	HELP	
Start		₽ ☆	四 16:41	

4. step 4: Select special function

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

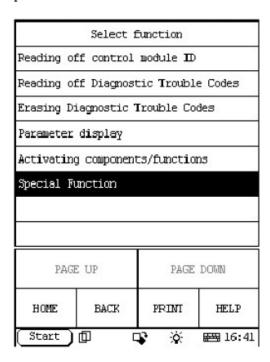

step 5:
 Select Resetting the counter for Transmission oil, change

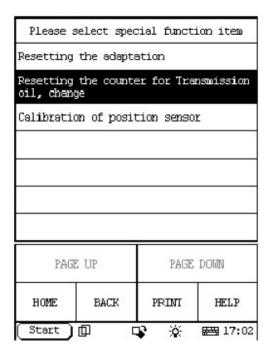


step 6:

The information of Resetting the counter for Transmission oil, change:

Hint: The transmission control module (TCM) has a counter for the oil's quality that counts up when the transmission is exposed to very heavy loads or high ambient temperature. If the counter is not reset when draining/changing oil, there is a risk that a diagnostic trouble code may be generated under incorrect conditions. That is why it is important that the counter for Transmission oil, change is reset.

Note! This only applies when the transmission oil is changed and when the oil is changed during repairs to the transmission's temperature sensor.

Ignition on

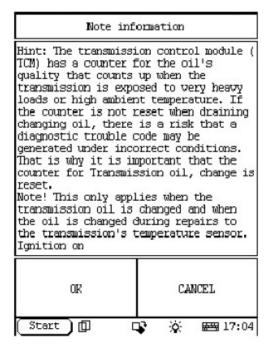


7. step 7:

Note! In some Diagnostic Part Number maybe has not displayed Item functions, go to step 8. Select OK, then it will display one Item function:

Resetting oil degradation counter, status

When you select any one item, it will send command to vehicle and show result to you (see step 8).

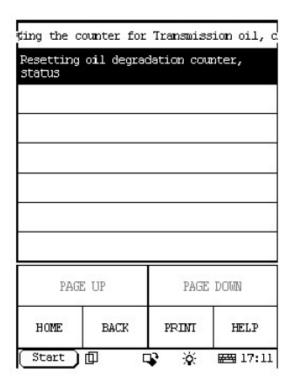

8. step 8:

If Reset successes, it will display: Operation finished.

Otherwise it will display: Operation failed. In the case, please try again.

