

# DTC P0722 output shaft speed (OSS) sensor

## Circuit Description

The output shaft speed (OSS) sensor assembly provides vehicle speed information to the transmission control module (TCM). The OSS sensor assembly is a permanent magnet generator. The sensor is mounted in the transmission case facing the rear internal gear which is splined to the output shaft assembly. As the output shaft and internal gear rotate, the toothed rotor of the internal gear produces AC voltage as the rotor teeth pass through the magnetic field of the sensor. The AC voltage level and the number of pulses increase as the speed of the vehicle increases. The TCM converts the voltage to vehicle speed. The TCM uses the output shaft speed signal to determine shift timing and torque converter clutch (TCC) scheduling. If the TCM detects no vehicle speed when there is engine speed in a drive gear range, then DTC P0722 sets. DTC P0722 is a type B DTC.

## Conditions for Running the DTC

- No TP sensor DTC P0120.
- No ISS DTCs P0716 or P0717.
- No OSS DTC P0723.
- No IMS DTCs P1815, P1820, P1822, P1823, P1825 or P1826.
- The engine run time is greater than 5 seconds.
- The throttle position is greater than 12 percent.
- The engine torque is greater than 70 N·m (52 lb ft).
- The transmission input shaft speed is 1,500–6,800 RPM.

## Conditions for Setting the DTC

The transmission output shaft speed is less than 100 RPM for 3 seconds.

## Action Taken When the DTC Sets

- The TCM illuminates the malfunction indicator lamp (MIL) during the second consecutive trip in which the Conditions for Setting the DTC are met.

- The TCM commands maximum line pressure.
- The TCM freezes transmission adaptive functions.
- The TCM calculates vehicle speed from the automatic transmission input shaft speed sensor and commanded gear.
- At the time of the first failure, the TCM records the operating conditions when the Conditions for Setting the DTC are met. The TCM stores this information as a Failure Record.
- At the time of the second failure, the ECM records the operating conditions when the Conditions for Setting the DTC are met. The ECM stores this information as a Freeze Frame.
- The TCM stores DTC P0722 in TCM history.

## Conditions for Clearing the MIL/DTC

- The ECM turns OFF the MIL after the sixth consecutive drive trip in which the TCM does not send a MIL illumination request.
- A scan tool can clear the MIL/DTC.
- The TCM clears the DTC from TCM history if the vehicle completes 40 warm-up cycles without an emission related diagnostic fault occurring.
- The TCM cancels the default actions when the ignition is OFF long enough in order to power down the TCM.

## Diagnostic Aids

Ensure the OSS sensor is properly torqued to the transmission housing.

## Test Description

The numbers below refer to the step numbers on the diagnostic table.

3. The resistance measurement will not change if either the OSS high signal circuit or the OSS low signal circuit, but not both, is shorted to ground. The vehicle speed detector in the TCM and the OSS are matched in such a way that an open or a short to ground in the OSS low signal circuit will not usually cause a loss of speed signal or a DTC P0722 to set.
6. This step isolates the short between the OSS and the wiring.
8. The DMM will detect AC voltage if the OSS high signal circuit is shorted to ground.
11. Refer to the latest procedures for TCM reprogramming.

## DTC P0722

Step	Action	Value(s)	Yes	No
1	Did you perform the Diagnostic System Check – Vehicle?	—	Go to Step 2	Go to Diagnostic System Check - Vehicle in Vehicle DTC Information
2	<p><b>Notice: SIO-ID = 17864 LMD = 13-sep-1996</b></p> <p><b>In order to</b> avoid damage to the drive axles, support the lower control arms in the normal horizontal position. Do not run the vehicle in gear with the wheels hanging down at full travel.</p> <p>1).Install a scan tool. 2).Turn ON the ignition, with the engine OFF.</p> <p><b>Important:</b></p> <ul style="list-style-type: none"> <li>● • Before clearing the DTC, use the scan tool in order to record the ECM Freeze Frame and the TCM Failure Records. Using the Clear Info function erases the Freeze Frame and Failure Records from the ECM and the TCM.</li> <li>● • Using the Clear Info function erases stored DTCs in both the ECM and TCM.</li> </ul> <p>3).Record the DTC Freeze Frame and Failure Records. 4).Clear the DTC. 5).Raise the drive wheels. 6).Support the lower control arms so that the drive axles are in a horizontal, straight, position. 7).Start the engine. 8. Shift the transmission into D5. 8).Select Transmission OSS on the scan tool. Does the scan tool display transmission output speed above the specified value?</p>	100 RPM	Go to Intermittent Conditions in Engine Controls – 4.6L	Go to Step 3

Step	Action	Value(s)	Yes	No
3	1).Turn OFF the ignition. 2).Disconnect the TCM. 3).Measure the resistance between the OSS high signal circuit and the OSS low signal circuit at the TCM connector. Is the resistance within the specified range?	325–575 W	Go to Step 5	Go to Step 4
4	Test the OSS high signal circuit and the OSS low signal circuit for the following conditions: <ul style="list-style-type: none"> <li>● An open circuit or high resistance condition</li> <li>● OSS high signal and OSS low signal circuits for a short to voltage or shorted together.</li> </ul> Did you find and correct a condition?	—	Go to Step 12	Go to Step 9
5	Measure the resistance between the OSS high signal circuit at the TCM and ground. Is the resistance greater than the specified value?	50K W	Go to Step 8	Go to Step 6
6	1).Leave the DMM connected. 2).Disconnect the OSS. 3).Measure the resistance between the OSS high signal circuit at the TCM and ground. Is the resistance greater than the specified value?	50K W	Go to Step 9	Go to Step 7
7	Repair the short to ground in the OSS high signal circuit. Did you complete the repair?	—	Go to Step 12	—
8	1. Connect the DMM between the OSS high signal circuit and the OSS low signal circuit at the TCM connector. 2. Measure the AC voltage with the DMM while rotating the drive wheels by hand. Is the AC voltage equal to or greater than the specified value?	0.5 V	Go to Step 11	Go to Step 9

Step	Action	Value(s)	Yes	No
9	<p>1).Remove the OSS.</p> <p>2).Inspect the OSS and the OSS rotor for the following conditions:</p> <ul style="list-style-type: none"> <li>● OSS damage</li> <li>● OSS rotor damage</li> <li>● Excessive air gap between the OSS rotor and the OSS</li> <li>● Incorrect alignment between the OSS and the OSS rotor</li> <li>● Damaged or missing OSS sensor spacer</li> </ul> <p>3).Repair or replace any of the above items as necessary.</p> <p>Did you find and correct a condition?</p>	—	Go to Step 12	Go to Step 10
10	<p>Replace the OSS.</p> <p>Did you complete the repair?</p>	—	Go to Step 12	—
11	<p>Replace the TCM.</p> <p>Is the action complete?</p>	—	Go to Step 12	—
12	<p>Perform the following procedure in order to verify the repair:</p> <p>1).Select DTC.</p> <p>2).Select Clear Info.</p> <p>3).Drive the vehicle in D5 and observe the Transmission</p> <p>4).OSS on the scan tool.</p> <p>5).Ensure the Transmission OSS is greater than 500 RPM for at least 2 seconds.</p> <p>6).Select Specific DTC.</p> <p>7).Enter DTC P0722.</p> <p>Has the test run and passed?</p>	—	Go to Step 13 Go to Diagnostic	Go to Step 2
13	<p>With the scan tool, observe the stored information, capture info and DTC info.</p> <p>Does the scan tool display any DTCs that you have not diagnosed?</p>	—	Trouble Code (DTC) List -Vehicle in Vehicle DTC Information	System OK