


CVT fluid pressure learn


Function Description:


need to be carried out when replacement of CVT and/or ECU.


Instruction:

1).comprises the following steps:

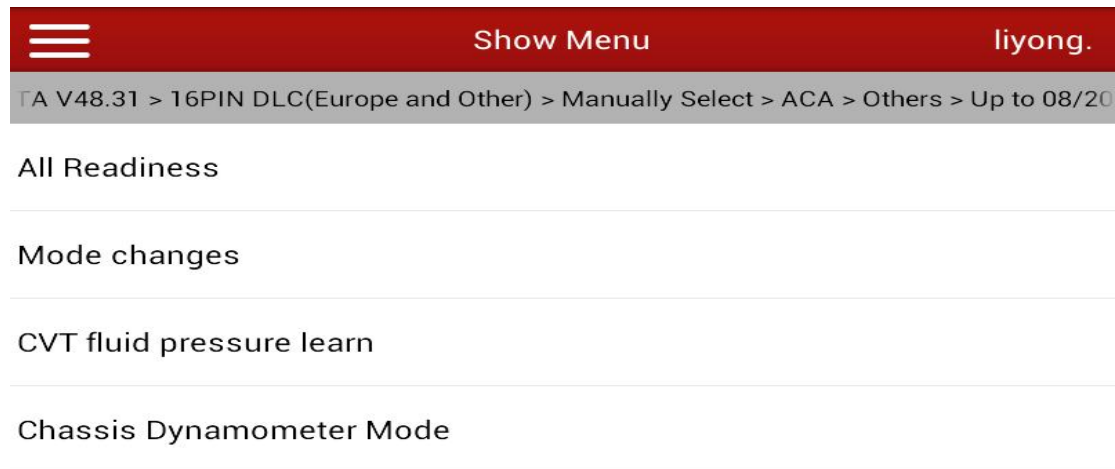

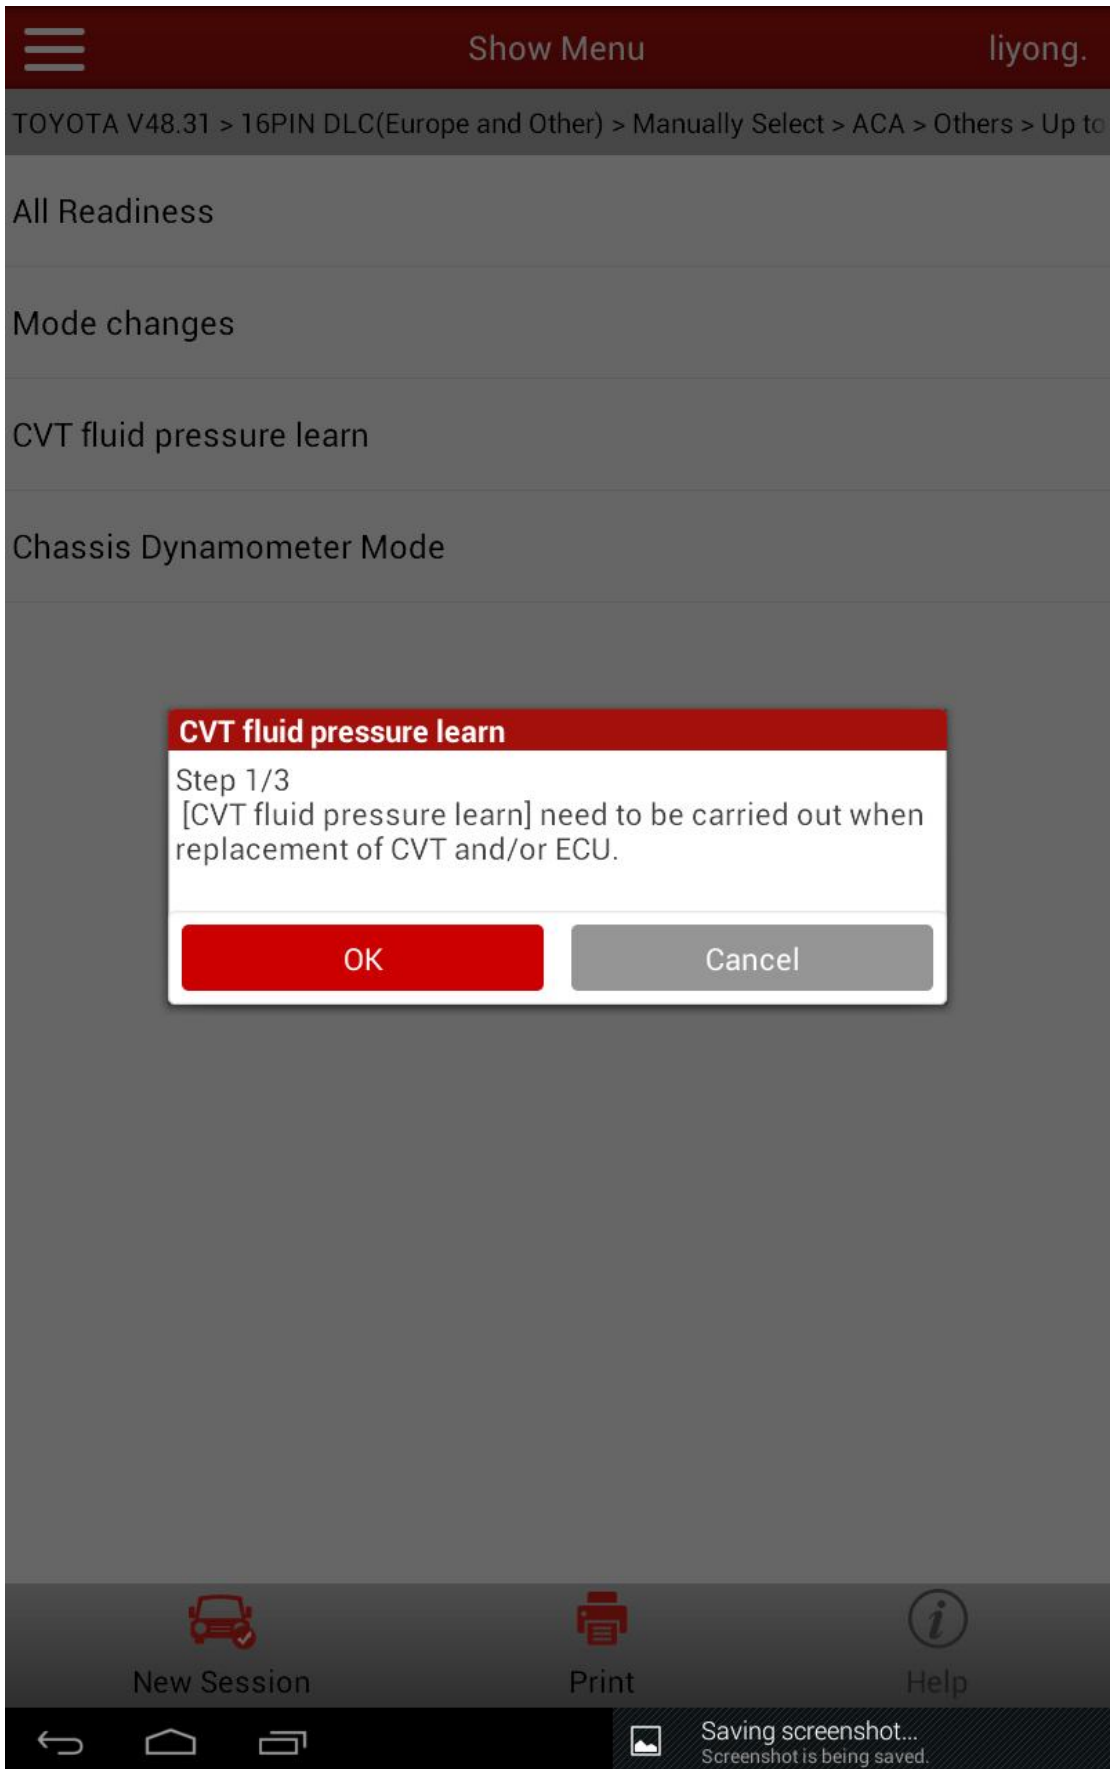

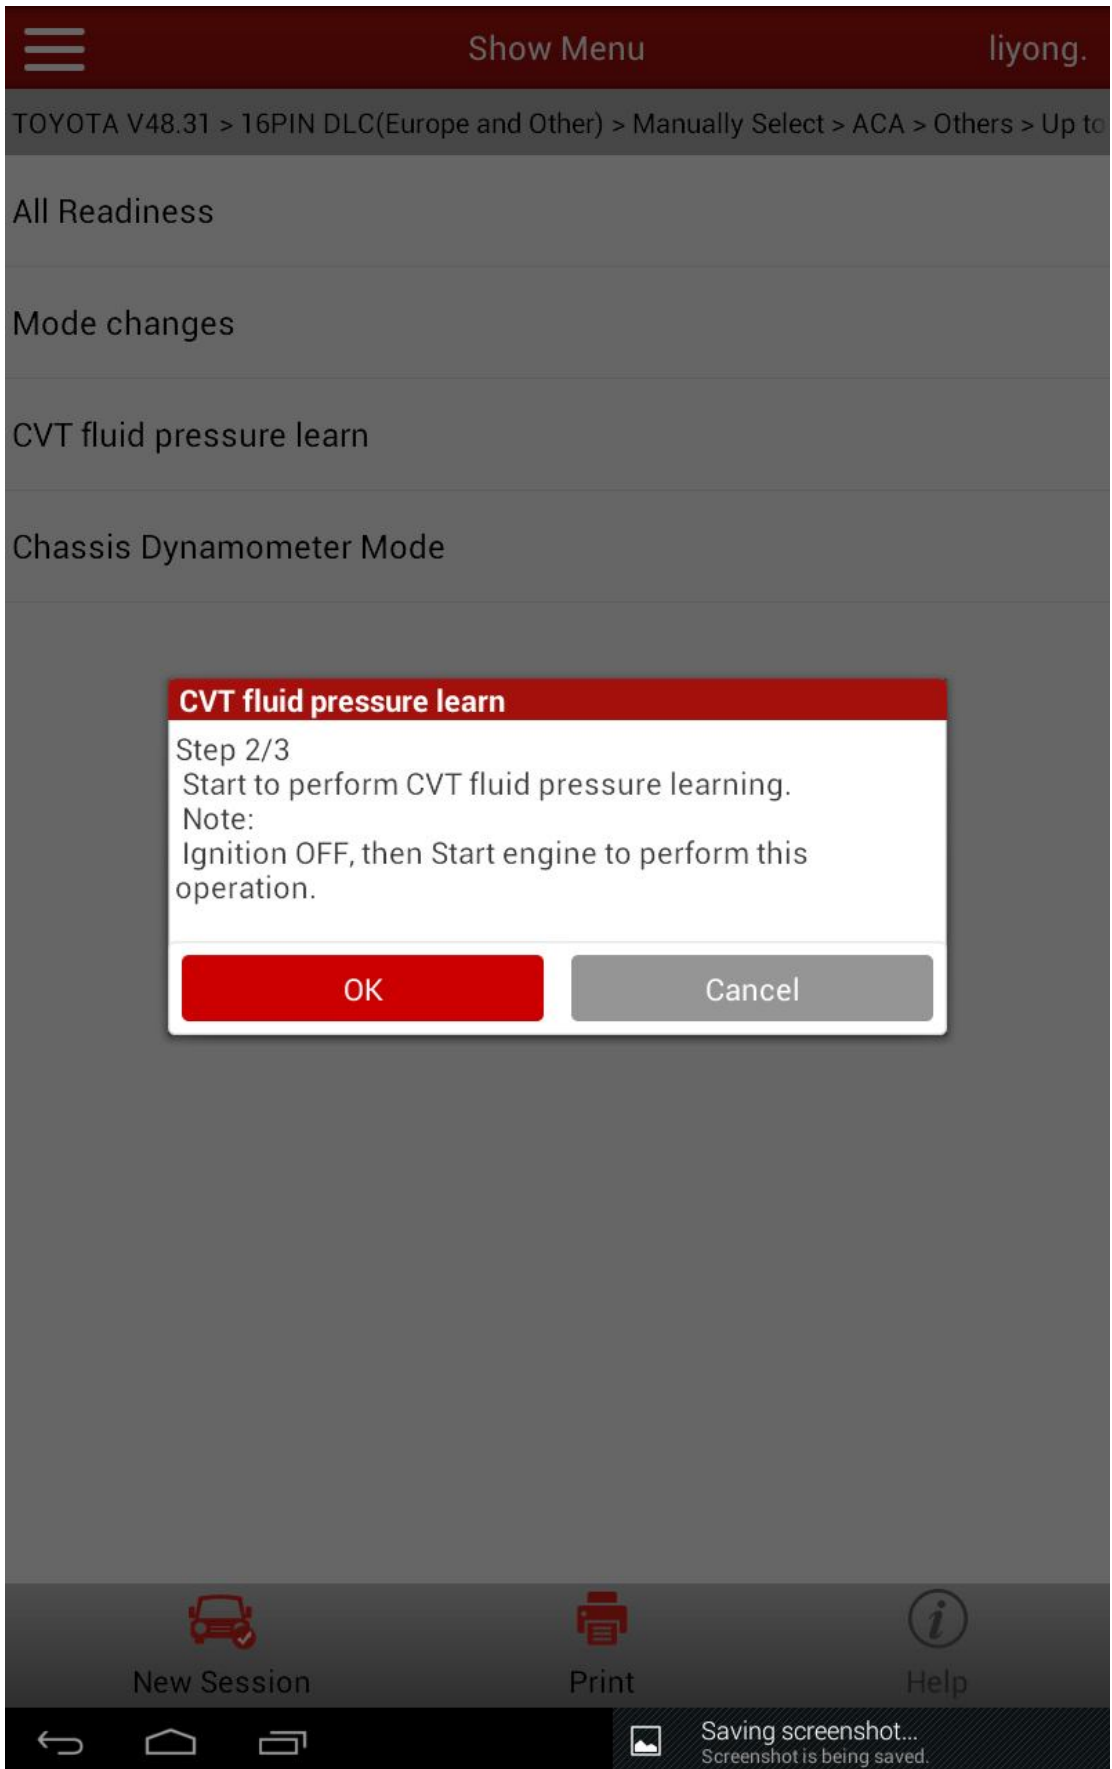

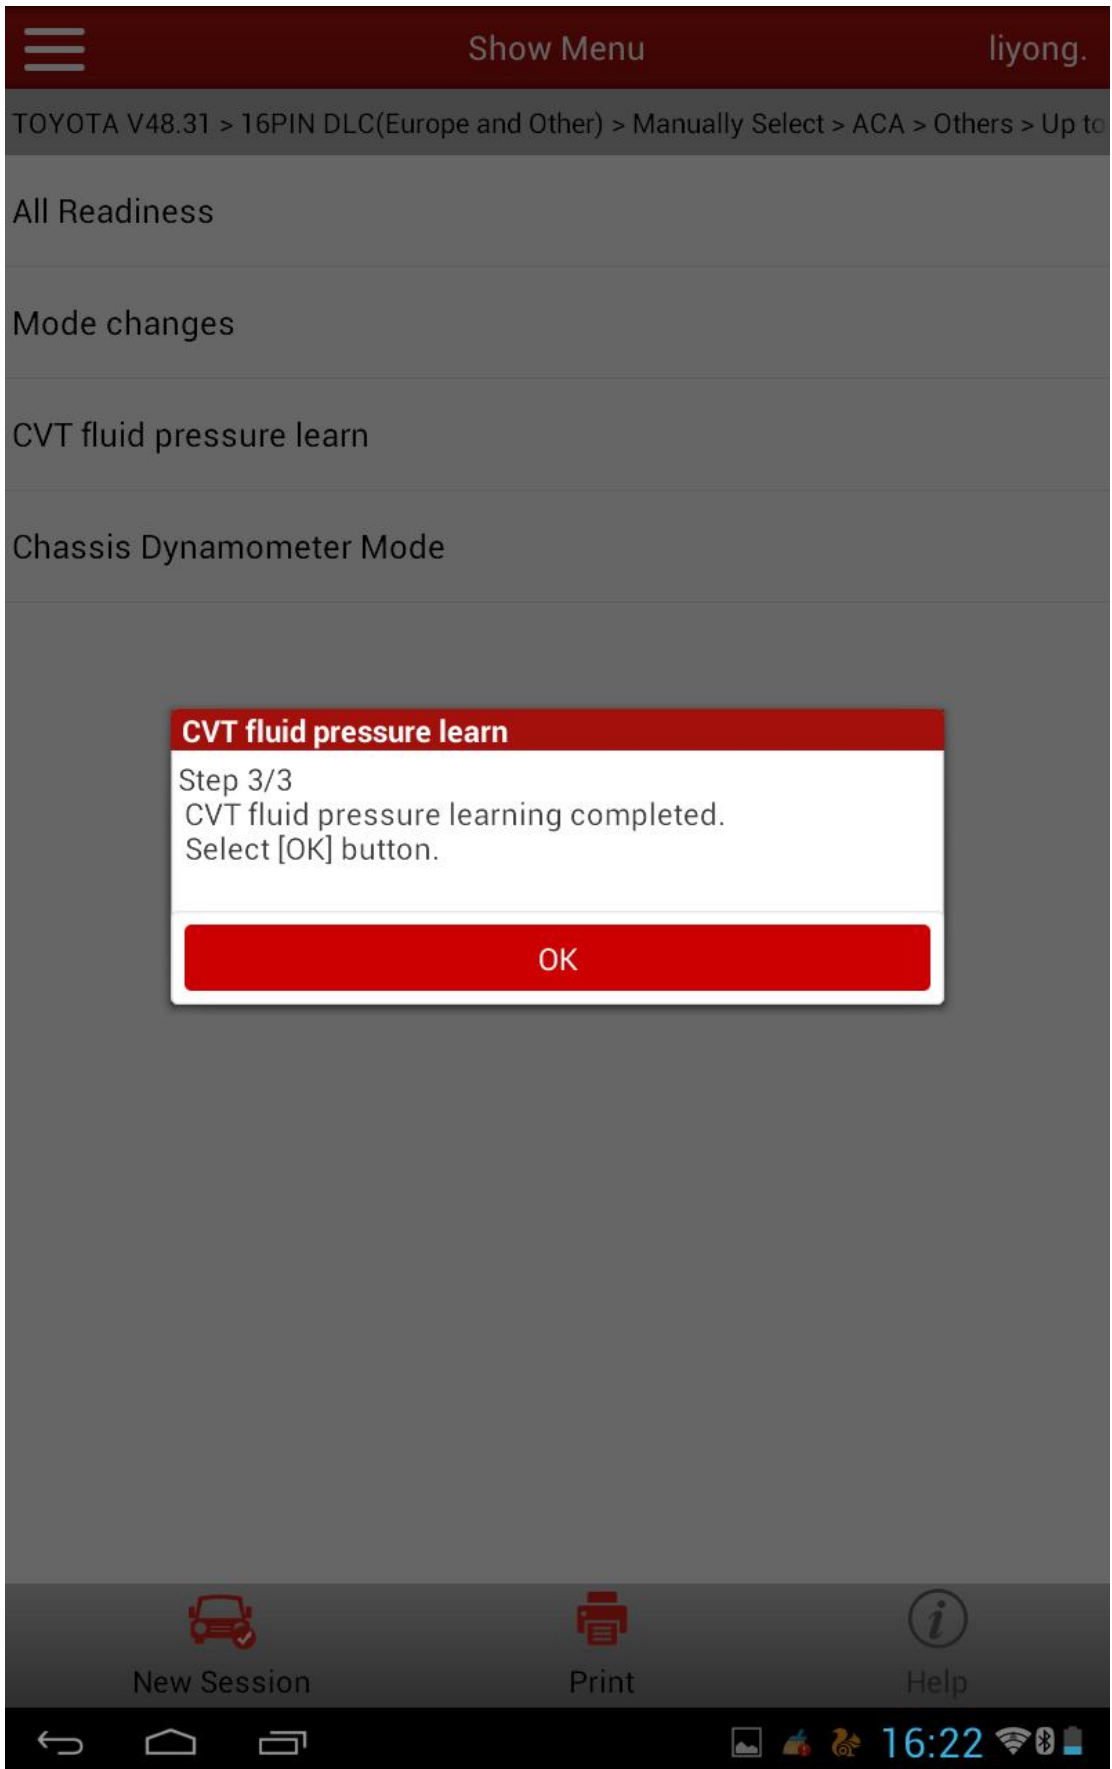

Declare:

The document is owned by the Shenzhen City, the copyright of the LAUNCH Technologies Inc, and no individual or entity shall be quoted or reproduced without consent.

LAUNCH